


KODO™ Radio Controlled Quadcopter



Before taking first flight, download complete KODO instruction manual from www.dromida.com.


CHARGING

Plug charger into USB port or AC adapter (not included) as shown and connect the battery. The red LED will flash slowly while the battery is charging. The LED will be steady when the battery is fully charged.

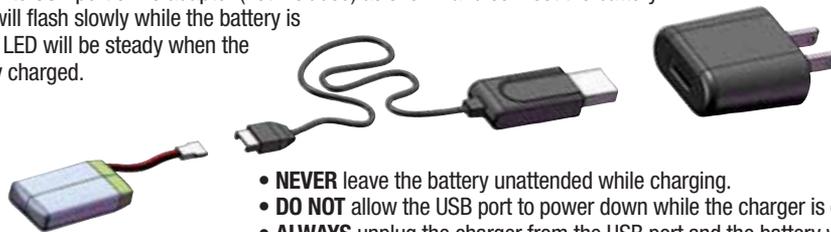

- **NEVER** leave the battery unattended while charging.
- **DO NOT** allow the USB port to power down while the charger is connected to the battery.
- **ALWAYS** unplug the charger from the USB port and the battery when charging is complete.


RADIO

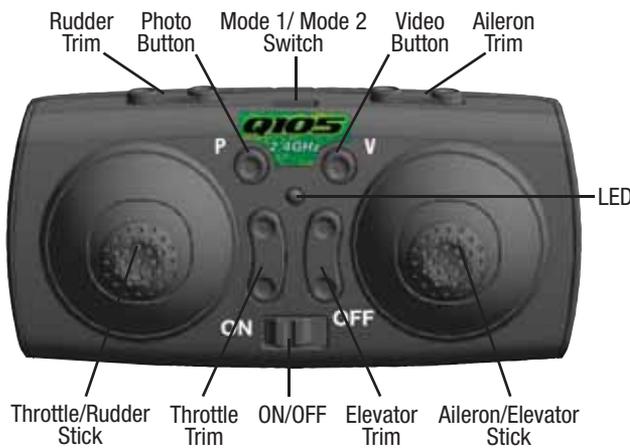

NOTE: For Mode 1 configuration, refer to the complete KODO instruction manual at dromida.com

SENSITIVITY ADJUSTMENT

Push down on the left stick to change the sensitivity of the controls.

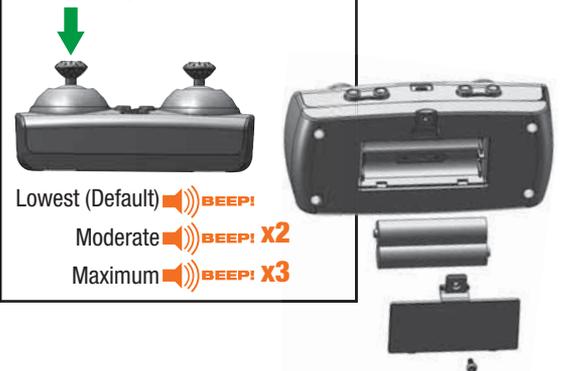

PREPARING TO FLY


1. Turn on the radio with throttle at lowest position.
2. Place the Kodo on a **level** surface and connect the battery. The Kodo will beep twice. **Do not move** the Kodo until the LEDs stop flashing.
3. Move the throttle up and listen for one beep.
4. Move the throttle down. Listen for one beep and verify that the LEDs have stopped flashing.



The motors are armed and the KODO is ready to fly.

HOW TO FLY

BASIC FLIGHT

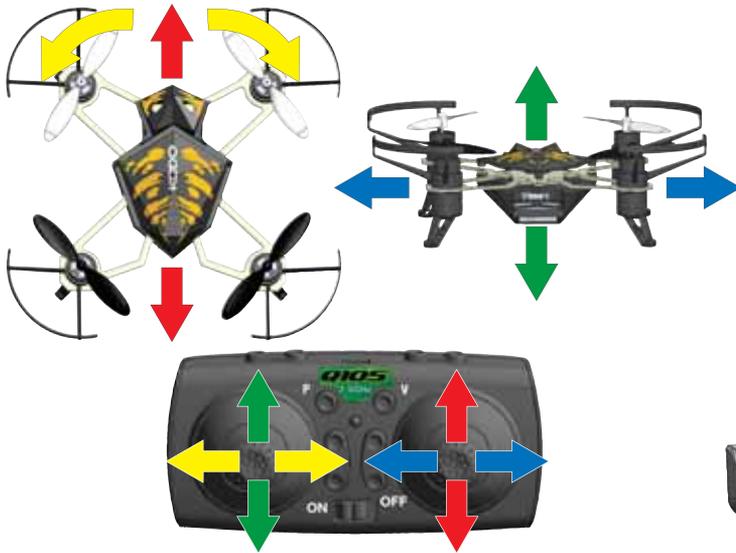

The LEDs will flash when the battery voltage is low. Land the KODO as soon as possible. Recharge the battery before storing the quadcopter.

FLIPS




Push down on the right stick and release it to start the flip. Hold the right stick in any direction and release it when the flips are completed. The radio will beep until the right stick released.

CORRECTING DRIFT

It is normal for the KODO to drift slightly. However if it drifts in any direction consistently press the trim button opposite the movement as many times a needed to eliminate the drift.



CAMERA OPERATION

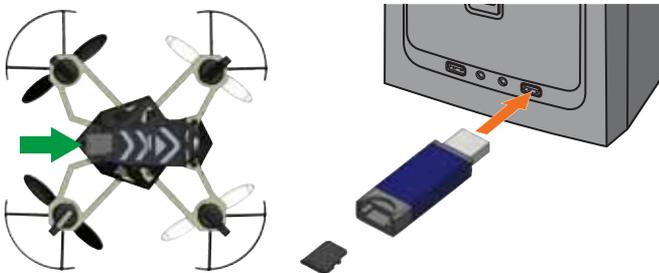

Press the photo button to capture a photo. BEEP!

Press the video button to start a video. BEEEEP!

The video button must be pressed again to stop and save the video on the card. The photo button will not operate while the camera is recording a video.

TROUBLESHOOTING

PROBLEM: The quadcopter will not respond to the radio.

SOLUTION: (1) Charge or change the battery on the quadcopter (2) Turn off the radio and disconnect the battery for the KODO. Re-link the quadcopter and radio.

PROBLEM: Red radio LED light flashing after linking.

SOLUTION: Replace with new AAA batteries.


PROBLEM: Unable to flip.

SOLUTION: Battery voltage too low.

dromida.com

BLADE REPLACEMENT

NOTE: Rotor blades *must* be installed as shown.

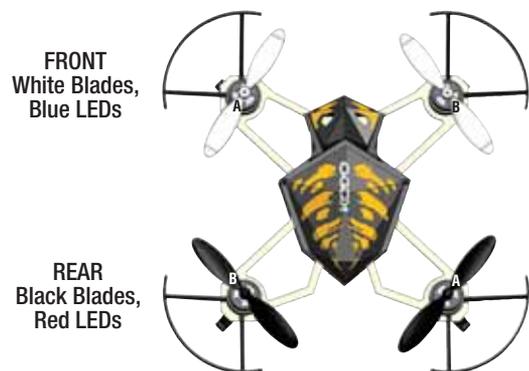

PROBLEM: Gyro not working properly.

SOLUTION: (1) Battery voltage low. (2) Re-link. (3) Land on to the ground for 3 seconds and take off again.

PROBLEM: Will not take off.

SOLUTION: Rotor blades incorrectly installed. See Rotor Blade Replacement section.

PROBLEM: Quadcopter is shaking.

SOLUTION: Check the canopy, chassis, motors and rotor blades for damage.

DIDE0005 v1.0 © 2014 DROMIDA, A HOBBICO COMPANY **Hobbico**