



Replacement Parts

Table with columns: Stock #, Description, and quantity. Lists various replacement parts like bearings, batteries, connectors, and chassis components.

Table with columns: Stock #, Description, and quantity. Lists specific parts like Upper Arm Set, Tire Set, Wheel Set, and Wall Charger.

HARDWARE

Table with columns: Stock #, Description, and quantity. Lists hardware items like Ball Studs, E-Clips, Machine Screws, and Servo Tapes.

OPTIONALS

Table with columns: Stock #, Description, and quantity. Lists optional parts like NIMH batteries, Carbon Fiber Battery Strap, and Aluminum Knuckle Set.

To order replacement parts or to send your model in for repairs covered under warranty, you should send your model to DuraTrax's authorized U.S. repair facility:

Hobby Services
3002 N. Apollo Drive, Suite 1, Champaign, Illinois 61822
Attn: Service Department
Phone: (217) 398-0007
9:00 A.M. - 5:00 P.M. Central Time M-F
E-Mail: hobbyervices@hobbico.com

* indicates Stress-Tech™ part

Hardware Chart

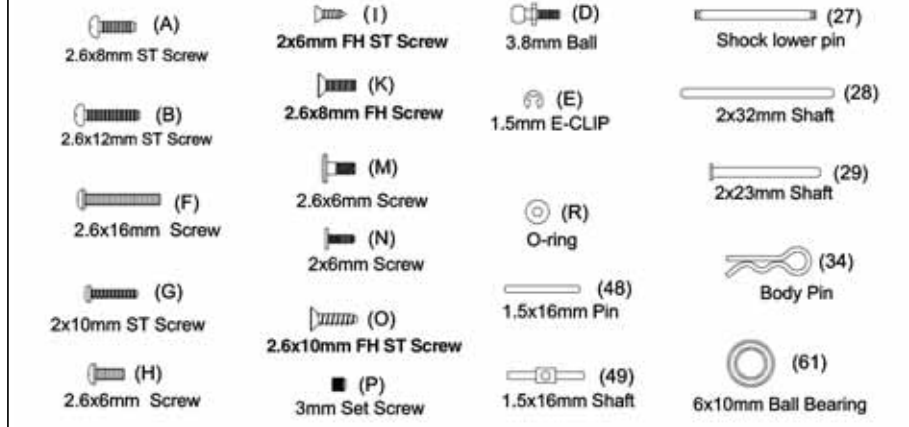


Table listing parts with columns: Part #, Item Description, Stock #, and quantity. Includes items like Inner Lower Hinge Pin, Servo Arm, Shock Cartridge Cap, and various screws.

DURATRAX

MINI QUAKE

