

The Proto-X FPV Quad and the Proto-X FPV Transmitter use different memory card formats. Once the card is formatted for one, you cannot interchange with the other unless you reformat the card for that device. The default formatting is for the quad/computer.



As delivered from the factory, the micro memory card is formatted to be read by your quad and your computer. You can take video by installing the card in your quad and pressing its "video" button. Recorded video can then be viewed on your PC. Your transmitter, however, will not be able to read and play it.



You can also install the micro memory card in your transmitter, reformat it, and capture video using the transmitter. Your transmitter will then be able to read and play the file - but **NOT** your computer.

IMPORTANT NOTE: The micro memory card can be reformatted from your PC to the transmitter and back again, depending on your playback preference. Simply be aware that when formatted to one, your video files will not be readable in the other.

