


playmate

Technical Update

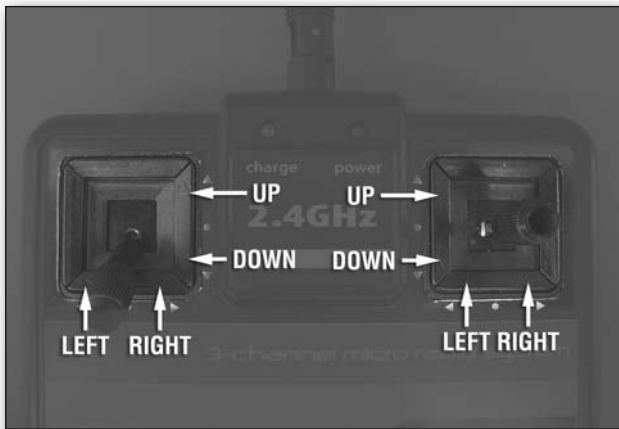

In order to reverse the direction of the rudder or elevator control surfaces mentioned on page 5 of the manual, it may be necessary to press the **right trim or left trim button** below the left control stick. Do this in conjunction with pressing the up trim or down trim (elevator) or the left trim or right trim (rudder) on the right control stick to reverse the direction of the control surfaces.