


P-38 Lightning

TECH NOTICE

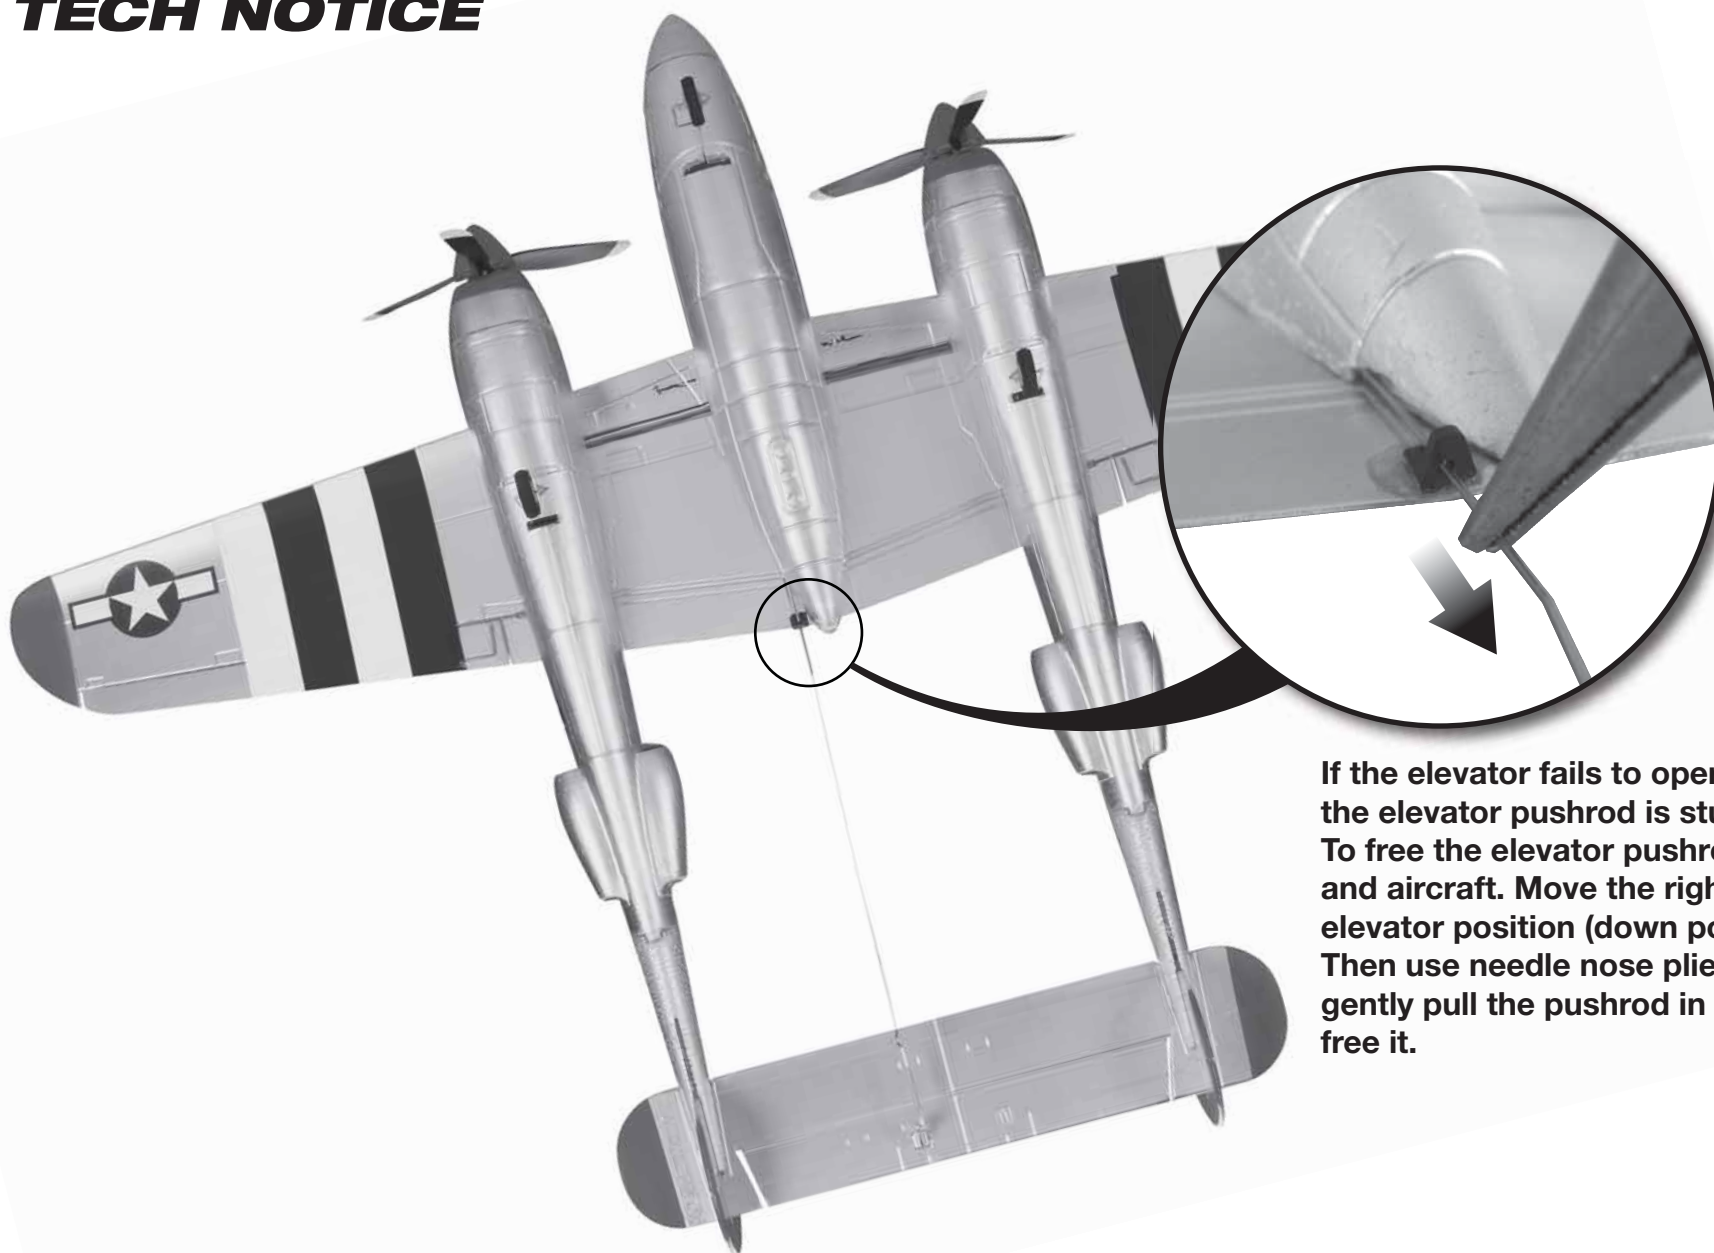

If the elevator fails to operate, it's likely that the elevator pushrod is stuck to the fuselage. To free the elevator pushrod, power the radio and aircraft. Move the right stick to the up elevator position (down position on the stick). Then use needle nose pliers or hemostats and gently pull the pushrod in the aft direction to free it.