 



sensei™

Technical Notice

The fit between the two wing panels of the Sensei Trainer is exceptionally snug. Follow the instructions on page 8, step 3 by inserting the plastic wing connector into the top of the wing. If the wing connector will not easily slide into the aligned holes in the wing and wing joiner, you'll need to follow these steps to ensure a proper fit.

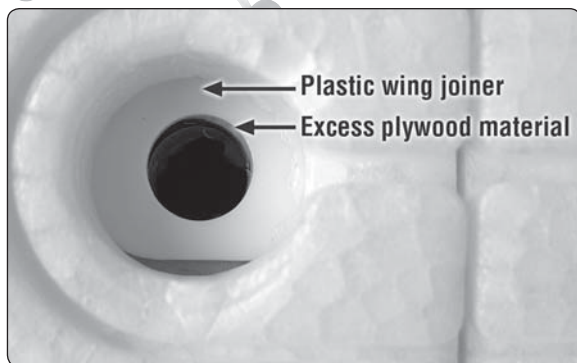

 1. Inspect both holes in the location where the wing connector should be installed. Look for misalignment between the white plastic holes in the wing joiner and the holes in the plywood inserts installed in the wing.

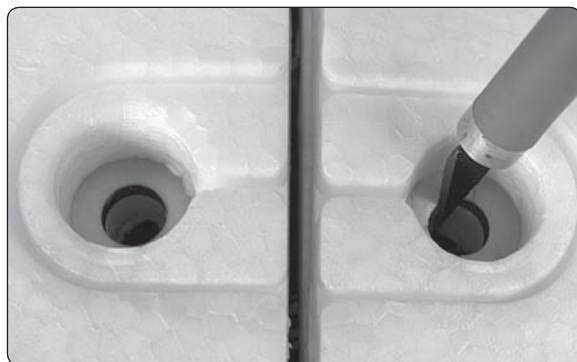


2. Use a marker to highlight the excess areas of the plywood which restrict the wing connector fit.

3. Separate the wing panels and remove the joiner.

4. Use a #11 blade to remove excess plywood material which is causing the misalignment from one or both plywood inserts.

5. Reinstall the wing joiner and attempt to install the wing connector again.

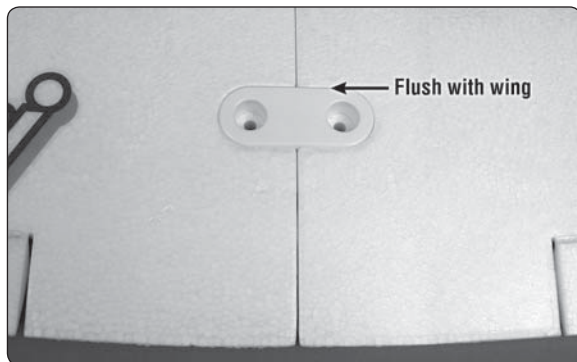

Flyzone™
how high will you soar