



tidewater

Please follow these instructions to install the water rudder.

Flyzone[™]
how high will you soar

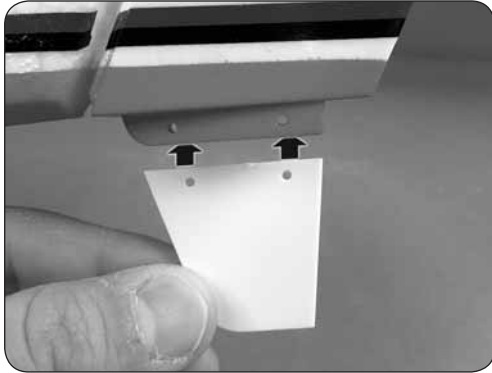

1. Place the water rudder in the groove on the lower portion of the rudder as shown.

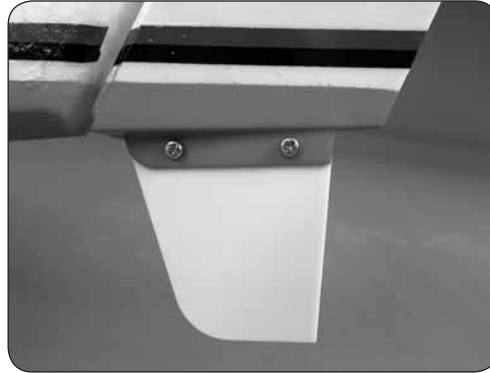

2. Install two 2x4mm Phillips head machine screws through the predrilled holes in the water rudder and groove.



3. Secure the machine screws with two 4mm nuts.

RTF Version Only

If necessary, follow these steps to achieve the proper 7/16" [11mm] high rate rudder control throw.

1. Move the screw lock connector to the outer hole of the elevator surface control horn. Confirm the screw lock connector is securely attached to the horn.
2. During assembly install the elevator pushrod's Z-bend to the 3rd inner hole of the servo horn.

