

Super Cub



ESC REMOVAL/REPLACEMENT

1. Ensure that the battery is disconnected, then remove cowl and motor.
2. Cut zip tie holding motor wires to the motor mount.
3. Attach a 12" string to the three motor wires where they protrude through the metal motor mount (pictured).
4. Remove the battery hatch under the front of fuselage.
5. Carefully cut a 1" [25.4mm] x 1.5" [38mm] hole in the foam directly under the esc (pictured).
6. Slowly remove ESC partially.
7. Once string is visible from under side of fuse, remove string from old esc.
8. Attach string to new ESC bullet connector wires (pictured).
9. Pull the string through the firewall.
10. Remove string from new ESC, and attach the bullet connectors to the motor.
11. Use new zip tie to secure ESC/motor wires to motor mount.
12. Reassemble motor and cowl to the Super Cub.

