


### Page 13, Step 1 Main Landing Gear Installation

In the production of the plane small pieces of tape may have been used to cover the landing gear blind nuts. Please remove the tape before installing the 4-40 x 1/2" [12.7mm] socket-head cap screws.

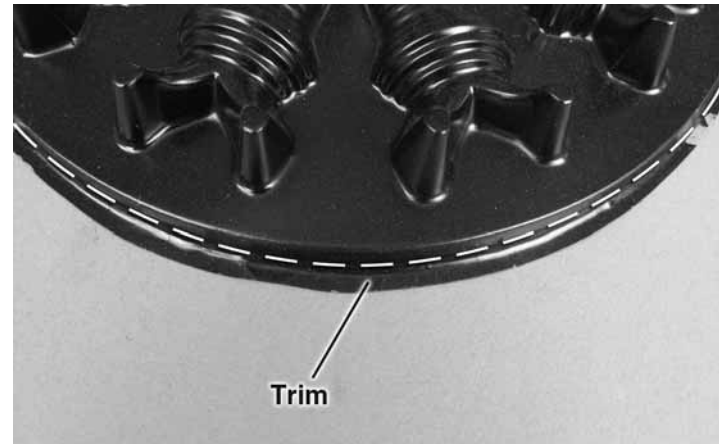

### Page 20, Cowl and Propeller Installation

Before enlarging the center of the dummy engine in step 1, use a sharp hobby knife or scissors to trim the plastic lip from around the dummy engine.