 
 


SKYFLY 2™

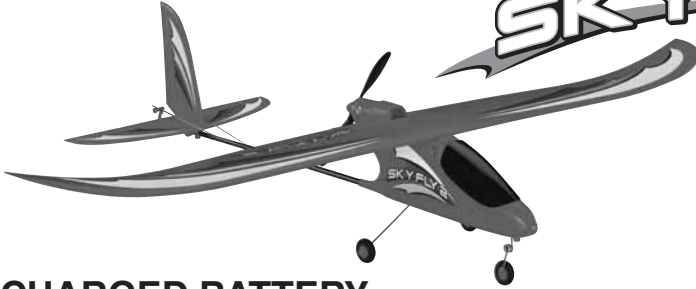

The charging instructions on page 6 & 7 in the manual of the Sky Fly 2 are unclear. There are three different sequences of beeps that indicate different charging conditions.

CHARGED BATTERY

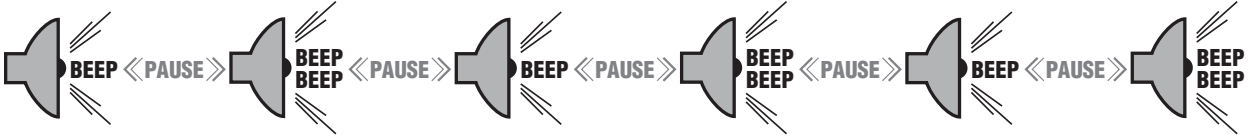

The battery is now ready to discharge or use.

TIME OUT

Indicates the charger's safety timer has ceased the charging process.



If this occurs, disconnect the battery from the charger and then reconnect to continue charging.

DISCONNECTED CHARGER

If the battery is connected to the charger and the charger is not connected to the power supply, or if the charger is connected to the power supply but not connected to the battery, the following type of beeping sequence will be audible.



If the above sequence is heard during use with the AC (wall plug-in) power supply, it may be necessary to make sure the male socket of the charger is completely inserted into the female socket of the power supply.

Three complete charge and discharge cycles on a new battery are recommended to achieve maximum flight times from the 8.4V 900mAh NiMH battery included with the Sky Fly 2.