

# SKYFLY™ max



We encourage you to read and understand each step *in the manual* before proceeding with assembly.

## ATTENTION



Although this model is easy to assemble, parts must be installed in order. Please follow the instruction manual! Certain parts like the pushrods and the tail boom rely on other parts being installed first. Please read and understand each step in the manual before proceeding with assembly.


## WARNING



**DO NOT** mount the propeller to the motor until instructed to do so in the manual. A mounted propeller could cause damage or injury if the throttle is accidentally bumped or the servo reversing switch is actuated. **Always keep clear of the propeller while handling the model** and make sure that the airplane is securely held down.

## When Using Replacement Batteries...

1. An in line adapter is included if you would like to use one of the Flyzone or SuperTigre® replacement batteries listed in the instruction manual. **Note:** No adapter is needed to fly with the battery included.

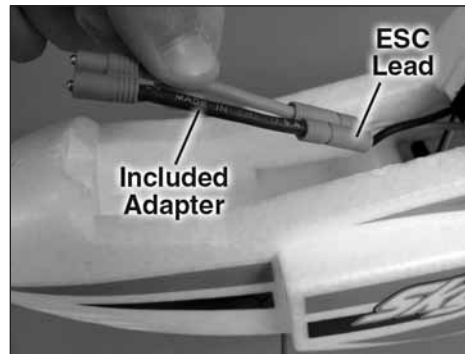


2. When using a replacement battery with a Flyzone or SuperTigre connector, connect the included adapter to the ESC.



3. Fit the battery in the battery compartment as recommended in the manual. Following all safety precautions in the manual, turn on your transmitter and set the throttle stick to the minimum throttle position. Connect the battery lead to the adapter. Tuck the wires into the fuselage and install the canopy.

4. When you're done flying, unplug the LiPo from the adapter. If you are going to use your optional battery again, you may leave the adapter connected to the ESC.

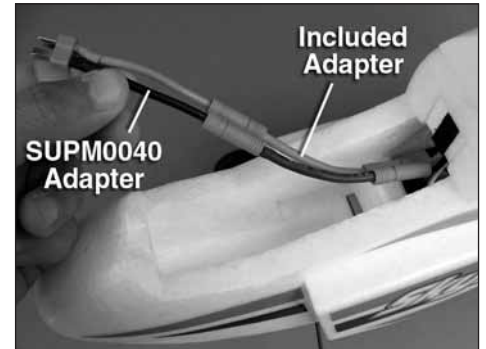

5. If you want to use one of the optional Great Planes batteries listed in the manual or another battery which uses a Deans® Ultra® connector, please use a Deans Ultra Male to SuperTigre ESC Adapter (SUPM0040) in line with the required adapter.

**Flyzone™**  
how high will you soar