



- ❑ 1. On Page 9, "**INSTALL THE BATTERY**" you are instructed to plug the battery into the connector located inside of the battery compartment. The connector **may not** be located in the battery compartment. Before installing the wing, check inside of the fuselage and if you find that the connector has not been routed into the battery compartment, do that before installing the wing.

- ❑ 2. Before flying the model please double check the tightness of each of the set screws that hold the pushrod wire to the servo.

