

## Safety Precautions

- Adult supervision required.
- Always install the propeller guards before flying.
- Calibrate the Flitt accelerometers before each flying session.
- Do not touch the spinning propellers.
- Keep your face and body as well as all spectators away from the propellers.
- Stay clear of buildings, high voltage wires, trees, shrubbery or groups of people.
- Don't fly in bad weather conditions, such as in high wind, rain, or snow.
- Operating Temperature Range: 32°F to 104°F (0°C to 40°C).
- Always keep Flitt in your line of sight.
- Maintain a safe pilot-to-device distance while flying.
- Flitt is not a toy. If not operated correctly, it could possibly cause injury to you or spectators and damage to property.
- Do not alter or modify, as doing so may make it unsafe or unflyable.
- You must check the operation of Flitt before every flight to insure that it has remained structurally sound.

# flitt™

## Quick Start Guide



BC

See Setup and Flying instructions inside.

[flittcamera.com](http://flittcamera.com)

## Battery Precautions

The Flitt is equipped with a rechargeable 3.7V Lithium Polymer (LiPo) battery. Please pay attention to the following cautions for safe use:



- KEEP OUT OF REACH OF CHILDREN.
- LiPo batteries must be recycled or disposed of properly.
- Do not use this product if the Flitt was severely crashed and the battery possibly damaged.
- Never disassemble, puncture or modify the Flitt battery.
- Always turn off Flitt power after each use.
- Only charge using a USB 5.0V 2A max power supply.
- Do not charge inside your car.
- Do not leave unattended while charging.
- Allow Flitt to cool for 30 minutes before recharging.
- Always place Flitt on a fireproof surface while charging.
- Keep away from combustible materials while charging.
- Unplug the charger immediately if it or the battery becomes hot! However, it is normal for the charger and battery to get warm. Disconnect from the charger and quickly move to a fireproof location if the battery begins to get hot or smoke!
- Keep a supply of sand accessible when charging. Dumping sand on the battery will extinguish a LiPo chemical fire.
- Always disconnect the charger after charging is complete.

### Video Record

To start recording a video, select the video icon. To stop, push the square icon.

### Speed Selector

Push this icon to adjust your flight speed. Use low (L) or medium (M) speeds indoors. If you have plenty of room to fly, use high (H) speed to fly fast.

### Instant Share

This feature loads your pictures or videos to your favorite social media quickly. You can set this up before you fly. Go to Settings and choose which social media service you want to use and how you want to add a caption. Then go back to the main screen and select the instant share button and then take another picture. You'll be prompted to sign in to your selected service.

When ready to fly, first select either instant share 1 or instant share 2. Next, take pictures or videos as you fly. During your flight (for iOS) or after (for Android), your pictures will be sent over your chosen service.

### Camera

Single shot: Press the camera icon or the up/down volume button on your mobile device. Self-Timer: Push and "hold" the camera icon. Choose timer and then either 3S or 10S. Multi-picture Burst: Push and "hold" the camera icon. Choose Burst, and then choose the number of pictures you want to take in a burst.

### Screen Gesture Swipe Control

This part of your screen shows you what the Flitt camera sees. The image can be moved to the left or the right by swiping the screen. This rotates Flitt so the camera will see the picture you want to take.

### Frame your subject

You can move the image you see on the screen from side to side by swiping the open screen area. This rotates Flitt so that you can easily frame your perfect shot! For framing up and down, use the altitude slider in small movements.

### Altitude Slide Bar

Swipe left or right to rotate the camera



### Controls

Use the directional control stick, altitude slide bar, and left/right swipe area to control the position of Flitt. For easiest control, make small movements and then let go. To rotate, swipe the screen left or right. If you want to rotate constantly, swipe one direction and hold. For indoor flight, there are fine tune buttons to compensate for any slight drift.

### Fine Tuning Buttons

The orientation of the controls are as if you were sitting inside Flitt. So, if you rotate, you may find that moving left moves Flitt towards or away from you. With practice, this will become second nature.

Memory Card Capacity

Battery

Wi-Fi

Safety Unlock

Gallery

Settings

One-tap Take Off/ Land

▲ Take Off ▲

 
▼ Land ▼

From this menu, you can set up and customize Flitt, manually calibrate the sensors, access the help menus and the Start Up slide show.


# Setup

## 1: Charge the battery


Unlock the battery.

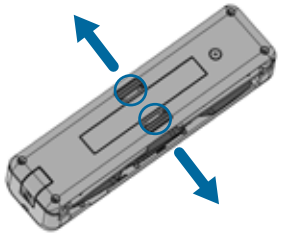

 Grip the battery from the sides and push up.

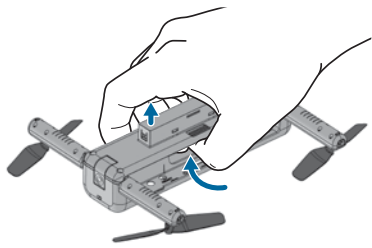


 Plug the charger into any standard USB power source.

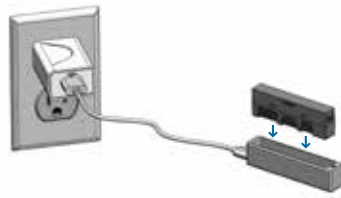

The LED will be solid while charging.  
The LED will flash when finished.  
Always disconnect when finished.

 Insert the battery and lock in place.

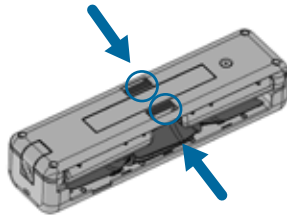

## 2: Download the app


Search the app store for "Flitt."



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android and Google Play are trademarks of Google Inc.


## 3: Turn on

 Push the power button and hold for a few seconds until the LED stays on.

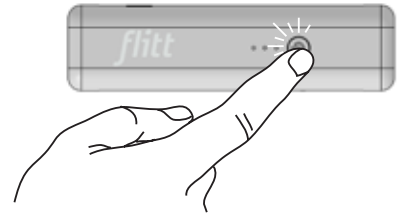


## 4: Open the arms

 Open the arms fully.

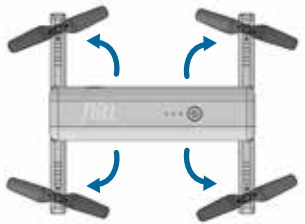

## 5: Attach the propeller guards

 Install a prop guard into the end of each arm. Match A guards to A arms and B guards to B arms.

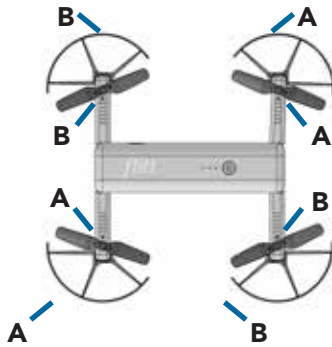

## 6: Connect your phone

Go to Wi-Fi Settings on your phone and look for the network Flitt\_\*\*\*\*\*. Connect and enter Password: 12345678



## 7: Open the app

 
Watch the slide show to learn about the controls and features.



# Fly

## 1: Get Ready.

Position Flitt on a level surface with the camera facing you.

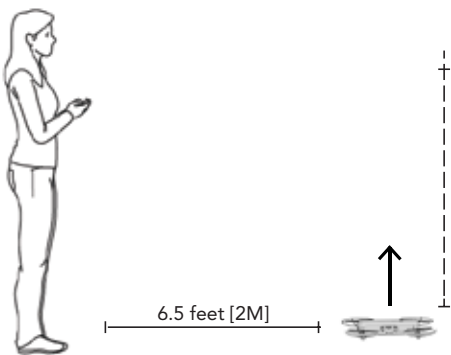

In settings, you can set the camera to face away from you to capture scenery.

Push "unlock" and hold for 2 seconds



Calibrate the sensors if prompted.




Push "Take off" when green. For your safety, Flitt will re-lock after five seconds to prevent unintentional takeoffs.



We recommend recalibrating the sensors after a hard landing or crash. Access this feature through the settings menu.

## 2: Controls

 
Move slider to change altitude.

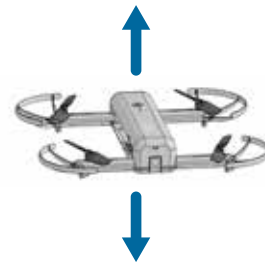

  Move controls in the direction you want to travel.

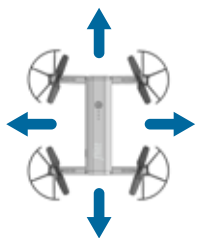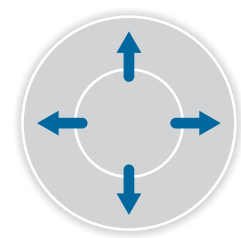

## 3: Land

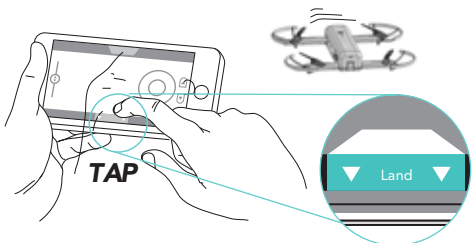 


To land immediately, push **EMERGENCY**

## 4: Power off

 Push and hold until the LED turns off.

It's easiest to fold up Flitt starting with the back arms first. Now head out to your next photo shoot!

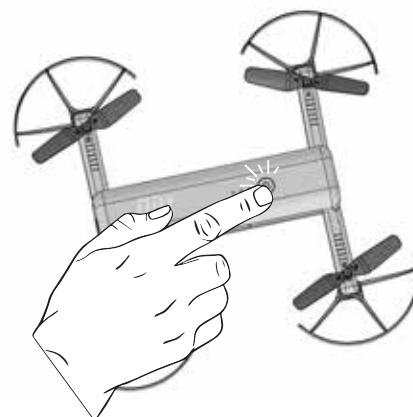

# flitt™