

Heli-Max®

PRODUCT UPDATE

Please follow this guide to charge your battery.

Heli-Max®

CHARGING THE FLIGHT BATTERY

WARNING!! The charger supplied with this Heli-Max Helicopter contains protective circuitry. If you experience any difficulties while charging the battery, please disconnect the battery from the charger and unplug the charger from the power source. Allow the battery and charger to rest for two hours as this will allow the charge protection circuit to reset. If this issue re-occurs during normal use, please contact technical support for further assistance.



Plug the USB charger into your USB port. The *indicator light* will remain off.



Plug the battery into the charger. The indicator light will glow solid, indicating that the battery is being charged. Once the battery is completely charged, the indicator light will flash slowly. Disconnect the battery from the charger. Under normal operating conditions, the battery may take up to 60 minutes to recharge.

NOTE: A fast flash indicates a charge error. This is typically an indication that your battery has gone bad.