


# Heli-Max<sup>®</sup>


**AXE<sup>™</sup>**  
**100SSL**

## Replacing LED Contact Brush Assembly on the Heli-Max Axe 100 SSL

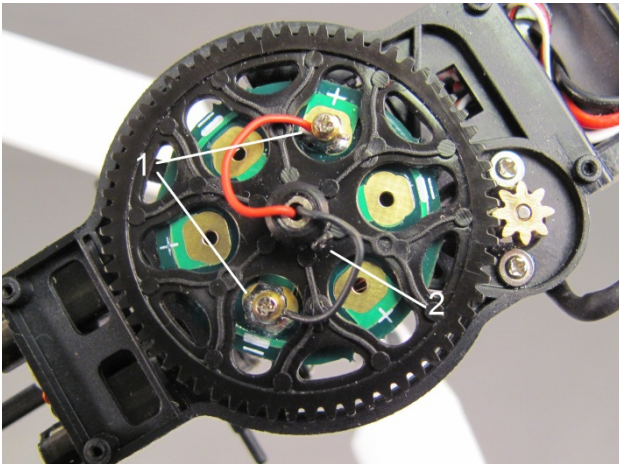


1. After removing the landing gear, the Main Gear with LED board will have to be removed. Loosen screws on the posts that hold the wires on the Contact Board and remove the wires from the posts.

2. Remove the screw that holds the main gear assembly to the main shaft. Gently pull the gear off the main shaft.

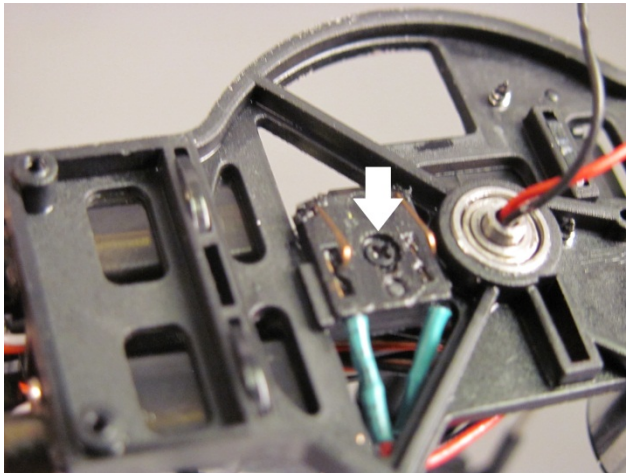


Remove screw that holds the LED Gear Contact Board to the frame.

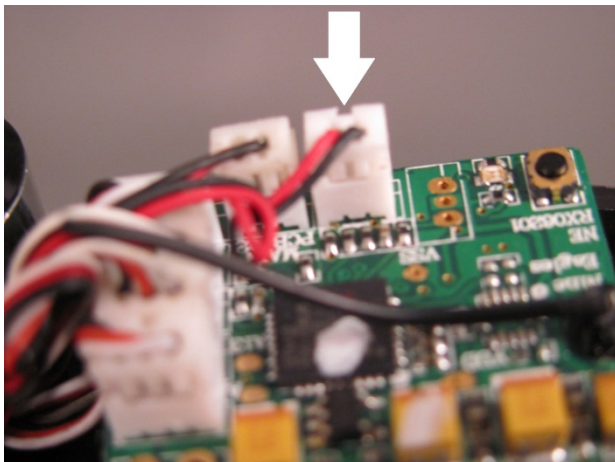

Unplug the LED Gear Contact Board assembly from the E-board and remove the contacts from the model.

Reverse the procedure to install the new contact assembly.

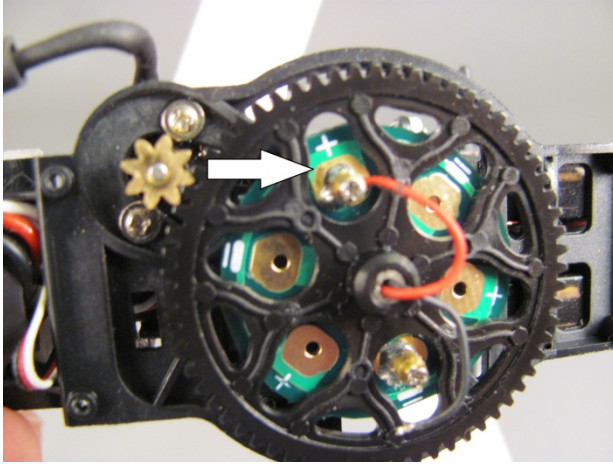

Be sure to connect the red wire that comes up from the main shaft to the post with the “+” symbol. Also, tighten the screws on the posts so they are snug. If these screws are over-tightened, the screws can break the wires.