

Linking

TECHNICAL NOTICE

How to link the **AnyLink™** module or an **SLT™** compatible transmitter to your SLT compatible model.

1. Turn on the transmitter. Make sure the throttle is at zero.
2. Place the transmitter close to the model.
3. Remove the canopy and locate the small black link button on the PC board.
4. Press and hold the button for 3 seconds.
5. Release and wait 3~5 more seconds. Your system is now ready!