

 
AXETM CX Nano




QUICK START CHECKLIST



WARNING!! *The instruction manual must be read completely before operating the Heli-Max AXE CXn Helicopter.* It contains specific warnings about safety and use of the LiPo flight battery supplied with the AXE CXn. All of these warnings and safety steps must be read and understood before proceeding to the next step.

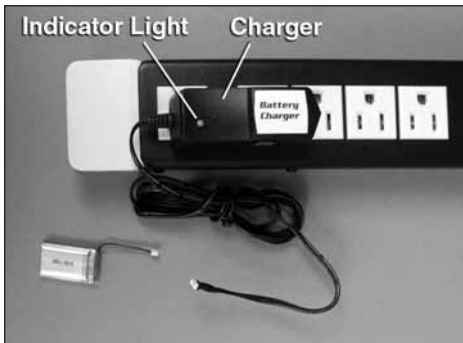

 ❑ 1. Plug the charger into an AC outlet. The **indicator light** on the wall transformer will flash red during initialization and then turn solid green once initialization has been completed.

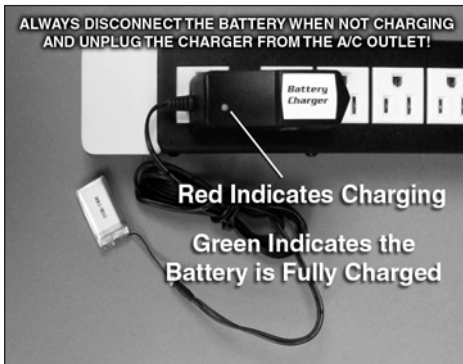

❑ 2. Plug the battery into the charger. The charge indicator light will turn red; this indicates that the battery is being charged. Once the battery is completely charged, the charge indicator light will turn solid green. Disconnect the battery from the


charger. Under normal operating conditions, the battery may take up to one hour to recharge.

Charge Indicator Light

Solid Red	The battery is being charged.
Solid Green (with battery connected)	The battery is fully charged.
Solid Green (without battery connected)	The charger is ready.



 ❑ 3. Open the battery cover on the back of the transmitter, and install four AA batteries. Double check the polarity of each battery before replacing the battery cover.

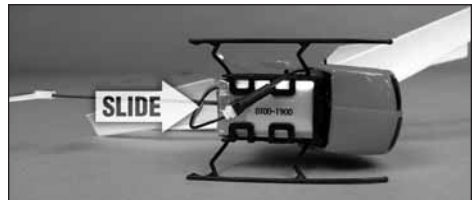

❑ 4. Place the helicopter on its side and slide the battery into the battery compartment. Connect the flight battery and place the helicopter onto a flat surface.



 
Your AXE CXn helicopter has a safe start feature built in that prevents the motor from activating unless the collective stick has been lowered to the lowest position. If the motor won't run and turn the main blades, please make sure the collective stick is all the way down and leave it there for a couple of seconds. Then try moving the stick up slowly.

□ 5. Turn the transmitter on and allow the helicopter to remain still for 10 seconds. Always step 15 feet [4.5m] away from the AXE CXn Helicopter before operating the throttle.


□ 6. Transmitter Controls

Your AXE CXn is now ready to fly. Please refer to the flying instructions on page 16 in the manual before operating the model.


Climbs

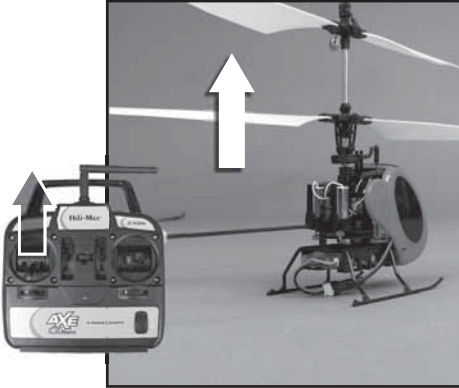

Moves Forward

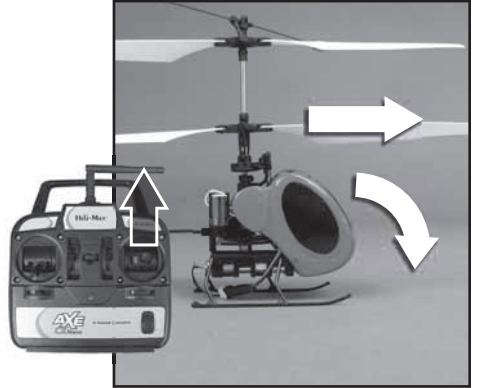 

Nose Rotates Left

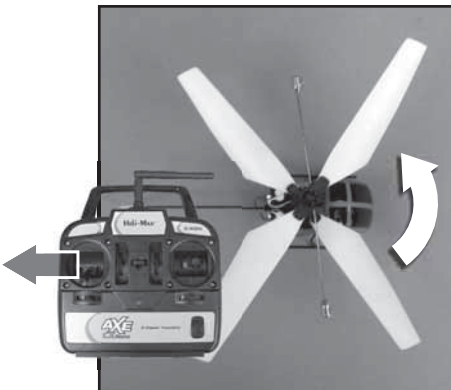 

Moves Left

