


TAIL WHEEL ASSEMBLY

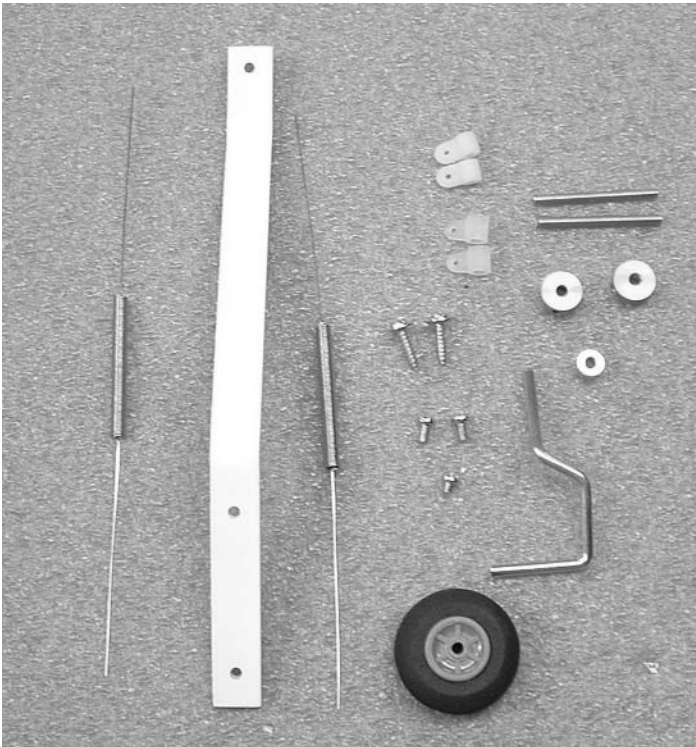


1. Collect the following items
 - (2) Springs
 - (4) 1/8 Adjustable Horn Brackets
 - (1) Tail Wheel Bracket
 - (1) Tail Wheel Axle
 - (1) Tail Wheel
 - (1) Wheel collar with Set Screw
 - (2) 6-32 all threaded short shafts
 - (2) Brass Tail Wheel Axle Supports with Set Screws



1. Locate the tail wheel axle and one of the brass tail wheel supports with only one threaded hole.
 - Insert the axle through the brass tail wheel support and tighten the set screw like shown above.


Note: Use thread lock on the set screw.

- Insert the axle shaft through the hole on the tail wheel bracket.

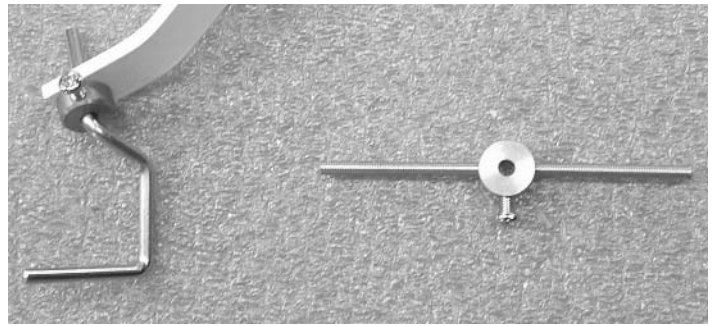


2. Thread the two threaded rods in to the brass axle.

Note: Use thread lock on the set screw.

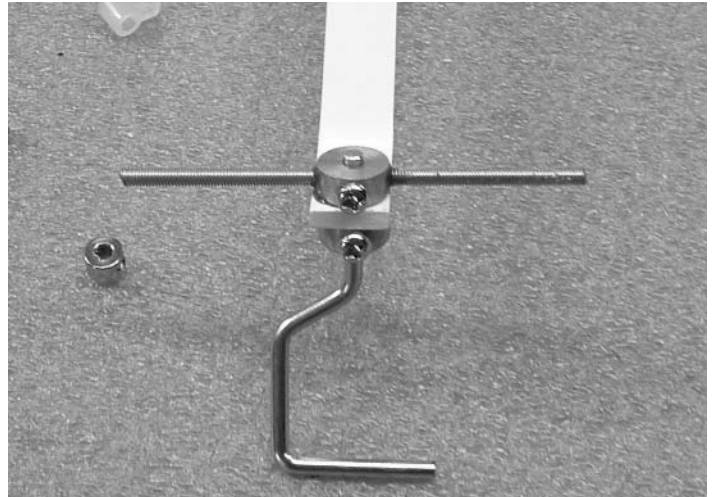

3. Place the brass tail wheel support on the top of the axle and tighten the set screw like shown above

Note: Use thread lock on the set screw.

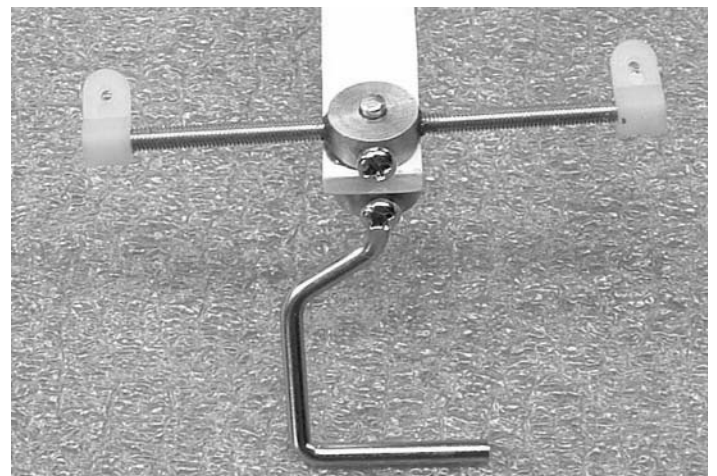

3. Thread on to each end of the threaded rod a 1/8" adjustable control horn