



Ring and Pinion Gear Mesh Setup: Using the included shims, adjust the gear mesh for smooth rotation without **any** play (should feel slightly snug when rotating by hand).

The number of shims needed, and the side on which they must be placed, may vary.

IMPORTANT!

Apply a 1/4" strip of the included grease to three locations on the ring gear.