



www.revell.com

Instructions



Install batteries into the charger.

1. Open the battery compartment cover by removing the screw using a Phillips screwdriver.
2. Install two new "AA" alkaline batteries. Make sure the +/- polarities match those indicated inside the compartment.
3. Replace the cover and reinstall the screw.



Charge your plane's battery.

NOTE: Keep your hands and all objects away from the propeller when charging and launching your Crazy Wings.

1. Make sure the power switch on the bottom of the plane is OFF.
2. Insert the white charge jack into the charging port on the plane as shown. The jack inserts properly only one way. It should go in easily, without forcing.
3. Allow the plane's battery to charge for 5-10 seconds. Then, remove the charger.
4. With your fingers away from the propeller, turn the power switch to ON. Now you're ready to launch.



Launch your Crazy Wings.

1. Grasp your plane by the fuselage with its spinning propeller pointing away from you.
2. Gently toss it into the air at a slight upward angle — and watch it fly!

Crazy Wings™

It's even more fun to fly more than one! Get both cool Crazy Wings designs:



Battery Safety Information

- Batteries should always be replaced by an adult.
 - Do not mix old and new batteries.
 - Do not mix different types of batteries — such as alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Use only the recommended battery types.
 - Install batteries following the correct polarity.
 - Exhausted batteries should be removed from the toy.
 - Do not short-circuit the supply terminals.
 - Save these cautions for future reference.
- Caution:** Do not dispose of batteries into fire. The batteries may leak or explode.

IMPORTANT SAFETY INFORMATION

Keep the aircraft clear from your face, eyes, and hair at all times. Keep your fingers away from the moving propeller. Do not launch the aircraft near other people or animals. Use caution; make sure people around you know that you are playing with the aircraft. Stay away from obstacles and electrical hazards. This is an outdoor airplane, designed to be flown in little or no wind. Find a large, open area without trees in which to fly. Please retain this information for future reference.

ADULT SUPERVISION IS RECOMMENDED.