

# 4PK-2.4G

# SuperR



## 4PK SuperR

# INSTRUCTION MANUAL

CE 0682 ①

1M23N20723

# Futaba®

Digital Proportional R/C System

Thank you for purchasing a Futaba 4PK SuperR-2.4GHz system.  
Before using your 4PK SuperR-2.4GHz system, read this manual carefully in order  
to use your R/C set safely.

After reading this manual, store it in a safe place.

## **Application, Export, and Modification**

1. This product may be used for models only. It is not intended for use in any application other than the control of models for hobby and recreational purposes.
2. Exportation precautions:
  - (a) When this product is exported from the country of manufacture, its use is to be approved by the laws governing the country of destination for devices that emit radio frequencies. If this product is then re-exported to other countries, it may be subject to restrictions on such export. Prior approval of the appropriate government authorities may be required. If you have purchased this product from an exporter outside your country, and not the authorized Futaba distributor in your country, please contact the seller immediately to determine if such export regulations have been met.
  - (b) Use of this product with other than models may be restricted by Export and Trade Control Regulations, and an application for export approval must be submitted.
3. Modification, adjustment, and replacement of parts: Futaba is not responsible for unauthorized modification, adjustment, and replacement of parts on this product. Any such changes may void the warranty.

## **Compliance Information Statement (for U.S.A.)**

This device, trade name Futaba Corporation of America, model number R614FF, complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The responsible party for the compliance of this device is:

Futaba Service Center

3002 N Apollo Drive Suite 1, Champaign, IL 61822 U.S.A.

TEL (217)398-8970 or E-mail: support@futaba-rc.com (Support)

TEL (217)398-0007 or E-mail: service@futaba-rc.com (Service)

## Battery Recycling (for U.S.A.)



The RBRC™ SEAL on the (easily removable) nickel-cadmium battery and nickel-metal-hydride battery contained in Futaba products indicates that Futaba Corporation of America is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The

RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries and nickel-metal-hydride batteries into the trash or municipal waste system, which is illegal in some areas.

You may contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on NiCd/NiMH battery recycling in your area. Futaba Corporation of America's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

**NOTE:** Our instruction manuals encourage our customers to return spent batteries to a local recycling center in order to keep a healthy environment.

RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.

- 
- No part of this manual may be reproduced in any form without prior permission.
  - The contents of this manual are subject to change without prior notice.
  - This manual has been carefully written. Please write to Futaba if you feel that any corrections or clarifications should be made.
  - Futaba is not responsible for the use of this product.

## **For Your Safety As Well As That Of Others.....8**

<b>Explanation of Symbols.....</b>	<b>8</b>
<b>2.4GHz System Precautions.....</b>	<b>8</b>
<b>High Speed Mode Precautions.....</b>	<b>8</b>
<b>Operation Precautions.....</b>	<b>9</b>
<b>Ni-MH/Ni-Cd Battery Handling Precautions.....</b>	<b>10</b>
<b>Storage and Disposal Precautions.....</b>	<b>11</b>
<b>Other Precautions.....</b>	<b>11</b>

## **Before Using .....12**

<b>Features.....</b>	<b>12</b>
<b>Set Contents.....</b>	<b>14</b>
<b>TransmitterT4PKSR.....</b>	<b>15</b>
T4PKSR Nomenclature.....	15
Power & Display Switch.....	16
Power Off Forgotten Alarm.....	16
High Voltage Alarm.....	16
Low Battery Alarm.....	16
Digital Trim Operation.....	17
Grip Dial Operation.....	17
Mechanical ATL Adjustment.....	18
Wheel & Trigger Tension Adjustment.....	18
Trigger Slide Adjustment.....	19
Ni-MH Battery Replacement.....	19
Charging The HT5F1700B Battery.....	20
Grip Vibrator.....	21
Display when power switch turned on.....	21
Edit button lock and trim/dial lock.....	22
Total Timer.....	22
LCD Screen Contrast.....	22
Changing wheel position and modifying for left-hand use.....	23
Installing the accessory neck strap hook.....	27
<b>About Transmitter Antenna and Receiver.....</b>	<b>28</b>
About Transmitter Antenna.....	28
Receiver Nomenclature.....	29
How to link the transmitter and the receiver.....	29
Receiver Installation.....	30

**Installation .....31**

**Receiver and Servo Connections .....31**

**Installation Safety Precautions .....32**

**For Your Safety  
As Well As  
That Of Others**

**Initial Set-Up .....35**

**Preparations (Transmitter).....35**

**Before  
Using**

**Function Map .....38**

**Menu Selection .....38**

Function Menu Screen ..... 38

Menu Screen..... 39

Custom Menu..... 40

**Direct Selection .....42**

List of functions by menu type..... 44

Functions List..... 45

**Installation**

**Initial  
Set-Up**

**Functions .....46**

**Receiver Type/Servo Response Mode "RXSYS".....46**

Receiver type (C1/C2), Servo response (HIGH/NORMAL) select

**Servo Reverse "REV" .....47**

Servo operation reversing

**Subtrim "SUBTR" .....48**

Servo center position fine adjustment

**End Point Adjuster "EPA" .....49**

End point adjustment

**Throttle Acceleration "ACCEL" .....52**

Function which adjusts the movement characteristic from the throttle neutral position

**Fail Safe/Battery Fail Safe Function "F/S" .....54**

Fail safe, battery fail safe

**Steering Exponential "STEXP" .....56**

Steering operation curve adjustment

**Throttle Exponential "THEXP" .....57**

Throttle curve adjustment

**Steering Speed "STSPD" .....61**

Steering servo delay

**Throttle Speed "THSPD" .....63**

Throttle servo delay

**Function  
Map**

**Functions**

**Reference**

<b>Start Function / Engine Cut "START" .....</b>	<b>66</b>
Throttle preset at start function/ engine cut off by switch	
<b>A.B.S. Function "A.B.S" .....</b>	<b>69</b>
Pulse brake	
<b>Brake Mixing "BRAKE" .....</b>	<b>74</b>
Front and rear independent brake control for 1/5GP car, etc.	
<b>Boat Mode "BOAT" .....</b>	<b>78</b>
Boat, etc. brake operation stop/outboard engine tilt mixing	
<b>Throttle Mode "THMOD" .....</b>	<b>80</b>
Neutral brake function	
Throttle servo forward and brake operation proportion setting	
<b>Idle-Up "IDLUP" .....</b>	<b>82</b>
Idle up at engine start	
<b>Programmable Mixes 1/2 "P-MIX" .....</b>	<b>83</b>
Programmable mixes between arbitrary channels	
<b>Special Mixing "S-MIX" .....</b>	<b>86</b>
4WS Mixing "AWS MIX" .....	88
Dual ESC Mixing "DUAL ESC" .....	90
Gyro Mixing "RYRO MIX" .....	92
CPS-1 Mixing "CPS MIX" .....	94
<b>Function Select Switch "SWTCH" .....</b>	<b>96</b>
Selection of functions operated by push switches	
<b>Function Select Dial "DIAL" .....</b>	<b>98</b>
Selection of functions operated by digital dial and digital trim	
<b>Timer Function "TIMER" .....</b>	<b>100</b>
Up, Fuel down, lap, or lap navigation timer	
<b>Lap List "LAP-L" .....</b>	<b>107</b>
Lap timer data (lap time, average lap time) check	
<b>Model Select "M-SEL" .....</b>	<b>108</b>
Model memory call	
<b>Model Name "NAME" .....</b>	<b>109</b>
Model memory name set/modify, username set/modify	
<b>Model Copy "M-COP" .....</b>	<b>110</b>
Model memory copy	
<b>Model Reset "M-RES" .....</b>	<b>112</b>
Model memory reset	
<b>Menu Type Select .....</b>	<b>113</b>
Function menu type selection	
<b>ESC Link Function "MCLNK" .....</b>	<b>114</b>
Special function, Futaba ESC (MC960CR, MC851C, MC602C, MC402CR...etc.)	

**System Functions "SYSTM" ..... 122**

- Battery type setting
- Liquid crystal screen backlighting display mode setup
- Setting of ON time
- Liquid crystal screen contrast adjustment
- Buzzer sound tone adjustment
- Pilot lamp display color setup
- Initial screen display mode setting
- Second condition setting
- The power off forgotten alarm setting
- 2.4GHz band setting
- Quick EPA
- About Second condition function

**Data Transfer "DTTRN" ..... 126**

- The T4PKSR model memory data to another T4PKSR

**Adjuster "ADJST" ..... 128**

- Steering wheel and throttle trigger correction

**Vibrator Function "VIBRA" ..... 130**

- Vibrator setting

**Steering Dual Rate "D/R" ..... 131**

- Steering angle adjustment while running (dual rate)

**ATL Function "ATL" ..... 132**

- Brake side adjustment

**Channel 3/4 Position "CH3", "CH4" ..... 133**

- Channel 3/4 servo operation position set/check

**Servo View "SERVO" ..... 134**

- Displays servo operation on a bar graph

**Reference ..... 135**

**Specifications ..... 135**

**Optional Parts ..... 136**

**Warning Displays ..... 138**

**When requesting repair (For U.S.A.)..... 140**

**For Your Safety  
As Well As  
That Of Others**

**Before  
Using**

**Installation**

**Initial  
Set-Up**

**Function  
Map**




**Functions**

**Reference**

Use this product in a safe manner. Please observe the following safety precautions at all times.

## Explanation of Symbols

The parts of this manual indicated by the following symbols are extremely important and must be observed.

Symbols	Explanation
 <b>Danger</b>	Indicates a procedure which could lead to a dangerous situation and may cause death or serious injury if ignored and not performed properly.
 <b>Warning</b>	Indicates procedures which may lead to dangerous situations and could cause death or serious injury as well as superficial injury and physical damage.
 <b>Caution</b>	Indicates procedures that may not cause serious injury, but could lead to physical damage.

Symbols:

 : Prohibited

 : Mandatory

## 2.4GHz System Precautions

### **Warning**

 Special attention should be paid before turning on the system while other cars are running or other airplanes are flying because the 2.4GHz RC system could potentially affect them.

 Be sure to set the Fail Safe function.

## High Speed Mode Precautions

### **Caution**

 When using the T4PKSR in the high speed (HIGH SPEED) mode, always use it under the following conditions:

**Servos** :Futaba digital servo (including BLS Series brushless servos)

**Receiver's battery** :Matched to the ratings of the receiver and connected digital servo (dry cell battery cannot be used).

**Transmitter mode** :HIGH SPEED mode (See p.46 for setting method.)

Under other conditions, the set will not operate, or the specified performance will not be displayed even if it operates. In addition, it may cause servo trouble. Futaba will not be responsible for damage, etc. caused by combination with the products of other companies.

In addition, the FSU Fail Safe Unit cannot be used because the system is different. Use the fail safe function of the transmitter.

 When using analog servos, always switch the T4PKSR servo response to the NORMAL mode.

**Transmitter mode** :NORMAL mode (See p.46 for setting method.)

**Receiver's battery** :Matched to the ratings of the receiver and connected servo.

The set cannot operate in the HIGH SPEED mode. Operation in this mode will cause trouble with the servo and other equipment.

Digital servos (including BLS Series brushless servos) can also be used in the NORMAL mode.



# Operation Precautions

## Warning

**⊘ Do not operate outdoors on rainy days, run through puddles of water or use when visibility is limited.**  
Should any type of moisture (water or snow) enter any component of the system, erratic operation and loss of control may occur.

**⊘ Do not operate in the following places.**  
-Near other sites where other radio control activity may occur.  
-Near people or roads.  
-On any pond when passenger boats are present.  
-Near high tension power lines or communication broadcasting antennas.  
Interference could cause loss of control. Improper installation of your Radio Control System in your model could result in serious injury.

**⊘ Do not operate this R/C system when you are tired, not feeling well or under the influence of alcohol or drugs.**  
Your judgment is impaired and could result in a dangerous situation that may cause serious injury to yourself as well as others.

**⊘ Do not touch the engine, motor, speed control or any part of the model that will generate heat while the model is operating or immediately after its use.**  
These parts may be very hot and can cause serious burns.

**❗ Extend the transmitter antenna to its full length.**  
If the transmitter antenna is not fully extended, the operating range of the radio will be reduced.

**❗ Always perform an operating range check prior to use.**  
Problems with the radio control system as well as improper installation in a model could cause loss of control.  
(Simple range test method)  
Have a friend hold the model, or clamp it down or place it where the wheels or prop cannot come in contact with any object. Walk away and check to see if the servos follow the movement of the controls on the transmitter. Should you notice any abnormal operation, do not operate the model. Also check to be sure the model memory matches the model in use.

**❗ Check the transmitter antenna to be sure it is not loose.**  
If the transmitter antenna works loose, or is disconnected while the model is running, signal transmission will be lost. This will cause you to lose control of the model. Rotate the antenna softly with your fingers when checking whether it is loosely or firmly fixed. Do not screw the antenna forcibly. Otherwise its antenna-holding part can be damaged.

**❗ Turning on the power switches.**  
Always check the throttle trigger on the transmitter to be sure it is at the neutral position.  
1. Turn on the transmitter power switch.  
2. Turn on the receiver or speed control power switch.  
**Turning off the power switches**  
Always be sure the engine is not running or the motor is stopped.  
1. Turn off the receiver or speed control power switch.  
2. Then turn off the transmitter power switch.  
If the power switches are turned off in the opposite order, the model may unexpectedly run out of control and cause a very dangerous situation.

**❗ When making adjustments to the model, do so with the engine not running or the motor disconnected.**  
You may unexpectedly lose control and create a dangerous situation.

## **Caution**

(Fail safe function)

### Before running (cruising), check the fail safe function.

Check Method; Before starting the engine, check the fail safe function as follows:

- 1) Turn on the transmitter and receiver power switches.
- 2) Wait at least one minute, then turn off the transmitter power switch. (The transmitter automatically transfers the fail safe data to the receiver every minute.)
- 3) Check if the fail safe function moves the servos to the preset position when reception fails.  
The fail safe function is a safety feature that minimizes set damage by moving the servos to a preset position when reception fails. However, if set to a dangerous position, it has the opposite effect. When the reverse function was used to change the operating direction of a servo, the fail safe function must be reset.  
Setting example: Throttle idle or brake position

## Ni-MH / Ni-Cd Battery Handling Precautions

(Only when Ni-MH/Ni-Cd batteries are used)

## **Warning**

### Never plug the charger into an outlet of other than the indicated voltage.

Plugging the charger into the wrong outlet could result in an explosion or fire.

### Never insert or remove the charger while your hands are wet.

You may get an electric shock.

### Do not use the transmitter's battery, HT5F1700B, as the receiver's battery.

Since the transmitter's battery has an overload protection circuit, the output power will be shut down when the high current load is applied. This may result in runaway or fatal crash.

### Always check to be sure your batteries have been charged prior to operating the model.

Should the battery go dead while the model is operating, loss of control will occur and create a very dangerous situation.

### To recharge the transmitter battery, use the special charger made for this purpose.

Overcharging could cause the battery to overheat, leak or explode. This may lead to fire, burns, loss of sight and many other types of injuries.

## **Caution**

### Do not use commercial AA size Ni-MH and Ni-Cd batteries.

Quick charging may cause the battery contacts to overheat and damage the battery holder.

### Do not short circuit the battery terminals.

A short circuit across the battery terminals may cause abnormal heating, fire and burns.

### Do not drop the battery or expose it to strong shocks or vibrations.

The battery may short circuit and overheat; electrolyte may leak out and cause burns or chemical damage.

### When the model is not being used, always remove or disconnect the battery.

Leaving the battery connected could create a dangerous situation if someone accidentally turns on the receiver power switch. Loss of control could occur.

ⓘ Always keep the charger disconnected from the outlet while it is not in use.

## Storage and Disposal Precautions

### ⚠ Warning

⊘ Do not leave the radio system or models within the reach of small children.

A small child may accidentally operate the system. This could cause a dangerous situation and injuries. Ni-Cd batteries can be very dangerous when mishandled and cause chemical damage.

⊘ Do not throw Ni-MH/Ni-Cd batteries into a fire. Do not expose batteries to extreme heat. Also do not disassemble or modify a battery pack.

Overheating and breakage will cause the electrolyte to leak from the cells and cause skin burns, loss of sight, and other injuries.

ⓘ When the system will not be used for any length of time, store the system with HT5F1700B batteries in a discharged state. Be sure to recharge the batteries prior to the next time the system is used.

If the batteries are repeatedly recharged in a slightly discharged state, the memory effect of the Ni-Cd battery may considerably reduce the capacity. A reduction in operating time will occur even when the batteries are charged for the recommended time. (After discharge to 1cell E.V.=1V)

#### <Ni-MH/Ni-Cd Battery Electrolyte>

The electrolyte in Ni-MH/Ni-Cd batteries is a strong alkali. Should you get even the smallest amount of the electrolyte in your eyes, DO NOT RUB. Wash immediately with water, and seek medical attention at once. The electrolyte can cause blindness. If electrolyte comes in contact with your skin or clothes, wash with water immediately.

### ⚠ Warning

⊘ Do not store your R/C system in the following places.

- Where it is extremely hot or cold.
- Where the system will be exposed to direct sunlight.
- Where the humidity is high.
- Where vibration is prevalent.
- Where dust is prevalent.
- Where the system would be exposed to steam and condensation.

Storing your R/C system under adverse conditions could cause deformation and numerous problems with operation.

ⓘ If the system will not be used for a long period of time, remove the batteries from the transmitter and model and store in a cool, dry place.

If the batteries are left in the transmitter, electrolyte may leak and damage the transmitter. This applies to the model also. Remove the batteries from it also to prevent damage.

#### <Ni-MH/Ni-Cd Battery Recycling>

A used battery is a valuable resource. Insulate the battery terminals and dispose of the battery by taking it to a battery recycling center.

## Other Precautions

### ⚠ Caution

⊘ Do not expose plastic parts to fuel, motor spray, waste oil or exhaust.

The fuel, motor spray, waste oil and exhaust will penetrate and damage the plastic.

ⓘ Always use only genuine Futaba transmitters, receivers, servos, ESCs (electronic speed controls), Ni-MH/Ni-Cd batteries and other optional accessories.

Futaba will not be responsible for problems caused by the use of other than Futaba genuine parts. Use the parts specified in the instruction manual and catalog.

## Features

**-2.4GHzSS (Spread Spectrum) radio communication system**

Frequency channel setting is unnecessary: Channel shifting takes place within the 2.4GHz band automatically. This system minimizes the interference from other 2.4GHz systems.

**-Model memory for 40 models**

Model names can use up to 10 letters, numbers, and symbols, so that logical names may be used. A model memory with different setups can be created by using the model copy function.

**-Two function selection modes: Menu Selection and Direct Selection**

The setup screens are called from menu screens. The menu screen can be selected from among 4 levels (LEVEL1/LEVEL2/LEVEL3/BIGCAR).

Frequently used (high degree of urgency) functions can be assigned to direct selection buttons which quickly call the assigned function. (8 functions)

**-Menu customizing**

Function menus can be customized as desired. The menu order, display function and other functions used by individual models only can be displayed.

**-Brake mixing for large cars (BRAKE)**

Brake mixing of the front and rear wheels of 1/5GP and other large cars can be adjusted independently.

**-4WS mixing for crawlers and other 4WS type (4WS MIX)**

This function can be used with crawlers and other 4WS type vehicles.

**-Dual ESCs mixing for crawlers cars (DUAL ESC)**

ESC at the front and rear are controlled independently.

**-Gyro mixing (GYRO MIX)**

The sensitivity of Futaba car rate gyros can be adjusted from the T4PKSR.

**-CPS-1 mixing (CPS MIX)**

LED lighting and flashing control using our CPS-1 channel power switch can be matched to steering and throttle operation by switch only.

**-Anti-skid braking system (A.B.S.)**

This function applies the brakes so that the tires of gasoline engine cars, etc. do not lose their grip on the road even when braking at corners.

**-Throttle acceleration (ACCEL)**

Gasoline engine cars have a time lag before the clutch and brakes become effective. The TH-ACCEL function reduces this time lag.

**-Throttle speed (THSPD)**

Sudden trigger operation on a slippery road surface will only cause the tires to spin and the model to not accelerate smoothly. By setting the throttle speed function, operation can be performed smoothly and easily. It also suppresses battery consumption.

**-Start function (START)**

A pre-set throttle position, less than full throttle, to be used for the initial acceleration off the line without having wheel spin. When the trigger is released, auto-start is turned off and

throttle operates normally again.

### **-Steering speed (STSPD)**

When you sense that the steering servo is too fast, etc., the servo operating speed (direction that suppresses the maximum speed) can be adjusted.

### **-Racing timer (TIMER)**

The lap timer can record 99 lap times, total time, and average lap time. The timer can also be started automatically by trigger operation. The race time and audible alarm can be set. The 4PK also has a navigation timer effective during practice runs. The target lap and re-/fueling time are indicated by an audible alarm. An up timer and down timer are also provided.

### **-Digital trim w/reset function**

The current trim position is displayed on the LCD screen. The operating amount of 1 step can also be adjusted.

Trim operation has no effect on the maximum travel of the steering and throttle servos.

### **-Function select dial function (DIAL)**

This function assigns functions to dials (digital trim, grip dial, knob). The step amount and operating direction can also be adjusted. Trim positioning at each model call is unnecessary because all the dials are digital.

### **-Function select switch function (SWTCH)**

This function assigns functions to 3 switches. The operating direction can also be set.

### **-MC-Link**

This is a dedicated function which allows setting of the contents of the Link software which makes possible Futaba speed controller (ESC), MC960CR, MC950CR, MC850C, MC851C, MC602C, MC402CR, etc. variable frequency and other data changes by PC at the T4PKSR.

### **-Edit button lock & trim/dial lock functions**

Lock functions which prohibit setting and operation by transmitter edit buttons, trim, and dials are provided.

### **-Wheel & Trigger position can be changed**

The wheel position can be offset by using an accessory APA wheel position offset adapter. The wheel angle can also be adjusted.

The position of the throttle trigger can be moved forward and backward.

### **-Left-handed support**

The left and right installation direction of the wheel section can be reversed.

### **-Tension adjustment function**

The tension of the steering wheel & throttle trigger springs can be adjusted from the outside.

### **-Mechanical ATL Adjustment**

Make this adjustment when you want to decrease the total travel of the brake (push) side of the throttle trigger.

### **-Display switch**

Display switch allows function setup without transmitting.

### **-Vibrator built into the grip**

The vibrator can be operated at racing timer lap navigation, time-up, and low battery alarm.

### **-7-color LED pilot lamp**

Your favorite color can be selected.

# Set Contents

After opening the box, first check if the contents conform to the following. The contents depend on the set as shown below.

Before Using

<b>Transmitter</b>	<b>T4PKSR</b>
<b>Receiver</b>	<b>R614FS or R614FF-E</b>
<b>Miscellaneous</b>	<p><b>Transmitter Ni-MH battery pack HT5F1700B</b>  <small>*Installed in transmitter.</small></p> <p><b>Receiver switch</b></p> <p><b>Wheel offset adapter(APA)</b></p> <p><b>Wheel adapter 32deg</b></p> <p><b>Hook</b></p> <p><b>Instruction manual</b></p>

- If any of the set contents are missing, or you have any questions, please contact your dealer.

## Caution

**!** When using the T4PKSR in the high speed (HIGH SPEED) mode, always use it under the following conditions:

**Servos** :Futaba digital servo (including BLS Series brushless servos)

**Receiver's battery** :Matched to the ratings of the receiver and connected digital servo (dry cell battery cannot be used).

**Transmitter mode** :HIGH SPEED mode (See page 46 for setting method.)

Under other conditions, the set will not operate, or the specified performance will not be displayed even if it operates. In addition, it may cause servo trouble. Futaba will not be responsible for damage, etc. caused by combination with the products of other companies.

In addition, the FSU Fail Safe Unit cannot be used because the system is different. Use the fail safe function of the transmitter.

**!** When using analog servos, always switch the T4PKSR servo response to the NORMAL mode.

**Transmitter mode** :NORMAL mode (See page 46 for setting method.)

**Receiver's battery** :Matched to the ratings of the receiver and connected digital servo.

The set cannot operate in the HIGH SPEED mode. Operation in this mode will cause trouble with the servos and other equipment.


Digital servos (including BLS Series brushless servos) can also be used in the NORMAL mode.

**!** Always use only genuine Futaba transmitters, receivers, servos, ESCs (electronic speed controls), Ni-MH(Ni-Cd) batteries and other optional accessories.

Futaba will not be responsible for problems caused by the use of other than Futaba genuine parts. Use the parts specified in the instruction manual and catalog.

# Transmitter T4PKSR

## Nomenclature

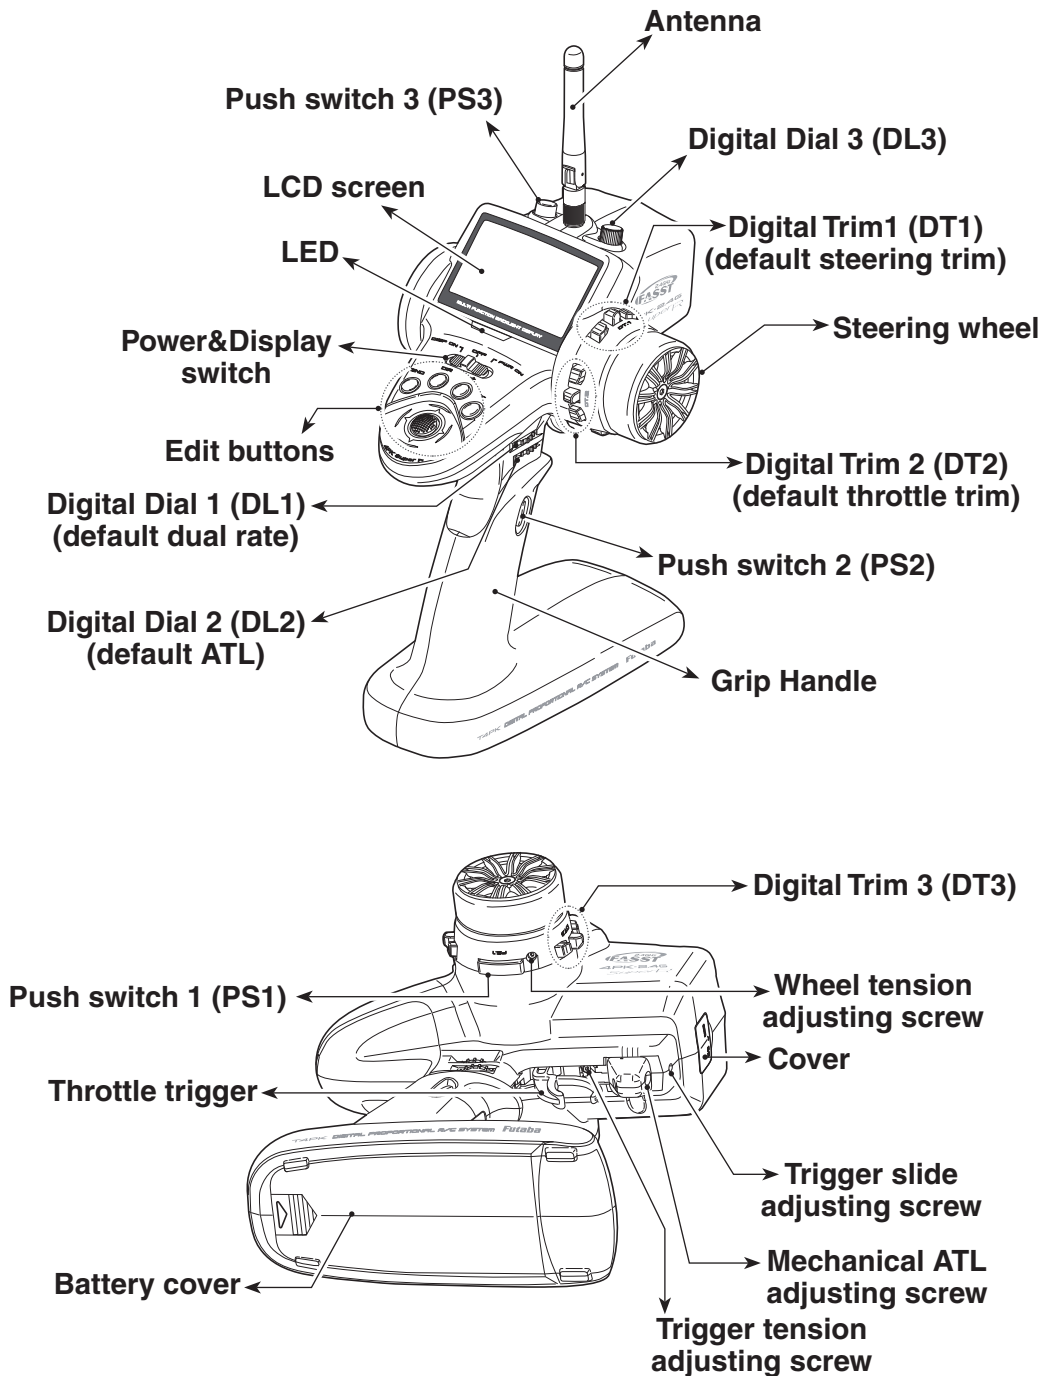

\*The switches, dial, and trimmers in the figure are shown in the initial setting position.


### Precautions when turning the power switch on and off.

When the data is changed using the edit keys or trim levers, wait at least two seconds before turning off the power. If the power is turned off within two seconds after the data is changed, the new data will not be written to memory.

Before Using

## Power & Display Switch

The power switch and display switch of the T4PKSR are integrated. In the PWR ON mode, radio waves are transmitted and in the DISP ON mode, model data, settings can be checked without transmitting radio waves.

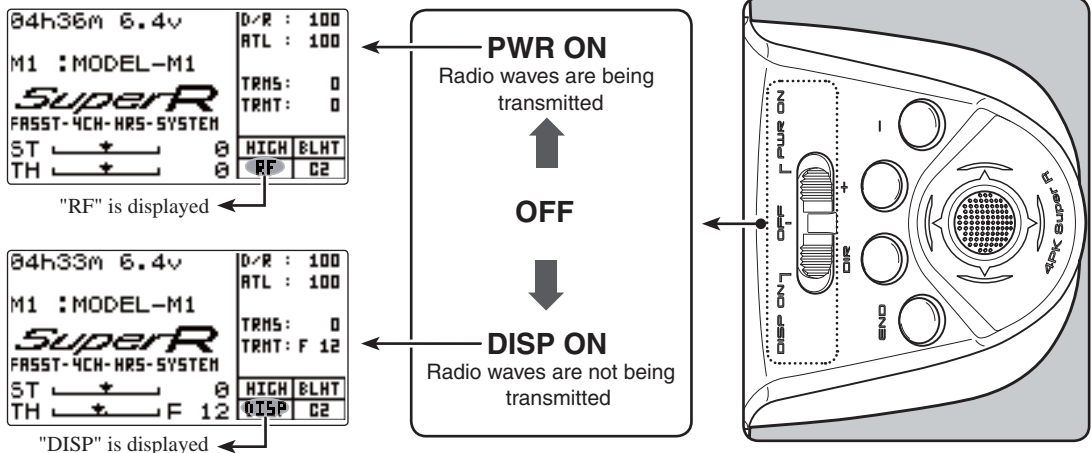


Before Using

## Power Off Forgotten Alarm

When the steering wheel, throttle trigger, push switch, or edit button are not operated for 10 minutes default, an alarm sounds and "NOT OPERATED FOR A LONG TIME" is displayed on the LCD screen.

When the steering wheel, throttle trigger, push switch, or edit button are operated, the alarm is reset. If the system is not to be used, turn off the power.


The function can be deactivated at the system menu (p.122).

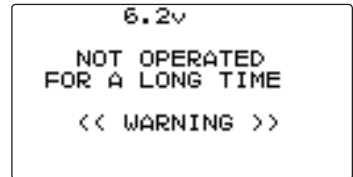

## High Voltage Alarm

If a battery exceeding 8V is used with the T4PKSR, an audible alarm will sound and "HIGH VOLTAGE" will be displayed on the LCD screen.

Immediately remove the battery because it may cause damage to the T4PKSR.

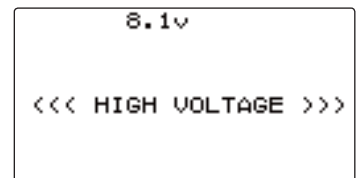

## Low Battery Alarm


If the transmitter battery voltage drops to 5.0V (when using dry cell battery: 4.2V) or less, an audible alarm will sound and "LOW BATTERY" will be displayed on the LCD screen.

Since Ni-MH and LiFe batteries have a different usable range than dry cell batteries, the power source used must be selected at system setting (p.122).

### ⚠ Warning

❗ When a low battery alarm is generated, cease operation immediately and retrieve the model.

If the battery goes dead while in operation, you will lose control of the model.

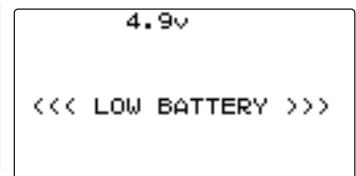





# Digital Trim Operation

(Initial settings: DT1: Steering trim, DT2: Throttle trim, DT3: -----)

Digital trims can be used in 2 ways:

Operating by the lever: Push the lever to the left or right (up or down). Operating by push button switch: Press the push button switch in the desired direction. The current position is displayed on the LCD screen in the bottom three rows of the list. However, this operation cannot be performed when the trim/dial lock (p.22) function is set.

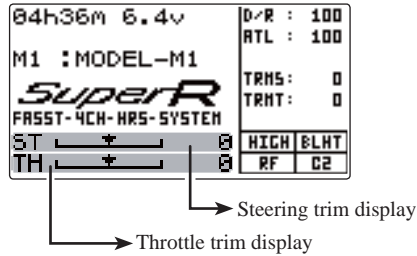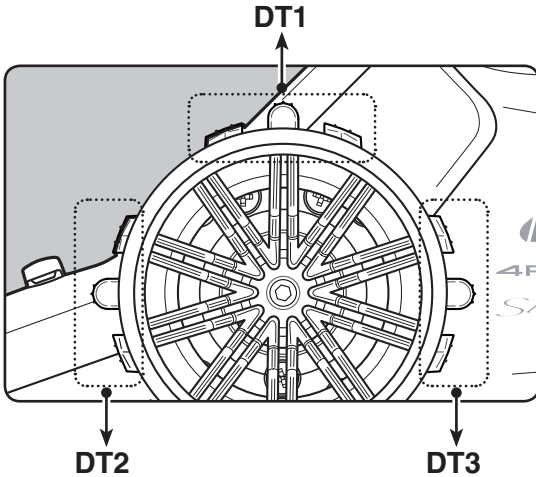

- Each step is indicated by a tone.
- When the trim exceeds the maximum trim adjustment range, the beep will change and the servo will not move any farther. Return to the neutral position (center) by pressing both the push button switches simultaneously for about one second.
- Trim lever adjustments have no effect on the maximum servo travel. This prevents the linkages from binding when adjustments are made.



## Trim Operation

With the center trim feature, trim adjustments have no effect on the maximum servo travel. This prevents the linkages from binding when adjustments are made.

# Grip Dial Operation

(Initial setting: DL1; Steering D/R, DL2; ATL)

Operate the dials by turning them. The current set value is displayed on the LCD screen. However, this operation cannot be performed when the trim/dial lock (p.22) function is set.

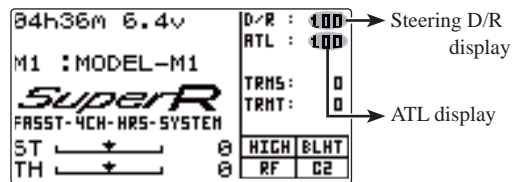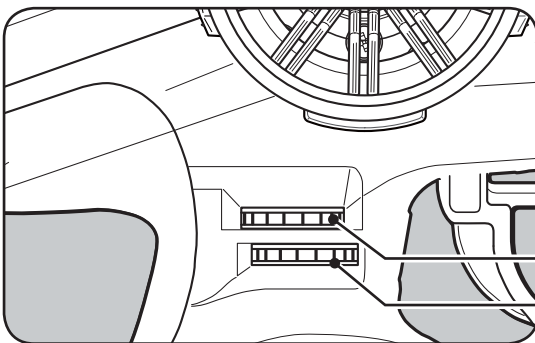

- Each step is indicated by a tone.
- When the trim exceeds the maximum trim adjustment range, the tone will change pitch and the servo will not move any farther.

## Mechanical ATL Adjustment


Make this adjustment when you want to decrease the stroke of the brake (back) side of the throttle trigger for operation feel.

### Adjustment

**1** Using a 2.5mm hex wrench, adjust the trigger brake (reverse) stroke. (The screw moves the throttle trigger stopper.)

- When the screw is turned clockwise, the stroke becomes narrower. Adjust the stroke while watching the screw.

**Mechanical ATL  
adjusting screw**

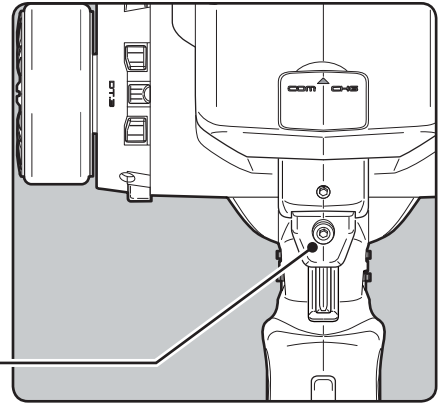

### Note:

Once you have changed the mechanical stroke on the brake side, be sure to adjust the scale of the throttle channel accordingly by using the "Adjuster Function" (p.128). Due to this change, you also need to adjust in most cases the travel of the throttle servo by using "Data Setting."


## Wheel & Trigger Tension Adjustment

Make this adjustment when you want to change the wheel or trigger spring's tension.

### Adjustment

**1** Using a 1.5mm hex wrench, adjust the wheel spring tension by turning the screw inside the adjusting hole in the arrow direction.

- The spring is set to the weakest tension at the factory.
- When the adjusting screw is turned clockwise, the spring tension increases.

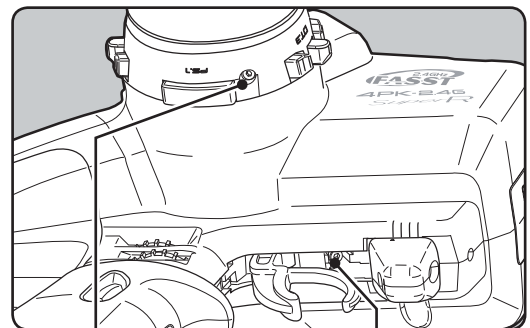

**Wheel tension  
adjusting screw**

**Trigger tension  
adjusting screw**

### Note:


The adjustment range is up to 7 to 8 turns from the fully tightened (strongest) position. If turned farther than this, the adjusting screw may fall out.

## Trigger Slide Adjustment

The throttle trigger position can be moved forward and backward.

### Adjustment

- 1 Using a 2.0mm hex wrench, loosen the trigger slide mounting screw by turning it slightly counterclockwise.
- 2 Using a 2.0mm hex wrench, turn the trigger slide adjusting screw, and adjust the trigger slide position within the marked range. When the adjusting screw is turned clockwise, the trigger slide moves away from the grip handle.
- 3 Retighten the mounting screw loosened at step 1 and fasten the trigger slide.

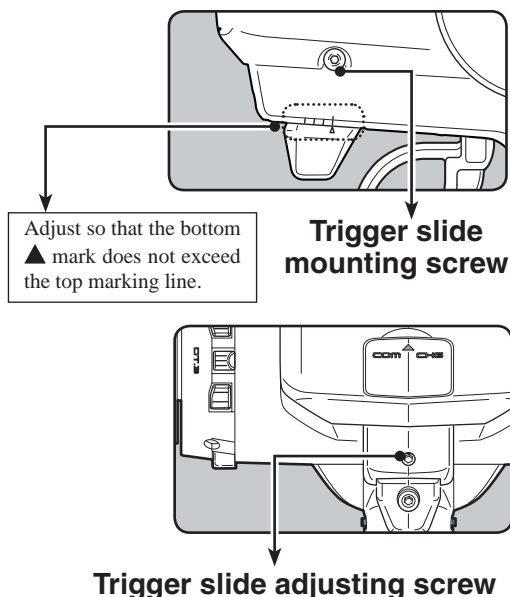

Before Using



## Ni-MH Battery Replacement

The Ni-MH battery is connected by a Futaba J connector so that it can be removed when you will not be using the transmitter for a long time, or when replacing a dead battery with a spare battery.

- Always use only genuine Futaba transmitter batteries.  
HT5F1700B Ni-MH battery  
FT2F2100B Li-Fe battery (Optional)

### Removal

- 1 Slide the transmitter battery cover in the arrow direction while pressing the part shown in the figure.
- 2 Remove the Ni-MH battery and disconnect the connector.
- 3 Insert the connector of the new battery and load the battery into the transmitter.
- 4 Finish by installing the battery cover.

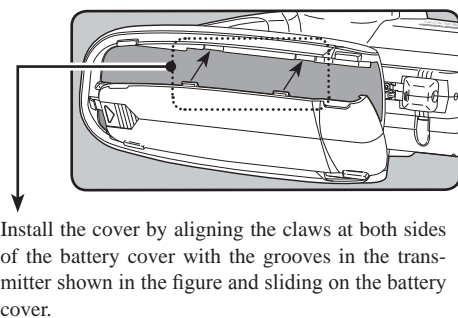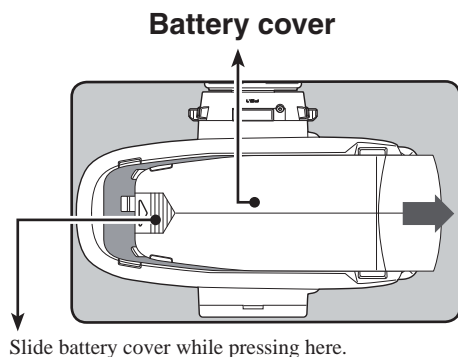

## ⚠ Caution


- 1 Pay full attention so that the battery cover does not pinch the cable of the Ni-MH battery. Pinching the cable by the battery cover can lead to an electrical shortage, fire and abnormal heat generation, which may cause burns and fire disaster.

# Charging The HT5F1700B Battery


## Charging

- 1 Plug the transmitter cord of the special charger into the charging jack on the rear of the transmitter.
- 2 Plug the charger into an AC outlet.
- 3 Check that the charging LED lights.

When charging the HT5F1700B battery with the special charger, allow about 15 hours for charging. If the transmitter has not been used for some time, cycle the battery by charging and discharging it two or three times.

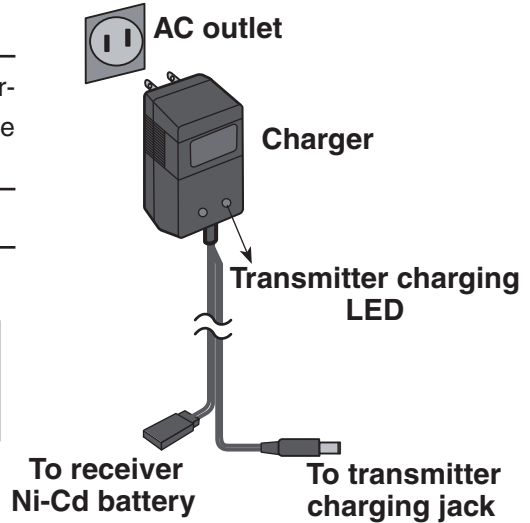

Before Using

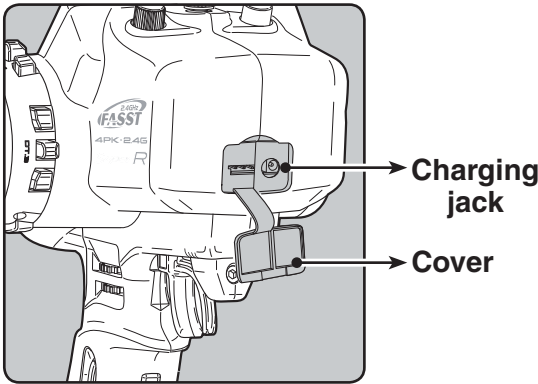

### When using Futaba CR-2000

The HT5F1700B is 5-cells, so, when charging the HT5F1700B battery with Futaba CR-2000 charger, you have to use the RX output side.

### Over current protection

The transmitter charging circuit is equipped with an over current protection circuit (1.7A). If the battery is charged with a quick charger for other than digital proportional R/C sets, it may not be fully charged.

## ⚠ Warning

⊘ Never plug it into an outlet of other than the indicated voltage.  
Plugging the charger into the wrong outlet could result in an explosion or fire.

⊘ Do not insert and remove the charger when your hands are wet.  
It may cause an electric shock.

⚠ Always use the special charger or a quick charger for digital proportional R/C sets to charge a digital proportional R/C set Ni-MH battery.  
Overcharging a Ni-MH battery can result in burns, fire, injuries, or loss of sight due to overheating, breakage, or electrolyte leakage.

## ⚠ Caution


⊘ Never try to recharge a dry cell battery.  
The transmitter may be damaged or the battery electrolyte may leak or the battery may break.

⚠ When the charger is not in use, disconnect it from the AC outlet.  
Do this to prevent accidents and to avoid overheating.

# Grip Vibrator

A vibrator is built into the grip of the T4PKSR. The vibrator vibrates at racing timer lap navigation, time-up, and low battery alarm. (p.130)

## Display when power switch is turned on

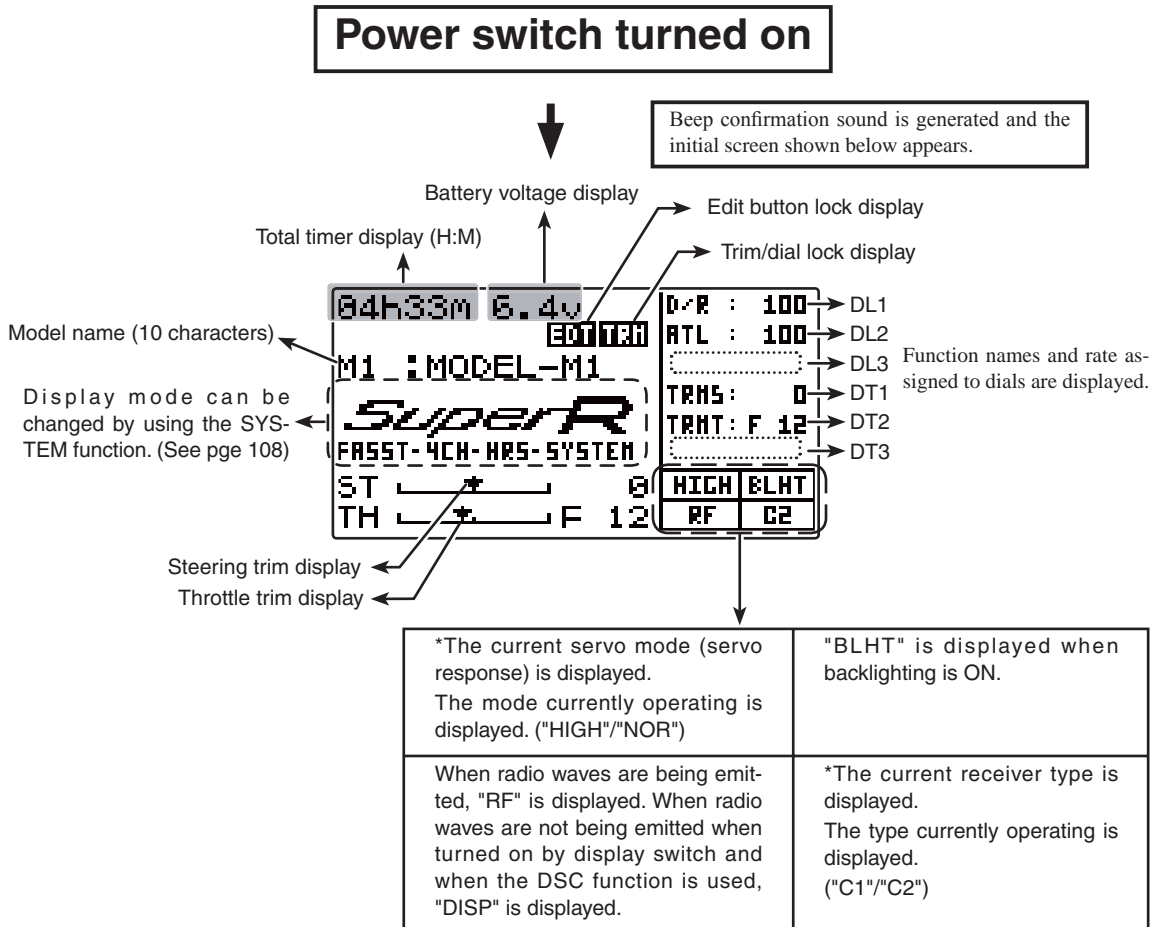

Before Using

### Power supply and voltage display

Dry cell batteries (alkali batteries are recommended) can be used with the optional battery box. However, when using dry cell batteries, set BATT-TYPE in the system menu to DRY 4CELL. When BATT-TYPE is set to DRY 4CELL, the voltage display of the initial screen will change to the **6.1V** symbol.

When using the T4PKSR standard HT5F1700B battery, always set BATT-TYP to NiMH5 LiFe2. (See page 110, for a detailed description of the battery types.)

### User name display

When the (END) button is held down for 1 second or longer at the initial screen, the Futaba logo and user name are displayed for about 2 seconds.

## Edit button lock and trim/dial lock

---

T4PKSR setup and operation by edit button (p.15) and digital trim DT1, DT2, and DT3 and dials DL1, DL2, and DL3 can be prohibited.

### Setting

---

- 1 Edit button lock: When the (+) button is pressed for about 1 second at the initial screen, a confirmation beep is generated and the edit button lock display **EDT** appears on the screen.  
Trim/dial lock: When the (-) button is pressed for about 1 second at the initial screen, a confirmation beep is generated and the trim/dial lock display **TRM** appears on the screen.

### Clearing

---

- 1 Edit button lock and trim/dial lock can be cleared in the initial screen state by the same method as the setting described above. (The edit button lock display **EDT** or trim/dial lock display **TRM** disappears from the screen.)

## Total Timer

---

The total timer shows the accumulated time from last reset.

The total time does not change even when the model changes.

### Reset method

---

- 1 In the initial screen state, hold down the (+) and (-) buttons simultaneously for 1 second.  
\* The total timer display counts up from 1 minute to 99hours 59 minutes.

## LCD Screen Contrast

---

The LCD screen contrast can be adjusted. (For more information, see page 122.)

### Caution

Do not adjust the contrast so that the LCD is too bright or too dark.  
When the display cannot be read due to a temperature change, data cannot be set.

### LCD Screen Temperature Change

In the following cases, the LCD may become difficult to read due to a temperature change.


- On hot summer days and cold winter days, the LCD may be easy to read indoors, but difficult to read outdoors.
- If the contrast is too bright or too dark, temperature changes and lighting conditions may cause the screen to become difficult to read.

## Contrast adjustment from main screen

---


- 1 Turn on the transmitter.
- 2 If the screen is too dark, adjust the contrast by pressing the (-) button while pressing the (JOG) button. If the screen is too light, adjust the contrast by pressing the (+) button while pressing the (JOG) button.

# Changing wheel position and modifying for left-hand use

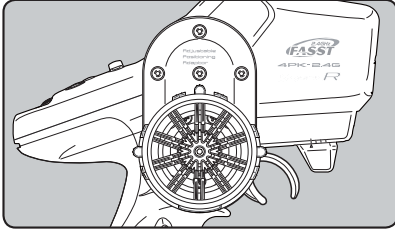

## Changing the wheel position

The wheel position can be offset by using the accessory APA wheel position offset adapter. (See page 24 for the modification method.)

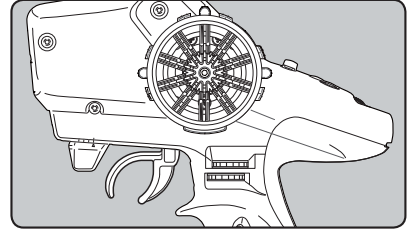

## Modifying for left-hand use

The wheel section left and right installation direction can be reversed. (See page 26 for the modification method.)

## Angle can be adjusted

The angle can be finely adjusted by adjusting the steering wheel unit installation. (See the modification method on the next page for the adjustment details.)

## The operating angle of the wheel can be adjusted

The operating angle of the wheel can be changed from 34 deg to 32 deg by installing the 32 deg wheel adjuster. (See "Removing the steering wheel unit" below for the replacement procedure.)

If you install the 32 deg wheel adapter, be sure to adjust the scale of the steering channel accordingly by using the "Adjuster Function" (p.128).

Before Using


## Removing the steering wheel unit

- Obtain 2.0 and 2.5mm hex wrenches.

**1** Hold the wheel and remove the screw.  
(Using a 2.5 mm hex wrench.)

**2** Pull off the wheel and wheel adapter.  
Since the wheel adapter is 34 deg as standard, install the 32 deg wheel adapter at final installation.


**3** Remove the 3 steering wheel unit mounting screws.  
(Using a 2.0 mm hex wrench.)

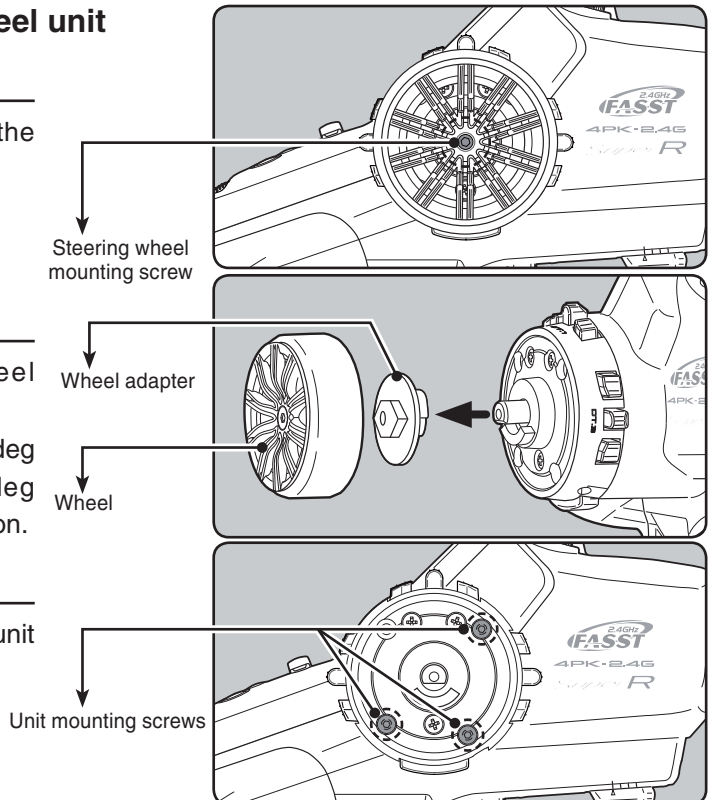

**4** Remove the steering wheel unit.

- Be careful not to stretch the wiring.


**5** Disconnect the steering wheel unit connector.

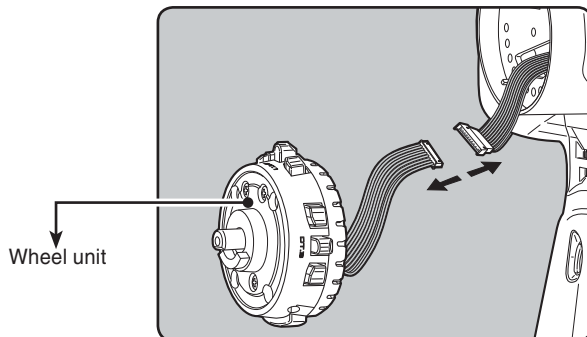


**Installing the accessory APA steering wheel offset adapter**

- Obtain 2.0 and 2.5mm hex wrenches.
- Install the steering wheel unit, removed as described on the preceding page, as follows:
- The length of the screws used at each part differs. When reassembling the steering wheel unit, always use the original screws.


**1** The steering wheel unit connector through the adapter.

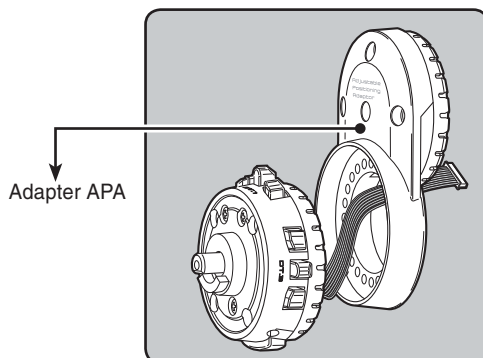

**2** Install the steering wheel unit using the 3 mounting screws.  
(Using a 2.0 mm hex wrench.)

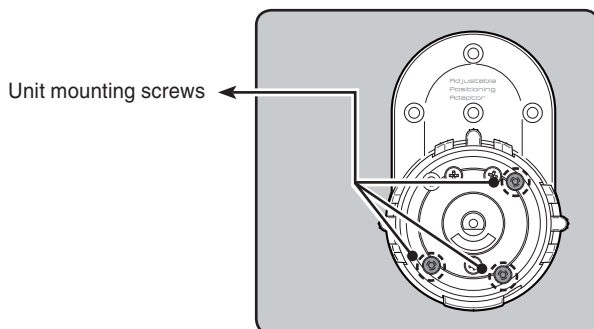



**3** Connect the steering wheel unit connector.  
(Pay close attention to the direction of the connector.)

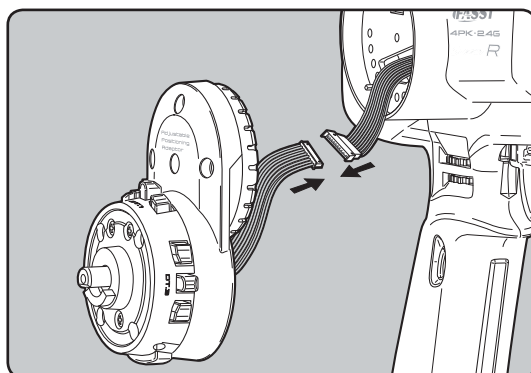



**3** Pull out the wiring as far as possible from between the wheel unit and APA. Stow the surplus pulled out wiring in the transmitter.


- Be careful not to stretch the wiring.

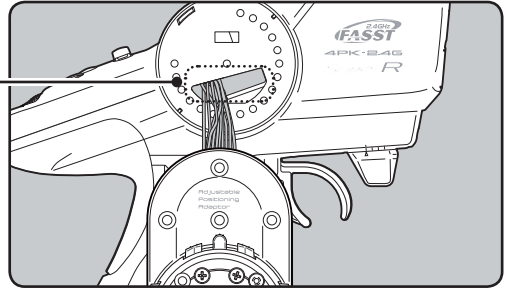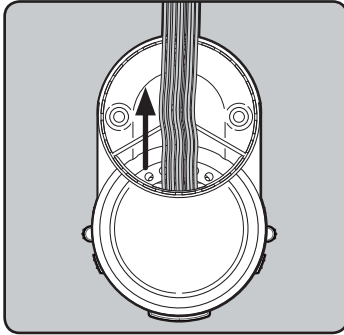

Stow the surplus wiring here.


**4** Install the assembled wheel unit and APA to the transmitter using the screw supplied. The APA mounting screws are in the hook and APA mounting screws bag. Verify the position of the transmitter bottom holes by mounting angle. The screw used depends on the position of the bottom hole.

(Using a 2.0 mm hex wrench.)

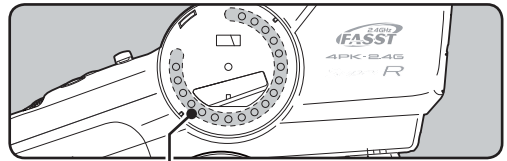

Transmitter bottom hole

\*The figure below is an installation example.

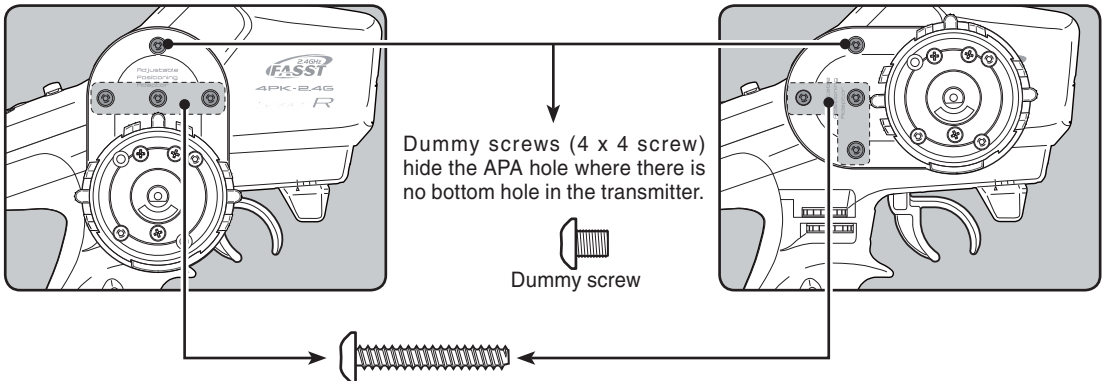


Dummy screws (4 x 4 screw) hide the APA hole where there is no bottom hole in the transmitter.

Dummy screw

Use (3 x 20 tapping screw) to install the APA at the 3 bottom holes in the transmitter

**5** Install the steering wheel using the screw.

(Using a 2.5 mm hex wrench.)

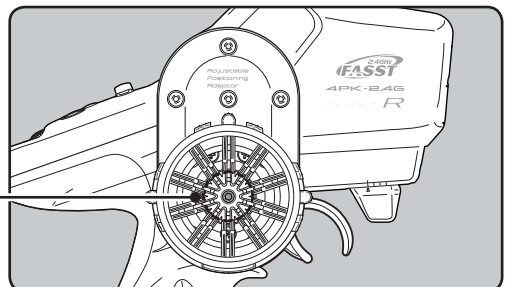


Steering wheel mounting screw

## Modifying for left-hand use


- Obtain 2.0 and 2.5mm hex wrenches.
- Install the steering wheel unit removed as described on the preceding page as follows:

### 1 Remove the wheel section rear cover.

- The rear cover can be easily removed by inserting a coin, etc. into the slot at the bottom of the rear cover.

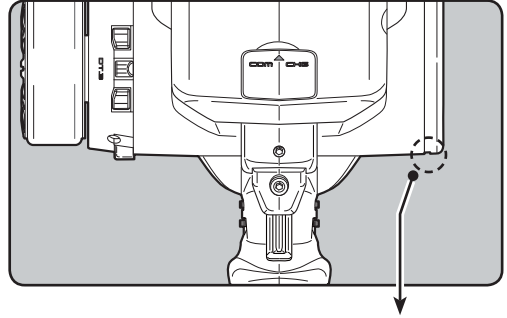


### 2 Push in the disconnected connector so that it can be connected at the opposite side.

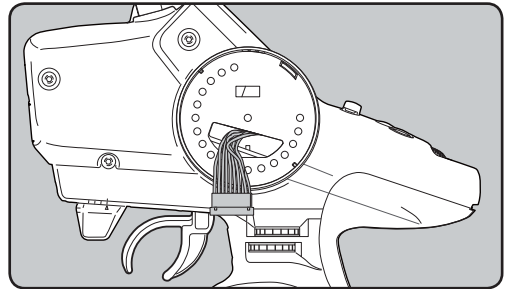


### 3 At the opposite side, connect the steering wheel unit connector and install the steering wheel unit, steering wheel cover, and wheel to their original positions.

- At this time, be sure that the wiring is not pinched between the wheel unit and transmitter.

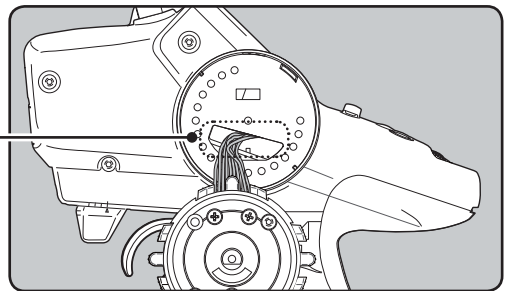

Stow the surplus wiring here.

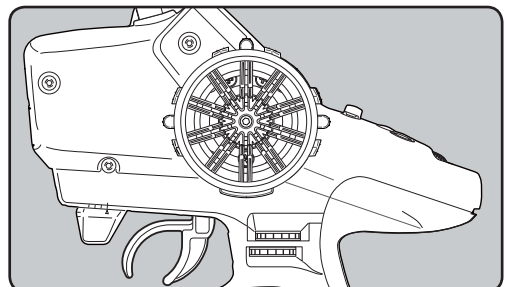


## Installing the accessory neck strap hook

A hook can be installed to the T4PKSR, as required.


The hook is in the hook and APA mounting screws bag supplied with the set.

- Obtain a 2.5mm hex wrench.
- Pull up the grip rubber.


**1** Pull up the bottom of the grip rubber as shown in the figure.

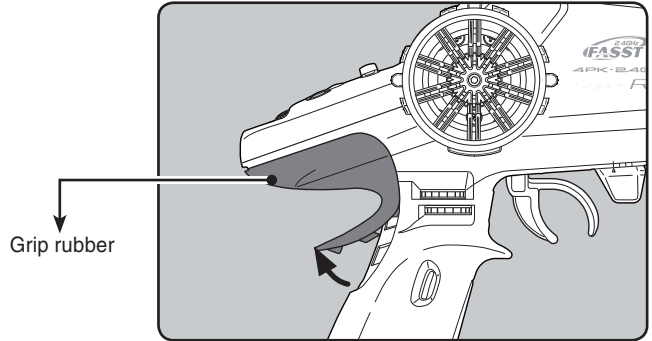


**2** Pull out the grip rubber in the arrow direction.

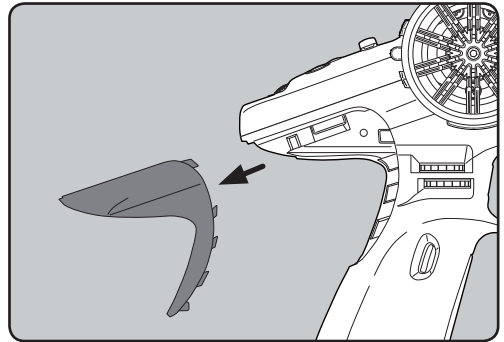

**3** There is a mounting nut inside the transmitter. Install the hook at the position shown in the figure using the accessory screw w/washer. (Using a 2.5 mm hex wrench.)

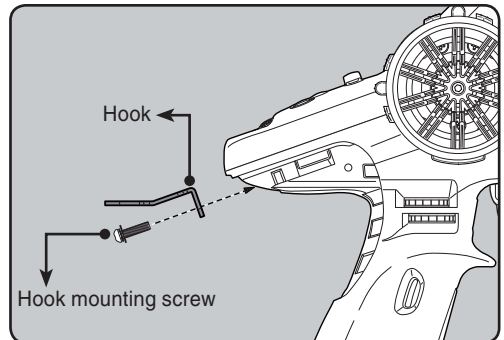



**4** Return the grip rubber to its original position.

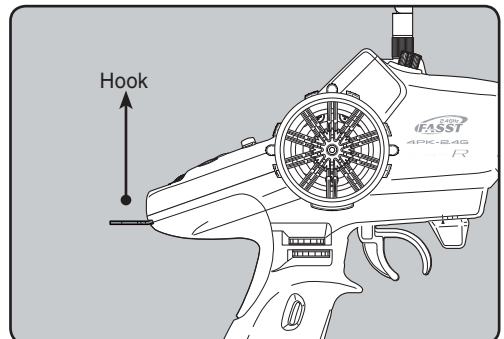


# About Transmitter Antenna and Receiver

## About The Transmitter Antenna

Adjust the antenna vertically to the ground.

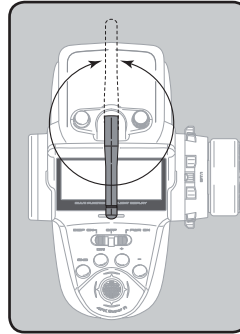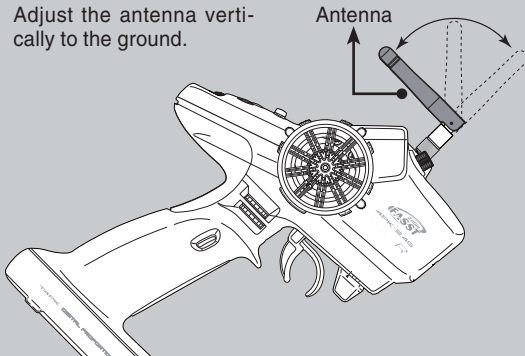

A

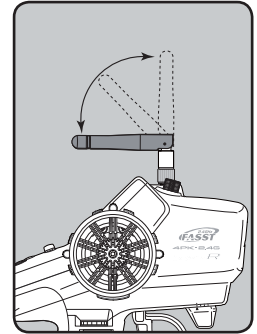

B

Antenna Moving Range

Before Using

### ⚠ Warning

- ❗ Adjust the antenna vertically to the ground.

Otherwise, the operating range may become shorter.

- ⊘ Never hold only the antenna.

Hold the grip handle. Otherwise, the antenna may be damaged.

- ⊘ The antenna position can be changed in the range as shown in figures A and B. However, please do not apply unnecessary force or shock.

The internal cable may be damaged; thus transmitting distance decreases and it may cause malfunction.

- ⊘ The antenna is a screw-on type and can be removed. However, do not remove the antenna except when it must be replaced.


If the transmitter antenna terminals get dirty, the radio wave output will become weak and there is the danger that the receiving range will be substantially shortened.

- ❗ When the antenna is changed, it requires the metal part of the antenna to be held firmly while putting it on.

The antenna cannot be mounted to T4PKSR (by rotating the middle part of the antenna).


**There might be a small glitch when the antenna of the transmitter is brought close to servos, ESCs or other peripheral devices. This is not an issue but please keep this symptom in mind, especially when setting-up.**

Antenna

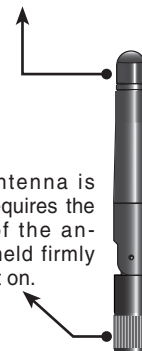

When the antenna is changed, it requires the metal part of the antenna to be held firmly while putting it on.

# Receiver Terminology

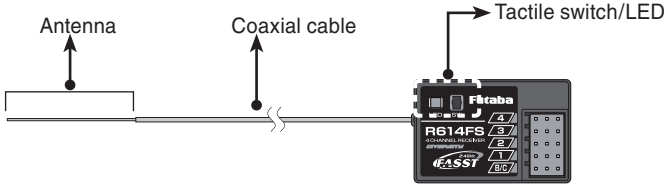

## Connectors


- 4 :CH4 servo(CH4)
- 3 :CH3 servo(CH3)
- 2 :Throttle servo(CH2)
- 1 :Steering servo(CH1)
- B/C :Power connector/DSC connector

## How to link the transmitter and the receiver

Each transmitter has an individually assigned, unique ID code. In order to start operation, the receiver must be linked with the ID code of the transmitter to which it is being paired. Once the link is made, the ID code is stored in the receiver and no further linking is necessary unless the receiver needs to be used with another transmitter.

### Link procedure

- 1** Bring the transmitter and the receiver close to each other, within 20 inches (half meter).
- 2** Turn on the transmitter.
- 3** Turn on the receiver.
- 4** Push the tactile switch of the receiver.  
When the link is complete, the LED in the receiver changes to solid green.  
When the ID cannot be read due to the surrounding environment, try reading it with the transmitter and receiver antennas touching.

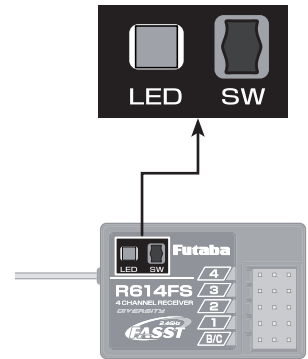

### Precaution:

If there are many FASST systems turned on in close proximity to the R603FS/R603FF/R604FS(E)/R614FF, your receiver might not link to your transmitter. In this case, even if the receiver's LED stays solid green, unfortunately the receiver might have established a link to one of other transmitters. This is very dangerous if you do not notice this situation. In order to avoid the problem, we strongly recommend you to double-check whether your receiver is really under control by your transmitter by giving the stick input and then checking the servo response.

### ⚠ Warning

- ❗ After the linking is done, please cycle receiver power and check if the receiver to be linked is really under the control of your transmitter.
- ⚠ Do not perform the linking procedure with motor's main wire connected or the engine operating as it may result in serious injury.

\*Please refer to the table below for LED status vs receiver's condition.

LED status vs receiver's condition:

No signal reception	Red : On
Receiving signals	Green: On
Receiving signals, but ID is unmatched.	Green: Blink
Unrecoverable failure (EEPROM, etc.)	Red and Green turn on alternately


## Receiver Installation

Install the R614FS receiver on the car as follows:

The operating range may become shorter, depending on where the receiver and the antenna are mounted.

### ⚠ WARNING

- ⊘ Do not cut or bundle the receiver antenna wire.
- ⊘ Do not bend the coaxial cable. It causes damage.
- ❗ Install the antenna in the higher place as shown in the figure.
- ❗ Put the antenna in the antenna tube to protect it.
- ❗ Keep the antenna as far away from the motor, ESC and other noise sources as you possibly can.
- ❗ Wrap the receiver with something soft, such as foam rubber, to avoid vibration. If there is a chance of getting wet, put the receiver in a waterproof bag or balloon.

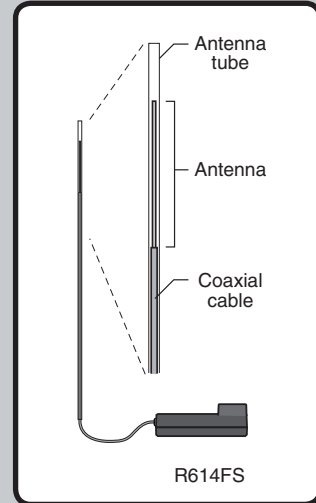

**Note:** Since the receiver generates a certain amount of heat, change the mounting method to improve the ventilation at the receiver. If the receiver is too tight, it may malfunction when the ambient temperature is high.

### ⚠ Caution

- ❗ Always use R614FS / R614FF-E under the following conditions:
  - Battery :Power requirement Rated voltage 3.7V~7.4V  
Matched to the ratings of the receiver and connected servo (digital servo cannot use the dry battery).
  - RX Type :FASST-C2(See page 46 for setting method.)
  - Transmitter mode-HIGH SPEED mode :Futaba digital servo(See page 46 for setting method.)
  - Transmitter mode-NORMAL mode :Futaba all servo(See page 46 for setting method.)

Under other conditions, the set will not operate, or the specified performance will not be displayed even if it operates. In addition, it may cause trouble with servos and other equipment. Futaba will not be responsible for damage, etc. caused by combination with the products of other companies.

#### Transmitter mode setting

Set the transmitter to the HIGH SPEED mode or NORMAL mode. See page 46 for a description of the setting method.

**Note:** However, digital servos (including BLS Series brushless servo) can only be used in the HIGH SPEED mode.

When the power is turned on, whether the receiver is in the HIGH SPEED or NORMAL mode is judged and the R604FS operates in that mode until the power is turned off. When the transmitter mode is changed, operation becomes possible when the receiver power is turned on again. When the frequency band is changed, reception on the new frequency band becomes possible when the receiver power is turned on again.

For the receiver, servos, and other connections, see page 31 for the DSC cord (option) connections, see page 137.


## Receiver and Servo Connections

Connect the receiver and servos as shown below. Connect and install the receiver and servos in accordance with "Installation Safety Precautions" on the next page.


The figure shown below is an example. The method of connecting the motor controller to the motor and battery depends on the motor controller used. Purchase the motor controller and servos separately. The receiver also depends on the set.

When using the DSC cord with a gasoline engine car, connect the optional double extension cord to B/C of the receiver and the DSC cord and receiver switch to the opposite side connector.

### Installation When An Electronic Speed Control Is Used

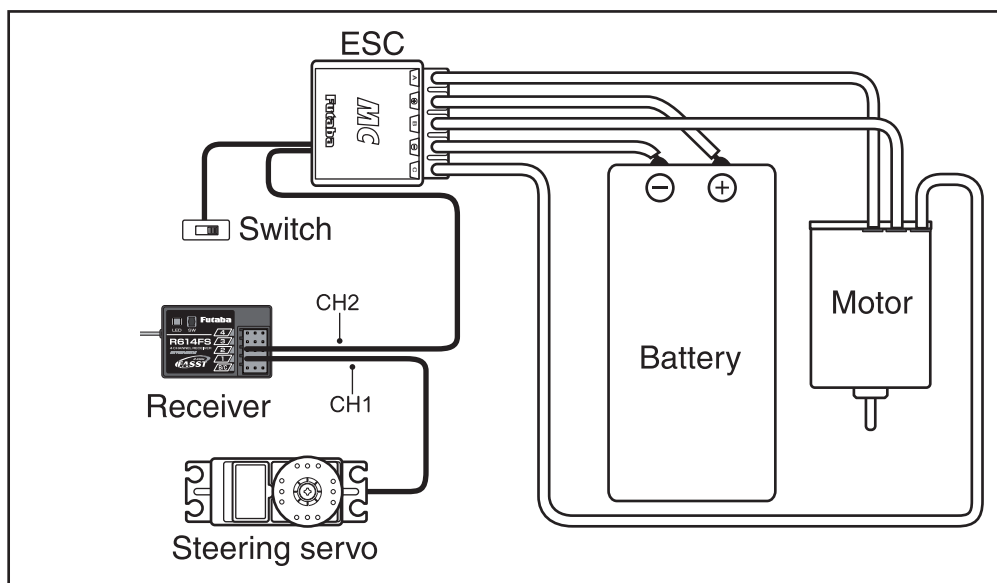

### Installation For Gas Powered Models

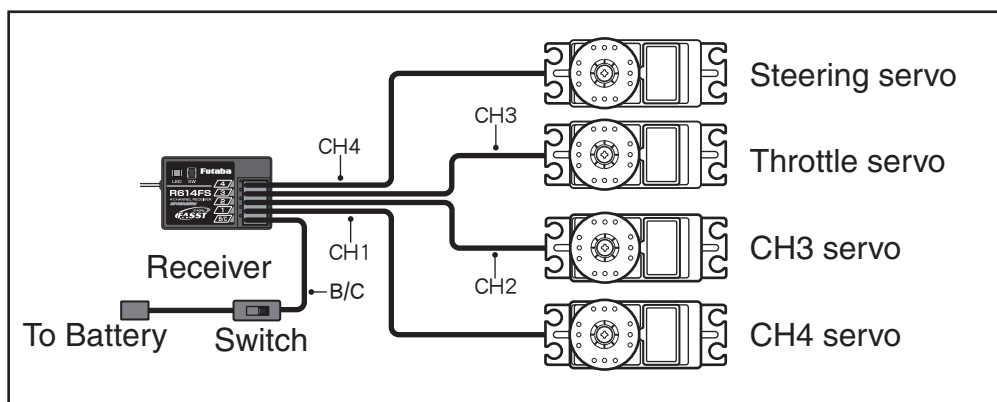

# Installation Safety Precautions


## ⚠ Warning

### Receiver (receiver antenna)

- ⊘ Do not cut or bundle the receiver antenna wire.
- ⊘ Do not bundle the receiver antenna wire together with the motor controller lead wire.
- ⊘ Keep the receiver antenna wire at least 1cm away from motor, battery, and other wiring carrying heavy current.
- ⊘ Do not use a metal receiver antenna holder on a plate made of metal, carbon, or other conductive material.
- ❗ Install the receiver antenna holder as closely as possible to the receiver.


If the antenna wire is cut, bundled, or routed near a noise source, the receiving sensitivity will drop, the running (sailing) range will decrease, and you may lose control of the model.

\*Noise is transmitted through metal, carbon, and other conductive material, so keep the receiver antenna wire away from such parts.

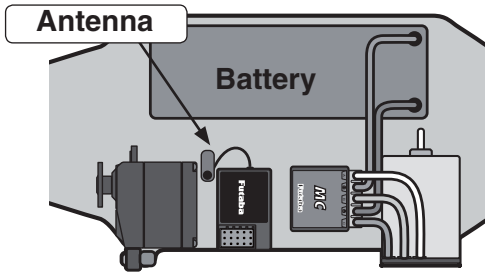

Install the receiver as far away as possible from the battery, motor controller, motor, silicon cord and other noise sources. Keep it away from the antenna wire, in particular.

### Antenna holder

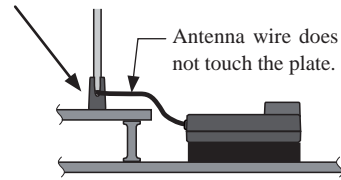

Install the antenna holder as close as possible to the receiver. The surplus antenna wire from the receiver to the antenna holder is affected by noise. Do not use a metal antenna holder on a plate made of metal, carbon, or other conductive material.

## Receiver Vibration-proofing / Waterproofing

(Car)

- ❗ Vibration-proof the receiver by wrapping it in foam rubber or other vibration-absorbing material and mount it with thick double-sided tape.
- ❗ When using the receiver holder supplied with the model kit, mount the holder to the chassis through a rubber grommet.

(Boat)

- ❗ Vibration-proof the receiver by wrapping it in foam rubber or other vibration-absorbing material. Also waterproof the receiver by sealing it in a plastic bag.

If the receiver is exposed to strong vibration and shock, it will operate erroneously due to the invasion of water drops and you may lose control of the model.

When using the receiver holder supplied with the kit, install the receiver through a rubber grommet.

Foam rubber, etc.

Wrap the receiver in foam rubber or other vibration-absorbing material. Do not use hard material. Hard material does not have a vibration-proofing effect.

When mounting the receiver with double-sided tape, do not use a stiff tape. Stiff tape does not have a vibration-proofing effect.




## Warning

### Connector Connections

- ❗ Be sure the receiver, servo, battery and connectors are fully and firmly connected.  
If vibration from the model causes a connector to work loose while the model is in operation, you may lose control.


### Servo Installation

- ❗ When you install the servos, always use the rubber grommets provided in servo hardware bags. Mount the servos so they do not directly come in contact with the mount.  
If the servo case comes in direct contact with the mount, vibration will be directly transmitted to the servo.  
If this condition continues for a long time, the servo may be damaged and control will be lost.

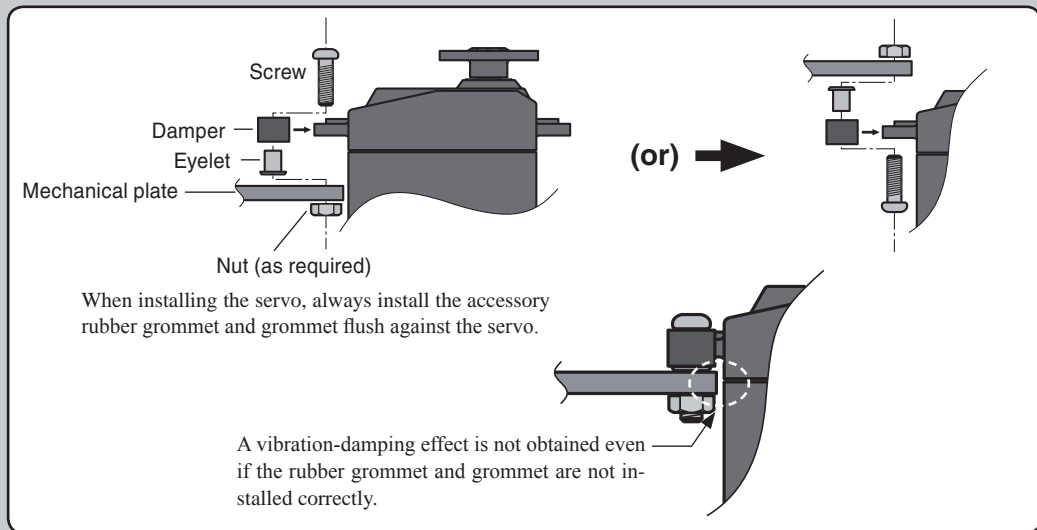

### Servo Throw

- ❗ Operate each servo over its full stroke and be sure the linkage does not bind or is loose.  
The continuous application of unreasonable force to a servo may cause damage and excessive battery drain.

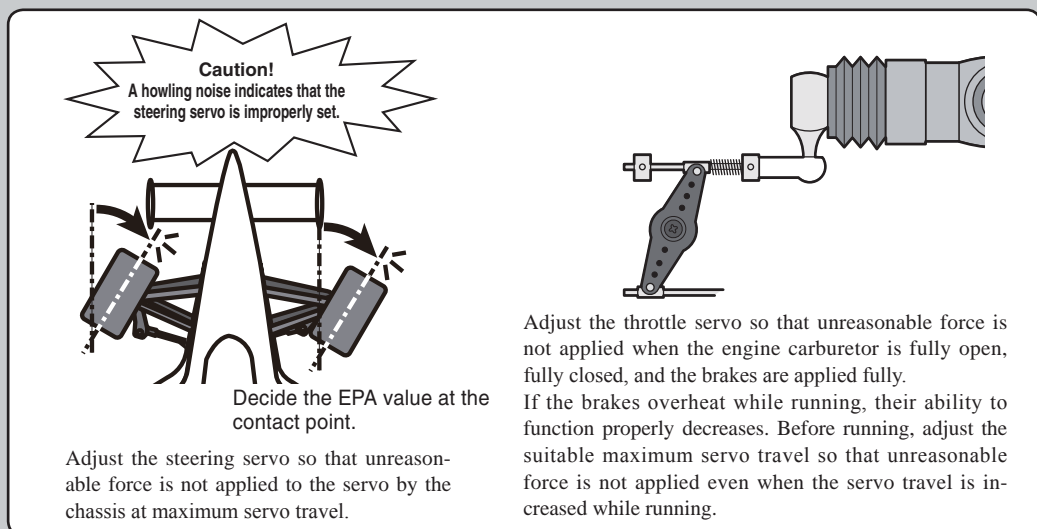

## Warning

### Electronic Speed Control


- ❗ Install the heat sinks where they will **not** come in contact with aluminum, carbon fiber or other parts that conduct electricity.

If the FET Amp (Electronic speed control) heat sinks touch other materials that conduct electricity a short circuit could occur. This could result in loss of control and damage to the system.

### Motor Noise Suppression

- ❗ Always install capacitors to suppress noise when electric motors are used.

If capacitors are not properly installed you could experience erratic operation and reduced range as well as loss of control.

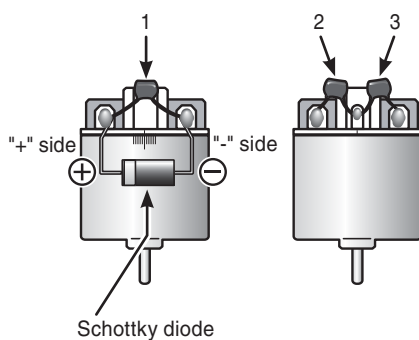

Motors with no suppressor capacitors, or inadequate suppression, may cause the receiver to malfunction. Always solder the capacitors supplied to your motor.

The Schottky diode improves the efficiency of the speed control / motor combination and provides extra protection to the brake FETs. The white ring must always face the positive side.

### Other Noise Suppression Methods

- ❗ Be sure there are no metal parts in your model which under vibration can come in contact with other metal parts.

Metal to metal contacts under vibration will emit a high frequency noise that will affect the receiver's performance. You could experience erratic operation and reduced range as well as loss of control.

## Preparations (Transmitter)

Before setting the Transmitter functions, check and set items 1 to 5 below.


### (Display when power switch turned on)

When the power switch is turned on, the currently selected model number is displayed. Check if this number is the model number you want to set-up. To change the model number, use the Model Select function (p.108).

Turn on the transmitter power.



(Start screen)

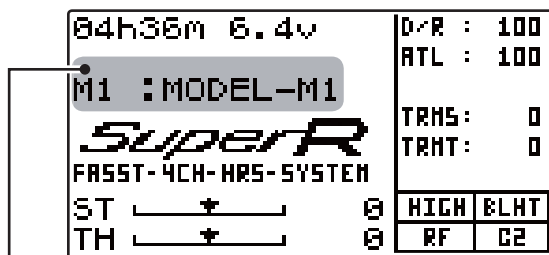


→ The model number is displayed.

## 1.RF Output Check

If signals are output normally, RF output monitor "RF" will be displayed on the screen.

If "RF" is not displayed, contact your Futaba dealer.


"DISP" is displayed when the radio is turned on by the display switch and the DSC function is used, but no radio waves are sent.

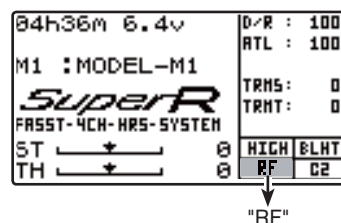

When radio waves are not being emitted when turned on by display switch and when the DSC function is used, "DISP" is displayed.

## 2.Rx Type Check


The T4PKSR transmitter can use the Futaba 2.4GHZ R603FS/FF. However, there are two types of Futaba 2.4GHz receivers for vehicles: "C1" type and "C2" type. The R603FS and 603FF are "C1" type. The R614FF supplied with the 4PKS set as standard is the "C2" type. Check that the setting matches the receiver being used. For example, when using the R614FF, the receiver type must be set to FASST-C2 and when using an R603FS or R603FF, the receiver type must be set to FASST-C1. If the setting is wrong, change it using the RX/SX type select function (p.46).

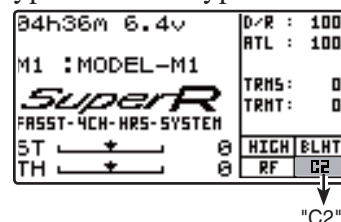

When FASST-C2


### 3. Servo Response Mode Check

Check that the servo response setting matches the servo being used. When using a digital servo (including BLS Series brushless servo), both HIGH SPEED and NORMAL can be used. When an analog servo is used, HIGH SPEED cannot be used; therefore, servo response must be set to NORMAL. If the setting is wrong, change it using the RX/SX type select function (p.46).

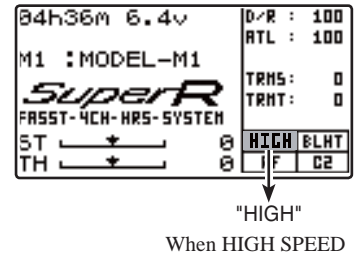


### 4. Throttle Mode Check

-When using the T4PKSR transmitter with a boat, throttle brake operation can be shut down by setting the BOAT function (p.78) \*TRG-BRK item to "Cut-OFF".

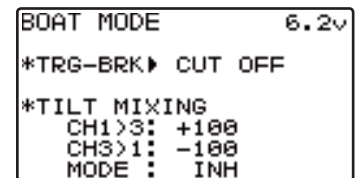


-The throttle servo travel can be set to 50:50 or 70:30 for throttle trigger operation as required by the throttle mode function (p.80).

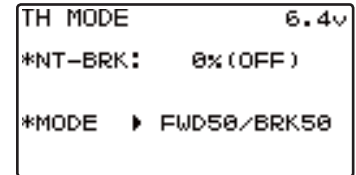

### 5. Trims Initial Set-Up



#### - Steering trim (DT1) check

On the initial set-up, steering trim is assigned to the DT1 trim lever above the steering wheel. Operate the lever and make sure the marker moves on the ST graph. If default has been changed, test steering trim in its new location. After checking the trim, set the trim display to the center (N) position.

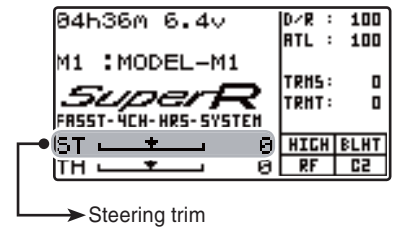


#### - Throttle trim (DT2) check

On the initial set-up, throttle trim is assigned to the DT2 trim lever on the left side of the steering wheel. Operate the lever and make sure the marker moves on the TH graph. If the default has been changed, test the throttle trim in its new location. After checking the trim, set the trim display to the center (N) position.

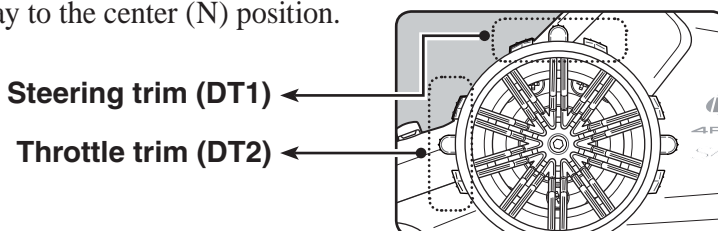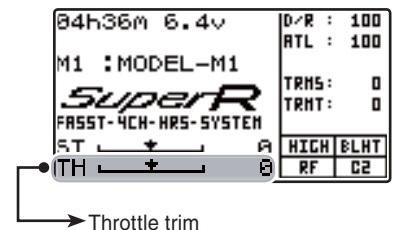



## - Steering dual rate (DL1) check

At initial set-up, steering dual rate (D/R) is assigned to DL1 dial, at the grip of the transmitter. Operate the DL1 and check if the D/R value displayed on the screen changes. After checking ST.D/R, set the steering dual rate to 100%.

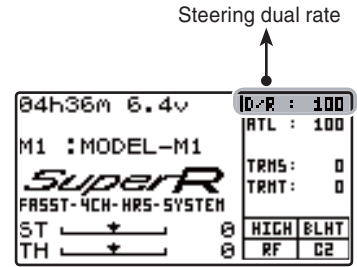

## - Throttle ATL (DL2) check

At initial setting, throttle ATL (ATL) is assigned to DL2 dial, below DL1. Operate the DL2 and check if the ATL value displayed on the screen changes. After checking TH.ATL, set throttle ATL to 100%.

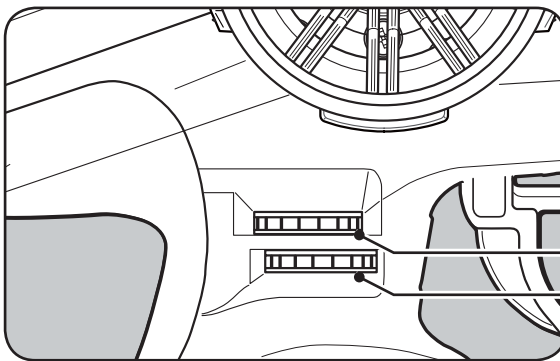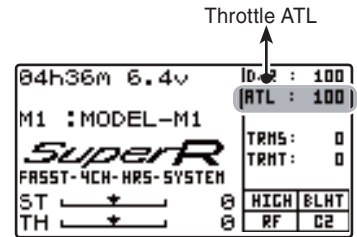

Steering dual rate dial DL1

Throttle ATL dial DL2

## (Set-Up Procedure When Installed In a Car)

When installing the servos in a car, performing function set-up in the following order is recommended.

- 1** Perform step 1 to 5. Trims Initial Set-Up of Preparations on the preceding page.
- 2** Set the servo direction of operation using the Reverse function. (p.47)
  - The servo installation method and linkage direction depend on the kit. Therefore, the servo operation direction may have to be reversed relative to transmitter operation. Before installing the servo, check the operating direction and set it using the Reverse function.
- 3** Set the subtrim and adjust the servo neutral point. (p.48)
- 4** Set the trigger travel by adjusting the throttle trigger mechanical ATL to your liking. (p.18)
  - When the stroke was adjusted, compensate the throttle by adjuster function (p.128).
- 5** Set EPA of each channel and adjust the servo throw (travel). (p.49)

## Menu Selection

The function set-up screen can be easily selected from the function menu displayed on the LCD screen.

The function menu can be selected from among the following 4 types to match the level of use. To select the type, use the Menu type select function (p.113).

- Level 1 (LEVEL1) : Basic functions only
- Level 2 (LEVEL2) : For middle class driver
- Big car (BIGCAR) : Displays the main functions for large cars (1/5).
- Level 3 (LEVEL3) : All functions can be selected. (For expert driver)

\* In addition to the menu types shown above, there is ALLOFF. It is convenient when customizing all menus.  
This menu consists of 3 fixed functions; \*M-SEL (model select), \*M-RES (model reset), and \* MENU-T (menu type select), and cannot be moved or deleted.

### Edit Buttons

In this instruction manual, Edit Buttons are represented by the symbols shown at right.

## Function Menu Screen

Function Map

Call the menu screen by button up, down, left, or right operation.

34h36m 6.4v	D/R : 100
	RTL : 100
<b>SuperR</b>	
ASST-4CH-HRS-SYSTEM	
ST	HIGH BLHT
TH	RF CE

(Opening Screen)

Push

Press the button to return to the Start Screen

LEVEL1

MENU 1	OF	
EPA	RXSYS	SYSTEM
REV	F/S	*M-SEL
SUBTR	NAME	*M-RES
		*MENU-T

Push

MENU 2	OF	
STEXP	DIAL	MCLNK
THEXP	SWTCH	ADJST
A.B.S	BOAT	THMOD
M-COP	DTRN	VIBRA

Push

LEVEL2

MENU 1	OF	
STEXP	EPA	SYSTEM
THEXP	SUBTR	NAME
IDLUP	REV	*M-SEL
A.B.S	RXSYS	*M-RES
BOAT	F/S	*MENU-T

Push

MENU 2	OF	
STSPD	DIAL	DTRN
THSPD	SWTCH	MCLNK
ACCEL	TIMER	ADJST
START	LAP-L	THMOD
M-COP	SERVO	VIBRA

Push

BIGCAR

MENU 1	OF	
BRAKE	SUBTR	SYSTEM
A.B.S	REV	NAME
EPA	RXSYS	*M-SEL
STEXP	F/S	*M-RES
THEXP		*MENU-T

Push

MENU 2	OF	
STSPD	DIAL	DTRN
THSPD	SWTCH	SERVO
ACCEL	P-MIX	ADJST
IDLUP	S-MIX	THMOD
M-COP	SERVO	VIBRA

Push

LEVEL3

MENU 1	2	
STEXP	EPA	TIMER
STSPD	ACCEL	LAP-L
THEXP	START	BOAT
THSPD	IDLUP	*M-SEL
BRAKE	P-MIX	*M-RES
A.B.S	S-MIX	*MENU-T

Push

MENU 2	16	
SUBTR	DIAL	SYSTEM
REV	SWTCH	DTRN
M-COP	D/R	MCLNK
NAME	ATL	ADJST
RXSYS	CHS/4	THMOD
F/S	SERVO	VIBRA

Push


# Menu Screen

The menu screen displays 18 items on 3 rows and 6 lines on one page and displays up to 36 items on 2 pages designated MENU1 and MENU2.

A menu screen matched to the purpose can also be created by using the menu customize functions described on page 40. The menu No. of the function indicated by the cursor is displayed at the top right-hand corner of the screen. When a function is not assigned, "OF" is displayed at the top right-hand corner of the screen.

When the cursor is in a position without a function assigned, "OF" is displayed.


Menu No. of the function indicated by the cursor is displayed.

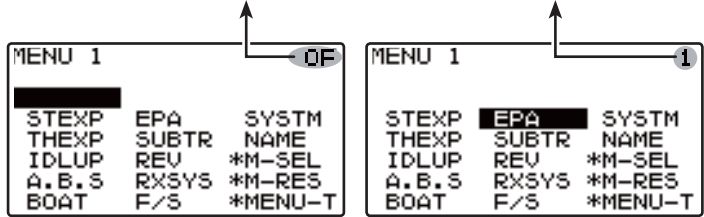


The screen above is an example of the LEVEL2 MENU1 menu.

## Calling the setup screen

Call the menu screen by JOG button up, down, left, or right operation.

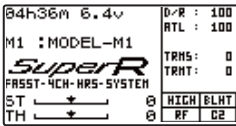


(Opening Screen)

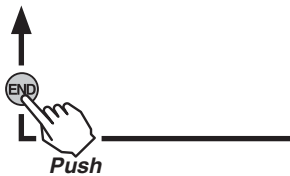


Press the END button to return to the Start Screen

### Example of menu LEVEL2

Switch MENU1 and MENU2 by pressing the + button.

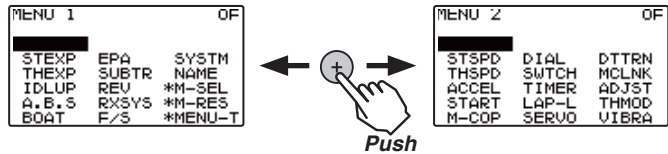


Push



On the menu screen, select the function by moving the cursor by JOG button up, down, left, or right operation.


The highlighted item is the currently selected function.

Press the END button to return to the Start Screen

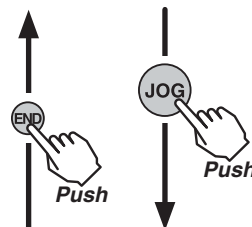

Call the setup screen by pressing the JOG button.

The screen on the right shows an example of setting EPA function.

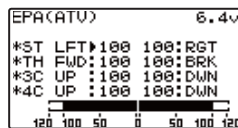

(Function Set-up Screen)

# Custom Menu


A menu matched to the purpose (custom menu) can be created by using the menu customize function.

A different menu can be created for each model memory.

In addition, custom menus can be copied to other models by using menu copy of the model copy function (p.110). There is a method which modifies the arrangement or adds (other than LEVEL3) or removes menus locally from the LEVEL1, LEVEL2, BIGCAR, and LEVEL3 basic menus and a method which changes all the menus to personal use only.


## One point

This function allows modification of the menu list and addition (except LEVEL3) or removal of functions. All the functions can also be grouped at MENU1 only depending on the purpose.



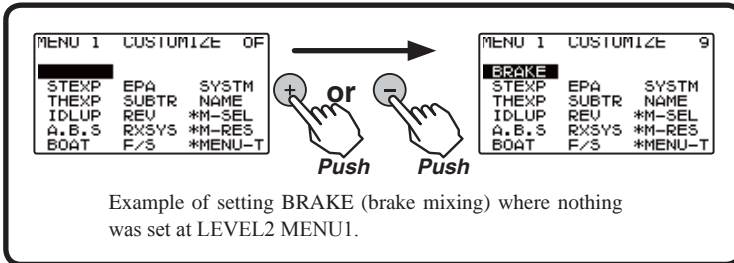


## Menu assignment



- 1** Call the menu screen from the initial screen by (JOG) button up, down, left, or right operation.
- 2** Use the (+) button to Select the MENU1 or MENU2 screen to be edited.
- 3** Press the (-) button for about 1 second. A confirmation beep is generated and the menu customize screen is displayed.
- 4** Select the location where the function is to be assigned or modified by moving the cursor by (JOG) up, down, left, or right operation.
- 5** Use the (+) or (-) button to select the function to be assigned.
- 6** When assignment is complete, end by returning to the menu screen by pressing the (END) button.

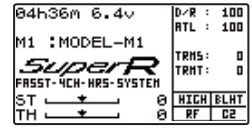

(Opening Screen)

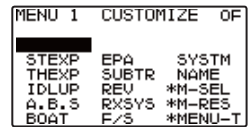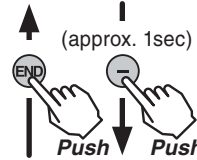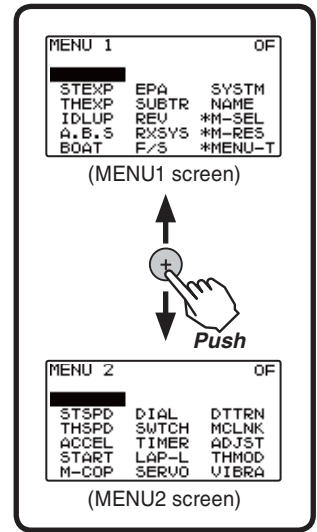

(CUSTOMIZE MENU screen)

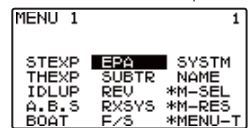

The highlighted item is the currently selected function.



## Customizing all functions.

In addition to the menu types shown page 38, there is ALL-OFF. It is convenient when customizing all functions.


- 1** Call the menu screen from the initial screen by (JOG) button up, down, left, or right operation.
  - 2** On the MENU1 screen, move the cursor to "\*MENU-T" by (JOG) button up, down, left, or right operation and press the button.
  - 3** (Menu type selection)  
After the MENU TYPE screen is displayed, select the setting item "TYPE" with blinking cursor by (JOG) button up or down operation. Change "TYPE" by pressing (+) or (-) buttons. Example-select "ALLOFF".
  - 4** (Menu type modification)  
Select "EXEC" with blinking cursor by (JOG) button up or down operation. Press the (+) and (-) buttons simultaneously for 1 second.
- Operation is completed when "COMPLETE!" blinks on the screen.
- 5** Return to the menu screen by pressing the (END) button.  
Use the (+) button to select the MENU1 or MENU2 menu screen to be edited.
  - 6** Press the (-) button for about 1 second. A confirmation peeping sound is generated and the menu customize screen is displayed.  
See steps 4 and 5 on page 40 for a description of the menu assignment method.

### Note:

This function consists of 3 fixed functions; \*M-SEL (model select), \*M-RES (model reset), and \* MENU-T (menu type select), and cannot be moved or deleted.

When the menu type is changed from the created customize menu to another menu type by \* MENU-T, the customize menu is reset and the menu is initialized to the original menu.



The set values of a function deleted from the menu remain valid. When an unused function is turned OFF or rate adjustment, etc. related to other functions is performed, check the set values before deleting the function.

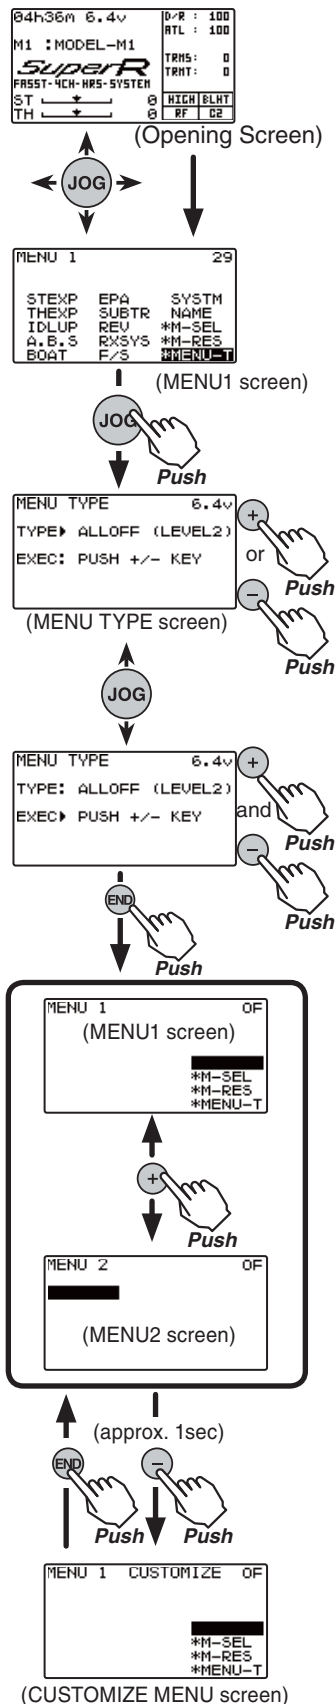

# Direct Selection

The Direct Selection allows instant access to the six functions most frequently used. The function set-up screen can be directly and quickly called with the special buttons for each of the eight functions. They can be freely selected by pressing "Direct Selection Button" (DIR) function.

## Initial Setting

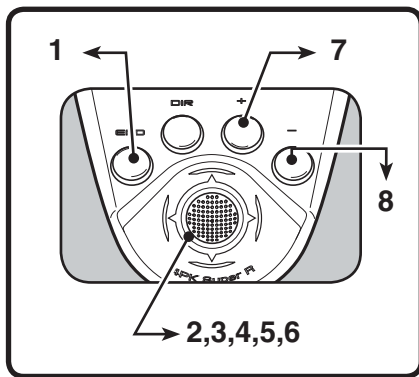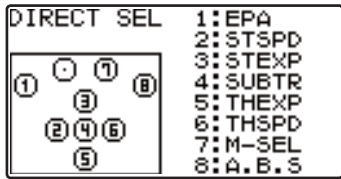


Direct No	Button	Function abbreviation	Function
1.	Press	EPA	Channel End Point Adjuster
2.		STSPD	Steering Speed
3.		STEXP	Steering EXP
4.		SUBTR	Subtrim
5.		THEXP	Throttle EXP
6.		THSPD	Throttle Speed
7.	Press	M-SEL	Model Select
8.	Press	A.B.S	A.B.S

Function Map

Call the direct Selection screen by pressing the button.

Upon your needs, select one of the 8 functions and then click its button to call the Function Set-up Screen.

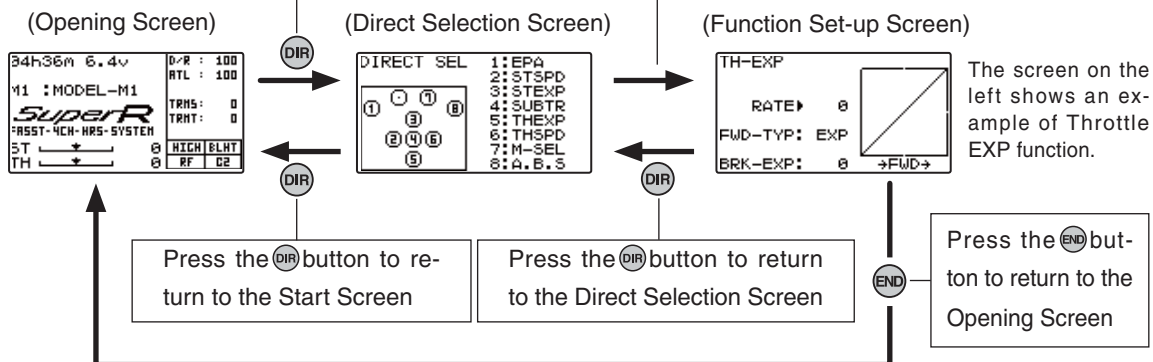

# Direct Customize



With the T4PKSR, your favorite direct call matched to the purpose can be assigned to the edit buttons by using the direct customize function.

Direct call lets you create a different menu for each model memory.


Direct call assigned to each edit button can also be copied to other models by using menu copy of the model copy function (p.110).

## Direct selection function assignment

- 1** The setup screen of this function is called by pressing the (DIR) button for 3 seconds or longer from the initial screen.
- 2** (Direct button selection)  
Select the function you wish to customize (No.1~8) by (JOG) button up or down operation.
- 3** (Assignment function selection)  
Change the function by pressing the (+) or (-) button.
- 4** When ending setting, return to the initial screen by pressing the (END) button and (DIR) button one time each, in that order.

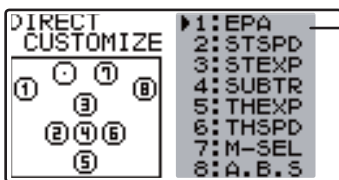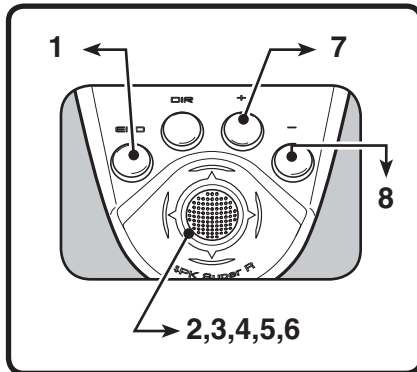

- Setup items**
- 1: Function assigned to button No. 1
  - 2: Function assigned to button No. 2
  - 3: Function assigned to button No. 3
  - 4: Function assigned to button No. 4
  - 5: Function assigned to button No. 5
  - 6: Function assigned to button No. 6
  - 7: Function assigned to button No. 7
  - 8: Function assigned to button No. 8

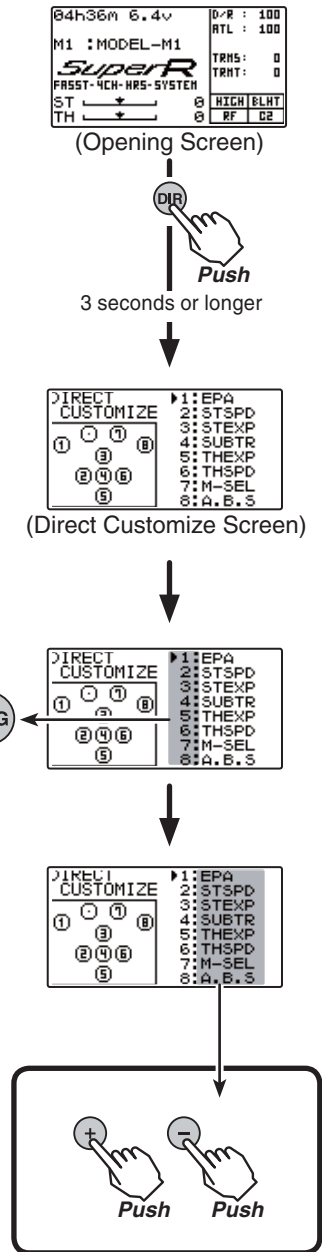

### List of functions by menu type

Function No	Function abbreviation	LEVEL1	LEVEL2 (Initial setting)	BIGCAR	LEVEL3
1	EPA	★	★	★	★
2	STEXP	★	★	★	★
3	STSPD		★	★	★
4	THEXP	★	★	★	★
5	THSPD		★	★	★
6	A.B.S	★	★	★	★
7	ACCEL		★	★	★
8	START		★		★
9	BRAKE			★	★
10	IDLUP		★	★	★
11	TIMER		★		★
12	LAP-L		★		★
13	P-MIX			★	★
14	S-MIX			★	★
15	BOAT	★	★		★
16	SUBTR	★	★	★	★
17	REV	★	★	★	★
18	F/S	★	★	★	★
19	*M-SEL	★	★	★	★
20	*M-RES	★	★	★	★
21	M-COP	★	★	★	★
22	NAME	★	★	★	★
23	DIAL	★	★	★	★
24	SWTCH	★	★	★	★
25	D/R				★
26	ATL				★
27	CH3/4				★
28	RXSYS	★	★	★	★
29	*MENU-T	★	★	★	★
30	SYSTEM	★	★	★	★
31	DTRN	★	★	★	★
32	SERVO		★	★	★
33	MCLNK	★	★		★
34	ADJST	★	★	★	★
35	VIBRA	★	★	★	★
36	THMOD	★	★	★	★

## Function list

Function No	Function abbreviation	Description of function	Page No
1	<b>EPA</b>	End point adjustment	P-49
2	<b>STEXP</b>	Steering curve adjustment	P-56
3	<b>STSPD</b>	Steering servo delay	P-61
4	<b>THEXP</b>	Throttle curve adjustment	P-57
5	<b>THSPD</b>	Throttle servo delay	P-63
6	<b>A.B.S</b>	Pumping brake	P-69
7	<b>ACCEL</b>	Function which adjusts the rise characteristic from the throttle neutral position	P-52
8	<b>START</b>	Throttle preset at start function/ engine cut off by switch	P-66
9	<b>BRAKE</b>	Front and rear independent brake control for 1/5GP car, etc.	P-74
10	<b>IDLUP</b>	Idle up at engine start	P-82
11	<b>TIMER</b>	Up, down, lap, or lap navigation timer	P-100
12	<b>LAP-L</b>	Lap timer data (lap time, average lap time) check	P-107
13	<b>P-MIX</b>	Programmable mixing between arbitrary channels	P-83
14	<b>S-MIX</b>	4WS mixing, DUAL ESC mixing, GYRO mixing, CPS-1 mixing	P-86
15	<b>BOAT</b>	Boat, etc. brake operation stop/outboard engine tilt mixing	P-78
16	<b>SUBTR</b>	Servo center position fine adjustment	P-48
17	<b>REV</b>	Servo operation reversing	P-47
18	<b>F/S</b>	Fail safe, battery fail safe	P-54
19	<b>*M-SEL</b>	Model memory call	P-108
20	<b>*M-RES</b>	Model memory reset (ALL, DATA, MENU)	P-112
21	<b>M-COP</b>	Model memory copy (SINGLE, GROUP) (MENU, SW/DIAL)	P-110
22	<b>NAME</b>	Model memory name set/modify, username set/modify	P-109
23	<b>DIAL</b>	Selection of functions operated by digital dial and digital trim	P-98
24	<b>SWTCH</b>	Selection of functions operated by push switches	P-96
25	<b>D/R</b>	Steering angle adjustment while running	P-131
26	<b>ATL</b>	Brake side adjustment	P-132
27	<b>CH3/4</b>	Channel 3&4 servos operation position set/check	P-133
28	<b>RXSYS</b>	Servo response mode and receiver type selection	P-46
29	<b>*MENU-T</b>	Function menu type selection	P-113
30	<b>SYSTEM</b>	Battery type/backlight/LCD contrast/buzzer/LED display color/initial screen display mode/power off forgotten alarm/2ND condition/2.4GHz band adjustment and setting	P-122
31	<b>DTTRN</b>	Data copy from T4PKSR to another T4PKSR	P-126
32	<b>SERVO</b>	Displays servo operation on a bar graph	P-134
33	<b>MCLNK</b>	MC851C/602C/402CR/MC950CR/MC960CR...etc Link software setting function	P-114
34	<b>ADJST</b>	Steering wheel and throttle trigger correction	P-128
35	<b>VIBRA</b>	Vibrator setting	P-130
36	<b>THMOD</b>	Neutral brake and throttle servo forward side and brake side operation rate setting	P-80

## Receiver Type / Servo Response Mode "RXSYS"

### Receiver

There are two types of Futaba 2.4GHz FASST receivers for cars depending on the system differences: C1 type and C2 type. The R603FS/FF are C1 type and the R614FS / FF-E supplied with the 4PKSR set as standard is C2 type. For the R603FS/FF set RX TYPE to "FASST-C1". For the R614FS/FF-E,604FS/FSE set RX TYPE to "FASST-C2".


### Servos

HIGH SPEED or NORMAL servo response mode can be selected. However, the HIGH SPEED mode is for Futaba digital servos (including BLS Series brushless servos) use only. When using other servos, select the NORMAL mode. All servos, including digital servos, can be used in the NORMAL mode.

#### Calling the setup screen



##### \*Calling from menu screen

(Opening Screen)

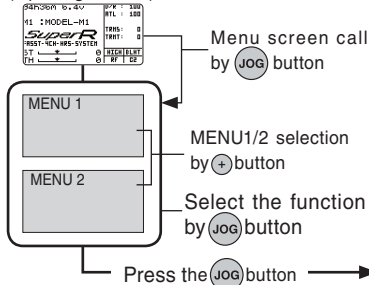

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

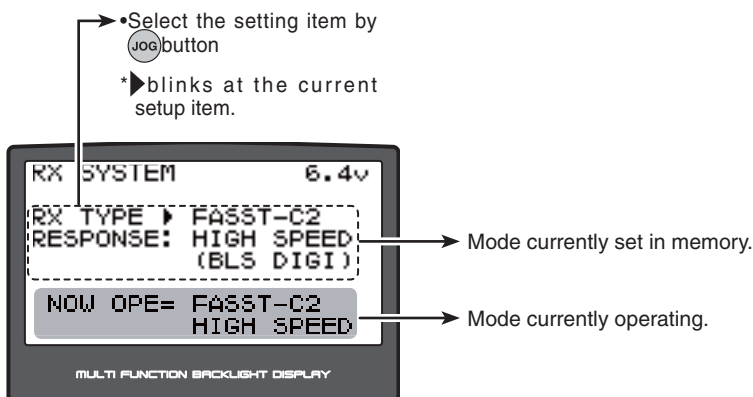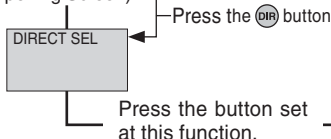

- When the receiver type and servo response are changed and when a model with a different receiver type and servo response has been selected, turn the transmitter power off and on. Radio waves are output by the type set at that point.

### Rx type / Servo response mode selection

(Preparation)

Select the item to be set by (JOG) button up or down operation.

#### 1 (Writing to memory)

Press the (+) or (-) button and set the RX TYPE or RESPONSE.

#### 2 In order for the change to occur you need to cycle the power switch (off/on) to make the change complete.

#### RX TYPE / RESPONSE selection

- Select by (JOG) button left or right operation.

#### RX TYPE

FASST-C1, FASST-C2

#### RESPONSE

HIGH SPEED (BLS DIGI)

NORMAL (GENERAL)

#### Select button


- Select with the (+) or (-) buttons.

# Servo Reverse "REV"

(All channel)

This function reverses the direction of operation of the servos related to transmitter steering, throttle, channel 3, and channel 4 operation.

However, when the position set by trim or subtrim shifts from the center, the center becomes the opposite side.

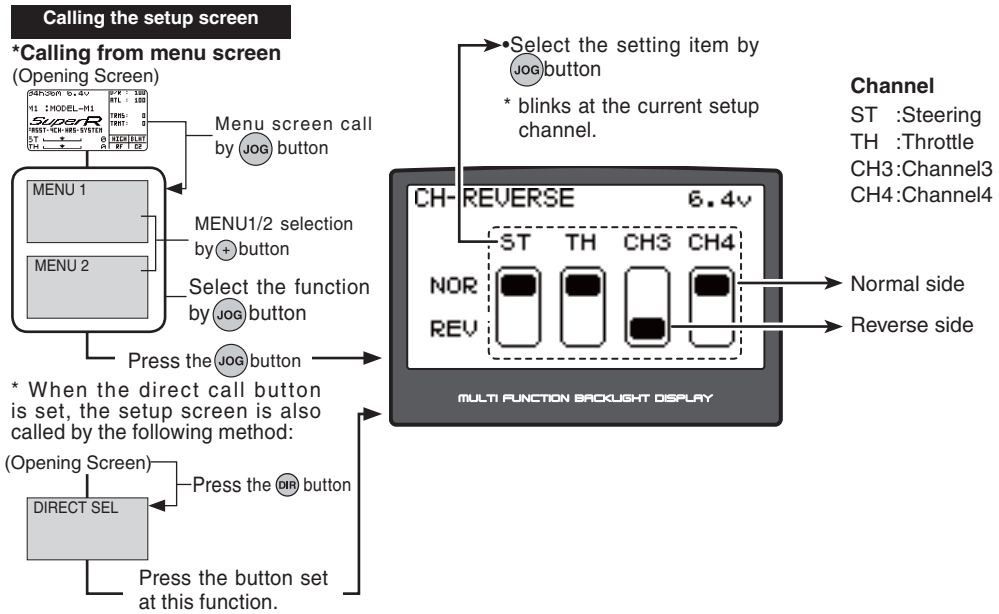

## Servo Reverse Function Setting

(Preparation)

Select the channel to be set by (JOG) button left or right operation. ST, TH, CH3 and CH4 on the screen blink.

### 1 (Servo reverse setting)

Use the (+) or (-) button to reverse the servo operation direction.

(Each channel can be set similarly.)

### 2

When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Channel selection

- Select by (JOG) button left or right operation.

#### Select button

- Select with the (+) or (-) buttons.



Function

# Subtrim "SUBTR"

(All channel)

Use this function to adjust the neutral position of the steering, throttle, channel 3 and channel 4 servos.


\*Subtrim adjusts the entire range of the servo in the set direction.

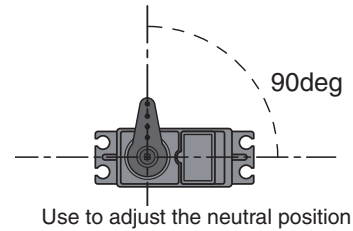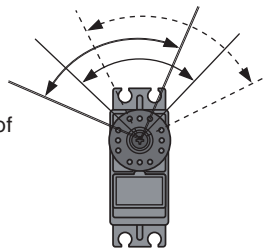



Use to adjust the neutral position

## Calling the setup screen

### \*Calling from menu screen (Opening Screen)

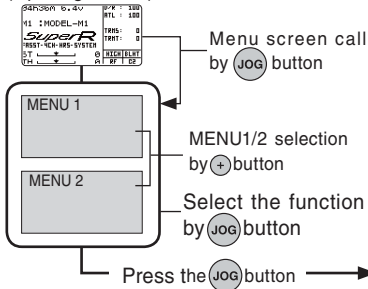

\* When the direct call button is set, the setup screen is also called by the following method:

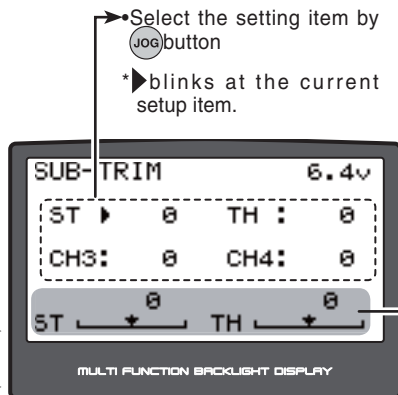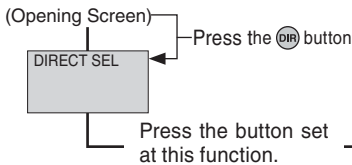

### Channel

ST :Steering  
TH :Throttle  
CH3 :Channel 3  
CH4 :Channel 4

Set the steering and throttle digital trims to the neutral "0" position.

## Subtrim adjustment

(Preparation)

- Set the steering and throttle digital trims to the neutral "0" position. Set CH3 to the center "0" position.
- Select the channel to be set by (JOG) button up or down operation.

### 1 (Subtrim adjustment)

Use the (+) or (-) button to adjust the center.

(Each channel can be set similarly.)

2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Channel selection

- Select by (JOG) button up or down operation.

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.

### Subtrim

ST :L100~R100  
TH :B100~F100  
CH3 :-100~+100  
CH4 :-100~+100  
Initial value : 0



# End Point Adjuster "EPA"

(All channel)

Use this when performing left and right end point adjustments, throttle high side/brake side operation amount adjustment, channel 3 and channel 4 servo up side/down side operation amount adjustment during linkage.

- Correct the maximum steering angle for left and right steering angles when there is a difference in the turning radius due to the characteristics, etc. of the vehicle.

## Maximum steering angle

The EPA function basically determines the maximum steering angle of each channel.

The functions shown below may have been adjusted or the operating range set by EPA function may be exceeded. Check the linkage each time the following functions are adjusted.

- Sub trim (all channels)
- Program mixing slave side (all channels)
- Tilt mixing (steering, channel 3)
- Idle up (throttle)
- Start Function, Engine Cut (throttle)
- Throttle acceleration (throttle)

## ATL trim

ATL trim allows adjustment of the brake side operation amount during operation.


Therefore, when the operating angle is adjusted with throttle EPA, ATL trim must also be taken into account.

## Remark


When the steering angle is insufficient even though EPA is increased to maximum (120%), the steering angle can be increased somewhat by using program mixing. (Setup example: See page 85.)

## Warning

- ❗ Operate each servo over its full stroke and be sure the linkage does not bind or is not loose.  
The continuous application of unreasonable force to a servo may cause damage and excessive battery drain.

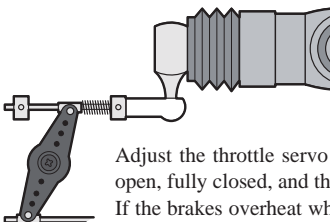

Adjust the throttle servo so that unreasonable force is not applied when the engine carburetor is fully open, fully closed, and the brakes are applied fully. If the brakes overheat while running, their ability to function properly decreases. Before running, adjust the suitable maximum servo travel so that unreasonable force is not applied even when the servo travel is increased while running.

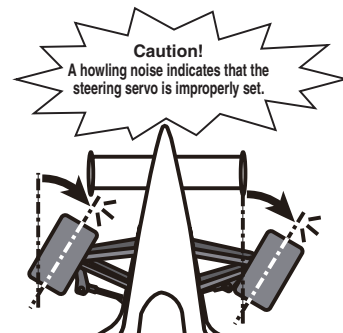


Adjust the steering servo so that unreasonable force is not applied to the servo by the chassis at maximum servo travel.



Decide the EPA value at the contact point.

## Calling the setup screen

### \*Calling from menu screen (Opening Screen)

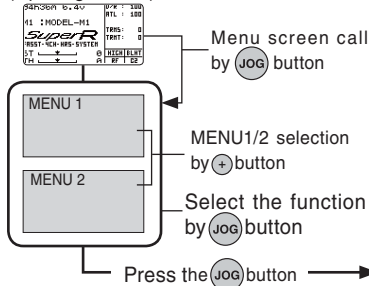

\* When the direct call button is set, the setup screen is also called by the following method:

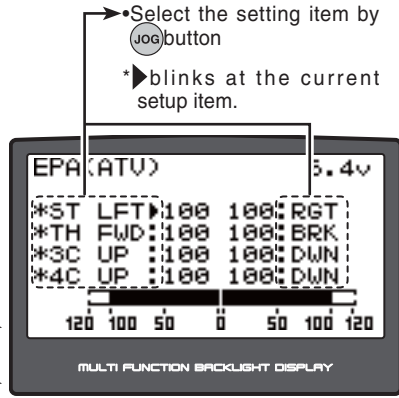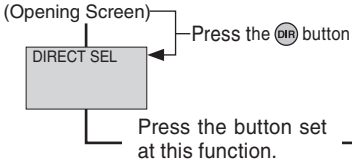

### Setting item (channel and direction)

- ST-LFT :Steering (left side)
- ST-RGT :Steering (right side)
- TH-FWD :Throttle (forward side)
- TH-BRK :Throttle (brake side)
- 3C-UP :3rd channel (up side)
- 3C-DWN :3rd channel (down side)
- 4C-UP :4th channel (up side)
- 4C-DWN :4th channel (down side)

### Setting item selection (channel and direction)

- Select by (JOG) button left or right operation.
- The direction (ST-LFT and ST-RGT) linked with the steering wheel is switched.
- The direction (TH-FWD and TH-BRK) linked with the throttle trigger is switched.

## Steering (EPA) adjustment

### (Preparation)

- Before setup of the steering end point adjustment (EPA), set the steering D/R dial (initial setup: DL1) to the maximum steering angle position 100%.
- Select the setting item "ST-LFT" by (JOG) button up or down operation and make the following adjustments:

### 1 Steering (left side) adjustment

Turn the steering wheel fully to the left and use the (+) or (-) buttons to adjust the steering angle.




### 2 Steering (right side) adjustment

Turn the steering wheel fully to the right and use the (+) or (-) buttons to adjust the steering angle.



### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

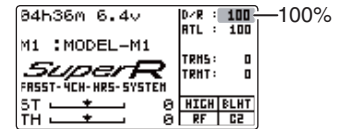

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "100" by pressing the (+) and (-) buttons simultaneously for about 1 second.

### Note

Step #1 & #2 are done when the receiver is in the on position installed on the chassis. You're watching the wheels reach their maximum end point.

### Steering EPA



- ST-LFT :0~120
- ST-RGT :0~120
- Initial value :100

### Quick EPA

When EPA TRIM is set to ACT at system setting (p.122) steering end point adjustment (EPA) can be performed by steering trim set digital trim or dial. (Steering trim initial setup DT1).


#### Steering left side adjustment

With the steering wheel turned fully to the left, steering is adjusted by steering trim. Temporarily displayed at this part of the initial screen as shown in the figure below.

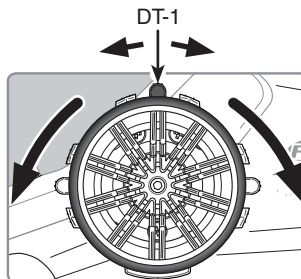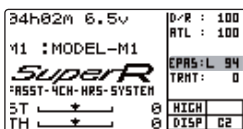

#### Steering right side adjustment


With the steering wheel turned fully to the right, steering is adjusted by steering trim. Temporarily displayed at this part of the initial screen as shown in the figure below.

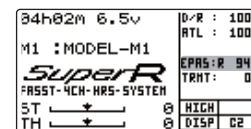

## Throttle (EPA) adjustment


(Preparation)

- Before setting the throttle end point adjustment (EPA), set the throttle ATL dial (initial setup: DL2) to the maximum throttle angle position 100%.
- Select the setting item "TH-FWD" by (JOG) button up or down operation and make the following adjustments:

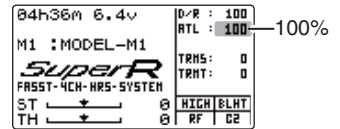

### 1 Throttle (forward side) adjustment

Pull the throttle trigger fully to the high side and use the (+) or (-) buttons to adjust the throttle angle. However, when using an FET amp, set to 100%.

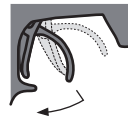

### 2 Throttle (brake side/reverse side) adjustment

Move the throttle trigger fully to the brake side and use the (+) or (-) buttons to adjust the throttle angle. However, when using an ESC, set to 100%.



- ### 3
- When adjusting the throttle angle of another channel immediately after this, see the adjustment method for that channel. When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Adjust button

- Use the (+) and (-) buttons to make adjustments.
- Return to the initial value "100" by pressing the (+) and (-) buttons simultaneously for about 1 second.
- Please see previous note on page 50.

#### Throttle EPA

TH-FWD :0~120  
 TH-BRK :0~120  
 Initial value :100

If "CUT OFF", (which prohibits trigger brake side operation in the boat mode (p.78) ), is set, throttle "TH-BRK" (brake side) cannot be adjusted.

## 3rd & 4th channel servo (EPA) adjustment

(Preparation)

- Select the setting item "3C-UP" or "4C-UP" by (JOG) button up or down operation and make the following adjustments:

### 1 3rd/4th channel servo (up side) adjustment

Set the 3rd or 4th channel dial fully to the up side (+ side) and use the (+) or (-) buttons to adjust the servo angle.

### 2 3rd/4th channel servo (down side) adjustment

Select the setting item "3C-DWN" or "4C-DWN" by (JOG) button up or down operation and set the 3rd or 4th channel dial fully to the down side (-) and use the (+) or (-) buttons to adjust the servo angle.

- ### 3
- When adjusting the servo angle of another channel immediately after this, see the adjustment method for that channel. When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Direction selection

- Select by (JOG) button up or down operation.

#### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "100" by pressing the (+) and (-) buttons simultaneously for about 1 second.
- Please see previous note on page 50.

#### 3rd & 4th channel EPA

3/4C-UP :0~120  
 3/4C-DWN :0~120  
 Initial value :100


# Throttle Acceleration "ACCEL"

(Throttle system)

The servo will jump to the input position at its maximum possible speed. Unlike exponential, which adjusts the whole throttle movement into a curve, throttle acceleration simply "jumps" away from neutral and then leaves the remaining response linear.

## Operation

- Operation near the throttle trigger neutral position becomes a sharp rise.
- The forward and brake sides can be set separately.
- When the brake mixing function (p.74) is set, the CH3/CH4 brake can also be set.

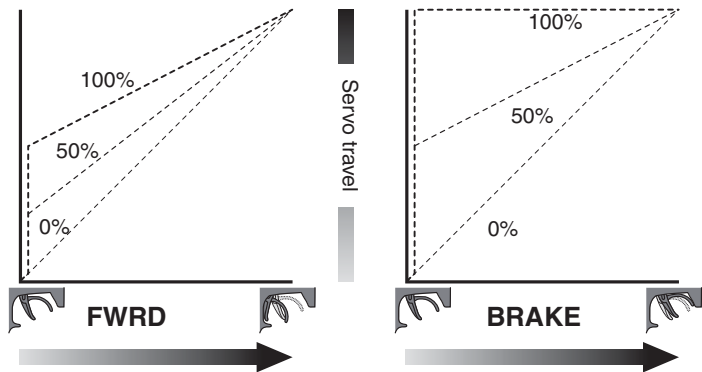


## Set value

The standard value (100% point) of this setup affects the operation amount set by throttle EPA function.

## Convenient usage method


For gasoline engine cars, the linkage must have a clearance because one servo controls the engine carburetor and brake. Thus, there is a noticeable time delay at both the forward and brake sides. Sharp response comparable to that of electric motor cars is obtained by reducing this clearance at the transmitter side.

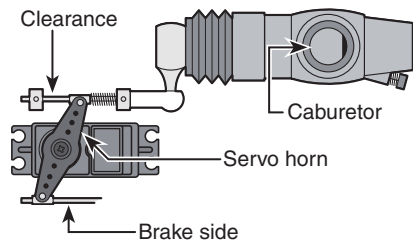

## Calling the setup screen

### \*Calling from menu screen


(Opening Screen)

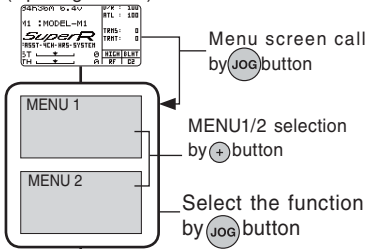

Press the JOG button

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

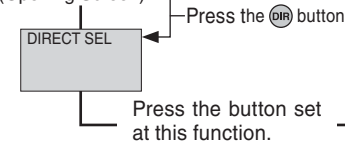

Select the setting item by JOG button

\* blinks at the current setup item.

### Setup item

- FWRD :Forward side acceleration amount
- BRAK :Brake side acceleration amount

### Setting item selection

- Select by (JOG) button up or down operation.

Function

## Throttle acceleration adjustment

(Preparation)

- Select the setting item "FWRD" by (JOG) button up or down operation and make the following adjustments:

### 1 (Forward acceleration amount adjustment)

Use the (+) and (-) buttons to adjust the acceleration amount.

- "0" :No acceleration
- "100" :Maximum acceleration (Approximately 1/2 of the forward side throttle angle)

### 2 (Brake side acceleration amount adjustment)

Select the setting item "BRAK" by (JOG) button up or down operation and use the (+) and (-) buttons to adjust the acceleration amount.

- "0" :No acceleration
- "100" :Maximum acceleration (Brake side maximum throttle angle)

### 3 (3rd & 4th channel brake side acceleration amount adjustment)

If the "Brake Mixing Function" (p.74) is being set, the 3rd or 4th channel brake side acceleration will become adjustable.

Select the setting item "BRAK (3CH)" or "BRAK (4CH)" by (JOG) button up or down operation and adjust acceleration amount by (+) or (-) button.

- "0" :No acceleration
- "100" :Maximum acceleration (Brake side maximum throttle angle)

```
TH-ACCEL      6.4v
FWRD▶  0
BRAK:  0
BRAK:  0 (3CH)
```

3rd channel Brake

```
TH-ACCEL      6.4v
FWRD▶  0
BRAK:  0
BRAK:  0 (4CH)
```

4th channel Brake

```
TH-ACCEL      6.4v
FWRD▶  0
BRAK:  0
BRAK:  0 (3CH)
BRAK:  0 (4CH)
```

3rd & 4th channel Brake

- ### 4
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Caution

When "TRG-BRK" is set to "CUT OFF" by boat mode function (p.78), the brake side function is not activated.

### Dial / Trim Setting

The throttle acceleration adjustment amount (FOWRD), (BRAKE), 3rd channel (BRAKE 3CH) and 4th channel (BRAKE 4CH) can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.98)

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.

### Forward acceleration amount (FWRD)

0~100  
Initial value: 0

### Brake side acceleration amount (BRAK)

0~100  
Initial value: 0

### 3rd/4th channel brake side acceleration amount (BRAK 3CH),(BRAK 4CH)

0~100  
Initial value: 0

# Fail Safe/Battery Fail Safe Function "F/S"

(All channel)


## Fail Safe Mode (F/S)

This function moves each servo to a preset position when the receiver cannot receive the signals from the transmitter for some reason.

-When "Rx Type"(p.46) is set "FASST-C1" and "Servo Response"(p.46) is "NORMAL", the setting fail safe (F/S) is only throttle (TH). Other channels are in "OFF" mode.

-The fail safe data is transferred from the transmitter to the receiver 10 seconds after the transmitter power is turned on and every minute thereafter. Usually the power is turned on in transmitter and then receiver order. Therefore, data is not transferred for about 1 minute after the receiver power is turned on.

-For gasoline engine cars, for safety we recommend that this fail safe function be used to set the throttle channel in the direction in which the brakes are applied.

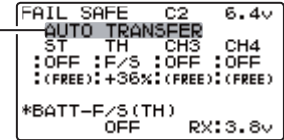

\*"AUTO TRANSFER" blinks during data transfer.

## Hold mode (HOLD)

This function holds the receiver in its position immediately before reception was lost. It is an R604FS and other C2 type receiver only function. When the receiver used is the R603FF/FF C1 type, this function cannot be used because the receiver type is set to "FASST-C1" by receiver type setting (p.46).

## Off mode (OFF)

This function stops output of signals to the servos and places the servos into the free state when the receiver cannot receive.

The F/S, HOLD, and OFF modes are automatically reset when signals from the transmitter can be received again.

## Battery fail safe function (BATT-F/S)


If the receiver battery voltage drops below a certain value when this function is enabled, the throttle servo moves to the position set by fail safe function. When the battery voltage recovers, the battery fail safe function is automatically reset.

-This function cannot be used when the throttle (TH) is not set to fail safe (F/S).

-For an R603FS/FF with RX TYPE (page 46) set to C1 types "FASST-C1", when throttle (TH) is set to fail safe (F/S), the battery fail safe function is executed automatically. It cannot be set at the transmitter.



### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

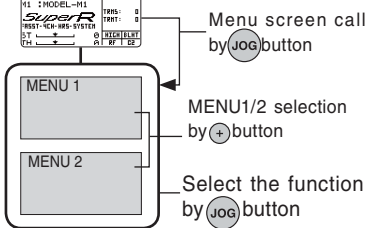

Press the JOG button


\* When the direct call button is set, the setup screen is also called by the following method:  
(Opening Screen)

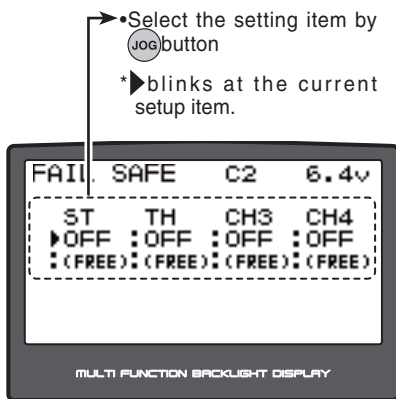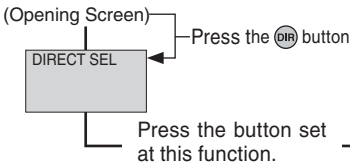

\*Select the setting item by JOG button  
\*blinks at the current setup item.

### Setup item

- ST :Steering
- TH :Throttle
- CH3 :Channel3
- CH4 :Channel4
- MODE :Battery fail safe function ON/OFF

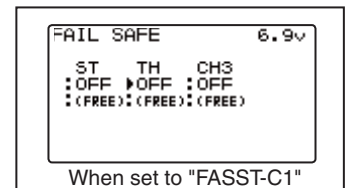

When set to "FASST-C1"

\* When fail safe is set, that servo position is displayed.

\* When fail safe is set at throttle (TH), the battery fail safe (BATT-F/S) setting items are displayed.

Function

## Fail safe mode selection


(Preparation)

- Select the channel to be set by (JOG) button operation.

### 1 (Mode selection)

Select the mode by (+) or (-) button.

(Each channel can be individually set.)

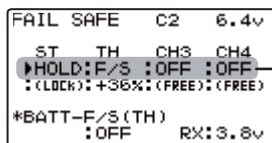

- ### 2
- When ending hold or off mode setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once). When setting fail safe, set the servo position by the following method.

## Setup item selection

- Select by (JOG) button up or down operation.

## F/S mode selection

- Select with the (+) or (-) buttons.

## F/S mode

OFF, HOLD, F/S

## Fail safe function setup

### 1 (Servo position setup)

When the fail safe function operates, the steering wheel, the throttle trigger or 3rd channel dial remains in the desired operation position. When the (+) and (-) buttons are pressed simultaneously for about 1 second, the servo position is displayed and you can confirm that the function was set.


When you want to release the setting, press the (+) or (-) button for 1 second. "HOLD" is displayed.

(Each channel can be set similarly.)

- ### 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## F/S position setup button

- The (+) and (-) buttons are pressed simultaneously for about 1 second.

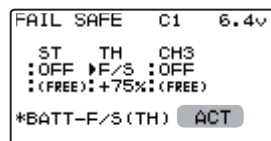

When RX TYPE is set to "FASST-C1", the BATT-F/S function automatically becomes "ACT"(active).


## Battery fail safe function ON/OFF & BATT-F/S voltage setting

(Preparation)

- Select the setting item by (JOG) button operation. For BATT-F/S function ON/OFF, select "OFF" or "ACT" of "BATT-F/S(TH)". For voltage setting, select RX\*\*v (3.5v, 3.8v, 4.4v, 4.75v, 5.5v).

### 1 (Battery fail safe function ACT/OFF)

BATT-F/S function ACT/OFF and voltage setting which activates the BATT-F/S function can be switched by (+) or (-) button.

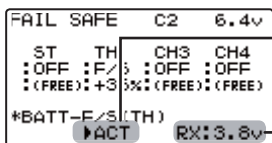

## Battery fail safe function

OFF, ON  
Initial value: OFF

## BATT-F/S Voltage

3.5v, 3.8v, 4.4v, 4.75v, 5.5v  
Initial value 3.8v  
5.5v : Only R614FF

Example:

Ni-MH /Ni-Cd 4cell---3.8V  
Ni-MH /Ni-Cd 6cell---4.4V  
LiFe 2cell---4.75V  
Li-Po 2cell---5.5V

- ### 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

When the receiver power supply of an electric car uses a common power supply from an ESC, we recommend that this function be set to OFF because the voltage supplied to the receiver may drop momentarily and the battery fail safe function may be activated.

# Steering EXP "STEXP"

(Steering system)


This function is used to change the sensitivity of the steering servo around the neutral position. It has no effect on the maximum servo travel.

## Racers Tip



When the setting is not determined, or the characteristics of the model are unknown, start with 0%. (When EXP is set to 0%, servo movement is linear.)

### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

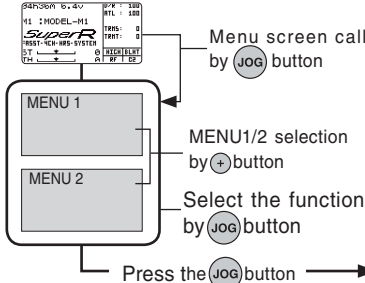


\* When the direct call button is set, the setup screen is also called by the following method:

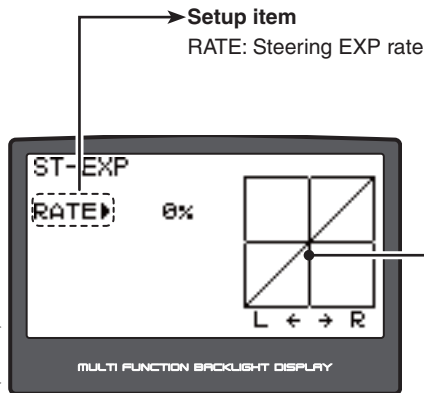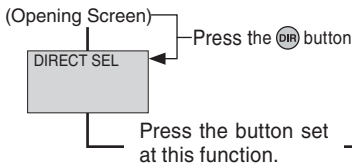

## Dial / Trim Setting

The steering EXP adjustment (RATE) can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.90)

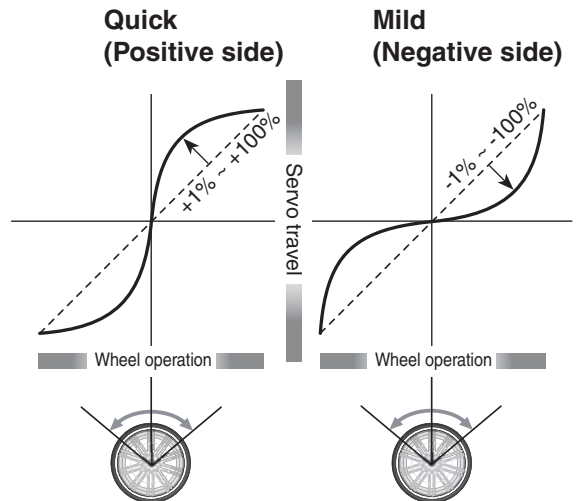

## Steering EXP adjustment

- 1 When you want to quicken steering operation, use the (+) button to adjust the + side. When you want to make steering operation milder, use the (-) button to adjust the - side.
- 2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Adjustment range

-100~0~+100%

### Adjust button

Adjust with the (+) and (-) buttons.  
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.



# Throttle EXP "THEXP"

(Throttle system)

This function makes the throttle high side and brake side direction servo operation quicker or milder. It has no effect on the servo maximum operation amount.

For the high side, selection from among three kinds of curves (EXP/VTR/CRV) is also possible.


## Advice

When the course conditions are good and the surface has good grip, set each curve to the + side (quick side). When the road surface is slippery and the drive wheels do not grip it, set each curve to the - minus (mild) side.

## Calling the setup screen



### \*Calling from menu screen

(Opening Screen)

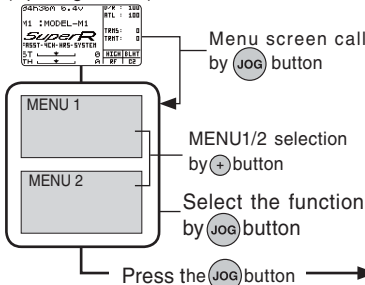


\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

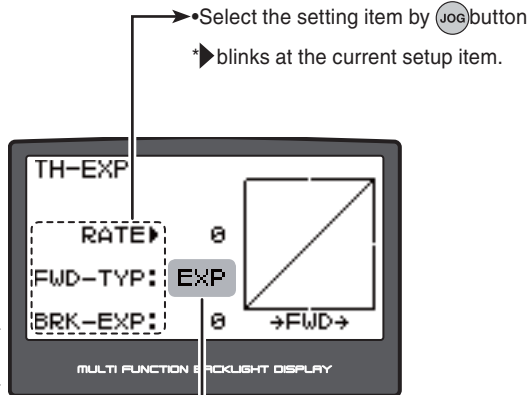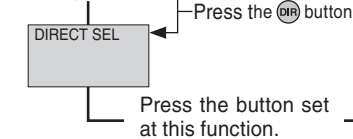


### Curve selection


First, select the type of forward side curve at the "FWD-TYP" item. The setup item (screen) varies with the type of curve. The figure at the above is the EXP curve setup screen.

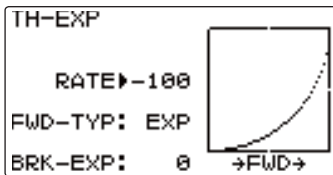

Curve type which operates the throttle from the neutral point to the high point on a curved curve.

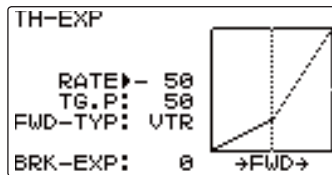

Curve type which sets the switching point between the throttle neutral point and high point and operates the throttle on a linear curve.

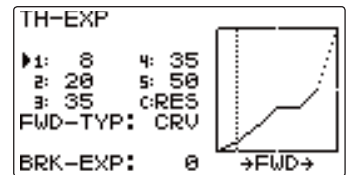

Curve type which sets 5 points between the throttle neutral point and high point and operates the throttle.

## Caution

When "TRG-BRK" is set to "CUT OFF" by boat mode function (p.78), the brake side function is not activated.

## Dial / Trim Setting

The throttle EXP curve and VTR curve adjustment (Forward side RATE) and (Brake side RATE) can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.98)

Function

## Adjustment method for EXP curve

(Preparation)


- With the jog dial, move the blinking cursor up or down to select "FWD-TYP".
- With the plus (+) or minus (-) buttons, select EXP.
- With the jog dial, move the blinking cursor up or down to select "RATE" and make the following preferred settings.

### Setup items

RATE :Forward side rate  
 FWD-TYP :Forward side curve selection  
 BRK-EXP :Brake side rate

### Setup item selection

- Select by (JOG) button up or down operation.

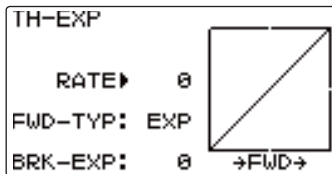


### Curve type Select button

- Select with the (+) or (-) buttons.

## 1 Forward Exponential Adjustment

Use the plus (+) button to adjust for a faster throttle response or use the minus (-) button for a slower or milder throttle response.

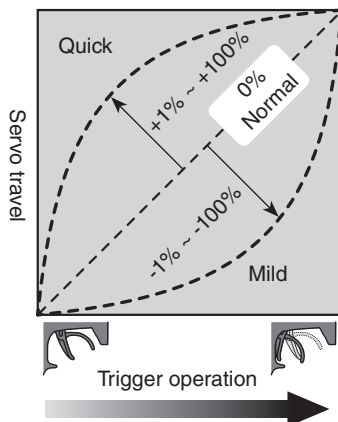

### Adjustment range

RATE :-100 ~ 0 ~ +100%  
 FWD-TYP :EXP, VTR, CRV  
 BRK-EXP :-100 ~ 0 ~ +100%


### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.

## 2 Brake Exponential Adjustment

With the jog dial, move the blinking cursor up or down to select "BRK-EXP".

Use the plus (+) button to adjust for a faster brake response or use the minus (-) button for a slower or milder brake response.

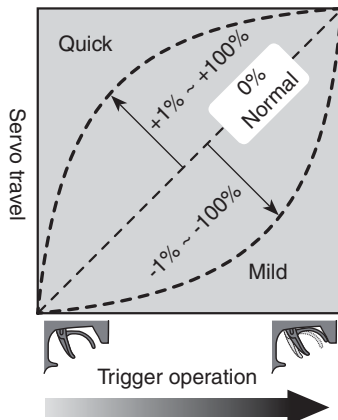

- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


## Adjustment method for VTR curve

(Preparation)

- With the jog dial, move the blinking cursor up or down to select "FWD-TYP". Use the plus (+) or minus (-) keys to select "VTR".
- With the jog dial, move the blinking cursor up or down to select "RATE" and make the following adjustments:

### Setup items

RATE : Forward side rate  
 TG.P : Curve switching point  
 FWD-TYP : Forward side curve selection  
 BRK-EXP : Brake side rate

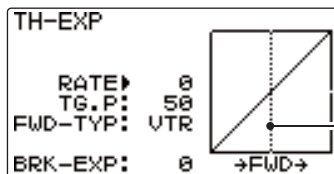

### Curve type Select button

- Select with the (+) or (-) buttons.

### Switching point

A vertical cursor line that shows the curve switching point is displayed on the setup screen graph.

### Setup item selection

- Select by (JOG) button up or down operation.

## 1 Forward side adjustment

Use the plus (+) button to adjust for a faster response. Use the minus (-) button for a slower or mild response.

-Plus (+) button- the higher the number goes on the positive side, the faster the response will be at center of throttle response.

-Minus (-) button- the higher the number goes on the negative side, the milder or softer it is in the center of the throttle response.

### Adjustment range

RATE : -100 ~ 0 ~ +100%  
 FWD-TYP : EXP, VTR, CRV  
 TG.P : 20 ~ 80%  
 BRK-EXP : -100 ~ 0 ~ +100%

### Adjust buttons


- Adjust with the (+) and (-) buttons.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

## 2 Curve switching point adjustment

With the jog dial, move the blinking cursor up or down to select "TG.P". Use the plus (+) or minus (-) buttons to move the point you prefer. This gives you the opportunity of switching the curve point in relation to the throttle trigger position.

Initial value:

RATE and BRK-EXP "0"  
 TG.P "50"

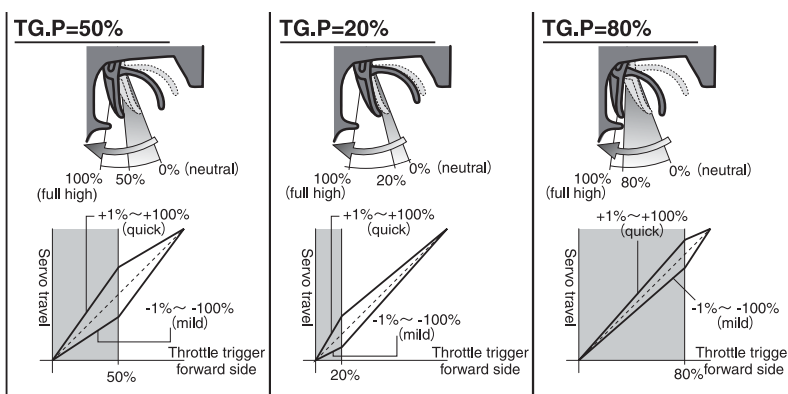

## 3 Brake side adjustment

With the jog dial, move the blinking cursor up or down to select "BRK-EXP". Use the plus (+) button to adjust for a faster brake response or use the minus (-) button for a slower or milder brake response.

For the VTR curve, only the high side can be set. The brake becomes the EXP curve.

- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


## Adjustment method for VTR curve

(Preparation)

- Select "CRV" at setup item "FWD-TYP".

### Setup items

1:~5 :Curve points 1~5  
 C:RES :Curve reset  
 FWD-TYP :Forward side curve selection  
 BRK-EXP :Brake side rate

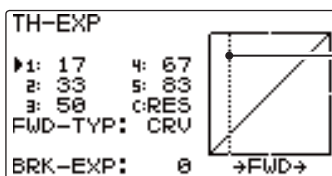

### Curve type Select button

- Select with the (+) or (-) buttons.

### Point in current setup

A vertical cursor line that shows the point in the current setup is displayed on the setup screen graph.

### Setup item selection

- Select by (JOG) button up, down, left or right operation.

### Adjustment range

1: ~ 5 : 0 ~ 100%  
 F-TYP : EXP, VTR, CRV  
 BRAKE: -100 ~ 0 ~ +100%

### Adjust buttons

- Adjust with the (+) and (-) buttons.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).
- Initial value:  
 Point.1:17, 2:33, 3:50, 4:67, 5:83  
 BRK-EXP "0"

## 1 Curve setup

- Select the setting item "1:" (1st point), by (JOG) button up, down, left, or right operation, and use the (+) and (-) buttons to set the 1st point.

Set the throttle curve by sequentially setting "2:" (2nd point) ~ "5:" (5th point).

## 2 Brake side adjustment

Select the setting item "BRAKE" by (JOG) button up or down operation. When you want to quicken the rise, use the (+) button to adjust the + side and when you want to make the rise milder, use the (-) button to adjust the - side.


## 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Returning entire curve to initial value

- Select setup item "C:RES" and return the set value of each point to the initial value by simultaneously pressing (approx. 1 sec) the (+) and (-) buttons.

For the CRV curve, only the high side can be set. The brake becomes the EXP curve.

## Throttle curve

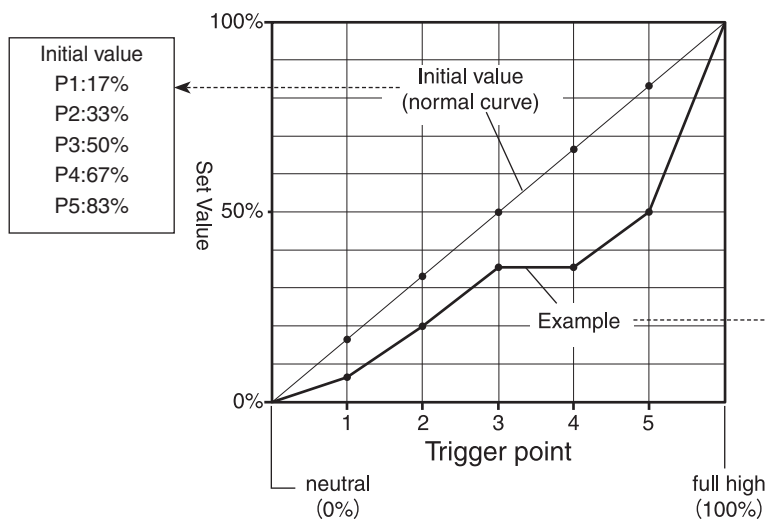


Throttle EXP "THEXP"

# Steering Speed "STSPD"


(Steering system)

Quick steering operation will cause momentary understeering, loss of speed, or spinning. This function is effective in such cases.

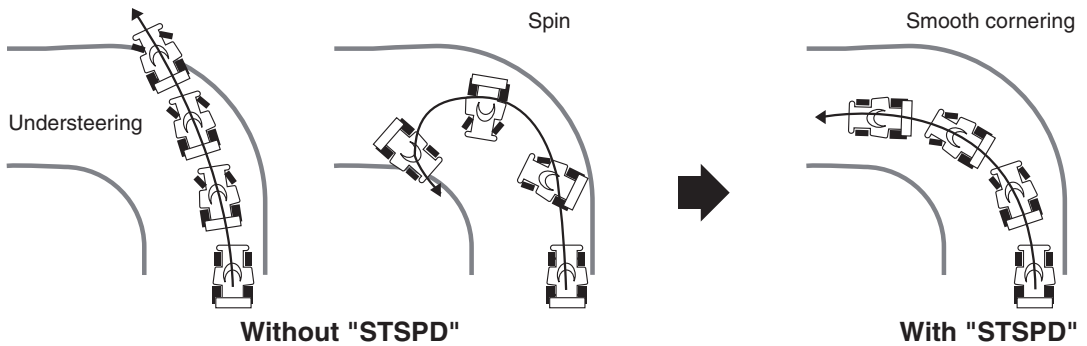


## Operation

- This function limits the maximum speed of the steering servo. (Delay function)
- The steering speed when the steering wheel is operated (TURN direction) and returned (RETURN direction) can be independently set.
- If the steering wheel is turned slower than the set speed, the steering servo is not affected.


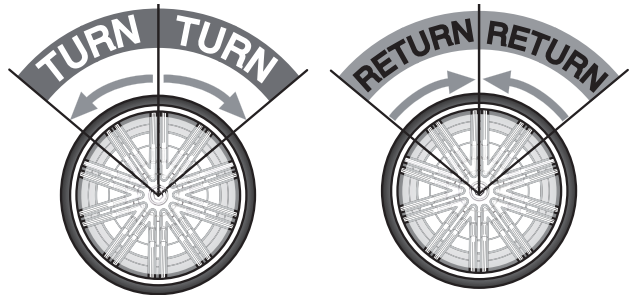


### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

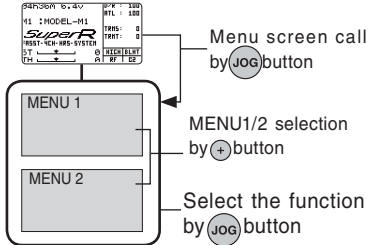

\* When the direct call button is set, the setup screen is also called by the following method:

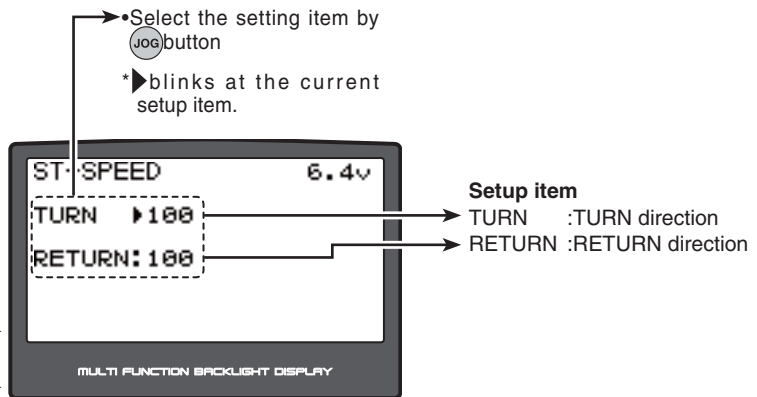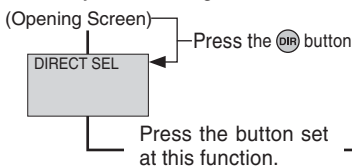

Function

## Steering Speed adjustment

(Preparation)

- Select the setting item "TURN" by (JOG) button up or down operation, and make the following adjustments:

### 1 "TURN" direction adjustment

Use the (+) or (-) buttons to adjust the delay amount.



### 2 "RETURN" direction adjustment

Select the setting item "RETURN" by (JOG) button up or down operation, and use the (+) or (-) buttons to adjust the delay amount.



- ### 3
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Setup item selection


- Select by (JOG) button up or down operation.

#### Adjustment range

1~100% (each direction)

At 100%, there is no delay.

1% 100%



Servo operation is delayed.

#### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.

### Setting example (Steering servo: BLS451 / BLS351) . . . (Setting criteria)

- Onroad TURN side: Approx. 50~80% RETURN side: Approx. 60~100%
- Offroad TURN side: Approx. 70~100% RETURN side: Approx. 80~100%

### Dial / Trim Setting

The steering speed adjustment "TURN" and "RETURN" can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.98)

# Throttle Speed "THSPD"

(Throttle system)


Sudden throttle trigger operation on a slippery road only causes the wheels to spin and the vehicle cannot accelerate smoothly. Setting the throttle speed function reduces wasteful battery consumption while at the same time permitting smooth, enjoyable operation.



## Operation


-Throttle servo (ESC) operation is delayed so that the drive wheels will not spin even if the throttle trigger is operated more than necessary. This delay function is not performed when the throttle trigger is returned and at brake operation.

-1 speed, 2 speed, or 3 speed can be selected.

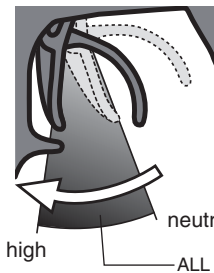


### 1 SPEED

A delay is set over the entire throttle range.

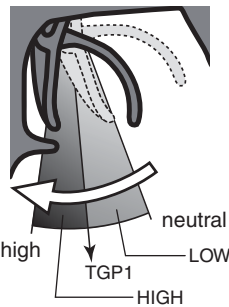

### 2 SPEED

A delay can be set in 2 ranges with TGP1 as the boundary.

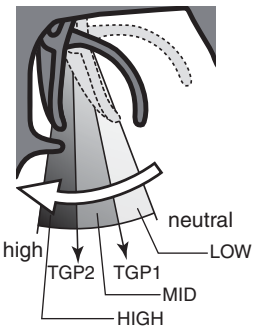


### 3 SPEED



A delay can be set in 3 ranges with TGP1 and TGP2 as the boundaries.

## Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

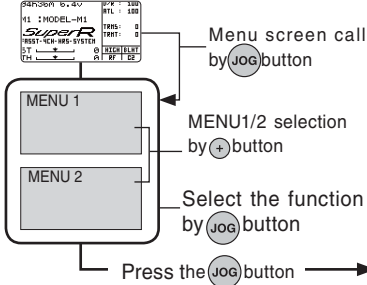

\* When the direct call button is set, the setup screen is also called by the following method:

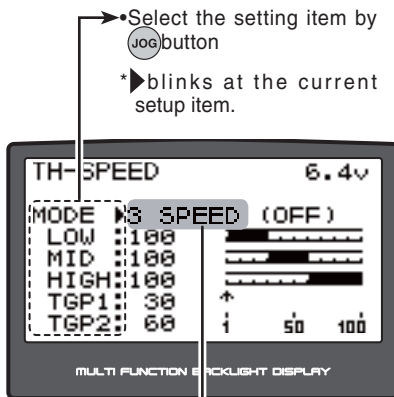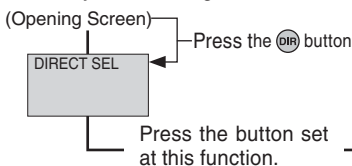

### Mode selection

One speed, 2 speed, or 3 speed can be selected at the "MODE" item. The setting item (screen) depends on the mode. The figure at the above is the 3 speed setup screen.

## Adjustment method for 1 SPEED

(Preparation)


- Select the setting item "MODE" by (JOG) button up or down operation. Press the (+) or (-) button and select "1 SPEED".

### Setting item

MODE :Speed type selection  
ALL :Speed adjustment

### Setup item selection

- Select by (JOG) button up or down operation.

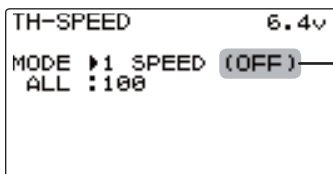

### Speed type Select button

- Select with the (+) or (-) buttons.

When a value of 99 or less is set at ALL setting, the display is switched from OFF to ON by trigger operation.

## 1 ("ALL" delay adjustment)

Select "ALL" by (JOG) button up or down operation.

Use the (+) or (-) button to adjust the delay of the entire throttle forward side range.

### Adjustment range

- 1~100% (each direction)
- At 100%, there is no delay.

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "100" by pressing the (+) and (-) buttons simultaneously for about 1 second.

- ## 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for direct selection, press the (END) button once).

## Adjustment method for 2 SPEED

(Preparation)


- Select the setting item "MODE" by (JOG) button up or down operation. Press the (+) or (-) button and select "2 SPEED".

### Setting item

MODE :Speed type selection  
LOW :Low side range speed adjustment  
HIGH :High side range speed adjustment  
TGP1 :Low and medium speed switching point

### Setup item selection

- Select by (JOG) button up or down operation.

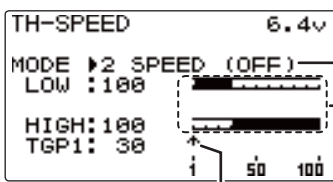

### Speed type Select button

- Select with the (+) or (-) buttons.

When a value of 99 or less is set at either LOW or HIGH, the display is switched from OFF to ON by trigger operation.

The LOW and HIGH ranges are linked to the TGP1 set point and displayed.

Throttle trigger position

## 1 ("LOW" and "HIGH" delay adjustment)

Select "LOW" or HIGH" by (JOG) button up or down operation.

Use the (+) or (-) button to adjust the delay of the entire throttle forward side range.

### Adjustment range

- LOW :1~100
- HIGH :1~100
- At 100%, there is no delay.
- TGP1 :1~100

## 2 (Speed switching point adjustment)

When you want to change the "LOW" and "HIGH" switching point, select the setting "TGP1" by (JOG) button up or down operation.

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).  
Initial value  
LOW, HIGH : "100"  
TGP1 :30

- ## 3
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).




## Adjustment method for 3 SPEED

(Preparation)

- Select the setting item "MODE" by (JOG) button up or down operation. Press the (+) or (-) button and select "3 SPEED".

### Setting item

MODE	:Speed type selection
LOW	:Low side range speed adjustment
MID	:Medium speed range speed adjustment
HIGH	:High side range speed adjustment
TGP1	:Low and medium speed switching point
TGP2	:Medium speed and high switching point

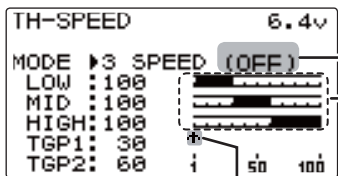

### Setup item selection

- Select by (JOG) button up or down operation.

### Speed type Select button

- Select with the (+) or (-) buttons.

When a value of 99 or less is set at either LOW or HIGH, the display is switched from OFF to ON by trigger operation.

The LOW and HIGH ranges are linked with the TGP1 set point and displayed.

Throttle trigger position

## 1 ("LOW", "MID", and "HIGH" delay adjustment)

Select the setting item "LOW", "MID", or "HIGH" by (JOG) button up or down operation.

## 2 (Speed switching point adjustment)

When you want to change the "LOW", "MID", and "HIGH" switching point, select setting item "TGP1" or "TGP2" by (JOG) button up or down operation.

## 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Adjustment range

LOW	:1~100
MID	:1~100
HIGH	:1~100
At 100%, there is no delay.	
TGP1	:1~100

### Adjust button

- Adjust with the (+) and (-) buttons.
  - Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).
- Initial value  
 LOW, MID, HIGH : "100"  
 TGP1 : 30  
 TGP2 : 60

## Dial / Trim Setting

The throttle speed adjustment "LOW", "MID", "HIGH" can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.98)

# Start Function, Engine Cut "START"

(Throttle system)

If the track is slippery and you begin to accelerate by pushing the trigger to full throttle, the car wheels will spin and the car will not accelerate smoothly. When the Start function is activated, merely operating the throttle trigger slowly causes the throttle servo to automatically switch from the set throttle position to a preset point so that the tires do not lose their grip and the car accelerates smoothly.

**With Start function**



Tires grip the track firmly- Car accelerates

**Without Start function**



Wheels spin- Car does not accelerate

## Start Function Operation

- When the throttle trigger is moved to the preset position (trigger position: TG.P), the throttle servo moves to the preset position.
- When the throttle trigger is operated slowly so that the wheels will not spin, the car automatically accelerates to the set speed.
- This function is effective only for the first throttle trigger operation at starting. This function has to be activated before every start.
- When the throttle trigger is returned slightly, the Start function is automatically deactivated and the set returns to normal throttle trigger operation.


## Engine Cut Function

When the switch is pressed, the throttle servo will move to the preset position without regard to the throttle trigger position. This is convenient when used to cut the engine of boats, etc. (The function select switch function. See page 96)


### Calling the setup screen

#### \*Calling from menu screen

(Opening Screen)



Menu screen call by JOG button

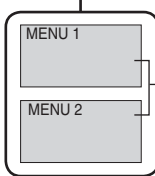


MENU1/2 selection by (+) button  
Select the function by JOG button

Press the JOG button

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)




Press the (DIR) button

Press the button set at this function.

Select the setting item by JOG button

\* JOG blinks at the current setup item.

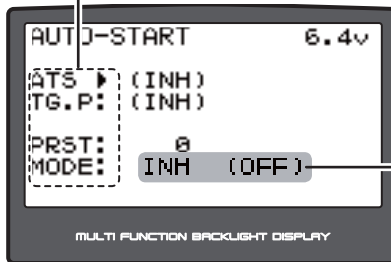

#### Function selection

First, select the function at the "MODE" item.

"AT&SW": Start function

"SW": Engine Cut function

If the power switch is turned on while the preset (engine cut) switch is on, an audible alarm will be heard. Immediately set the preset switch to OFF.

6.4v

IDLE UP or PRESET  
or NEUTRAL BRAKE  
<< MIX WARNING >>

Warning display

## Start function adjustment

(Preparation)


- Select the setting item "MODE" by (JOG) button up or down operation. Press the (+) or (-) button and select "AT&SW".
- Select setup item "TG.P" and make the following adjustments.

### Setup items

ATS : READY setting  
TG.P : Throttle position  
PRST : Preset position  
MODE : Function selection

### Setup item selection

- Select by (JOG) button up or down operation.

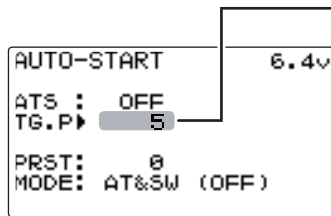

### Setup item selection

- Select by (JOG) button up or down operation.

When the trigger is moved to the HI side, and the trigger position is exceeded, "\*" is displayed in front of the number.

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

## 1 (Throttle position setup)

Set the throttle position by pressing the (+) or (-) button.

### Trigger position (TG.P)

5 ~ 95  
Initial value: 5

## 2 (Preset position setup)

Select the setting item "PRST" by (JOG) button up or down operation, and use the (+) and (-) buttons to set the preset position of the throttle servo.

### Preset position (PRST)

B100 ~ B1, 0, F1 ~ F100  
Initial value: 0

"B100" ~ "B1" : Brake side  
"0" : Neutral  
"F1" ~ "F100" : Forward side

### Setting Example: (When ESC used with an electric car)

Set the preset position to F75% at EPA100%.

## 3 ("READY" setting)

Select the setting item "ATS" by (JOG) button up or down operation, and press the (+) and (-) buttons simultaneously for about 1 second. "READY" blinks on the screen and the system enters the READY state. Throttle trigger operation starts the function.

### READY setting (ATS)

OFF : off state  
READY: Ready state  
ACT : on state

- ## 4
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

-If the throttle trigger is moved to the set position while "READY" is flashing, the throttle servo will move to the set position. The throttle operation wait state is reset when the throttle trigger is returned.

-When using the Start function, always set the function by performing step 3 above each time.

## Engine Cut function adjustment

(Preparation)

- Use the function select switch to select the switch.

### Setup items

PRST : Preset position  
MODE : Function selection

### Setup item selection

- Select by (JOG) button up or down operation.

```
AUTO-START      6.4v
ATS : (INH)
TG.P : (INH)
PRST▶   0
MODE:   SW (OFF)
```

- Select the setting item "MODE" by (JOG) button up or down operation. Press the (+) or (-) button and select "SW".

## 1 (Preset position setup)

Select the setting item "PRST" by (JOG) button up or down operation, and use the (+) and (-) buttons to set the preset position of the throttle servo.

"B100" ~ "B1" :Brake side  
"0" :Neutral  
"F1" ~ "F100" :Forward side

- ## 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Setup item selection

- Select by (JOG) button up or down operation.

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

### Preset position (PRST)

B100 ~ B1, 0, F1 ~ F100  
Initial value: 0

## When "TRG-BRK" is set to "CUT OFF" by boat mode function

When "CUT OFF", which prohibits trigger brake side operation, is set in the boat mode (p.78), "TH-BRK" (brake side) of the EPA functions (p.49) cannot be adjusted. The preset position set here becomes the linkage standard. Connect the linkage so that the carburetor is fully closed and the engine is cut off in the preset adjustment range and set the full throttle position by EPA function "TH-FWD". Adjust the idling position by throttle trim.

## Servo Throw

The throttle servo operating position (preset position) set by this setting is unrelated to the setting of other functions. Maximum to minimum servo travel can be set. However, the reverse function setting is enabled.

## ⚠ Caution


- ❗ Always operate carefully before using this function.

While push switch SW1, SW2, or SW3 with preset function set is in the ON state, the servo (motor controller) is locked in the preset position and does not operate even if the throttle trigger is operated. If the servo was operated at the wrong setting, you may lose control of the car (boat).


# A.B.S. Function "A.B.S"

(Throttle system)

When the brakes are applied while cornering with a 4 Wheel Drive or other type of vehicle, understeer may occur. The generation of understeer can be eliminated and corners can be smoothly cleared by using this function.

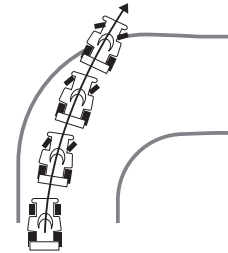

Without A.B.S.

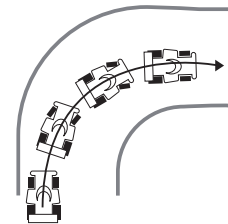

With A.B.S.

## Operation

- When the brakes are applied, the throttle servo will pulse intermittently. This will have the same effect as pumping the brakes in a full size car.
- The brake return amount, pulse cycle, and brake duty can be adjusted.
- The region over which the ABS is effective can be set according to the steering operation. (Mixing function)

## Operation display

During ABS operation, the LED blinks (if LED color is not selected as off).


**ABS** display also appears on the initial screen and menu screen.

## When "TRG-BRK" was set to "CUT OFF" by boat mode function



When "CUT OFF", which prohibits trigger brake side operation, was set in the boat mode (p.78), the ABS function will not actually operate even if set.

### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

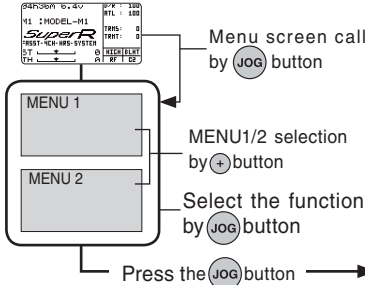

\* When the direct call button is set, the setup screen is also called by the following method:

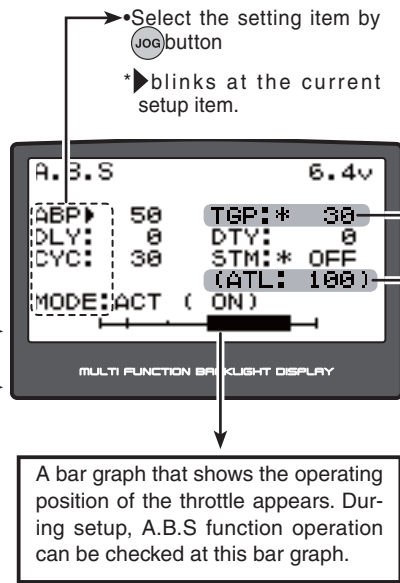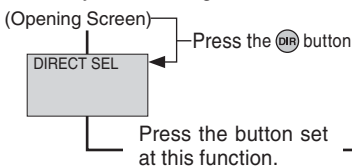

### Setup items

- ABP : Brake return amount
- DLY : Delay amount
- CYC : Cycle speed
- MODE : Function ON/Off
- TGP : Trigger point
- DTY : Cycle duty ratio
- STM : Steering mixing


When brake operation enters the set range, "\*" is displayed in front of the number.

ATL (brake) rate can be confirmed on the A.B.S function screen.

A bar graph that shows the operating position of the throttle appears. During setup, A.B.S function operation can be checked at this bar graph.

**- ABP : Amount of brake return**

Sets the rate at which the servo returns versus trigger operation for brake release. When set to 0%, the ABS function is not performed. When set to 50%, the servo returns 50% (1/2) of the trigger operation amount and when set to 100%, the servo returns to the neutral position.

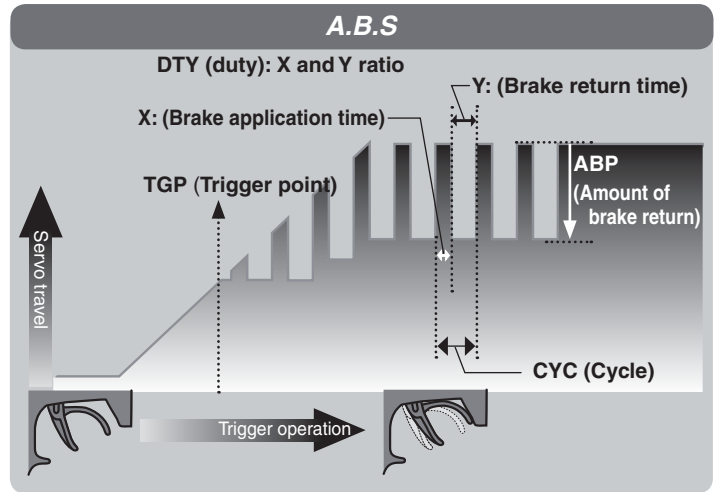

**- DLY : Delay**

Sets the delay from brake operation to ABS operation. When set to 0%, the ABS function is activated without any delay. At 50%, the ABS function is activated after a delay of approximately 0.7 second and at 100%, the ABS function is activated after a delay of approximately 1.4 seconds.

**- CYC : Cycle speed**

Sets the pulse speed (cycle). The smaller the set value, the faster the pulse cycle.

**- MODE : Function ON/OFF**

ABS function ON/OFF setting. When using the ABS function, set to "ACT(ON)".

**- TGP : Trigger point**

Sets the trigger point at which the ABS function begins to operate at brake operation.


**- DTY : Cycle duty ratio**

Sets the proportion of the time the brakes are applied and the time the brakes are released by pulse operation. The ratio can be set to +3 ~ 0 ~ -3 in 7 steps.

**- STM : Steering mixing**

Sets ABS operation ON/OFF according to the steering operation range.

Function

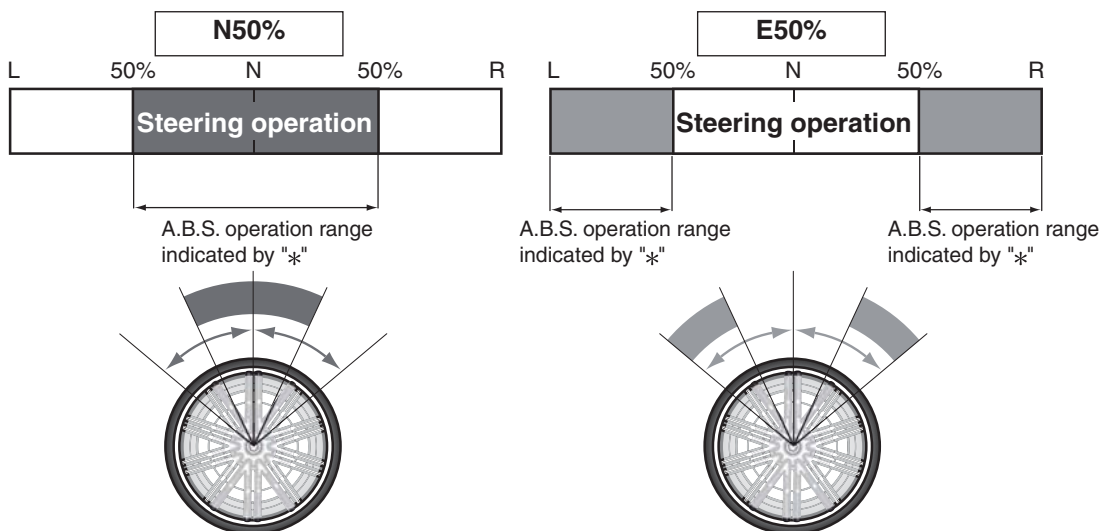

A.B.S Function "A.B.S"

## A.B.S. function adjustment

### 1 (Function ON/OFF)

Select the setting item "MODE" by (JOG) button up, down, left or right operation. Set the function to the active state by pressing the (+) or (-) button.

"INH(OFF)" :Function OFF  
"ACT(ON)" :Function ON  
"ACT(OFF)" :Switch OFF when setting switches

#### Setup item selection


- Select by (JOG) button up, down, left or right operation.

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.  
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

### 2 (Brake return amount adjustment)

Select the setting item "ABP" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the return amount.

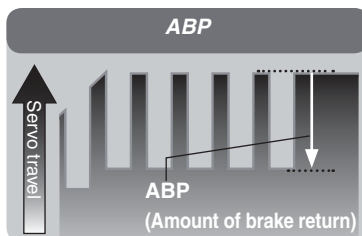

"0" :No return  
"50" :Return to the 50% position of the brake operation amount  
"100" :Return to the neutral position.

#### Function ON/OFF (MODE)

INH(OFF), ACT(ON), ACT(OFF)

#### Brake return amount (ABP)

0 ~ 50 ~ 100  
Initial value: 50

- Brake return amount (ABP) is influenced by the "EXP" rate on the brake side.

### 3 (Delay amount setup)

Select the setting item "DLY" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the delay amount.


"0" :A.B.S. function performed without any delay  
"50" :A.B.S. function performed after an approximate 0.7 sec delay.  
"100" :A.B.S. function performed after an approximate 1.7 secs delay.

#### Delay amount (DLY)

0 ~ 100  
Initial value: 0

### 4 (Cycle speed adjustment)

Select setting item "CYC" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the pulse speed (cycle).

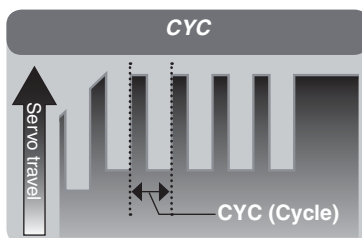

- The smaller the set value, the faster the pulse speed.


#### Cycle speed (CYC)

1 ~ 30  
Initial value: 10

### 5 (Trigger point setup)

Select setting item "TGP" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the operation point.

- Sets the throttle trigger position at which the A.B.S. function is performed. The number is the % display with the full brake position made 100.

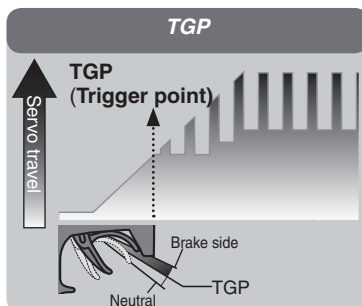


#### Trigger point (TGP)

10 ~ 100  
Initial value: 30

## 6 (Cycle duty ratio setup)

Select setting item "DTY" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the duty ratio.

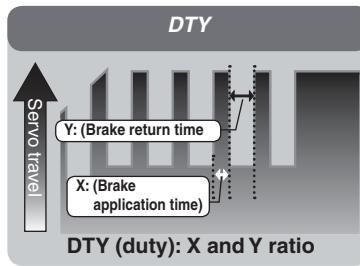

### Duty ratio (DTY)


-3 ~ 0 ~ +3  
Initial value: 0

- "-3" :Brake application time becomes shortest. (Brakes lock with difficulty)
- "+3" :Brake application time becomes longest (Brakes lock easily)
- (Remark) For low grip, set at the - side and for high grip, set at the + side.

## 7 (Steering mixing setup)

Select setting item "STM" by (JOG) button up, down, left or right operation. Use the (+) or (-) button to adjust the steering mixing range.

- Sets the range within which the A.B.S. function is performed relative to steering wheel operation.

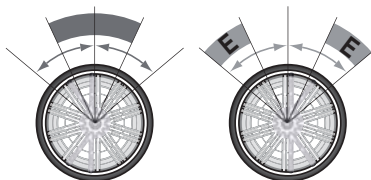

Steering operation

A.B.S	6.4v
ABP▶ 50	TGP: 30
DLY: 8	DTY: 0
CYC: 10	STM:* OFF
	(ATL: 100)
MODE: INH (OFF)	

### Steering mixing (STM)

OFF, N10 ~ N100, E10 ~ E100  
Initial value: OFF

When steering mixing is set and steering operation enters the set range, "\*" is displayed in front of the number. When mixing is OFF, the A.B.S. function can operate over the entire steering range.

- ## 8
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Switch setting

Use PS1, PS2, PS3 to switch the A.B.S. function ON/OFF.  
See the function select switch function (p.96).

### Dial / Trim Setting

The brake return amount (ABP), delay amount (DLY) and cycle (CYC) can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3 etc. with the function select dial function. (p.98)



## Fail Safe Unit

When the T4PKSR is used with the Futaba fail safe unit (FSU-1), it will operate as described below.

- When the FSU-1 is connected to the throttle channel, and the A.B.S. function has been activated, the FSU-1 LED will flash each time the servo operates. The reason for this is that the FSU-1 responds to sudden data changes caused by A.B.S. function pumping operation. It does not mean that the fail safe function is activated. The servo will not be affected.

## Example of A.B.S. function setting when BLS351 / BLS352 used (There will be a slight difference depending on the state of the linkage.)

- Basic setting

ABP : Approx. 30% (If this value is too high, the braking distance will increase.)

CYC : 5~7

DTY : 0 (When grip is low: - side, when grip is high: + side)

DLY : 10~15%

TGP : Approx. 70%

STM : OFF

- When the wheels lock, or the car spins, when the brakes are applied fully

ABP : Increase from 30%

DTY : Shift from 0 to - side (-1, -2, -3)  $\longrightarrow$

DLY : Reduce the delay

- When the braking effect is poor and the braking distance is long when the brakes are applied fully

ABP : Decrease from 30%

DTY : Shift from 0 to + side (+1, +2, +3)  $\longrightarrow$

DLY : Increase the delay

## 1/5 scale car and other independent brakes and ABS

ABS can be independently set for the brakes which are controlled by the 3rd CH and 4th CH by using the brake mixing (BRAKE) function described on page 74. For more information, read the brake mixing (BRAKE) item.

This function is used when the front and rear brakes must be adjusted independently such as a 1/5 scale GP car. This mixing uses the 2nd CH for the rear brakes and the 3rd or 4th CH for the front brakes, or controls the front brakes with the 3rd CH and 4th CH servos, or controls the 2nd CH by independent throttle and controls the rear and front brakes with the 3rd CH and 4th CH. In addition, mixing which varies the 3rd CH and 4th CH brake rate in proportion to steering operation is also possible.

### When "TRG-BRK" was set to "CUT OFF" by boat mode function


When "CUT OFF", which prohibits trigger brake side operation, was set in the boat mode (p.78), the brake mixing function will not actually operate even if set.

### Setting Special mixings

When "4WS MIX" (p.88) or "GYRO MIX" (p.92) was set to ON by special mixing the 3rd CH of this brake mixing function cannot be used and when "DUAL ESC" (p.90) or "CPS MIX" (p.94) was set to ON, 4th CH brake cannot be used.

### Operation

- When braking, mixing is applied to 2nd CH→3rd CH, 4th CH.
- 3rd CH and 4th CH brake amount, 2nd CH, 3rd CH, and 4th CH brake delay, and 3rd CH and 4th CH brake EXP and ABS can be set.
- Steering mixing which varies front brakes 3rd CH and 4th CH matched to the steering operation can be set. Front brakes 3rd CH and 4th CH can be individually weakened according to the steering left or right operation amount.

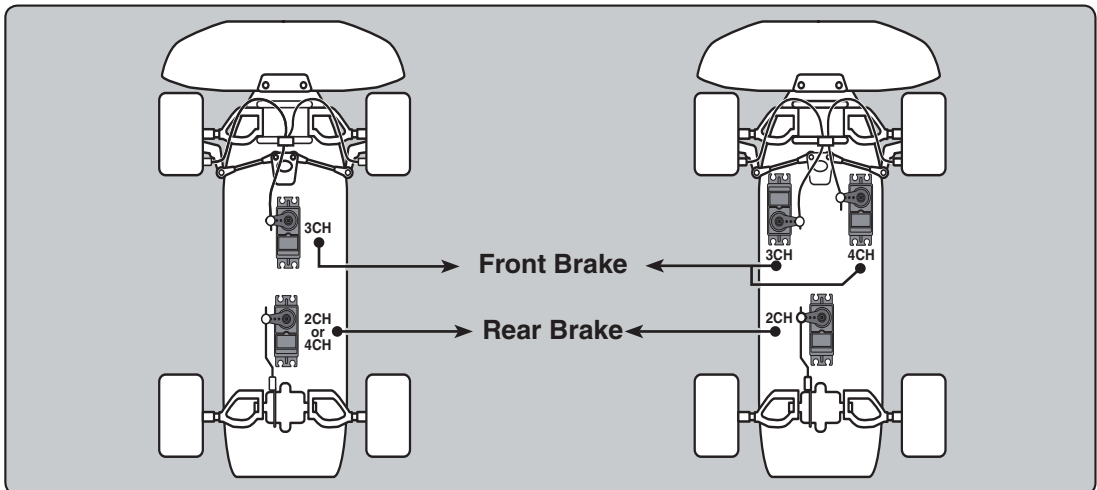


### 3rd, 4th channels A.B.S.

It is possible to adjust the Brake Return Amount (ABP), Delay Amount (DLY) and Cycle period (CYC) exclusively for the front brake (the 3rd or 4th CH). In doing so, you can use the A.B.S. Function at the front side even if the A.B.S Function is off for the rear brake (2nd CH). You can use the same procedure as the 2nd CH A.B.S Function for setting the Cycle Period (CYC), Duty Ratio (DTY) and Steering Mixing (STM). Use PS1, PS2, PS3 to switch the 3rd and 4th channel A.B.S. function ON/OFF.



## Calling the setup screen

### \*Calling from menu screen

(Opening Screen)

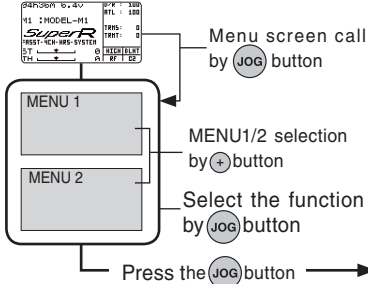


\* When the direct call button is set, the setup screen is also called by the following method:

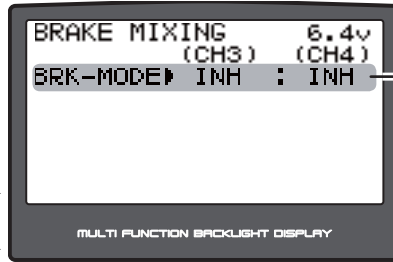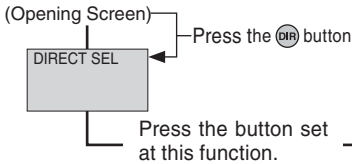


\* When set to BRK-MODE "ACT" the brake mixing function is executed and the screen display shown below appears. The screen which is displayed is different when CH3 and CH4 are independently ACT and when both CH3 and CH4 are both ACT.


### BRK-MODE : "ACT"

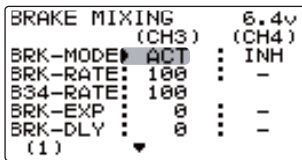


CH3 active only

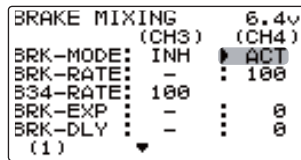

CH4 active only

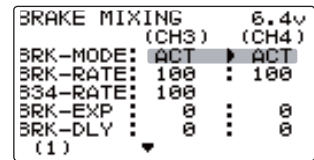

CH3/CH4 both active

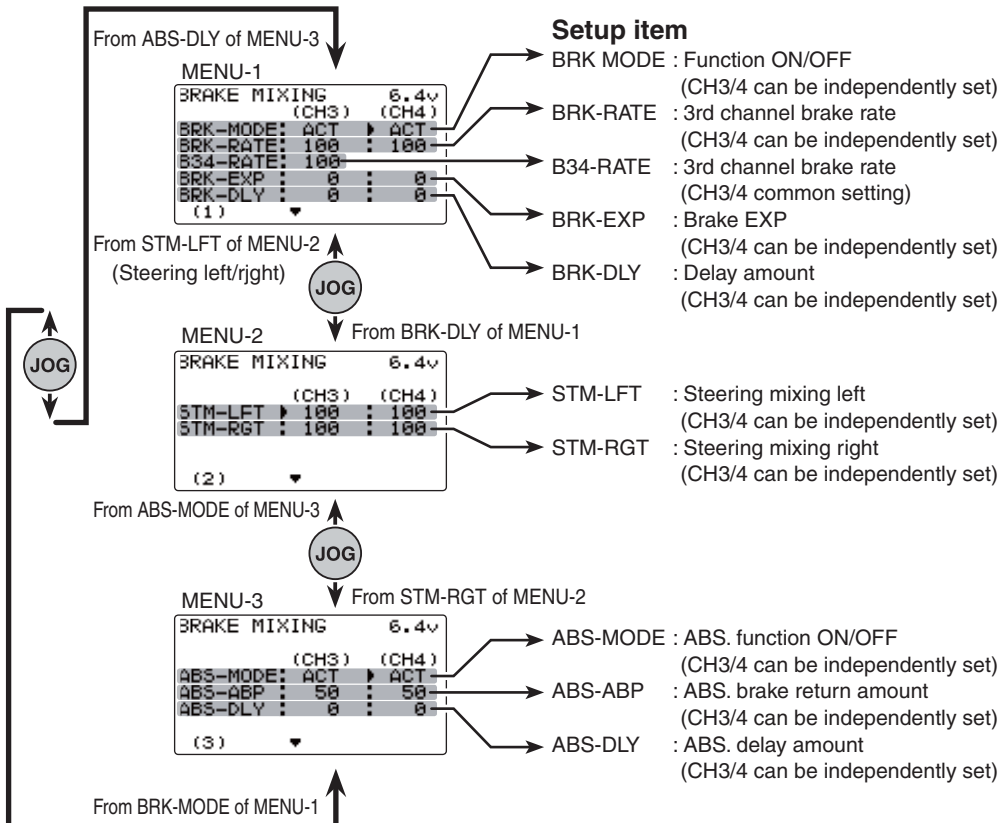

## Brake mixing adjustment

### 1 (Function ON/OFF)

Select the setting items "BRK-MODE(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation. Set the function to the active state by pressing the (+) or (-) button.

"INH(OFF)" :Function OFF  
 "ACT(ON)" :Function ON

#### Setup item selection

- Select by (JOG) button up, down, left or right operation.

#### Adjustment buttons


- Use the (+) and (-) buttons to make adjustments.  
 - Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

#### Function ON/OFF (MDE)

INH(OFF), ACT(ON), ACT(OFF)

### 2 (3rd channel brake rate)

Select setup items "BRK-RATE(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation, and use the (+) and (-) buttons to adjust the Brake rate amount.

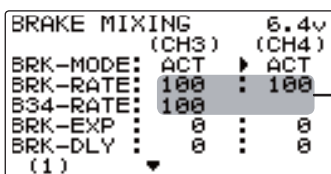

#### Brake rate (RATE)

0 ~ 100  
 Initial value:100

- When adjusting the brake amount of both brakes after individually adjusting the CH3 and CH4 brakes, select "B34-RATE".

### 3 (3rd & 4th channel brake-EXP)

With the jog dial, move the blinking cursor up/down, left or right to select "BRK-EXP (CH3) or (CH4)". Use the plus (+) button to adjust for a faster brake response or use the minus (-) button for a slower or milder brake response.

-When using CH3 and CH4 servos as front brakes and using EXP, set the (CH3) EXP amount and (CH4) EXP amount separately.

#### Brake EXP rate (EXP)

-100 ~ 0 ~ +100%  
 Initial value:0


### 4 (Delay amount setup)

Select setup items "BRK-DLY(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation, and use the (+) and (-) buttons to adjust the delay amount.


"0" : No delay  
 (CH3)"F100" : CH3 (front) maximum delay amount  
 (CH3)"R100" : CH2 (rear) maximum delay amount  
 (CH4)"100" : CH4 maximum delay amount

#### Delay amount (DLY)

(CH3)F100~F1, 0 ,R1~R100  
 (CH4)100 ~ 0  
 Initial value:0

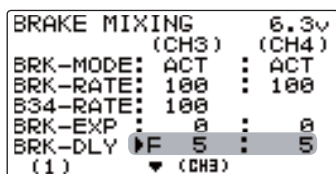

- When using the CH3 and CH4 servos for the front brakes and applying a delay to the front brakes, set the (CH3)F delay amount and (CH4) delay amount separately.

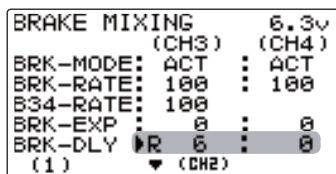


- When the CH2 servo is used for the rear brakes and the CH3 servo is used for the front brakes, delay is applied to either the F (front) or R (rear) side.

## 5 (Steering mixing)

Use this function when you want to weaken the front brakes when steering was operated.

Select the setting item "STM-LFT" or "STM-RGT" by (JOG) button up, down, left, or right operation. Use the (+) or (-) button to adjust the brake amount.

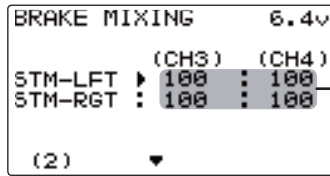

Brake rate (STM-LFT/STM-RGT)  
0 ~ 100  
Initial value:100

Use "STM-RGT" (CH3)(CH4) to adjust the brake amount relative to the steering right operation amount. The smaller the value, the weaker the front brakes. Set value "100" is the state in which steering mixing is not performed.

- The mixing amount can be adjusted in a range from 0 to 100.

## 6 (3rd & 4th channels brake-A.B.S ON/OFF)

Select setup item "ABS-MODE(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation. Set the function to the "ACT" state by pressing the (+) or (-) button.

Function ON/OFF (ABS-MODE)  
INH(OFF), ACT(ON), ACT(OFF)

## 7 (3rd & 4th channels brake-A.B.S return amount adjustment)

Select setup item "ABS-ABP(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation, and use the (+) and (-) buttons to adjust the return amount.

Brake return amount (ABS-ABP)  
0 ~ 50 ~ 100  
Initial value; 50

"0" :No return  
"50" :Return to the 50% position of the brake operation amount  
"100" :Return to the neutral position.

## 8 (3rd & 4th channels brake-A.B.S delay amount setup)

Select setup item "ABS-DLY(CH3)" or "(CH4)" by (JOG) button up, down, left or right operation, and use the (+) and (-) buttons to adjust the delay amount.

Delay amount (ABS-DLY)  
0 ~ 100  
Initial value; 0

"0" :A.B.S. function performed without any delay  
"50" :A.B.S function performed after an approximate 0.7 sec delay.  
"100" :A.B.S. function performed after an approximate 1.7 secs delay.

9 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Dial / Trim Setting

The function select dial function can control the 3rd/4th channels brake rate (RATE), delay amount (DLY), and 3rd channel brake-A.B.S return amount (ABP) ...etc setting using button trim DL1, DL2, DL3 or digital trim DT3 etc. (p.98)

When BIGCAR is selected on the "MENU-T" function (p.38, 113), 3rd channel brake rate (RATE) adjustment is automatically assigned to dial DL3.

### Shutting off brake side operation

When brake side operation is unnecessary with a boat, etc., it can be shut off.


### Tilt mixing

Tilt mixing uses an outboard engine and applies bidirectional mixing from rudder (steering) to channel 3 and from channel 3 to rudder so that with a boat, rudder operation and tilt mixing operation can be performed by 2 servos.

Tilt mixing can be performed by rudder operation, by steering wheel and 3rd channel.

### Effect of set value of other functions on tilt mixing

Steering side EPA function, STEXP function, STSPD function, or D/R function setting also affects channel 3 side operation. However, the channel 3 servo is not reversed by setting the steering side reverse function.

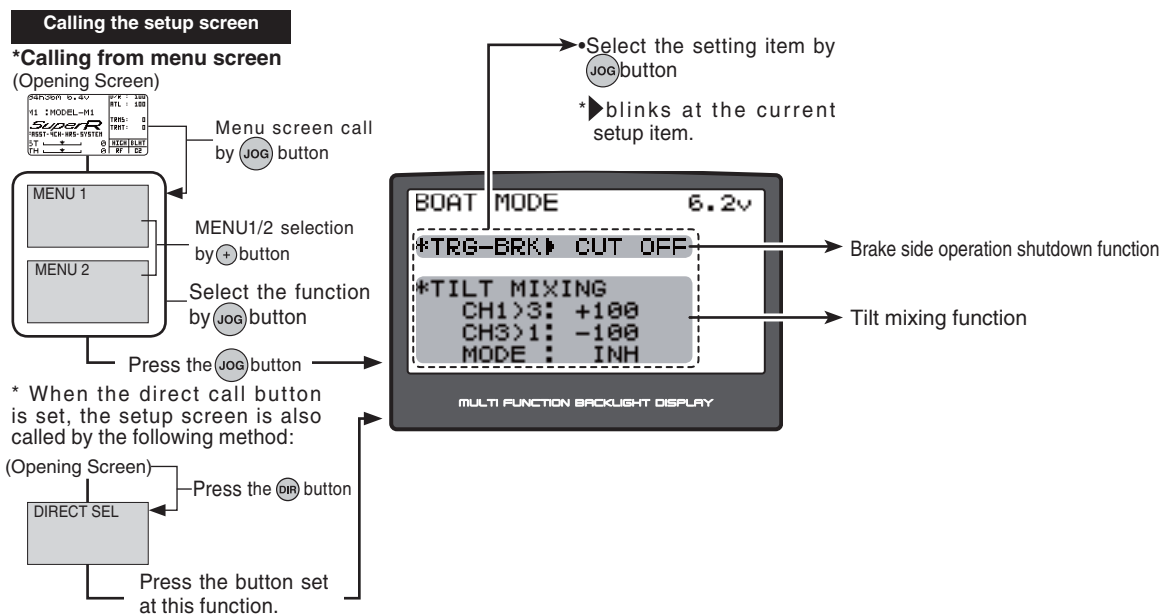

Function

### Prohibiting brake side operation

#### 1 (Shutting down brake side operation)

Select the setting item "TRG-BRK" by (JOG) button up or down operation. Use the (+) or (-) button to select "CUT OFF".

- "NORMAL" :Normal trigger operation
- "CUT OFF" :Trigger brake side operation shut down

#### Setup item selection

- Select by (JOG) button up or down operation.

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.

#### Brake side operation (TRG-BRK)

NORMAL, CUT OFF

#### 2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## Tilt mixing adjustment

(Preparation)

- Use the function select dial function to select the 3rd channel operation dial. (p.98)

### 1 (Function ON/OFF)

Select the setting item "MODE" by (JOG) button up or down operation. Set the function to the "ON" state by pressing the (+) or (-) button.

"INH" :Function OFF  
"ON" :Function ON

### 2 (CH1>CH3 mixing amount adjustment)

Select setup item "CH1>3" by (JOG) button up or down operation, and use the (+) and (-) buttons to adjust the mixing amount.

"+" :Operate in same direction as steering  
"-" :Operate in opposite direction of steering

### 3 (CH1>CH1 mixing amount adjustment)

Select setup item "CH3>1" by (JOG) button up or down operation, and use the (+) and (-) buttons to adjust the mixing amount.

"+" :Operate in same direction as channel 3  
"-" :Operate in opposite direction of channel 3

- ### 4
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## Slave channel output (Initial value)

Steering > 3rd channel side	: +100%
3rd channel > Steering side	: -100%

## Dial / Trim Setting

The mixing rate amount can be controlled with digital dial DL1, DL2, DL3 or digital trim DT3, etc. with the function select dial function. (p.98)
---

### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

### Function ON/OFF (MODE)

INH(OFF), ACT(ON), ACT(OFF)

### Mixing amount (CH1>3)

-100~+100  
Initial value: +100

### Mixing amount (CH3>1)

-100~+100  
Initial value: -100

# Throttle Mode "THMOD"

(Throttle system)


-The neutral brake function is a function switch function (p.96), and setting the neutral brake function ON/OFF switch is necessary.

Neutral brake, which applies the brakes at the throttle trigger neutral position, can be set. However, for Futaba speed controller (ESC) MC960CR, MC950CR, MC851C, MC602C, MC402CR, etc, considering safety, when the neutral position is not confirmed, the set will not enter the operation mode to prevent the motor from rotating instantly when the power is turned on. When using the MC960CR, MC950CR, MC851C, MC602C, MC402CR, etc., check that the ESC is in the neutral position and set the neutral brake function switch to ON after the set enters the operation mode.

## Operation display

An LED blinks while the neutral brake function is active (when LED is enabled). In addition, **N·B** appears on the initial screen and menu screen.

-This function allows selection of the forward side and brake (reverse) side operation ratio from 70:30 or 50:50 by changing the neutral position of the throttle servo.

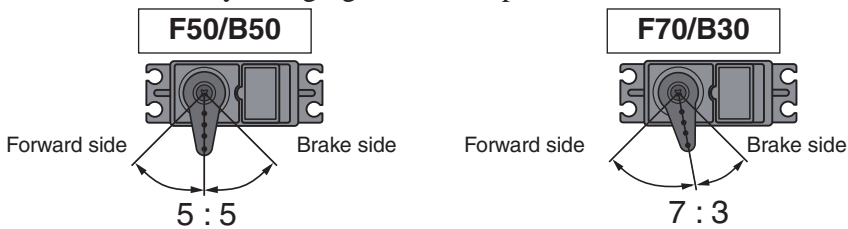


## When "TRG-BRK" was set to "CUT OFF" by boat mode function



When "CUT OFF", which provides trigger brake side operation in the boat mode (p.78), is set, the neutral brake function cannot be used because brake operation is stopped. In addition, the neutral position does not change even though the throttle mode is changed.

### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

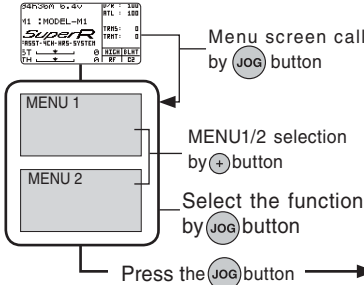

\* When the direct call button is set, the setup screen is also called by the following method:

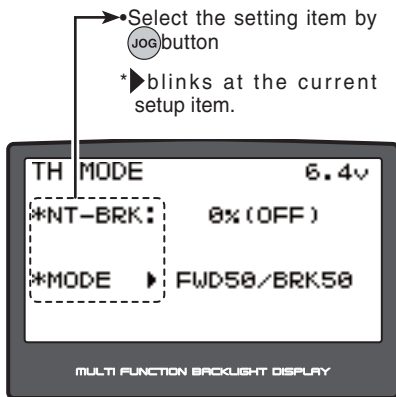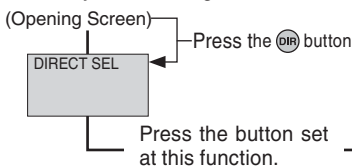

### Setup items

NT-BRK : Neutral Brake  
MODE : Forward side / Brake side

If the power switch is turned on while the neutral brake switch is on, an audible alarm will be heard. Immediately set the neutral brake switch to OFF.

6.4v  
IDLE UP or PRESET  
or NEUTRAL BRAKE  
<< MIX WARNING >>

Warning display



## Neutral Brake function adjustment

(Preparation)

- Use the function select switch function to select the switch. (p.96)

---

### 1 (Neutral brake rate)

Select the setting item "NT-BRK" by (JOG) button up or down operation. Use the (+) and (-) buttons to set the neutral brake rate.

- 
- ### 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## Reference

The ESC neutral brake function and T4PKSR neutral brake function can be used simultaneously. However, when setting is difficult to understand, we recommend that only one neutral brake function be used.

## Dial / Trim Setting

When the neutral brake function is "ON", the neutral brake rate (RATE) adjustment is automatically assigned to the throttle trim (DT1, 2, 3 or DL1, 2, 3).

## Effect of set value of other functions on neutral brake

Throttle side EPA function, or ATL function setting also affects neutral brake side operation.

The Idle-up (p.82) or preset (Engine Cut) (p.66) function has priority.

## Selecting the throttle mode

---

### 1 (Throttle mode selection)

Select the setting item "MODE" by (JOG) button up or down operation. Select "F50/B50" or "F70/B30" by (+) or (-) button.

"F50/B50" =Forward 50% : Back50%

"F70/B30" =Forward 70% : Back30%

- 
- ### 2
- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.

#### Throttle mode (MODE)

F50/B50, F70/B30

This is a function select switch function. The idle-up function ON/OFF switch must be set. (p.96)

It is used to improve engine starting performance by raising the idling speed when the engine of a gasoline car (boat) is started.


This function is also effective when you want to prevent braking when the power was turned off during running due to the effect of gear ratio setting and the motor used with a motor car. However, when using the MC960CR, MC950CR, MC851C, MC602C, MC402CR, etc., check the ESC neutral position and set the idling function switch to ON after the set enters the operation mode, the same as the neutral brake function (p.80).

### Operation


The throttle neutral position is offset to the forward side or brake side. There is no linkage locking, etc. because there is no change near the maximum operation angle even when the neutral position is offset by this function.

#### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

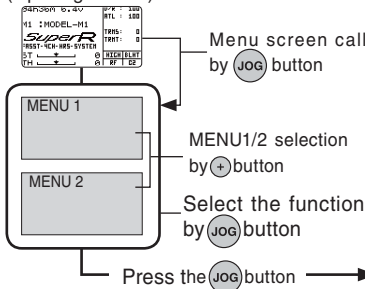

\* When the direct call button is set, the setup screen is also called by the following method:

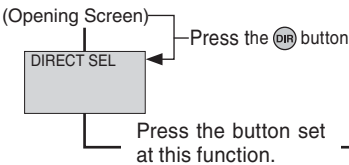

#### Operation Display

While this function is ON, the LED blinks. (When LED is active) **IDL** also appears on the initial screen and menu screen.



Idle-Up on/off state.

Displayed when the Idle -up function switch is not set.

The LED blinks while the Idle-Up function is on.

If the power switch is turned on while the idle-up switch is on, an audible alarm will be heard. Immediately set the Idle-Up switch to OFF.

6.4v  
IDLE UP or PRESET  
or NEUTRAL BRAKE  
<< MIX WARNING >>

Warning display

#### Idle-Up function adjustment

(Preparation)

- Use the function select switch function to select the switch. (page 88)

### 1 (Idle-Up rate)

Use the (+) and (-) buttons to set the Idle-Up rate.

**2** When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "0" by pressing the (+) and (-) buttons simultaneously for about 1 second.

#### Idle-Up rate (RATE)

D50% ~ D1%, 0%, U1% ~ U50%

Initial value: 0%  
"D": Brake side  
"U": Forward side

# Programmable Mixes (1, 2) "P-MIX"

(All channels)

These functions allow you to apply mixing between the steering, throttle, channel 3 and channel 4.

Two programmable mixing systems can be used. The programmable mixing 1 and programmable mixing 2 set-up screens are independent.

## Additional Functions

- When the steering or throttle channel is the master channel (channel that applies mixing), trim data can be added. (Trim mode)
- The mixing mode selection. (Master mixing mode)
- The master channel mixing center point (point at which the direction changes) can be offset. (Offset function)

## Movement of the slave channel side


The movement of the master channel side will be added to the movement of the slave channel side.

## When "TRG-BRK" was set to "CUT OFF" by boat mode function


When "CUT OFF", which prohibits trigger brake side operation, was set in the boat mode (p.78), since brake side operation is shut off, when the master channel (MST) is set to throttle, only "FWRD" side mixing is activated. "BRAK" side mixing is not activated.

### Calling the setup screen


\*Calling from menu screen  
(Opening Screen)

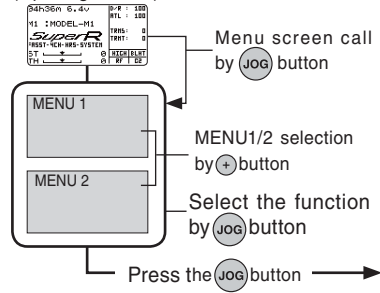

\* When the direct call button is set, the setup screen is also called by the following method:

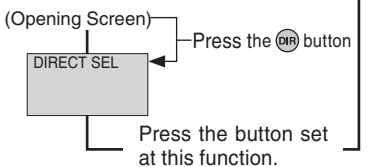

•Select the MIX1 or MIX2 by JOG button  
\*Selected MIX is reverse displayed.

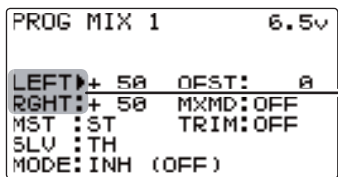

### Setup items

- 1.2 : PROG MIX 1 or 2
- LEFT : Mixing rate (Left side)
- RGHT : Mixing rate (Right side)
- MST : Master channel
- SLV : Slave channel
- MODE : Function ON/OFF
- OFST : Offset
- MXMD : Mix mode
- TRIM : Trim mode

### Adjust button

- Adjust with the (+) and (-) buttons.
- Return to the initial value "100" by pressing the (+) and (-) buttons simultaneously for about 1 second.


These setup items are different depending on the master channel.  
Upper side : LEFT/FWRD/UP  
Lower side : RGHT/BRAK/DOWN

Function

## Program mixing adjustment

(Preparation)

- Use the function select switch function (page 96) to select the switch. (as desired)
- Select the "PROG MIX" by (JOG) button up or down operation, and select the MIX1 or MIX2 by pressing the (JOG) button.

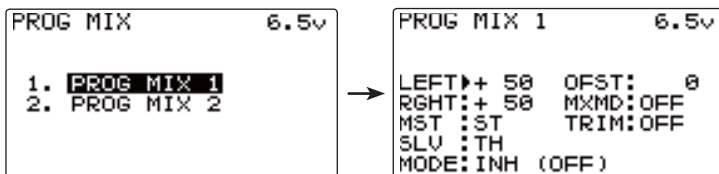

### 1 (Mixing function ON/OFF)

Select the setting item "MODE" by (JOG) button up, down, left, or right operation. Press the (+) or (-) button and set the function to the "ACT" state.

"INH" :Function OFF  
"ACT" :Function ON

### 2 (Master channel)

Select setup item "MST" by (JOG) button up, down, left, or right operation, and select the master channel by pressing the (+) or (-) button.

### 3 (Slave channel)

Select setup item "SLV" by (JOG) button up, down, left, or right operation, and select the slave channel by pressing the (+) or (-) button.

### 4 (Left, forward or up side mixing amount adjustment)

Select the setting item "LEFT", "FWRD", or "UP" by (JOG) button up, down, left, or right operation. Use the (+) or (-) button and adjust the right, brake, or down side mixing amount.

### 5 (Right, brake or down side mixing amount adjustment)

Select the setting item "RGHT", "BRAK", or "DOWN" by (JOG) button up, down, left, or right operation. Use the (+) or (-) button and adjust the right, brake, or down side mixing amount.

### 6 (Offset amount setup)

Select setup item "OFS" by (JOG) button up, down, left, or right operation, and use the (+) and (-) button to adjust the offset amount.

### 7 (Mixing mode setup)

Select setup item "MXD" by (JOG) button up, down, left, or

#### Switch

PRG MIX1 : Program mixing 1  
PRG MIX2 : Program mixing 2

#### Setup item selection

- Select by (JOG) button up or down operation.

#### Function ON/OFF (MODE)

INH, ACT

#### Channel selection (MST)

ST, TH, CH3, CH4  
Initial value :PMIX1(ST)  
PMIX2(TH)

#### Channel selection (SLV)

ST, TH, CH3, CH4  
Initial value :PMIX1(TH)  
PMIX2(CH3)

#### Mixing amount

-100~0~+100  
Initial value: +50

#### Mixing amount

-100~0~+100  
Initial value: +50

#### Offset amount (OFS)

-100~0~+100  
Initial value: 0

right operation, and use the (+) or (-) button to select the mixing mode.

- "OFF" :Mixing proportional to master channel operation.
- "MIX" :Mixing by master channel another function considered.

**Mixing mode (MXD)**  
OFF, MIX  
Initial value: OFF

## 8 (Trim mode setup)

Select setup item "TRM" by (JOG) button up, down, left, or right operation, and use the (+) or (-) button to select the mixing mode.

- "OFF" :Trim is added.
- "ON" :Trim is removed.

**Trim mode (TRM)**  
OFF, ON  
Initial value: OFF

## 9 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### When Steering and Throttle Travel is Insufficient

When the steering servo travel is insufficient even when D/R is 100% and EPA is 120%, programmable mixing can be used to increase the travel somewhat.


(Reference data)

- PROG NIX1->ON
- MST (master channel) -> ST Mixing is applied from steering
- SLV (slave channel) ->ST Mixing is applied to steering and the travel is increased.
- RGHT -> 10% [When subtrim is centered (0%)]
- LEFT -> 10% [When subtrim is centered (0%)]
- OFST -> 0% / - MXMD -> MIX / - TRIM -> OFF

However, the operating range of the servo is exceeded even if a large value is input at RIGHT and LEFT and a zone over which the servo does not operate even when the stick is moved to the left or right is created. A zone over which the servo does not operate is also generated at the moving side when the subtrim is moved to the left and right. Therefore, set the RIGHT and LEFT value by checking servo operation.

When the throttle servo travel is insufficient at ATL 100% and EPA120%, the same action can be performed by making TH (throttle) both the MST and SLV when steering.

When both steering and throttle operations are performed, use both PROG MIX1 and PROG MIX2 program mixing.

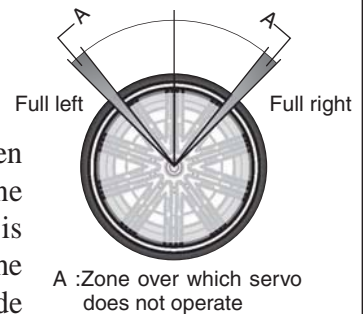

### Switch Setting

Select the program mixing 1,2 function ON/OFF switch with the function select switch function. ( p.96)

### Dial / Trim Setting


The mixing amount can be adjusted by using the function dial function (p.98).

## Special Mixes "S-MIX" (Steering,Throttle,3rd,4th channel system)

Four wheel steering 4WS mixing used with Corolla, etc., dual ESC mixing that controls the front and rear motor controllers independently, gyros which allow adjustment of the sensitivity of the Futaba car rate gyro from the transmitter, CPS-1 mixing that controls the Futaba CPS-1 power switch, and other special mixing functions can be set by special mixing (S-MIX) function.


### 4WS Mixing (4WS MIXING)

This function can be used with Corolla and other 4WS type vehicles. It is mixing that uses the 1st CH to control the front side steering and the 3rd CH to control the rear side steering. OFF (front side only), reverse phase, same phase, rear side only and other 4WS types are switched by switch.

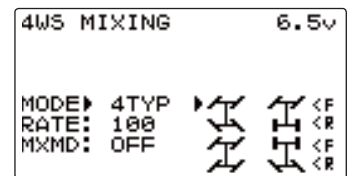


### Dual ESC Mixing (DUAL ESC)

This function is mixing that uses the 2nd CH to control the front side motor controller and the 4th CH to control the rear side motor controller of a Corolla or other 4WD type vehicle. Drive is switched among front side only, rear side only, and both front side and rear side (4WD) by switch.

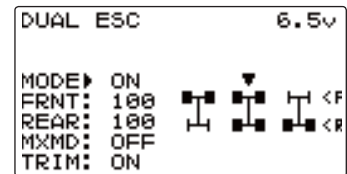

### Gyro Mixing (GYRO MIX)


This function is a remote gain function that uses the 3rd CH of the transmitter to adjust the sensitivity of a Futaba car rate gyro. It can also be used by switching the normal mode and AVCS mode by switch. Normal mode and AVCS mode are explained at gyro mixing (GYRO MIX).

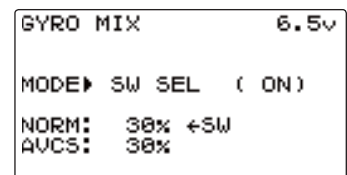

### CPS-1 Mixing (CPS MIX)



This function controls the Futaba CPS-1 channel power switch.

Normally, when a CPS-1 unit is used to light the chassis dress-up and other illumination (LED) the LED is connected to a vacant switch channel of the connected CPS-1 unit and the LED is turned on and off by switch while the vehicle is running. However, when this CPS-1 mixing (CPS-1 MIX) function is used the LED can be turned on and off and also flashed in step with steering and throttle operation, as well as being turned on and off by switch.

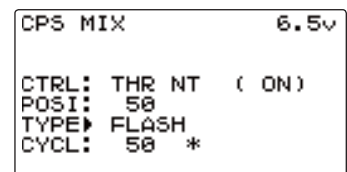


### Calling the setup screen

#### \*Calling from menu screen (Opening Screen)

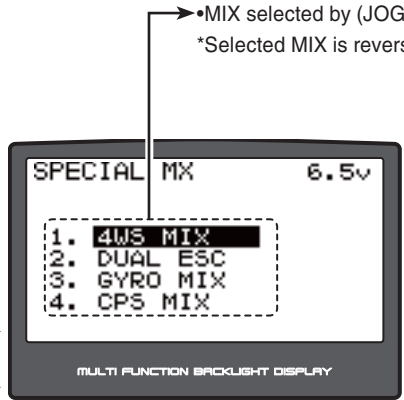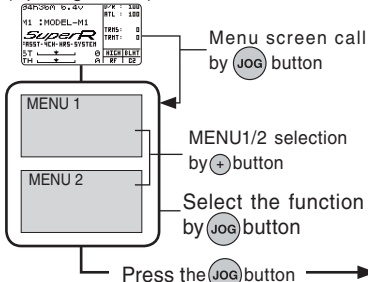

•MIX selected by (JOG) button.  
\*Selected MIX is reverse displayed.

\* When the direct call button is set, the setup screen is also called by the following method:

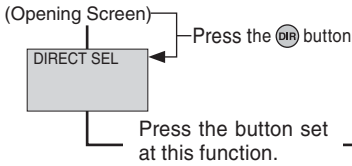

### 4WS Mixes (4WS MIXING) p.88



### Dual ESC Mixes (DUAL ESC) p.90



### Gyro Mixes (GYRO MIX) p.92



### CPS-1 Mixes (CPS MIX) p.94




# 4WS Mixing "4WS MIX"

This function can be used with crawlers and other 4WS type vehicles. It is mixing that uses the 1st CH to control front side steering and the 3rd CH to control rear side steering.

OFF (front side only), reverse phase, same phase, rear side only, and other 4WS type switching is used by selecting PS1 or PS2 with the function select function (p.96).

## Setting Special mixings

When the 3rd CH was set to ACT at Brake Mixing (p.74) or when Gyro Mixing (p.92) is used, 4WS mixing cannot be used.

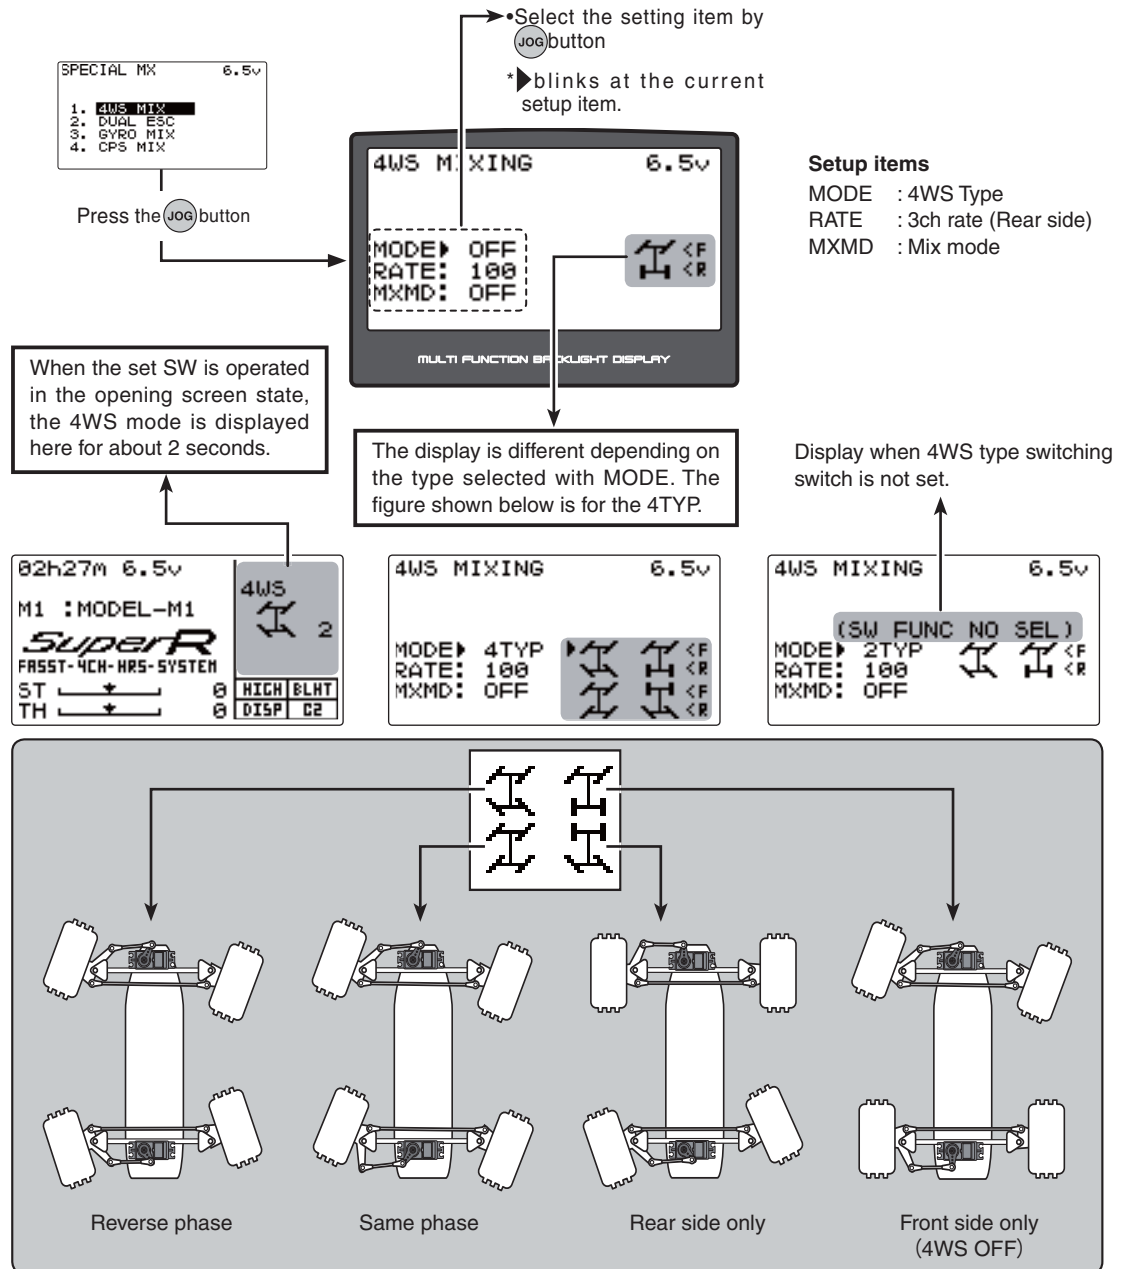



## 4WS mixing adjustment

(Preparation)

Since this function is used by switching the type of 4WS with a switch, the switch used by the function select switch function (p.96) is set.

### 1 (4WS type selection)

Operate the (JOG) button up and down and select the setting item "MODE". Select the type by pressing the (+) or (-) button.

**Function ON/OFF (MODE)**  
OFF, 2TYP, 3TYP, 4TYP


"OFF" :Function OFF (front only)

"2TYP" :Front side only, reverse phase switching

"3TYP" :Front side only, reverse phase and same phase switching

"4TYP" :Front side only, reverse phase, same phase, and rear side only switching

Switched in the order shown in the figure below by set SW

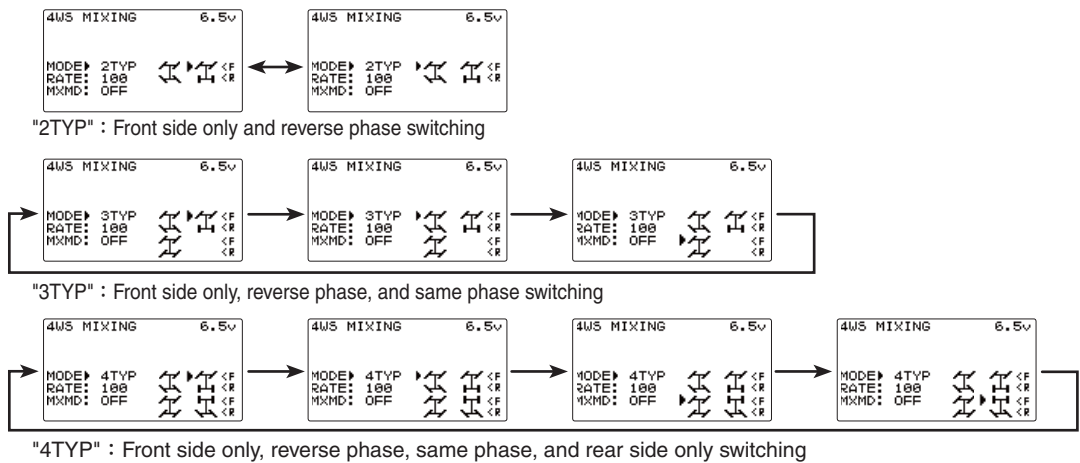

### 2 (Rear side travel adjustment)

Operate the (JOG) button up and down and select setting item "RATE". Adjust the rear side travel with the (+) or (-) button.

**Rear rate (RATE)**  
0 ~ 100  
Initial value:100

### 3 (Mix mode setting)

Operate the (JOG) button up and down and select the setting item "MXMD". Set the mix mode with the (+) or (-) button.

**Mixing mode (MXMD)**  
OFF, MIX  
Initial value: OFF

"OFF" :The EXP function of the 1st CH and other settings are not mixed.

"MIX" :The EXP function of the 1st CH and other settings are mixed.

**4** To end setting, return to the opening screen by pressing the (END) button three times (for direct selection, press the (END) button once).

### Dial / Trim Setting

The mixing amount can be adjusted by using the function dial function (p.98).


# Dual ESC Mixing "DUAL ESC"

This function is mixing used with crawlers and other 4WD type vehicles and uses the 2nd CH to control the front motor controller and the 4th CH to control the rear motor controller.

The switch which switches drive among front side only, rear side only, and both front side and rear side (4WD) is set from among DT1, 2, 3, 4, DL1, 2, 3 by the function dial function (p.98).

## Setting Special mixings

When 4th CH was set at ACT at Brake Mixing (p.74) or when CPS-1 Mixing (p.94) is used, Dual ESC Mixing cannot be used.

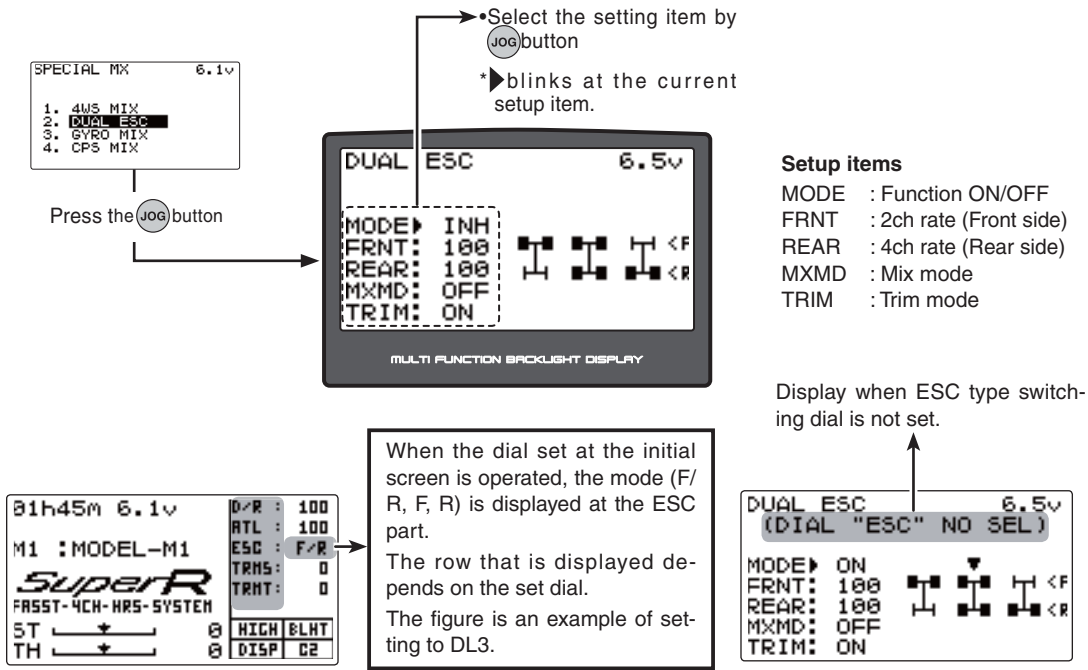

Function

## Dual ESC mixing adjustment

(Preparation)

This function is used to switch between front drive/4WD/ rear drive with a dial or digital trim, the switch used by the function select dial function (p.98) is set.


### 1 (Dual ESC setting)

Operate the (JOG) button up and down and select the setting item "MODE". Set the function by pressing the (+) or (-) button.

- "INH" :Function OFF
- "ON" :Function ON

**Function ON/OFF (MODE)**  
INH, ON

The dial (digital trim) is used to select the drive type as shown in the figure below.



## 2 (Front side travel adjustment)

Operate the (JOG) button up and down and select the setting item "FRNT". Adjust the front side (2CH) travel with the (+) or (-) button.

**Front (FRNT) / Rear (REAR)**

20 ~ 100

Initial value:100

## 3 (Rear side travel adjustment)

Operate the (JOG) button up and down and select the setting item "REAR". Adjust the rear side (4CH) travel with the (+) or (-) button.

## 4 (Mix mode setting)

Operate the (JOG) button up and down and select the setting item "MXMD". Set the mix mode with the (+) or (-) button.

**Mixing mode (MXD)**

OFF, MIX

Initial value: OFF

"OFF" :The EXP function of the 2nd CH and other settings are not mixed.

"MIX" :The EXP function of the 2nd CH and other settings are mixed.

## 5 (Trim mode setup)

Select setup item "TRM" by (JOG) button up, down, left, or right operation, and use the (+) or (-) button to select the mixing mode.

**Trim mode (TRM)**

OFF, ON

Initial value: OFF

"OFF" :Trim of the 2nd CH is added.

"ON" :Trim of the 2nd CH is removed.

**6** To end setting, return to the opening screen by pressing the (END) button three times (for direct selection, press the (END) button once).

### Dial / Trim Setting

The function select dial function can control the 2nd CH ESC (Front side) rate (FRNT) 4th CH ESC (Rear side) rate (REAR) with digital dial or digital trim, using the function select dial function (p.98).

#### Note:

As this function drives 2 separate motor controllers simultaneously, a mutual load is applied. Use this function carefully so that the motor controllers are not damaged.

Futaba will not be responsible for motor controller, motor, and other vehicle trouble due to use of this function.

# Gyro Mixing "GYRO MIX"


This function is a remote gain function which adjusts the sensitivity of the Futaba car rate gyro at the T4PKSR side, and is mixing that uses the 3rd CH to adjust the gyro sensitivity.

When using the 4PKRS by switching the AVCS and normal modes use PS1, PS2 or PS3 with the function select switch function (p.96).

For a description of the car rate gyro mounting method and handling, refer to the rate gyro instruction manual.

## Setting Special mixings

When the 3rd CH was set to ACT at Brake Mixing (p.74) or when 4WS Mixing (p.88) is used, Gyro Mixing cannot be used.

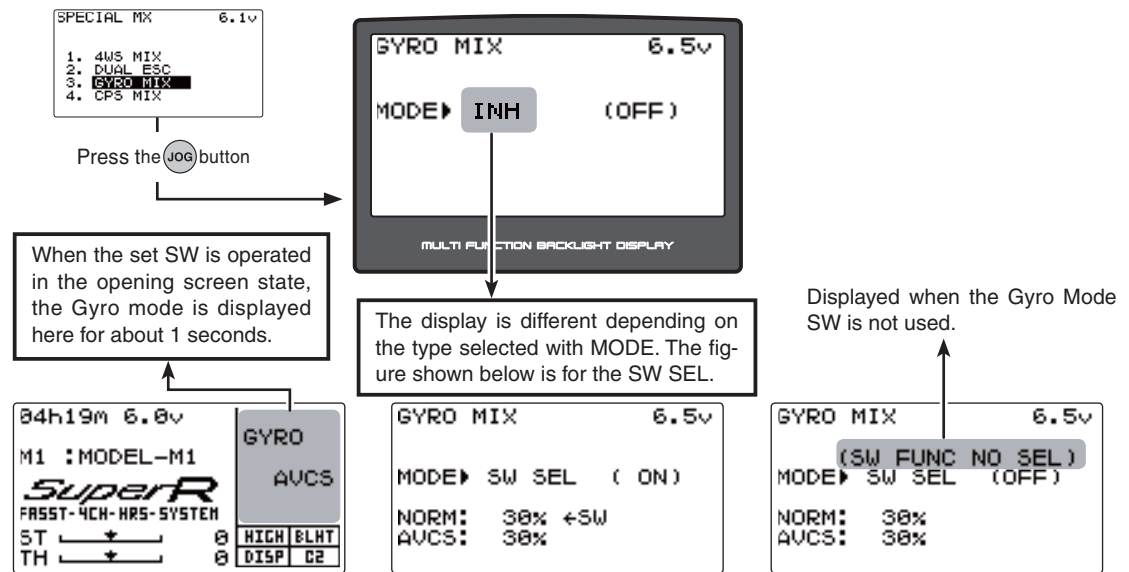


## AVCS / NORMAL Modes

The gyro has 2 operating modes: NORMAL mode and AVCS mode. In the AVCS mode, the angle is controlled simultaneously with NORMAL mode rate control (swing speed). The AVCS mode increases straight running stability more than that of the NORMAL mode. Because the feel of operation is different, choose your favorite mode.


### NORMAL

Countersteers against outside force, but cannot correct the skid direction.

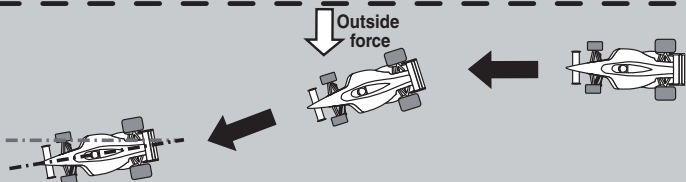

### AVCS

Corrects the skidding direction and forcefully maintains the heading.

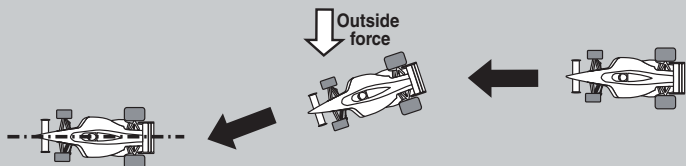

## Gyro mixing adjustment

### (Preparation)

- Refer to the gyro instruction manual and connect the gyro to the receiver. When using remote gain, connect gyro sensitivity adjustment to the 3rd CH of the receiver.
- When using gyro mixing by switching between the NORM (normal) and AVCS modes, use the function select switch function (p.96) to set the switch to be used.

### Switch setting


When using push switch PS1 or PS2 set the switch operation mode to "ALT".

#### Setup items


MODE : Function ON/OFF  
 NORM : NORMAL mode gain  
 AVCS : AVCS mode gain

- Select the setting item by (JOG) button


\*blinks at the current setup item.

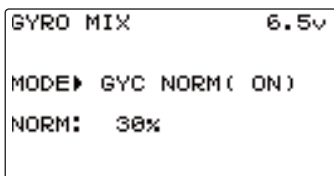

GYC NORM Screen

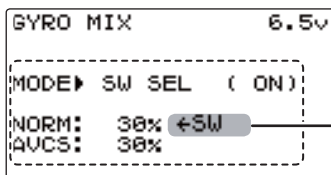

SW SELScreen

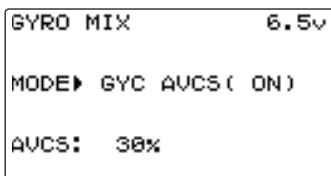

GYC AVCS Screen

Shows the gyro mode select switch mode.

## 1 (Gyro mixing type selection)

Operate the (JOG) button up and down and select the setting item "MODE". Select the type by pressing the (+) or (-) button.

"INH" :Function OFF  
 "GYC NORM" :NORMAL mode only  
 "GYC AVCS" :AVCS mode only  
 "SW SEL" :Switching Normal mode and AVCS mode

Switched in the order shown in the figure below by set SW

### Function selection (MODE)

INH, GYC NORM  
 GYC AVCS, SW SEL

## 2 (NORMAL side gain adjustment)

Operate the (JOG) button up and down and select setting item "NORM". Adjust the NORMAL side gain with the (+) or (-) button.

(AVCS side gain adjustment)

Operate the (JOG) button up and down and select setting item "AVCS". Adjust the AVCS side gain with the (+) or (-) button.

NORMAL / AVCS gain  
 (NORM / AVCS)  
 0 ~ 120  
 Initial value:30

## 3 To end setting, return to the opening screen by pressing the (END) button three times (for direct selection, press the (END) button once).

### Dial / Trim Setting

The gain amount can be adjusted by using the function dial function (p.98).

## CPS-1 Mixing "CPS MIX"


This function controls the Futaba CPS-1 channel power switch.

Normally, when using the CPS-1 unit to light the vehicle dress-up and other illumination (LED) the CPS-1 unit with LED connected is connected to a vacant switch channel and the LEDs are turned on and off by switch while the vehicle is running. However, when the CPS-1 mixing (CPS MIX) function is used, the LED can be turned on and off and flashed in step with steering and throttle operation, as well as being turned on and off by switch. The flashing speed (cycle) can also be set.

For instance, the LED can be flashed as a brake light by throttle brake side operation.

### Setting Special mixings

When 4th CH was set to ACT at Brake Mixing (p.74) or Dual ESC Mixing (p.90) is used, CPS-1 Mixing cannot be used.

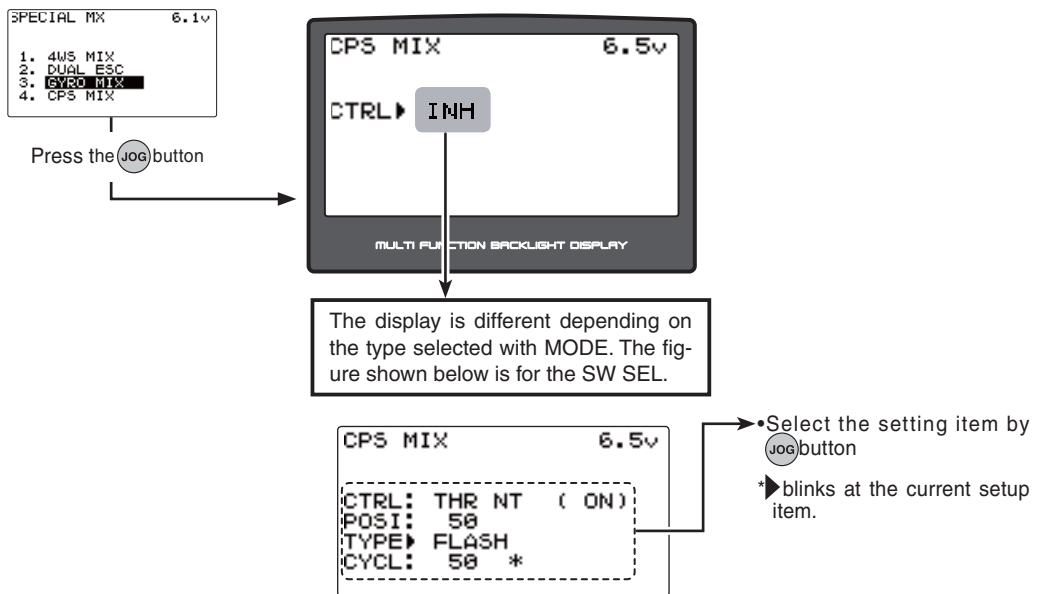

### CPS-1 mixing adjustment

(Preparation)

- Connect the CPS-1 to the 4th CH of the receiver.
- When the LEDs are turned on and off by switch, use the function select switch function (P.96) to set the switch to be used.

---

## 1 (Control system setup)

Operate the (JOG) button up and down and select the setting item "CTRL".

Press the (+) or (-) button and select the function.

"INH" : Function OFF  
"CH4 FUNC" : ON/OFF by switch set at the 4th CH  
"STRNT" : ON at steering neutral  
"STREND" : ON at both sides of steering  
"THRNT" : ON at throttle neutral  
"THR FWD" : ON at throttle forward side  
"THRBRK" : ON at throttle back (brake) side  
"THNT+BK" : ON at throttle neutral and back (brake) sides


---

## 2 (ON/OFF switching position selection)

Operate the (JOG) button up and down and select the setting item "POSI".

Press the (+) or (-) button and select the ON/OFF position.

Since the ON/OFF state is displayed at the right side of the setting item "CTRL", setting can be confirmed while operating the function to be controlled (for example, throttle).

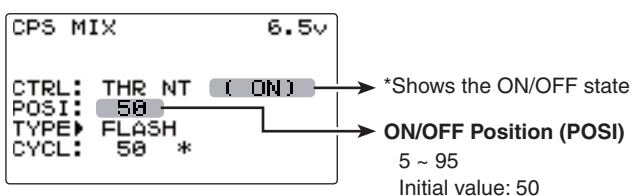

---

## 3 (ON/OFF type setup)

Operate the (JOG) button up and down and select the setting item "TYPE".

Press the (+) or (-) button and select the type of LED lighting. Normal ON/Off type or flashing can be selected.

"NORMAL" : Normal ON/OFF type  
"FLASH" : Flashing display

---

## 4 (Flashing cycle setting)

When flashing type "FLASH" was selected at the setting item "TYPE" the flashing speed (cycle) can be set.

Operate the (JOG) button up and down and select the setting item "CYCL".

Press the (+) or (-) button and select the flashing speed (cycle).

---

## 5 To end setting, return to the opening screen by pressing the (END) button three times (for direct selection, press the (END) button once).


# Function Select Switch "SWTCH"

This function allows selection of the function to be performed by the switches (PS1, PS2, PS3) and setting of the direction, etc. of operation.

-The table to the right shows the functions that can be assigned to each push switch.

-PS1 and PS2 can be made alternating operations (ON/OFF switched each time SW pressed). (NOR/ALT)

-The direction of operation of PS3 can be reversed. (NOR/REV)

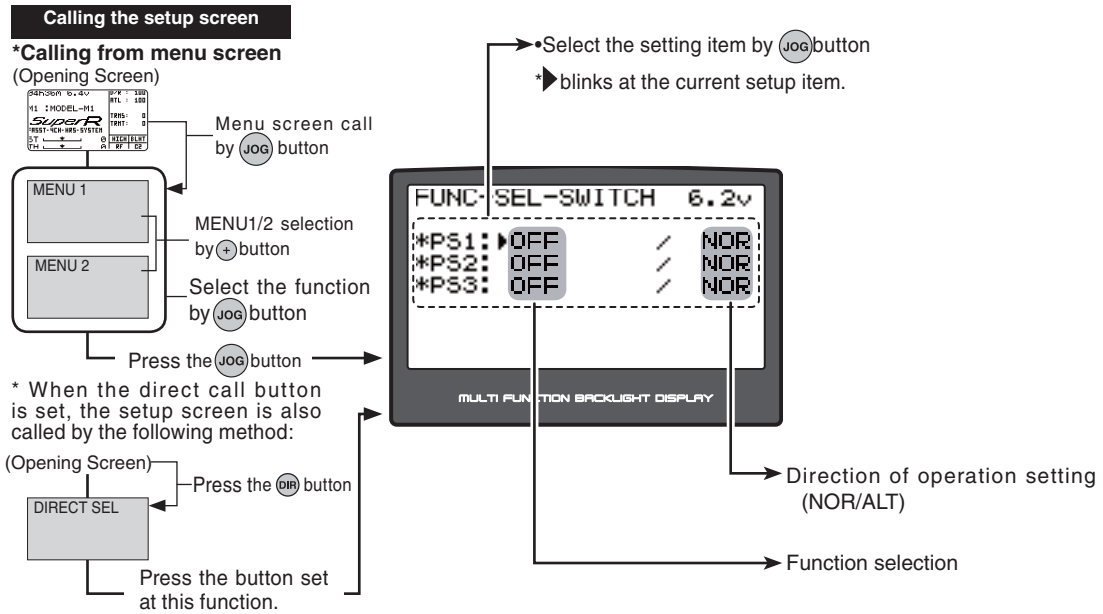

## Function select switch setup

### 1 (Setting SW selection)

Select the item you want to set by (JOG) button up, down, left, or right operation.

### 2 (To select or change a function for SW)

Select one of the functions for "SW" by pressing (+) or (-) button.

(To change the operation mode)

Select other operation mode for "SW" by pressing (+) or (-) button.

### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Setup item selection

- Select by (JOG) button up, down, left or right operation.



#### Setup buttons

- Use the (+) and (-) buttons to make adjustments.  
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

Initial value:

PS1,PS2,PS3 : "OFF", "NOR"




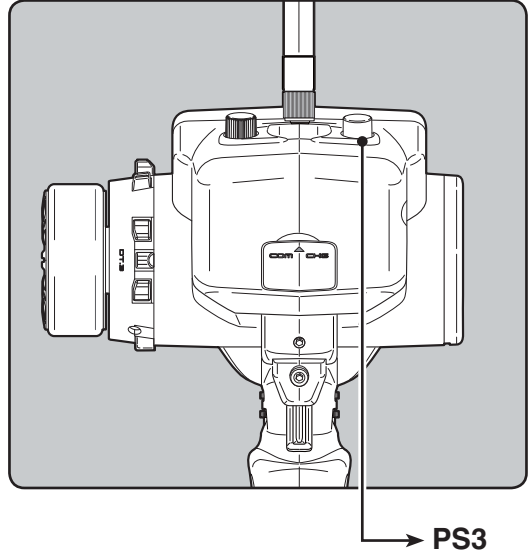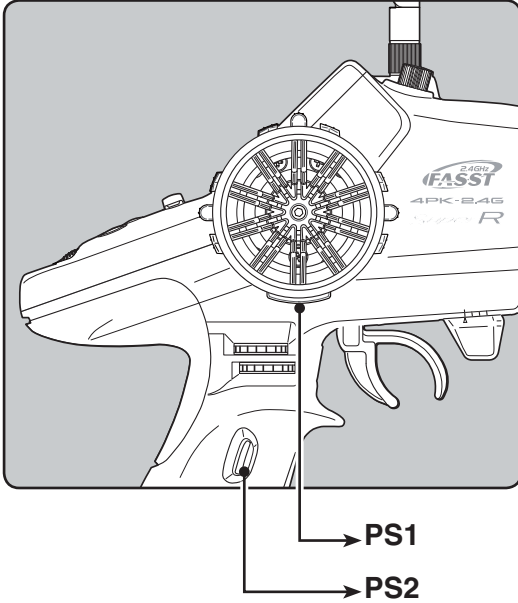

Set table functions (SW1/SW2/SW3)	
Abbreviation used on setup screen	Function name, etc
PRESET	Start function /Preset (Engine cut)
NT-BRAKE	Neutral brake function ON/OFF
A.B.S.CH2	A.B.S function (2CH)ON/OFF
A.B.S.CH3,CH4	A.B.S function (3CH,4CH)ON/OFF
2ND COND	2nd condition function ON/OFF
IDLE-UP	Idle up function ON/OFF
PROG MIX1	Program mixing1 function ON/OFF
PROG MIX2	Program mixing2 functionON/OFF
GYRO TYPE	Switching GYRO mode
CH3	channel 3
CH4	channel 4
LAP STAR	Timer function start (SW3 not possible)
LAP RESET	Timer function reset (SW3 not possible)
4WS MIX	4WS mixing type select
OFF	Not used

When push switch (PS1, PS2, PS3) is operated in the opening screen state, the state of the function is displayed in the upper-right corner for about one or two seconds.

Example :4WS Mixes

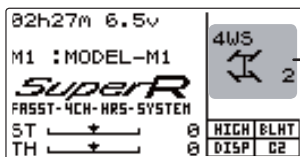


When the set SW is operated in the opening screen state, the 4WS mode is displayed here for about 2 seconds.

# Function Select Dial "DIAL"

This function allows selection of the function performed by the digital dial (DL1, DL2, DL3) and digital trimmers (DT1, DT2, DT3), step amount adjustment, and operating direction reversal.

- The table below lists the functions that can be assigned to each dial and digital trimmer. The assigned function is also displayed on the opening screen together with the current adjustment value. They are displayed in DL1, DL2, DL3, DT1, DT2, and DT3 order, from top to bottom.
- The step amount can be adjusted. The table below shows the relationship between set value and step amount.
- The operation direction can be reversed. (NOR/REV)

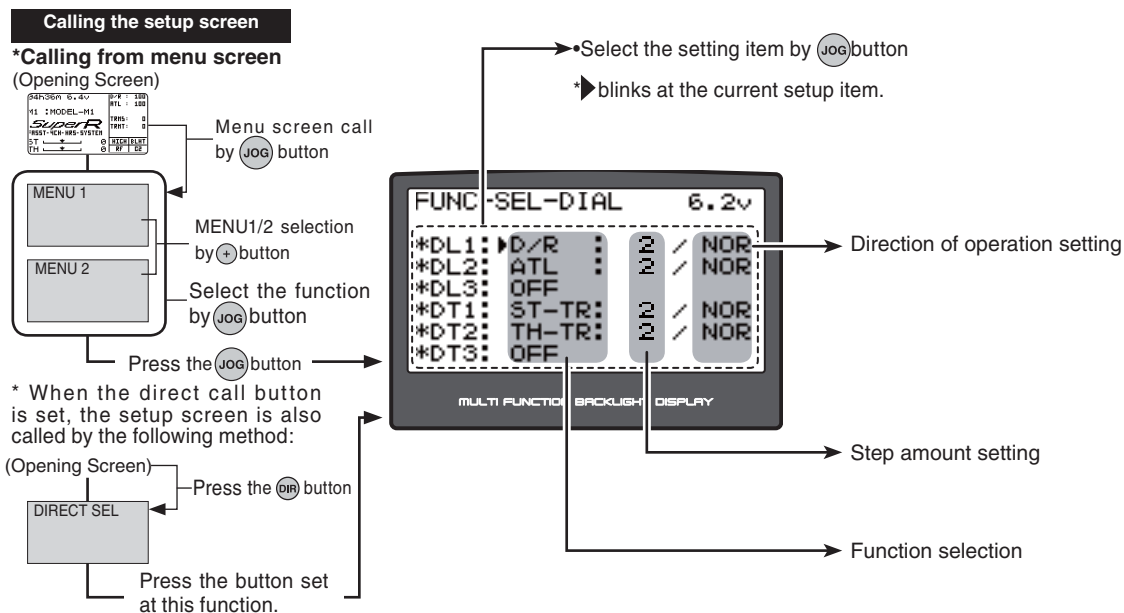

## Function select dial setup

### 1 (Setting Dial selection)

Select the item you want to set by (JOG) button up, down, left, or right operation.

### 2 (To select or change a function for Dial)

Select one of the functions for "DIAL" by pressing (+) or (-) button.

(To change the step amount)

Use the (+) or (-) button to set the step amount.

(When changing the direction of operation)

Use the (+) or (-) button to dial the direction.

### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Setup item selection

- Select by (JOG) button up, down, left or right operation.

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

Initial value:

DL1 : "D/R", "2", "NOR"  
DL2 : "ATL", "2", "NOR"  
DL3 : "OFF"  
DT1 : "ST-TR", "2", "NOR"  
DT2 : "TH-TR", "2", "NOR"  
DT3 : "OFF"

## Relationship between set value and step amount

(Setting range: 1, 2, 5, 10, 20, 30, 40, 50, 100, 2PS)

-Steering trim/throttle trim


When set to the minimum "1", the total trim operating width is 200 clicks. For "100", the total operating width is 2 clicks and for 2PS, the total operating width is 1 click.

-Rate, etc. setting


This is the % value which is operated by 1 click relative to the set value of each rate. Since the total operating width of functions having a rate of -100~0~+100 is 200%, when set to "100", the total operating width is 2 clicks. Since the total operating width of functions with a 0~100 rate is 100%, "100" and 2PS are operated by 1 click.

-Channel 3/4

When set to the minimum "1", the total operating width of channel 3 is 200 clicks. For "100", the total operating width is 2 clicks and 2PS is operated by 1 click.

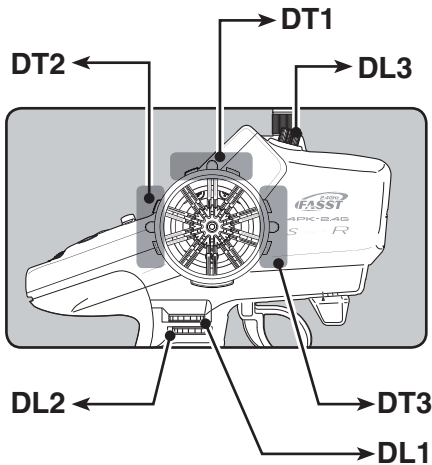

Abbreviation displayed on start screen

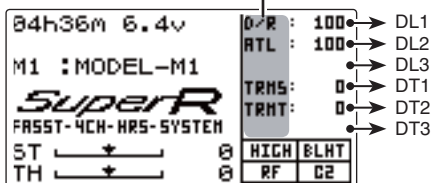

## Set table functions (DL1/DL2/DL3, DT1/DT2/DT3)

Abbreviation used on setup screen	Abbreviation displayed on opening screen	Function name, etc
D/R	(D/R)	Dual rate function
ATL	(ATL)	ATL function
EXP-S	(EXPS)	Steering EXP
EXP-F	(EXPF)	Throttle EXP (Forward side)
EXP-B	(EXPB)	Throttle EXP (Brake side)
EXP-3	(EXP3)	3rd Channel brake EXP
EXP-4	(EXP4)	4th Channel brake EXP
SP-TN	(SPTn)	Steering speed (Turn side)
SP-RN	(SPRn)	Steering speed (Return side)
AB.P	(AB.P)	A.B.S. function (Return amount)
ABS.D	(ABSD)	A.B.S. function (Delay)
CYCLE	(CYCL)	A.B.S. function (cycle speed)
ACC-F	(ACCF)	Throttle acceleration (Forward side)
ACC-B	(ACCB)	Throttle acceleration (Brake side)
ACC-3	(ACC3)	3rd Channel brake acceration (BRAKE function-ON)
ACC-4	(ACC4)	4th Channel brake acceration (BRAKE function-ON)
THSP1	(THS1)	Throttle speed (ALL/LOW)
THSP2	(THS2)	Throttle speed (MID)
THSP3	(THS3)	Throttle speed (HIGH)
ST-TR	(TRMS)	Steering trim
TH-TR	(TRMT)	Throttle trim
CH3	(3CH)	Channel 3
CH4	(4CH)	Channel 4
SUBT1	(SBT1)	Sub trim (CH1)
SUBT2	(SBT2)	Sub trim (CH2)
SUBT3	(SBT3)	Sub trim (CH3)
SUBT4	(SBT4)	Sub trim (CH4)
IDLE	(IDLE)	Idle up function
TLT13	(TL13)	Tilt mixing (1>3)
TLT31	(TL31)	Tilt mixing (3>1)
PM1-A	(PM1A)	Program mixing 1 (RGHT/BRAK/DOWN sides)
PM1-B	(PM1B)	Program mixing 1 (LEFT/FWRD/UP sides)
PM2-A	(PM2A)	Program mixing 2 (RGHT/BRAK/DOWN sides)
PM2-B	(PM2B)	Program mixing 2 (LEFT/FWRD/UP sides)
B3-RT	(B3RT)	Brake mixing (3ch brake rate)
B3-DL	(B3DL)	Brake mixing (3ch delay)
B3ABP	(B3AP)	3rd Channel A.B.S -Return amount (BRAKE function-ON)
B3ABD	(B3AD)	3rd Channel A.B.S -Delay (BRAKE function-ON)
B4-RT	(B4RT)	Brake mixing (4th brake rate)
B4-DL	(B4DL)	Brake mixing (4ch delay)
B4ABP	(B4AP)	4th Channel A.B.S -Return amount (BRAKE function-ON)
B4ABD	(B4AD)	4th Channel A.B.S -Delay (BRAKE function-ON)
B34RT	(B4AD)	Brake mixing (3ch & 4th brake rate)
4WSRT	(4WS)	4WS mixing (3ch steering rate)
ESC-F	(ESCF)	Dual ESC mixing (2ch/Front ESC rate)
ESC-R	(ESCR)	Dual ESC mixing (4ch/Rear ESC rate)
ESC	(ESC)	Dual ESC mixing (Drive mode select)
GYRO	(GYRO)	Gyro mixing (Gain rate)
OFF		Not used

Function

## Timer Function "TIMER"

Use the timer by selecting one of the four timers UP TIMER, DOWN TIMER, LAP TIMER and LAP NAVIGATE timer.

### UP TIMER function

- The UP TIMER can be used to count the time between start and stop, etc.
- The timer repeatedly starts and stops each time the switch is operated and accumulates the time between each start and stop. (When the count reaches 99 minutes 59 seconds, it returns to 00 minutes 00 seconds and repeats the count.)
- The first start operation can be linked to the throttle trigger.
- An alarm sound can be set. The passage of time is announced by sounding of a buzzer (beeps) each minute after starting.
  - Alarm :Generates a beep at the set time (minutes).
  - Prealarm :Alarm advance announcement sound. Sounding starts the set time (seconds) before the alarm. (beeps)
- After starting, the timer is enabled and can be stopped by switch even when the display switches to another screen.

```
RACING TIMER 6.2v
TYPE: UP TIMER
ALRM: 5m PRAL: OFF
RST:
00 m 00 s 00
```

### FUEL DOWN TIMER function

The fuel down timer is used primarily to check the refueling time of gasoline engine cars. (The remaining time is displayed.)


- Each time the switch is pressed, the timer is restarted and the set time is counted down. The start time becomes the alarm set time. (When counted down to 00 minutes 00 seconds, the timer becomes an up timer.)
- The fuel down timer can be initially started by throttle trigger.
- An audible alarm can be set. In addition, the passing of time is indicated by sounding of a buzzer each minute after starting.
  - Alarm :Buzzer sounds at the set time (minute).
  - Prealarm :Alarm advance notice sound. Beeping begins the set time (seconds) before the alarm.
- After starting, the timer continues to count even if the LCD switches to another screen.

```
RACING TIMER 6.2v
TYPE: FUEL DOWN TM
ALRM: 5m PRAL: OFF
RST:
05 m 00 s 00
```

# LAP TIMER

## LAP TIMER function

- The LAP TIMER can memorize each lap time of each switch operation. (98 laps)
- The race time can be set. Switch operation after the set time by alarm has elapsed automatically stops the timer. Prealarm can also be set. The passage of time is announced by sounding of a buzzer (beeps) each minute after starting.

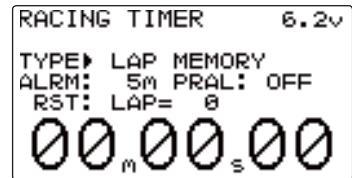

- Alarm :Generates a beep at the set time.
- Prealarm :Starts sounding the set time (second) before the alarm. (beeps)

- The first start operation can be linked with the throttle trigger.

## (LAP TIMER operation)

- When lap timer is selected, the number of laps (LAP) and the lap memory No. (No.) and current lap time (TIME) are displayed on the setup screen.

- Number of laps (LAP):Counts up each time the switch is pressed after starting. The numbers blink for 3 seconds after the switch was pressed. To prevent erroneous counting, switch operation is not accepted during this period..

- Lap memory No. (No.):Each lap time is memorized in a lap memory. The lap times are written sequentially from the number after the preceding data. After lap memory "No. 100", the lap No. returns to "No. 1".


- The lap time data memorized in the lap memory can be checked at the lap list (See p. 97) screen.

- Lap time (TIME):During the first 3 seconds, the last lap time is displayed and then the current lap time is displayed. At starting, "0" is displayed for 3 seconds.

# LAP NAVIGATE timer

## LAP NAVIGATE timer function

- This function sounds a buzzer at a fixed interval after the timer starts. Since only the buzzer can be restarted when the switch is pressed during timer operation, this function can be used as the training run, etc. target time. (Lap navigation alarm) The passage of time is announced by sounding of a buzzer (beeps) every minute after starting.

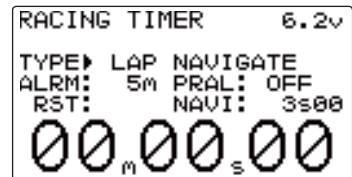

- The first start operation can be linked with the throttle trigger.

- The alarm sounds (alarm/prealarm) can be set separately from the fixed interval buzzer.


- Alarm :Generates a beep at the set time (minutes).
- Prealarm :Alarm advance announcement sound. Sounding starts the set time (seconds) before the alarm. (beeps)

- After starting, the timer is enabled and can be stopped by switch even when the display switches to another screen.

## Calling the setup screen



### \*Calling from menu screen

(Opening Screen)

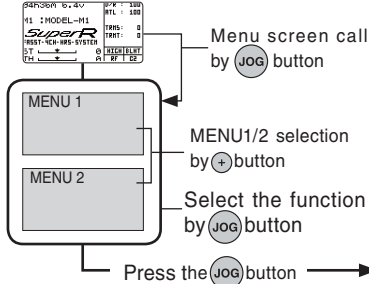

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

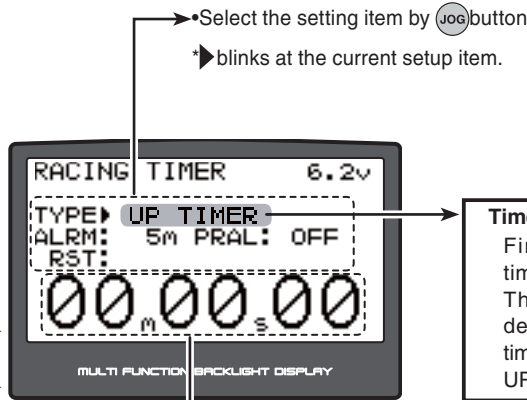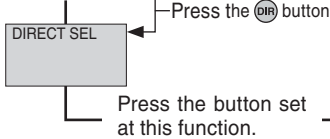

**Timer selection**  
First, select the type of timer at the "TYPE" item. The setup screen varies depending on the type of timer. This figure shows the UP TIMER setup screen.

**Time display**  
Minute display (m)  
Second display (s)  
1/100 second display

## Operation display

While the TIMER function is operating, **TIM** is displayed on the initial screen and menu screen.

## Racing timer type selection

(Preparation)

Assign the "LAP START" switch using the function select switch (p.96). When resetting by switch, assign "LAP RESET" also.

### 1 (Racing timer type selection)

Select the setting item "TYPE" by (JOG) button up, down, left, or right operation. Press the (+) or (-) button and set the racing timer type.

Timer selection (TYPE)  
UP TIMER : Up timer  
DOWN TIMER : Down timer  
LAP MEMORY : Lap timer  
LAP NAVIGATE : Navigate timer

### Setup item selection

- Select by (JOG) button up, down, left or right operation.

### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.

**2** When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## Using the up timer

(Preparation)


Select the setting item "TYPE" by (JOG) button up or down operation. Press the (+) or (-) button and select "UP TIMER".

### 1 (Alarm time setting)

Select the setting item "ALRM" by (JOG) button up, down, left, or right operation and set the alarm time with the (+) and (-) buttons.

(Pre alarm time setting)

Select the setting item "PRAL" by (JOG) button up, down, left, or right operation, and set the pre alarm time with the (+) and (-) buttons.

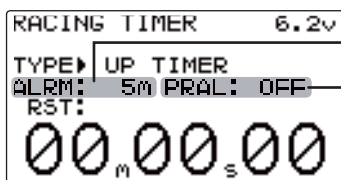

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

#### Alarm time (ALRM)


OFF, 1 ~ 99 m  
Initial value: 5 m

#### Prealarm time (PRAL)

OFF, 1 ~ 30 s  
Initial value: OFF

### 2 (Timer start/stop operation)

When the switch ("LAP START") assigned by function select switch function is pressed, the timer starts. Stop the timer with the same switch ("LAP START") as start, or with the switch assigned the "LAP RESET" function.

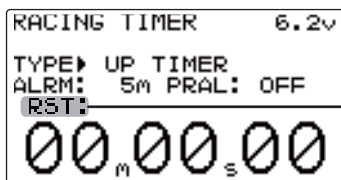

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

- Linking only start to the throttle trigger


Select the setting item "RST" by (JOG) button up, down, left, or right operation and press the (+) and (-) buttons simultaneously for about 1 second. When the set beeps and the status display switches from "RST" to blinking "RDY", the system enters the trigger operation ready state. When the trigger is operated at the forward side, the timer starts. (Status display "RUN")

#### Switches

LAP START :start / stop  
LAP RESET :stop / reset

### 3 (Timer reset operation)

When the switch ("LAP RESET") assigned by function select switch function is pressed, the timer is reset. Select the status display ("RUN", "STP", or "RDY") by (JOG) button up or down operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the status display changes to "RST" and the timer resets.

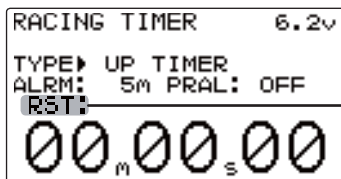

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

## Using the fuel down timer

(Preparation)


Select the setting item "TYPE" by (JOG) button up or down operation. Press the (+) or (-) button and select "FUEL DOWN TM".

### 1 (Alarm time setting)

Select the setting item "ALRM" by (JOG) button up, down, left, or right operation and set the alarm time with the (+) and (-) buttons.

(Pre alarm time setting)

Select the setting item "PRAL" by (JOG) button up, down, left, or right operation, and set the pre alarm time with the (+) and (-) buttons.

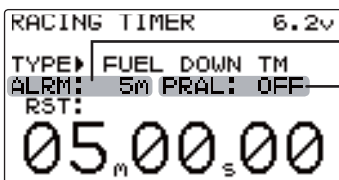

#### Alarm time (ALRM)


OFF, 1 ~ 99 m  
Initial value: 5 m

#### Prealarm time (PRAL)

OFF, 1 ~ 30 s  
Initial value: OFF

### 2 (Timer start/stop operation)

When the switch ("LAP START") assigned by function select switch function is pressed, the timer starts. When the switch ("LAP START") is pressed while the timer is operating, the timer is reset and simultaneously restarted. (Restart)

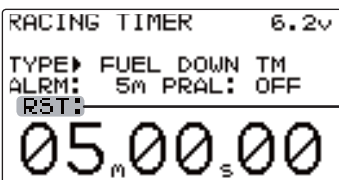

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

- Linking only start to the throttle trigger


Select the setting item "RST" by (JOG) button up, down, left, or right operation and press the (+) and (-) buttons simultaneously for about 1 second. When the set beeps and the status display switches from "RST" to blinking "RDY", the system enters the trigger operation ready state. When the trigger is operated at the forward side, the timer starts. (Status display "RUN")

#### Switches

LAP START :start / stop  
LAP RESET :stop / reset

### 3 (Timer stop and reset operation)

When the switch ("LAP RESET") assigned by function select switch function is pressed, the timer is stopped and reset. Select the status display ("RUN", "STP", or "RDY") by (JOG) button up or down operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the status display changes to "RST" and the timer resets.

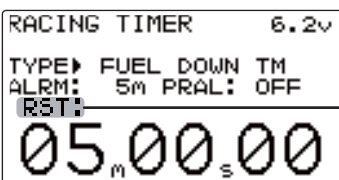

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped



## Using the Lap timer

(Preparation)


Select the setting item "TYPE" by (JOG) button up or down operation. Press the (+) or (-) button and select "LAP MEMORY".

### 1 (Alarm time setting)

Select the setting item "ALRM" by (JOG) button up, down, left, or right operation and set the alarm time with the (+) and (-) buttons.

(Pre alarm time setting)

Select the setting item "PRAL" by (JOG) button up, down, left, or right operation, and set the pre alarm time with the (+) and (-) buttons.

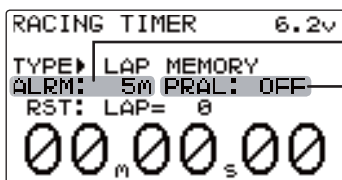

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

#### Alarm time (ALRM)

OFF, 1 ~ 99 m  
Initial value: 5 m

#### Prealarm time (PRAL)


OFF, 1 ~ 30 s  
Initial value: OFF

### 2 (Timer start/lap count operation)

Perform the start and lap count operations with the switch ("LAP START") assigned by function select switch function.

- Linking only start to the throttle trigger

Select the setting item "RST" by (JOG) button up, down, left, or right operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the timer display changes from "RST" to blinking "RDY" and the set enters the trigger operation ready state. (Status display "RUN")

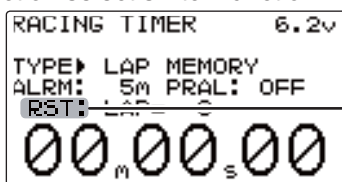

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

#### Switches

LAP START :start / lap count  
LAP RESET :stop / reset


### 3 (Timer stop/reset operation)

When the lap count switch ("LAP START") is pressed after the time set with "ALRM" has elapsed, the timer stops and the lap time, total time, and average time are memorized.

When the switch ("LAP RESET") is pressed, the timer is reset.

When a switch is not assigned, select the status display ("RUN", "STP", or "RDY") by (JOG) button up or down operation and press the (+) or (-) buttons simultaneously for about 1 second. The set beeps and the timer display changes to "RST" and the timer resets.

- When the timer is stopped with the switch assigned the "LAP RESET" function before the set "ALRM" time has elapsed, the total time and average time are not memorized.

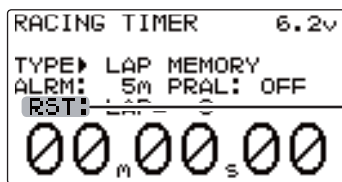

#### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

## Using the navigate timer

(Preparation)

Select the setting item "TYPE" by (JOG) button up or down operation. Press the (+) or (-) button and select "NAVIGATE".

### 1 (Alarm time setting)


Select the setting item "ALRM" by (JOG) button up, down, left, or right operation and set the alarm time with the (+) and (-) buttons.

(Pre alarm time setting)

Select the setting item "PRAL" by (JOG) button up, down, left, or right operation and set the pre alarm time with the (+) and (-) buttons.

(Lap navigation time setting)

Select the setting item "NAVI" by (JOG) button up, down, left, or right operation and set the lap navigation alarm (target) time with the (+) and (-) buttons.

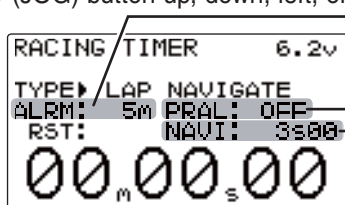

### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

### Alarm time (ALRM)

OFF, 1 ~ 99 m  
Initial value: 8 m

### Prealarm time (PRAL)

OFF, 1 ~ 30 s  
Initial value: OFF

### Navi alarm time (NAVI)

OFF, 1 ~ 30 s  
Initial value: 3 s


### 2 (Timer start/navigation restart operation)

When the switch ("LAP START") assigned by function select switch function is pressed, the timer starts.

- Linking only start to the throttle trigger

Select the setting item "RST" by (JOG) button up, down, left, or right operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the status display changes from "RST" to blinking "RDY" and the set enters the trigger operation ready state. When the trigger is operated at the forward side, the timer starts. (Status display "RUN")

- When your own lap time is less than the target time and the lap counts overlap, the lap navigation alarm timing is too big. The alarm timing can be corrected by pressing the switch ("LAP START") during measurement.

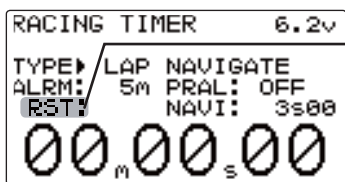

### Status display


RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

### Switches

LAP START :start/navi restart  
LAP RESET :stop/reset

### 3 (Timer stop/reset operation)

When the switch ("LAP RESET") assigned by function select switch function is pressed, the timer stops. Reset the timer by pressing the "LAP RESET" switch.

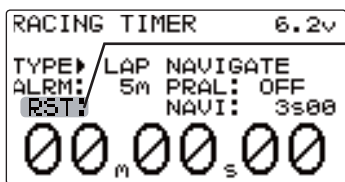

### Status display

RST :Reset state  
RDY :Throttle trigger operation wait  
RUN :Timer running  
STP :Timer stopped

When a switch is not assigned, select the status display ("RUN" or "RDY") by (JOG) button up or down operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the timer resets. (Does not pause)

# Lap List "LAP-L"

Call LAP-LIST when checking the lap memory data (each lap time) memorized by lap timer (p.101, 105 ) operation.

- After the lap timer is started, the lap time is sequentially memorized at each switch operation.


When set time of ALRM passes and the timer is stopped, the last lap is memorized and the total time is automatically written after the last lap and the average lap is automatically written after that.

-The next Lap-Timer starts at the lap memory number following the average lap (AVE).

## Calling the setup screen



### \*Calling from menu screen

(Opening Screen)

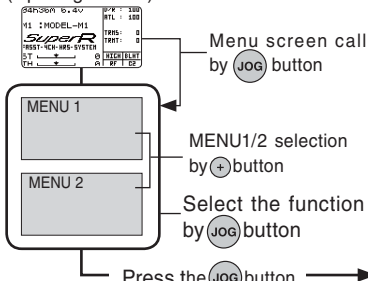

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

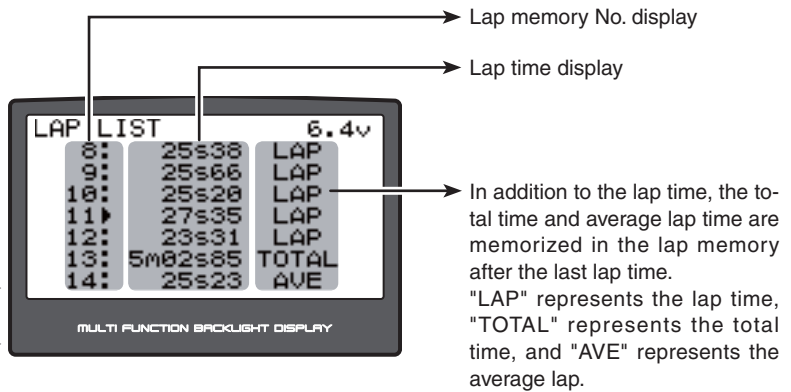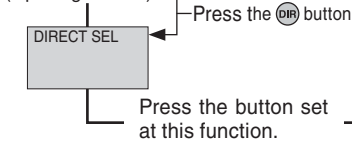

## Using the lap memory

### 1 (Lap memory check)

The cursor can be scrolled and each lap time checked by (JOG) button up or down operation.

### 2 (Lap memory reset)

Select the lap memory No. by (JOG) button up or down operation and press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and the lap memory of the selected lap memory No. resets.

(Resetting all the lap memory data)

While pressing the (JOG) button, press the (+) and (-) buttons simultaneously for about 1 second. The set beeps and all the data resets.

### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


# Model Selection "M-SEL"

Forty model data (model data for 40 R/C cars) can be saved in the 4PKS transmitter and used when the relevant model data is called.

## Calling the setup screen

### \*Calling from menu screen


(Opening Screen)

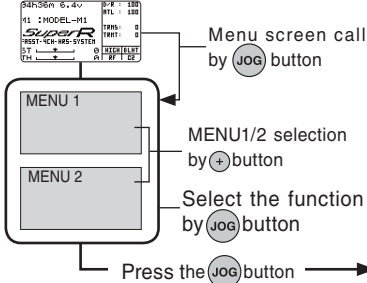


Press the JOG button

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

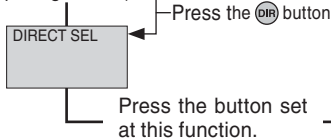

Press the button set at this function.

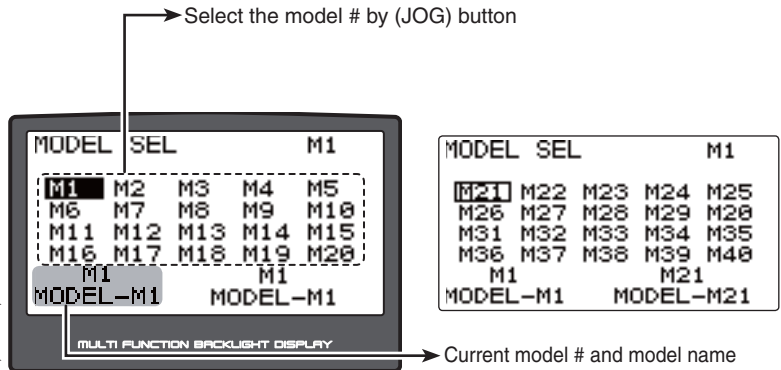


### When changing the receiver type and servo response to a different model (FASS-C1, FASST-C2, or HIGH SPEED, NORMAL)

When the type was changed to a different model, signals are output by previous model type until the transmitter power is turned off. Use after turning the transmitter power off and on.

## Using the model selection function

### 1 (Model No. selection)

Select the model No. by (JOG) button up, down, left, or right operation. When the up (JOG) button is operated from the "M1" ~ "M5" cursor position on the top line or the down (JOG) button is operated from the "M16" ~ "M20" cursor position on the bottom line, "M21" ~ "M40" is displayed. Perform the same operation to display the model numbers "M1" ~ "M40" from "M21" ~ "M40".

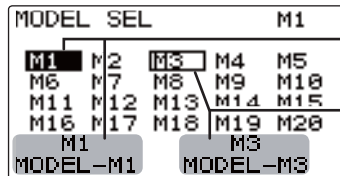

#### Model #.


M1-M40

#### Model selection button

- Select the model by (JOG) button up, down, left, or right operation.

### 2 (Model selection execution)

Press the (+) and (-) buttons simultaneously for about 1 second. A beeping sound is generated and the model is selected.

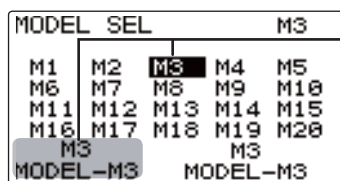

Modified model # and model name

- Model selection is complete when the model No. and model name at the bottom left of the screen change.

#### Model selection set button

- (+) and (-) buttons pressed simultaneously for about 1 second.

### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


# Model Name "NAME"

This function allows you to assign a ten character name to each model memory and user name (ten characters).

## Calling the setup screen



### \*Calling from menu screen

(Opening Screen)

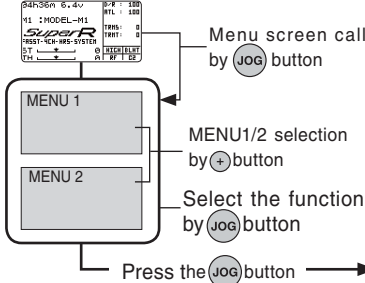

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

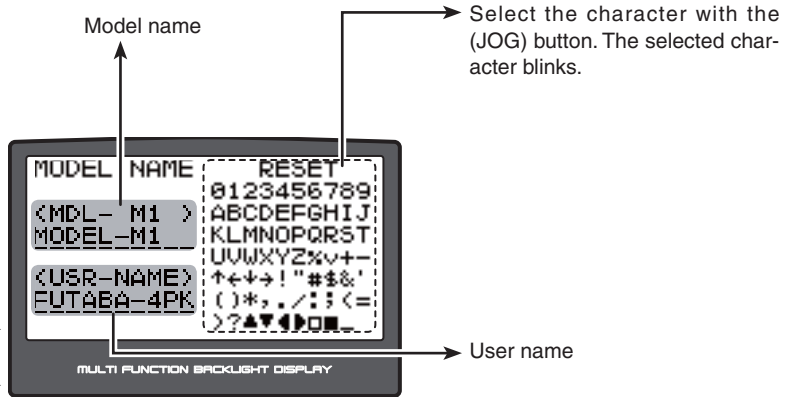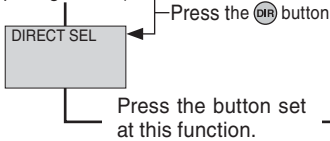

The character at the blinking cursor position can be changed.  
 The model name and user name can both use up to 10 characters.  
 When a character is entered by pressing the (JOG) button, the model name and user name cursors move to the right.

## Setting the model name and user name

**1** (Moving the cursor to the character you want to change.)  
 Move the cursor to the model name or user name character you want to set or change by pressing the (+) or (-) button. The selected character blinks.

**2** (Selecting the character to be used)  
 Select the character to be used from the character list at the right-hand side of the screen by (JOG) button up, down, left, or right operation. The selected character blinks. After selecting the character to be used, press the (JOG) button. The character is entered and the model name or user name character row moves to the right.

When "RESET" on the top row of the character list is selected and the (JOG) button is pressed, the model name or user name is initialized to the factory setting.

**3** When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

**Character select/set button**  
 - Select the character by (JOG) button up, down, left, or right operation and enter the character by pressing the (JOG) button.

Initialization  
 Model name :MODEL-M (#)  
 User name :FUTABA-4PK

Function

# Model Copy "M-COP"

The contents of the model memory can be copied to another model memory.

## Single mode (SINGLE) and group mode (GROUP)


Single mode copies the data to another model in model units.

Group mode groups M1~M10, M11~M20, M21~M30, and M31~M40 into individual groups and copies the data from group to group. For example, it is a convenient function in order to batch copy the data of M1~M10 to M11~M20.

## Menu copy (MENU COPY) and switch/dial copy (SW/DIAL COPY)

Menu copy copies the menu type selected by menu selection (p.38, 113) or a customized menu and direct menu. Setting data is not copied. It is a convenient function in order to copy only menus without changing the setting data of a model.

Switch/dial copy copies the operation functions set by function select switch (p.96) and function select dial (p.98). Setting data is not copied. It is a convenient function in order to copy only the function select switch and function select dial set by model.

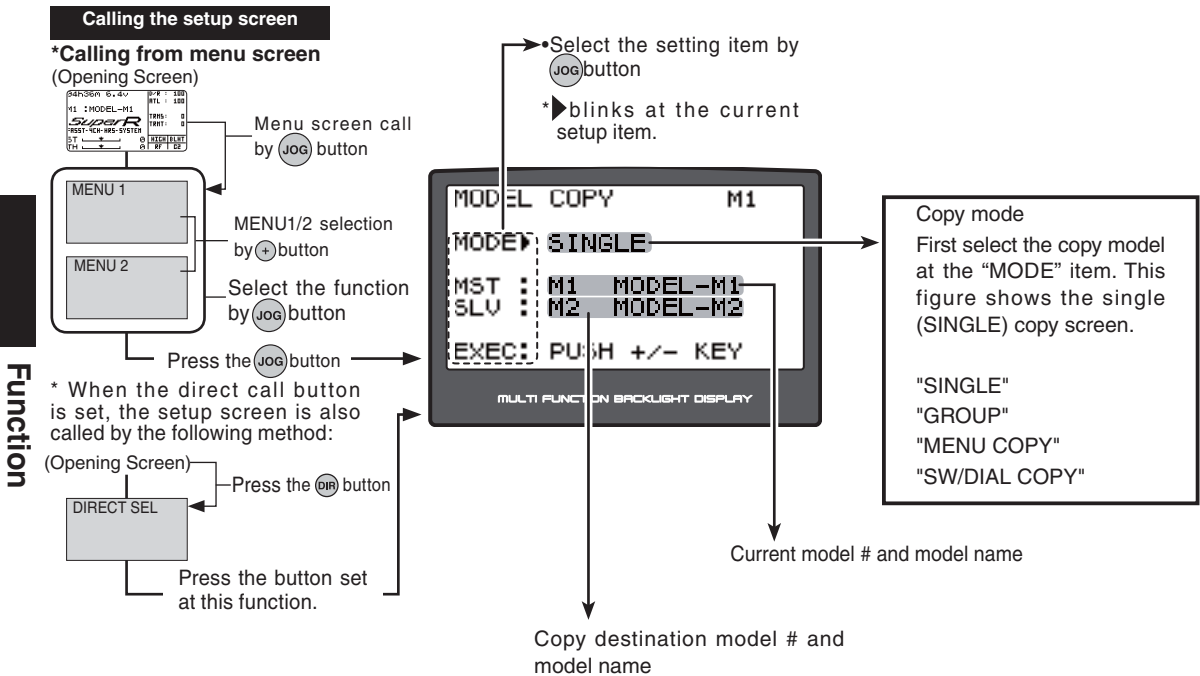

```

MODEL COPY      M1
MODE▶ SINGLE
MST : M1  MODEL-M1
SLV : M2  MODEL-M2
EXEC: PUSH +/- KEY

```

"SINGLE" mode

```

MODEL COPY      M1
MODE▶ GROUP
MST : M1 ~ M10
SLV : M11 ~ M20
EXEC: PUSH +/- KEY

```

"GROUP" mode

```

MODEL COPY      M1
MODE▶ MENU COPY
MST : M1  MODEL-M1
SLV : M2  MODEL-M2
EXEC: PUSH +/- KEY

```

"MENU COPY" mode

```

MODEL COPY      M1
MODE▶ SW/DIAL COPY
MST : M1  MODEL-M1
SLV : M2  MODEL-M2
EXEC: PUSH +/- KEY

```

"SW/DIAL COPY" mode

## Model copying

(Preparation)

Select setting item "MODE" by (JOG) button up or down operation and select the copy mode from "SINGLE", "GROUP", "MENU COPY", and "SW/DIAL COPY" by pressing the (+) or (-) button.

- When executing the model copy function, always select the copy mode first. If the copy mode is changed after the copy source (MST) and copy destination (STV) models were decided, it may become necessary to re-select MST and SLV because the copy source (MST) and copy destination (SLV) models return to the M1~M2 initial value.

### 1 (Copy source model No. selection)

Select the setting item "MST" by (JOG) button up or down operation. Press the (+) or (-) button and select the model #.

### 2 (Copy destination model No. selection)

Select the setting item "SLV" by (JOG) button up or down operation. Press the (+) or (-) button and select the model #.

- For the model currently in use (including group), "CAN NOT COPY" blinks at the bottom of the screen to alert the operator that the model cannot be copied.

### 3 (Copy execution)

Select the setting item "EXEC" by (JOG) button up or down operation. Press the (+) and (-) buttons simultaneously for 1 second. When "COMPLETE!" blinks at the bottom of the screen, copying is complete.

### 4 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Setup item selection

- Select by (JOG) button up or down operation.

#### Model number selection

- Use the (+) and (-) buttons to make adjustments.

#### Model No.

M1~M40

#### Copy execution button

- (+) and (-) buttons pressed simultaneously for about 1 second.

# Model Reset "M-RES"

This function resets the contents of the currently called model memory.

The reset method can be selected from among the 3 types described below. These resets do not initialize the adjuster function (ADJST), system function (SYSTEM), lap reset (LAP-L), user name (NAME), and receiver type (FASST-C1/FASST-C2), servo response selection function (RXSYS).

## DATA RESET


Initializes only the function setting data. The menu function and direct selection function are not initialized.

## MENU RESET

Initializes the menu function and direct selection function. Other settings are not initialized.

## ALL RESET

Initializes the menu function, direct selection function, and the setting data of each function.

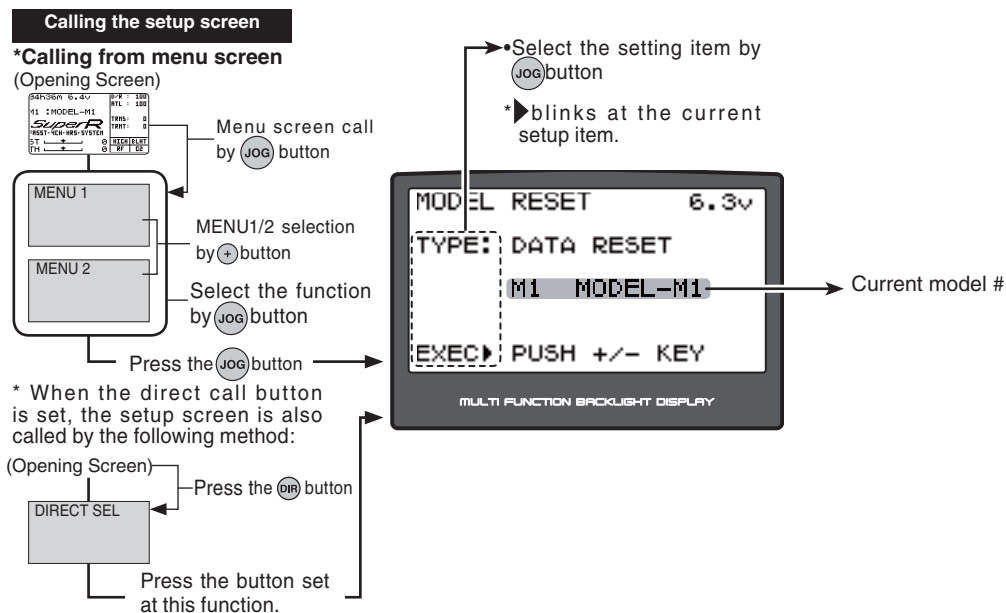

## Model Reset

Select the setting item "TYPE" by (JOG) button up or down operation and press the (+) or (-) button and select the reset type from among "DATA RESET", "MENU RESET", and "ALL RESET".

### 1 (Reset execution)

Select the setting item "EXEC" by (JOG) button up or down operation.

Press the (+) and (-) buttons simultaneously for 1 second.

When "COMPLETE!" blinks at the bottom of the screen, memory resetting is complete.

### 2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Setup item selection

- Select by (JOG) button up or down operation.

#### Reset type selection

- Use the (+) and (-) buttons to make adjustments.

#### Type (TYPE)

DATA RESET  
MENU RESET  
ALL RESET

#### Reset execution button

- (+) and (-) buttons pressed simultaneously for about 1 second.



# Menu Type Selection "MENU-T"

The function selection menu matched to the level of use can be selected from among the 4 types shown below. (The menu type can be set for each model.)


LEVEL1		LEVEL2		BIGCAR		LEVEL3		ALLOFF	
MENU 1	OF	MENU 1	OF	MENU 1	OF	MENU 1	2	MENU 1	OF
EPA	RXSYS	STEPP	EPA	BRAKE	SUBTR	STEPP	EPA		
REV	F/S	THEXP	SUBTR	A.B.S	REV	STSPD	ACCEL		
SUBTR	NAME	IDLUP	REV	EPA	RXSYS	THEXP	START		
	*M-SEL	A.B.S	RXSYS	THEXP	F/S	THSPD	IDLUP		*M-SEL
	*M-RES	BOAT	F/S		*MENU-T	BRAKE	P-MIX		*M-RES
	*MENU-T					A.B.S	S-MIX		*MENU-T
MENU 2	OF	MENU 2	OF	MENU 2	OF	MENU 2	16	MENU 2	OF
STEPP	DIAL	STSPD	DIAL	STSPD	DIAL	SUBTR	DIAL		
THEXP	SWTCH	THSPD	SWTCH	THSPD	SWTCH	REV	SWTCH		
A.B.S	BOAT	ACCEL	TIMER	ACCEL	P-MIX	M-COP	D/R		
M-COP	DTRRN	START	LAP-L	IDLUP	S-MIX	NAME	ATL		
	VIBRA	M-COP	SERVO	M-COP	SERVO	RXSYS	CH3/4		
			VIBRA		VIBRA	F/S	SERVO		

## Caution when lowering the level



The set value of the functions removed from the menu when the level was lowered remains effective thereafter. Before lowering the level, turn off the unused functions, and when there is rate adjustment, etc. related to other functions, check the set values.

### Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

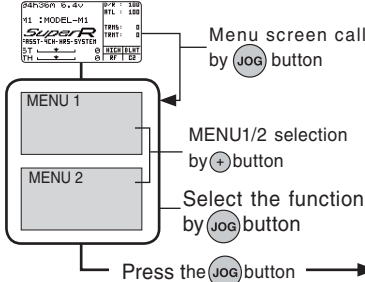

\* When the direct call button is set, the setup screen is also called by the following method:

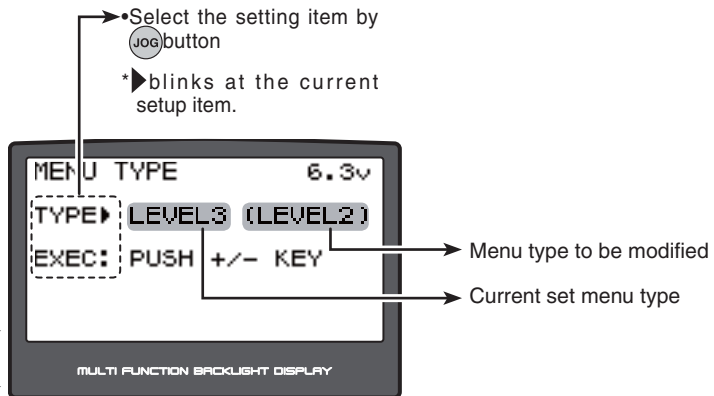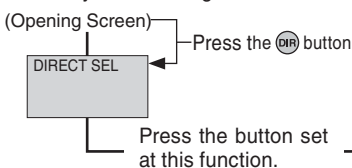

When "BIGCAR" is selected, brake mixing function (p.74 CH3 brake rate (BKRT) adjustment is automatically assigned to dial DL3. Brake mixing function ON is set with the brake mixing function. DL3 assignment remains unchanged even if the type is changed.

## Type selection

### 1 (Menu type selection)

Select the setting item "TYPE" by (JOG) button up or down operation. Select the menu type with the (+) or (-) button.

### 2 (Menu type change)

Select the setting item "EXEC" by (JOG) button up or down operation. Press the (+) and (-) buttons simultaneously for 1 second. When the screen display changes, the change is complete.

### 3 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Type (TYPE)

LEVEL1, LEVEL2, BIGCAR, LEVEL3, ALL OFF

#### Type change button

- (+) and (-) buttons pressed simultaneously for about 1 second.

# ESC Link Function "MCLNK"


This is a special function which allows Futaba motor controller (MC) data changes to be set by the T4PKSR transmitter (MC960CR, MC950CR, MC851C, MC602C, MC402R, etc.).

However, some data changes require a PC and Link software.

This function is used by connecting ESC directly to the transmitter. The T4PKSR power switch is used at the display side. Use the various optional servo extension cords according to the distance between the transmitter and ESC.

The last data read from ESC to T4PKSR or the last data written from T4PKSR to ESC is saved to the T4PKSR. Since the data for each model memory can be saved, the data of up to 40 models can be saved.


-When the T4PKSR battery voltage drops, the display switches to low battery display. Therefore, use this function when there is ample battery capacity remaining.  
-Also connect the battery at the ESC side.

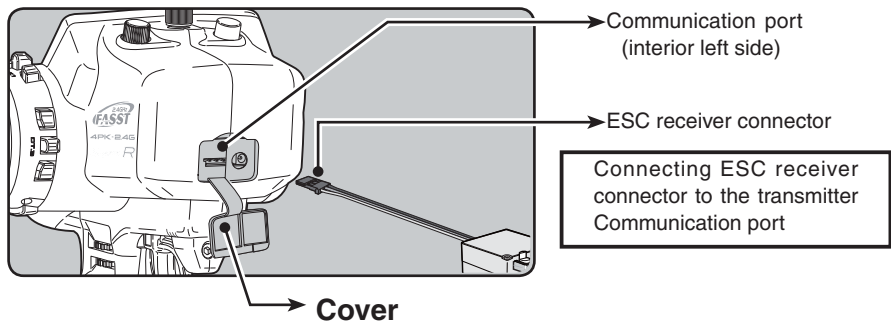


Function

### Calling the setup screen

\*Calling from menu screen (Opening Screen)

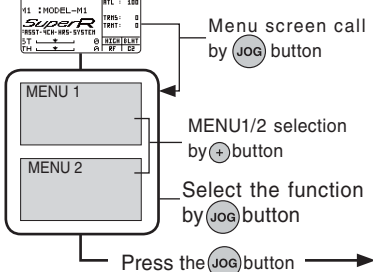

\* When the direct call button is set, the setup screen is also called by the following method:

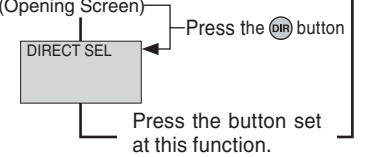

```
MC LINK (950CR) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
MIN: 5.0 DBA: 8 CLM: OFF BMD: 100
MAX: 3.0 LBP: 2.5 REV: BRK RMD: 100
BRK: 1.5 nTB: 2 LRA: 0 FMB: 6
MC950CR
```

```
MC LINK (402CR) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
MIN: 3.0 DBA: 12 CLM: 300 BMD: 100
MAX: 2.5 LBP: 3.0 CTH: 300 RMD: 50
BRK: nDRH nTB: 0 CLT: 0 FMB: 28
MC402CR
```

```
MC LINK 6.3v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
(NO DATA)
MULTI FUNCTION BACKLIGHT DISPLAY
```

```
MC LINK (602C) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
MIN: 3.0 DBA: 12 CLM: 300 BMD: 100
MAX: 1.5 LBP: 3.0 CTH: 300
BRK: HIGH nTB: 0 CLT: 0 FMB: 28
MC602C
```

```
MC LINK (960CR) 6.1v
(1/2) + LINK MENU
MIN> 5.0 nTB: 0
MAX: 3.0 CLM: 300
BRK: 1.5 REV: BRK →
DBA: 8 BMD: 100
LBP: 2.8 RMD: 100
▶ PWM FREQ MIN LD=KHZ
MC960CR
```

```
MC LINK (851C) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
MIN: 3.0 DBA: 12 CLM: 300 BMD: 100
MAX: 2.5 LBP: 3.0 CTH: 300
BRK: HIGH nTB: 0 CLT: 0 FMB: 0
MC851C
```

## Using the ESC Link function

(Preparation)

-Connect the T4PKSR and ESC in accordance with the connection diagram shown on page 114.

-Connect the battery to ESC.

**1** Set the transmitter power switch to the display side (DISP ON). Use the (JOG) button and (+) button to display the "ESC-LINK" menu. Set the FET amp power switch to the ON position.

**2** (ESC read)

Execute this function to read the connected ESC type and the data currently set at the amp. To save the ESC data to the T4PKSR, rewrite the read data.

When you want to write the data saved in the T4PKSR to an ESC of the same type, execute the following "WRITE(TX→MC)"(write) without executing "READ(MC→TX)"(read).

**a** -Select the setting item "MODE" by (JOG) button up or down operation, and select "READ(MC→TX)" by (+) or (-) button.

**b** -Select the setting item "EXEC" by (JOG) button up or down operation, and press the (+) and (-) buttons simultaneously for 1 second or longer.

- "COMPLETE!" blinks on the screen and the ESC type and currently set contents are read.

- If "LINK ERROR!" blinks on the screen, communication with the amp is not being performed normally. Check the T4PKSR and ESC connection and the battery connection to ESC and the ESC power switch and repeat steps a→b.

**3** (Writing to ESC)

Execute this function to write the setting data to ESC. See pages 108~109 for the setting data contents.

**a** -Select the setting item "MODE" by (JOG) button up or down operation, and select "WRITE(TX→MC)" by (+) or (-) button.

**b** -Select the setting item "EXEC" by (JOG) button up or down operation, and press the (+) and (-) buttons simultaneously for 1 second or longer.

- "COMPLETE!" blinks on the screen and the setting data is written to ESC.

If "LINK ERROR!" blinks on the screen, communication with the amp is not being performed normally. Check the T4PKSR and ESC connection and the battery connection to ESC and the ESC power switch and repeat steps a→b. In addition, if (NO DATA) is displayed on the T4PKSR screen, "WRITE(TX→MC)" cannot be selected because there is no setting data to be written.

- Different type ESC data cannot be written. If writing is attempted, "TYPE ERROR!" will blink on the screen to show that the ESC type is wrong.

When "MC-LINK" menu is selected when the transmitter power switch is at the transmit side (POWER ON) the message shown below prompting you to set the switch to the display side is displayed.

```
MC LINK 6.3v
PLEASE CHANGE TO
DISPLAY MODE
```

```
MC LINK 6.4v
MODE> READ (MC→TX)
EXEC> PUSH +/- KEY
(NO DATA)
```

```
MC LINK (958CR) 6.4v
MODE: READ (MC→TX)
EXEC> COMPLETE!
Min: 5.0 | DBA: 8 | CLN: OFF | BND: 100
MAX: 3.0 | LBP: 2.5 | REV: BRk | RND: 100
BRk: 1.5 | nTB: 2 | LA: 0 | FWE: 6
```

```
MC LINK 6.4v
MODE: READ (MC→TX)
EXEC> LINK ERROR!
(NO DATA)
```

```
MC LINK (958CR) 6.4v
MODE: WRITE (TX→MC)
EXEC> COMPLETE!
Min: 5.0 | DBA: 8 | CLN: OFF | BND: 100
MAX: 3.0 | LBP: 2.5 | REV: BRk | RND: 100
BRk: 1.5 | nTB: 2 | LA: 0 | FWE: 6
```

```
MC LINK (958CR) 6.4v
MODE: WRITE (TX→MC)
EXEC> LINK ERROR!
```

```
MC LINK (958CR) 6.4v
MODE: WRITE (TX→MC)
EXEC> TYPE ERROR!
```

## 4 (Initialization)

Write the factory set ESC setting data to the connected ESC and T4PKSR.

**a** -Select the setting item "MODE" by (JOG) button up or down operation, and select "DEFAULT(MC&TX)" by (+) or (-) button.

**b** -Select the setting item "EXEC" by (JOG) button up or down operation, and press the (+) and (-) buttons simultaneously for 1 second or longer.

- "COMPLETE!" blinks on the screen, and the initial data is written to ESC. If "LINK ERROR" blinks on the screen, communication with the amp is not being performed normally. Check the T4PKSR and ESC connection and the battery connection to ESC and the ESC power switch, and repeat steps a→b. In addition, if (NO DATA) is displayed on the T4PKSR screen, "DEFAULT(MC&TX)" cannot be selected because there is no initial data to be written.

```
MC LINK (950CR) 6.4v
MODE: DEFAULT(MC&TX)
EXEC> COMPLETE!
Min: 5.0 | Dbr: 8 | CLM: OFF | Bnd: 100
Max: 3.0 | Lbp: 2.5 | Rev: BRK | Rnd: 100
Brk: 1.5 | nTb: 2 | LA: 0 | FwB: 6
```

```
MC LINK (950CR) 6.4v
MODE: DEFAULT(MC&TX)
EXEC> LINK ERROR!
Min: 5.0 | Dbr: 8 | CLM: OFF | Bnd: 100
Max: 3.0 | Lbp: 2.5 | Rev: BRK | Rnd: 100
Brk: 1.5 | nTb: 2 | LA: 0 | FwB: 6
```

### System function setup

**1** Select the setting item by (JOG) button up, down, left, or right operation.  
Set the value by (+) and (-) button.

```
MC LINK (402CR) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
CURRENT LIMIT =A
Min: 3.0 | Dbr: 12 | CLM: 300 | ---
Max: 2.5 | Lbp: 3.0 | Cth: 300 | Rnd: 50
Brk: nDRM | nTb: 0 | CLT: 0 | FwB: 28
```

#### Setup item selection

- Select by (JOG) button up, down, left or right operation.

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.

- Return to the initial value by pressing the (+) and (-) buttons simultaneously (approx. 1 sec).

- The currently set item is displayed here.

#### Setup item

**Min-(PWM FREQ MIN LD) 100Hz~10000Hz (10kHz)**  
**MC950CR:500Hz~30000Hz (30kHz)**

Same as Link software PWM frequency (at Min. load), Min sets the "0"A PWM frequency at minimum load.

**MAX-(PWM FREQ MAX LD) 100Hz~10000Hz (10kHz)**  
**MC950CR:500Hz~30000Hz (30kHz)**

Same as Link software PWM frequency (at Max. load). MAX sets the PWM frequency at maximum load at the output current limit value set by Current Limiter.

**BRK-(PWM FREQ BRK LD) nORM(2000Hz)/ HIGH(1000Hz)/ SAPHI(500Hz)**  
**MC950CR:500Hz~30000Hz (30kHz)**

Same as Link software Brake PWM at frequency. This setting can set the brake PWM frequency.

**CLM-(CURRENT LIMIT) 50A~300A (MC950CR:50A~300A), OFF** Same as Link software Current Limiter.

Current Limiter sets the current value at maximum load here.

Since setting of the MAX is based on the output current limit value set by Current Limiter, Current Limiter does not have to be turned OFF except when a current exceeding 300A is generated.

```
MC LINK (402CR) 6.4v
MODE> READ (MC->TX)
EXEC: PUSH +/- KEY
CURRENT LIMIT =A
Min: 3.0 | Dbr: 12 | CLM: 300 | Bnd: 100
Max: 2.5 | Lbp: 3.0 | Cth: 300 | Rnd: 50
Brk: nDRM | nTb: 0 | CLT: 0 | FwB: 28
```

Function

"Min" which sets the frequency when the load is small, is set to the high frequency side (large value) when extension is desired after straight-aways and curves.

"MAX" which sets the frequency when the load is large, is set to the high frequency side (large value) when you want to suppress the rise from low speed and when motor heating and commutator roughness are sensed.

When the rise from low speed is poor, and becomes bad even when "MAX" is set to the low frequency side, use the log data to check if there was a momentary voltage drop. When you want to suppress the overall power, lengthen the run time, and otherwise improve efficiency, set both "MAX" and "Min" to the high frequency side. When you want to set a fixed PWM frequency at full range regardless of the load current, set PWM frequency (at Max. load) and PWM frequency (at Min. load) to the same value.


**LBP-(LOW BATTERY VOLT) 2.5V~6V**

Same as Link software Low Bat Protection  
 When the power supply voltage drops, the output current to the motor is limited and supply voltage to the receiver is ensured. When the power supply voltage drops to the set voltage, a protection circuit operation alarm is activated and output to the motor is cut. The protection circuit is automatically reset by recovery of the power supply voltage.

```
MC LINK (482CR) 6.4v
MODE▶ READ (MC→TX)
EXEC: PUSH +/- KEY
▼ CURRENT LIMIT =A
Min: 3.0|DPR: 12|CLM:300|END:100
Max: 2.5|LBP:3.0|CTH:300|RND: 50
Brk:nDRH|nTB: 0|CLT: 0|FNB: 28
```

**DBA-(DEAD BAND) ±2µs~±50µs**

Same as Link software Dead Band.  
 This sets the range (neutral point range) over which the ESC does not respond to transmitter throttle operation.  
 The larger the set value, the wider this range.

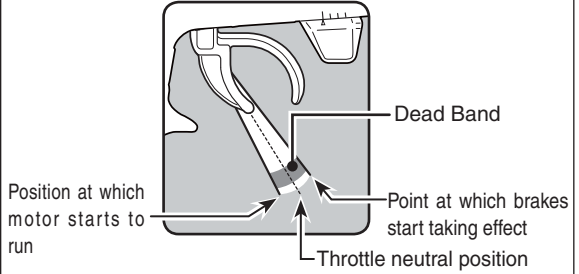**nTB-(NEUTRAL BRAKE) 0%(OFF)~100%**

Same as Link software Neutral Brake.  
 Make this setting when you want to use the brakes at the neutral throttle (OFF) position by throttle operation. The larger this value, the greater the braking force. When you want to use the neutral brake, set this value to "0%".

**CTM-(C.L. TIME LIMIT) 50A~300A /CLT-(C.L. TIMER) 0sec(OFF)~240sec**


Same as Link software Current Limiter (Time Limit)/Current Limit timer.  
 The output current can be limited up to the set time lapse from the start of running. This is effective in preventing the motor from outputting wasted energy when the voltage is high immediately after the power battery was recharged.  
 - "CTM" (Time Limit) sets the maximum output current within the time the output current is limited.  
 - "CLT" sets the time the output current is limited. This function is disabled when set to "0" sec.  
 Since the Current Limit Timer starts when the throttle is operated to the forward side and current is output to the motor, this function begins to operate when the motor is run during trim adjustment, etc.

**BMD-(BRAKE MAX DUTY) 0%~100%**

Same as Link software Brake Max. Duty.  
 This setting can set the braking force between the neutral point and Max brake point. The larger this value, the greater the braking force. When set to "0%", the brakes are not effective.

**RMD-(REVERSE MAX DUTY) w/back only 0%~100%**


Same as Link software Reverse Max. Duty  
 This setting can set the reverse power between the neutral point and Max reverse point. The larger this value, the greater the reverse power. When set to "0%", the reverses are not effective.

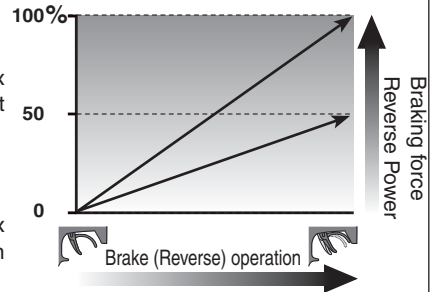

```
MC LINK (482CR) 6.4v
MODE▶ READ (MC→TX)
EXEC: PUSH +/- KEY
▼ CURRENT LIMIT =A
Min: 3.0|DPR: 12|CLM:300|END:100
Max: 2.5|LBP:3.0|CTH:300|RND: 50
Brk:nDRH|nTB: 0|CLT: 0|FNB: 28
```

**FWB-(FORWARD BOOST) (except MC850C)**

Same as Link software Forward Boost.  
 Operation near the throttle trigger (stick) neutral position becomes a sharp rise.

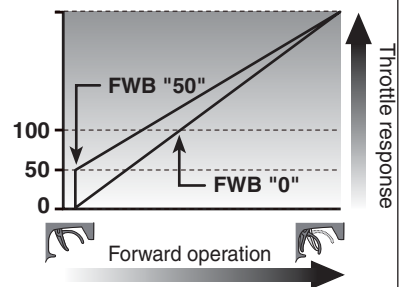**MC950CR only setup item****LINK (958CR)**

```
MODE▶ READ (MC→TX)
EXEC: PUSH +/- KE
▼ CURRENT LIMIT
3.0|DPR: 8|CLM:500|E
3.0|LBP:2.5|REV:BRK|E
1.5|nTB: 2|LA: 0|F
```

**REV-(REV CANCEL) BRK/REV**

Same as Link software Reverse Cancel.

When set to BRk, reverse operation is not performed.

**LA-(LEAD ANGLE) 0~1500**

Same as Link software Lead Angle.

The lead angle of the motor can be set at the MC950CR side. However, we recommend that it normally be set to "0". Since this setting is premised on setting by referring to the speed log by the Link software, independent use of the MC LINK function of the T4PKSR is recommended.


**Function**

## System function setup:MC960CR


### 1 (Setting item selection)

When the (JOG) button is operated at the bottom side from the MC960CR data read screen, Page1 of the setup screen is displayed.

Operate the following (JOG) button and switch between Page1 and Page2 of the setup screen.

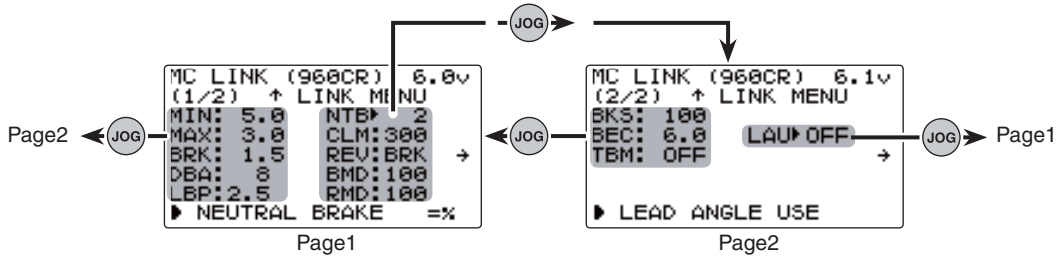

When "LAU" (LEAD ANGLE USE) displayed on Page2 is turned on the BOOST ANGLE settings are displayed on Page3. Page1 ⇔ 2 ⇔ 3 transition is the same as Page1 ⇔ 2 above except that Page3 is increased.

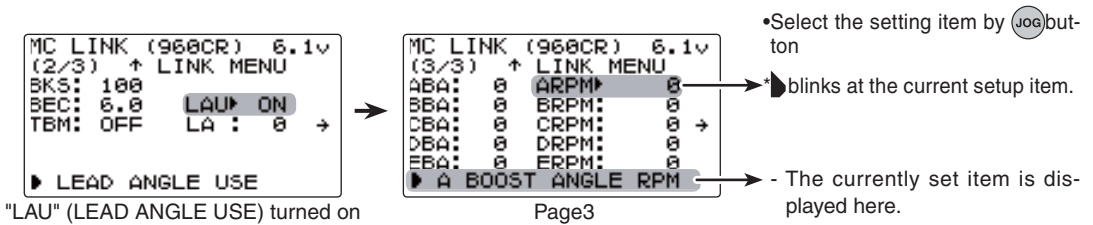

Writing of data to the MC960CR is returned from any Page to the initial read screen and "Writing to ESC" (p.115) is executed by operating the (JOG) button up and down. Select the setting item by (JOG) button up, down, left, or right operation. Set the value by (+) and (-) button.

### Setup item

**Min-(PWM FREQ MIN LD) 0.5kHz(500Hz) ~ 30kHz(30000Hz)**  
Same as Link software PWM frequency (at Min. load), Min sets the "0"A PWM frequency at minimum load.

**MAX-(PWM FREQ MAX LD) 0.5kHz(500Hz) ~ 30kHz(30000Hz)**  
Same as Link software PWM frequency (at Max. load). MAX sets the PWM frequency at maximum load at the output current limit value set by Current Limiter.

**BRK-(PWM FREQ BRK LD) 0.5kHz(500Hz) ~ 30kHz(30000Hz)**  
Same as Link software Brake PWM at frequency. This setting can set the brake PWM frequency.

### CLM-(CURRENT LIMIT) 50A~500A , OFF

Same as Link software Current Limiter.

Current Limiter sets the current value at maximum load here.

Since setting of the MAX is based on the output current limit value set by Current Limiter, Current Limiter does not have to be turned OFF except when a current exceeding 300A is generated.

```
MC LINK (960CR) 6.5v
MODE: READ (MC→TX)
EXEC: COMPLETE!
↓ DATA LIST
(Rev5A)
```

MC960CR data read screen



```
MC LINK (960CR) 6.1v
(1/3) ↑ LINK MENU
MIN: 5.0 NTB: 0
MAX: 3.0 CLM: 300
BRK: 1.5 REV: BRK →
LBP: 2.8 BMD: 100
PBM: 0 RMD: 100
▶ PWM FREQ MIN LD=KHZ
```

Page1

"MIN" which sets the frequency when the load is small, is set to the high frequency side (large value) when extension is desired after straightaways and curves.

"MAX" which sets the frequency when the load is large, is set to the high frequency side (large value) when you want to suppress the rise from low speed and when motor heating and commutator roughness are sensed.

When the rise from low speed is poor, and becomes bad even when "MAX" is set to the low frequency side, use the log data to check if there was a momentary voltage drop. When you want to suppress the overall power, lengthen the run time, and otherwise improve efficiency, set both "MAX" and "MIN" to the high frequency side. When you want to set a fixed PWM frequency at full range regardless of the load current, set PWM frequency (at Max. load) and PWM frequency (at Min. load) to the same value.

**NTB-(NEUTRAL BRAKE) 0%(OFF)~100%** Same as Link software Neutral Brake.  
 Make this setting when you want to use the brakes at the neutral throttle (OFF) position by throttle operation. The larger this value, the greater the braking force. When you want to use the neutral brake, set this value to "0%".

**DBA-(DEAD BAND) ±2µs~±50µs**  
 Same as Link software Dead Band.  
 This sets the range (neutral point range) over which the ESC does not respond to transmitter throttle operation. The larger the set value, the wider this range.

```
MC LINK (960CR) 6.1v
(1/3) ↑ LINK MENU
MIN: 5.0 NTB: 0
MAX: 3.0 CLM: 300
BRK: 1.5 REV: BRK →
DBA: 8 BMD: 100
LBP: 2.8 RMD: 100
▶ PWM FREQ MIN LD=KHZ
```

Page1

**LBP-(LOW BATTERY VOLT) 2.5V~7.5V** Same as Link software Low Bat Protection  
 When the power supply voltage drops, the output current to the motor is limited and supply voltage to the receiver is ensured. When the power supply voltage drops to the set voltage, a protection circuit operation alarm is activated and output to the motor is cut. The protection circuit is automatically reset by recovery of the power supply voltage.


```
MC LINK (960CR) 6.1v
(1/3) ↑ LINK MENU
MIN: 5.0 NTB: 0
MAX: 3.0 CLM: 300
BRK: 1.5 REV: BRK →
DBA: 8 BMD: 100
LBP: 2.8 RMD: 100
▶ PWM FREQ MIN LD=KHZ
```

Page1

**REV-(REV CANCEL) BRK /REV**  
 Same as Link software Reverse Cancel.  
 When set to BRK, reverse operation is not performed.

**BMD-(BRAKE MAX DUTY) 0%~100%**  
 Same as Link software Brake Max. Duty.  
 This setting can set the braking force between the neutral point and Max brake point. The larger this value, the greater the braking force. When set to "0%", the brakes are not effective.

**RMD-(REVERSE MAX DUTY) w/back only 0%~100%**  
 Same as Link software Reverse Max. Duty  
 This setting can set the reverse power between the neutral point and Max reverse point. The larger this value, the greater the reverse power. When set to "0%", the reverses are not effective.

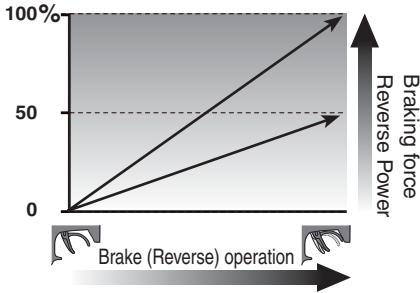

Function

### BKS-(BRAKE SLOPE) 0-300

Same as Link software Brake Slope.

This function adjusts the braking effect when the throttle was returned (throttle off). It cancels operation like that called engine brake of actual vehicles.

### BEC-(BEC VOLT) 6.0V/7.4V

Same as Link software BEC Volt.

The receiver BEC voltage can be selected from 60V and 74V. Match the voltage to the rating of the servo connected to the same receiver. This BEC voltage cannot output a voltage higher than the input voltage.

```

MC LINK (960CR) 6.1v
(2/2) + LINK MENU
BKS: 100
BEC: 6.0 LAU:OFF
TBM: OFF

```

▶ BRAKE SLOPE

Page2

### TBM-(TURBO MODE) OFF /LEV1 /LEV2

Same as Link software Turbo Mode

This function sets the turbo mode. More power can be displayed by using the turbo mode. Depending on the setting, the motor and ESC may be damaged so make this setting carefully.

(Note) When LAU (LEAD ANGLE USE) is off, lead angle setting will not operate even if set to LEV1 or LEV2. (Turbo mode disabled, TBM=OFF)

#### OFF mode: (No Lead Angle mode) Lead angle - No

When used in races in which the lead angle setting function is inhibited by ESC, set to this mode. The lead angle function is disabled the same as if LAU (LEAD ANGLE USE) was turned off.

When the lead angle function was disabled by the method described above, the MC960CR shows that the lead angle function is off by blinking a blue LED at an ON 0.1 second, OFF 0.9 second cycle at the neutral point.

#### LEV1 turbo mode: (Lead Angle mode) Lead angle – Yes

The output can be increased by setting a lead angle.

Depending on the set value, the motor may be damaged so increase the lead angle value in steps from a small value while observing the conditions.

Turn on LAU (Lead Angle Use) and adjust the lead angle by LA-(LEAD ANGLE) and A, B, C, D, E BA-(A, B, C, D, E BOOST ANGLE) value.

#### LEV2 power mode: (Power Mode) Lead angle – Yes

Displays still more power than a turbo.

However, since even a motor applies a large load on the ESC, make the lead angle larger in steps from a small value while observing the conditions.

Turn on LAU (LEAD ANGLE USE) and adjust the lead angle by LA-(LEAD ANGLE) and A, B, C, D, E BA-(A, B, C, D, E BOOST ANGLE) value.

When "LAU" (LEAD ANGLE USE) is turned on "LA" (LEAD ANGLE) is displayed and the lead angle can be set. In addition, the BOOST ANGLE settings are displayed on Page3.

Function

```

MC LINK (960CR) 6.1v
(2/2) + LINK MENU
BKS: 100
BEC: 6.0 LAU:OFF
TBM: OFF

```

▶ LEAD ANGLE USE

"LAU" (LEAD ANGLE USE) turned on

```

MC LINK (960CR) 6.1v
(2/3) + LINK MENU
BKS: 100
BEC: 6.0 LAU: ON
TBM: OFF LA: 0

```

▶ LEAD ANGLE USE

"LA" (LEAD ANGLE) is displayed and the lead angle can be set.

```

MC LINK (960CR) 6.1v
(3/3) + LINK MENU
ABA: 0 ARPM: 0
BBA: 0 BRPM: 0
CBA: 0 CRPM: 0
DBA: 0 DRPM: 0
EBA: 0 ERPM: 0
▶ A BOOST ANGLE =DEG

```

Page3

The BOOST ANGLE and BOOST ANGLE RPM which can set the lead angle of 5 points relative to the speed are displayed on Page3.



```

MC LINK (960CR) 6.1v
(2/3) + LINK MENU
BKS: 100
BEC: 6.0
TBM: OFF
LAU: ON
LA: 0
▶ LEAD ANGLE USE

```

**LAU-(LEAD ANGLE USE) ON/OFF**  
 Same as Link software Lead Angle Use  
 This function is effective when TBM (Turbo Mode) is LEV1 or LEV2 and sets whether or not lead angle is used. This setting has priority over the TURBO MODE setting. When using in races in which the lead angle function is inhibited by the ESC set this function to OFF.  
 OFF : Lead angle function not used.  
 ON : Lead angle used

**LA-(LEAD ANGLE) 0-59deg**  
 Same as Link software Lead Angle  
 When LAU (LEAD ANGLE USE) is turned on the motor lead angle can be set at the MC960CR. The lead angle can be set up to 59 degrees in 1 degree increments.

```

MC LINK (960CR) 6.1v
(3/3) + LINK MENU
ABA: 0 ARPM: 0
BBA: 0 BRPM: 0
CBA: 0 CRPM: 0
DBA: 0 DRPM: 0
EBA: 0 ERPM: 0
▶ A BOOST ANGLE =DEG



```

**A,B,C,D,E BA-(A,B,C,D,E BOOST ANGLE) 0-59deg**  
 Same as Link software Boost Angle  
**A,B,C,D,E RPM-(A,B,C,D,E BOOST ANGLE RPM) 0-99990rpm**  
 Same as Link software Boost Angle rpm  
 When LAU (LEAD ANGLE USE) is turned on the lead angle versus motor speed of the 5 points A to E can be set. The lead angle can be set up to 59 degrees in 1 degree increments.

Page3

The LA-(LEAD ANGLE) and A, B, C, D, E BA- (A, B, C, D, E BOOST ANGLE) relationship is shown on the graphs below. Graph [A] shows the relationship when the same value is set at points A, B, C, D, E BA- (A, B, C, D, E BOOST ANGLE) of [A] and [B] and the LA-(LEAD ANGLE) was set to "0" and graph [B] shows the relationship when a value other than "0" was set at LA-(LEAD ANGLE).

As shown in the graphs, [B] is added to the A, B, C, D, E BA-(A, B, C, D, E BOOST ANGLE) set lead angle and [A] is added to the LA-(LEAD ANGLE) set lead angle. For example, if "3" is set at ABA and LA of [B] is set to "2", the actual ABA becomes 3+2=5 (deg). Since LA of [A] is "0", the actual ABA also becomes 3+0=3 (deg).

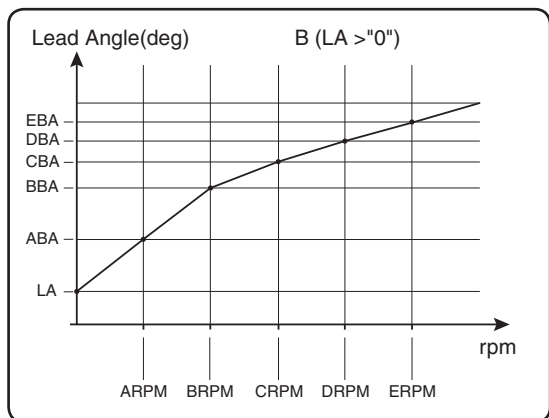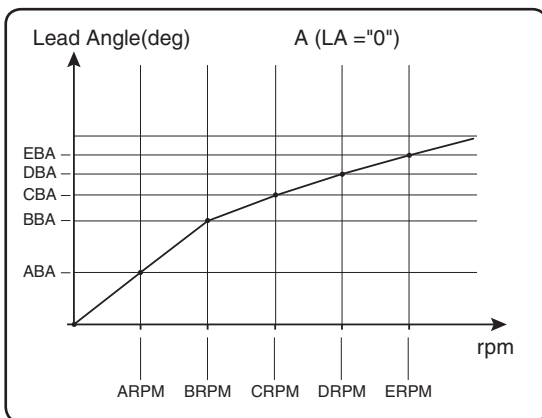

When using in races in which the lead angle setting function is inhibited by the ESC, set LAU (LEAD ANGLE USE) to OFF. The LAU setting has priority over TBM-(TURBO MODE). If LAU is set to "OFF", the lead angle setting function can be turned off even if TBM is set to "LV1" or "LV2".  
 The MC960CR shows that the lead angle setting function is OFF ("0" timing) by blinking a LED


# System Functions "SYSTEM"

The graphic liquid crystal screen display mode, buzzer sound, LED display mode and initial screen display mode can be set.


The system function setup items cannot be set for each model. (Second condition can be set for each model.)

## - Battery type setting (NiMH5 LiFe2, DRY 4CELL)

The T4PKSR can use dry cell batteries (alkaline battery recommended) with the optional battery box, but the low battery alarm setting is different from that of a rechargeable battery. Therefore, always set the battery type matched to the power source used. Especially, when using a Futaba rechargeable type battery, always set the battery type to "NiMH5 LiFe2". If the T4PKSR is used at "DRY 4CELL" setting, the time from low battery alarm to stopping of the system will become extremely short.

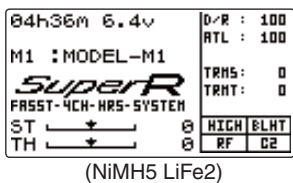


(NiMH5 LiFe2)

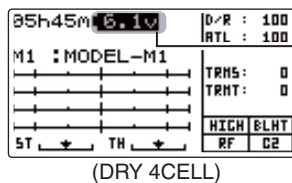

(DRY 4CELL)


\* Voltage display  
When BATT-TYP is set for dry cell battery (DRY 4CELL), the voltage display of each screen will be displayed by this mark.

- Liquid crystal screen backlighting display mode setup (OFF, ON at button operation, normally ON)
- Setting of ON time (1~30 secs) when [ON at button operation] was selected above.
- Jog button LED mode setup
- Liquid crystal screen contrast adjustment (20 steps)
- Buzzer sound tone adjustment (OFF, 100 steps)
- LED display color setup (OFF, 7 colors)
- Initial screen display mode setting ("Futaba", "SUPER-R", Timer, Servo, Users name, 4WS type, Trim/Dial)

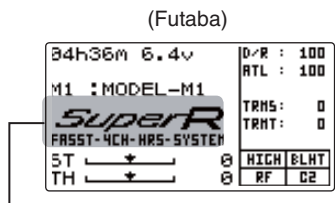

(Futaba)

When "Futaba", "SUPER-R", "TIMER", "SRV-VIEW", "USR-NAME", "4WS-TYPE" or "TRM/DIAL" was selected, this part is displayed.

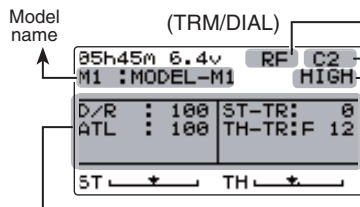

(TRM/DIAL)

When "TRM/DIAL" was selected, the trim DT1, DT2, and DT3 and dial DL1, DL2, and DL3 information is enlarged and displayed.

RF display  
When signals are being transmitted, "RF" is displayed. When signals are not being transmitted, "DISP" is displayed.  
Receiver type display  
The type currently operating is displayed. ("C1"/"C2")  
Servo response display  
The mode currently operating is displayed. ("HIGH"/"NOR")

## - Second condition setting (INH, ACT)


To use second condition, switch setting by function select switch (p.96) is necessary, in addition to ACT (active) setting by this system.

- The power off forgotten alarm setting (OFF, 10 m)
- 2.4GHz band setting (GENERAL, FRANCE)  
Select "GENERAL", except inside France.
- Quick EPA (p.50) setting (INH, ACT)

## Calling the setup screen



### \*Calling from menu screen

(Opening Screen)

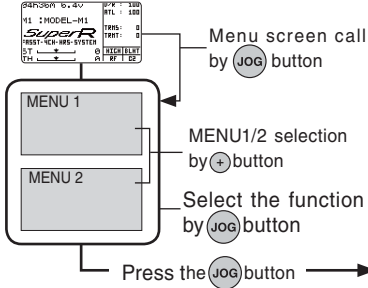


\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

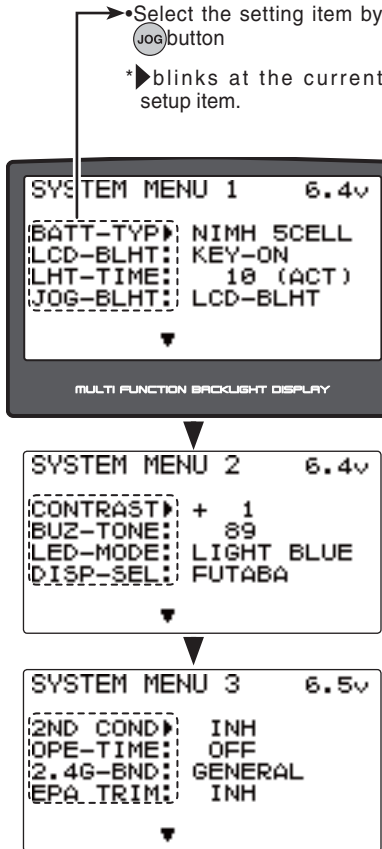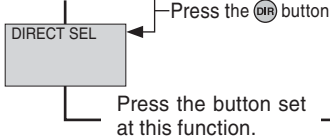

## Setup items

- BATT-TYP :Battery type
- LCD-MODE :Backlighting mode
- LHT-TIME :Backlighting time
- JOG-BLHT :Jog button LED mode
- CONTRAST :Contrast
- BUZ-TONE :Buzzer tone
- LED-MODE :LED color
- DISP-SEL :Initial screen mode
- 2ND-COND :2nd condition function
- OPE-TIME :Power off forgotten alarm
- 2.4G-BND :2.4GHz band mode
- EPA TRIM :Quick EPA function

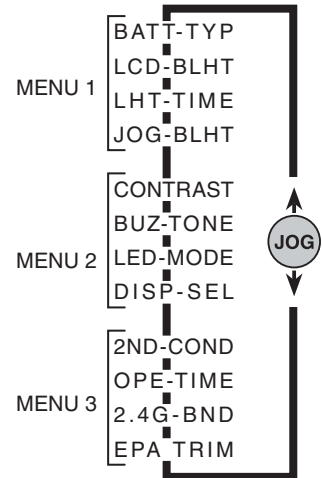

## System function setup

**1** Select the setting item by (JOG) button up or down operation,

### (Setting the battery type)

Select the "BATT-TYP", and select the mode by pressing the (+) or (-) button.

"NiMH5 LiFe2" :Futaba rechargeable type battery

"DRY 4CELL" :Dry cell battery (alkaline battery recommended) 4 batteries

### (Setting the liquid crystal backlighting mode)

Select the "LCD-BLHT", and select the mode by pressing the (+) or (-) button.

"KEY-ON" :Fixed time backlighting ON after button operated.

"ALWAYS" :Backlighting always ON

"OFF" :Backlighting OFF

### (Setting liquid crystal backlighting time)

Select the "LHT-TIME", and use the (+) and (-) buttons to set the ON time. When "KEY-ON" is set at the preceding item, this ON time becomes effective.

### (Jog button LED mode)

Select the "JOG-BLHT", and use the (+) and (-) buttons to set the ON time.

"LCD-BLHT" :Link to LCD screen backlight setting

"OFF" :Jog button LED OFF

## Setting item selection

The items move in the order shown in the figure above.

### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

### Battery Type (BATT-TYP)

NiMH 5CELL, DRY 4CELL

### Backlight mode (LCD-BLHT)

KEY-ON, ALWAYS, OFF

### Backlighting time (LHT-TIME)

1~30

Initial value: 10

### Jog button LED mode (JOG-BLHT)

LCD-BLHT, OFF

**(Adjusting the liquid crystal contrast)**

Select the "CONTRAST", and use the (+) and (-) buttons to adjust the screen contrast.

- Adjust to an easy-to-see contrast.

**(Adjusting the buzzer tone)**

Select the "BUZ-TONE", and use the (+) and (-) buttons to adjust the tone.

- Decide by referring to the tone at adjustment.

**(Changing the LED display color)**

Select the "LED-MODE", and use the (+) and (-) buttons to select the color.

- Select your favorite color while viewing the LED color.

**(Changing the initial screen display mode)**

Select the "DISP-SEL", and use the (+) and (-) buttons to select the display mode.

- "Futaba" : "Futaba" logo is displayed on the initial screen.
- "SUPER-R" : "SuperR" logo is displayed on the initial screen.
- "TIMER" : Timer screen is displayed on the initial screen.
- "SRV-VIEW" : Servo operation graph is displayed on the initial screen.
- "USR-NAME" : User name
- "4WS-TYPE" : 4WS type is displayed on the initial screen.
- "TRM/DIAL" : The trim and dial information is enlarged and displayed on the initial screen.

**(Setting the 2nd condition function)**

Select the "2ND-COND", and use the (+) and (-) buttons to select the display mode.

- "ACT" : 2ND Condition ON
- "INH" : 2ND Condition OFF

**(Changing the power off forgotten alarm setting)**

Select the "OPE-TIME", and use the (+) and (-) buttons to select the power off forgotten alarm mode.

- "10m" : If an operation is not performed within 10 minutes while the power is on, an audible alarm sounds.
- "OFF" : Power off forgotten alarm setting OFF

**(Changing the 2.4GHz band mode)**

Select the "2.4G-BND", and use the (+) and (-) buttons to select the power off forgotten alarm mode.

- "GENERAL" : Always use it
- "FRANCE" : Using this system in France

**(Setting the Quick EPA function)**

Select the "EPA TRIM", and use the (+) and (-) buttons to select the display mode.

- "ACT" : Quick EPA ON
- "INH" : Quick EPA OFF

**Contrast (CONTRAST)**

-10~0~+10  
Initial value: 0

**Buzzer tone (BUZ-TONE)**

OFF, 1~75~100  
Initial value: 85

**LED color (LED-MODE)**

(OFF), RED, GREEN, YELLOW, BLUE, PURPLE, LIGHT BLUE, WHITE  
Initialization : LIGHT BLUE

**Initial screen mode (DISP-MODE)**

Futaba, SUPER-R, TIMER, SRV-VIEW, USR-NAME, 4WS-TYPE, TRM/DIAL

**2nd condition (2ND-COND)**

ACT, INH

**The power off forgotten alarm (OPE-TIME)**

10m, OFF

**2.4GHz band (2.4G-BND)**


GENERAL, FRANCE

- When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


## Set second condition function (2ND COND)

Two kinds of data can be set in one model for specific functions only; for example, two kinds of data such as steering D/R set to 90% at normal condition and steering D/R set to 80% at second condition. This second condition can be set for each model.


- To use the second condition function, setting "2ND-COND" to ACT (active) by "SYSTEM" and switch setting by function select switch (p.96) are necessary.
- Switching from normal condition to second condition by switch set by function select switch is indicated by an audible alarm.
- When switched to the second condition side, the LED blinks (does not blink when "LED-MODE" setting by "SYSTEM" is OFF), and **CD2** is displayed on the initial screen and menu screen and the screen of the functions for which second condition can be set. When switched from second condition to normal condition, an audible alarm sounds and the **CD2** display disappears.

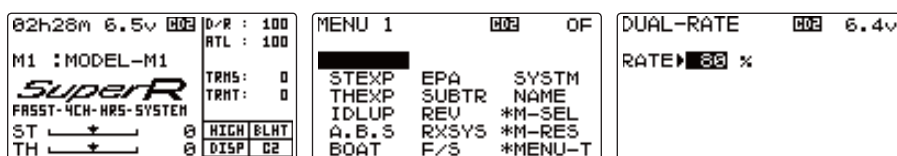

- After "2ND-COND" was set to ACT (active) by "SYSTEM" and switch setting was performed by function select switch (page 86), all the normal condition data is copied to second condition only when initially switched from normal condition to second condition by switch. Thereafter, normal condition and second condition can each set two kinds of data. The items which can be set by second condition are reverse displayed.

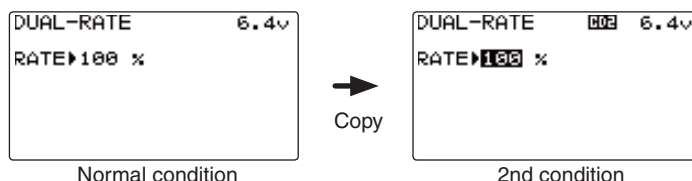

- Each data set by second condition is memorized until "2ND-COND" is changed to the INH (inhibit) state by "SYSTEM", or the data is reset by model setting (p.112). The data is memorized even if switch setting by function select switch is performed.

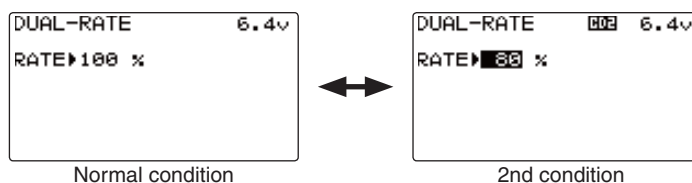


Related function	
Abbreviation used on menu screen	Function name, etc
D/R	Dual rate function
ATL	ATL function
STEXP	Steering EXP
THEXP	Throttle EXP (Forward side) EXP & VTR (not CRV)
STSPD	Steering speed TURN & RETURN side
THSPD	Throttle speed SPEED-LOW, MID, HIGH
A.B.S	2CH A.B.S. function ABS-ABP, ABS-DLY, ABSCYCLE
BRAKE	Brake mixing (3CH,4CH) BRK-RATE, ABS-ABP, ABS-DLY
PMIX1	Program mixing 1 RGHT/BRAK/DOWN sides, LEFT/FWRD/UP sides
PMIX2	Program mixing 2 RGHT/BRAK/DOWN sides, LEFT/FWRD/UP sides

# Data Transfer "DTTRN"


This function copies the model memory data of one T4PKSR to another T4PKSR. Data exchange with a T4PK Super is also possible, but functions not provided at the T4PK Super are not copied. Connect the communication port of both T4PKSR with the optional DSC cord. Use with this function with the T4PKSR power switch at the display side.

Data is not interchangeable with T4PK.


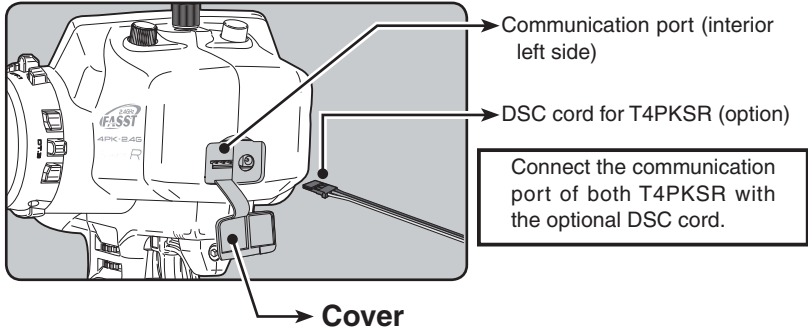


## Calling the setup screen

\*Calling from menu screen  
(Opening Screen)

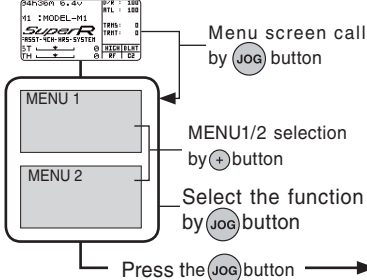

\* When the direct call button is set, the setup screen is also called by the following method:

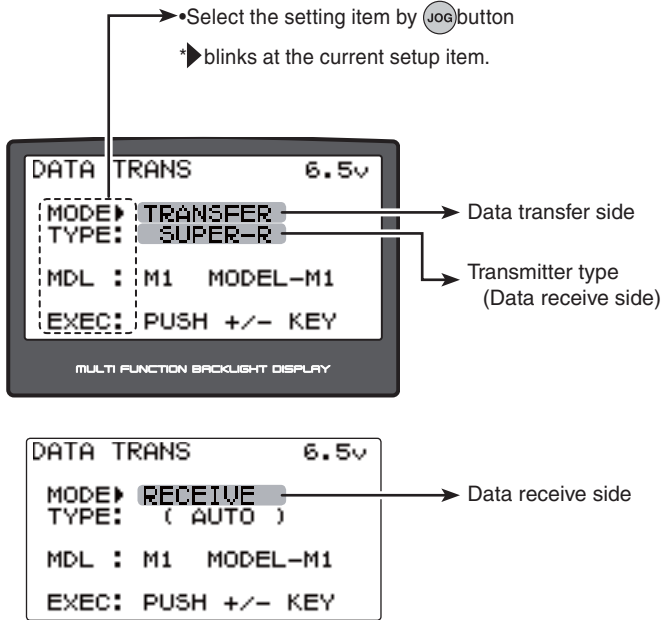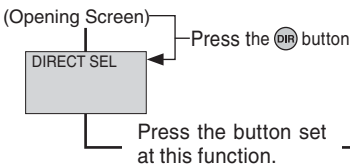

Function


## Using the Data Transfer function

(Preparation)

- Connect the communication port of both transmitters with the optional DSC cord.

- 1 Set the power switch of both transmitters to the display (DISP ON) side.  
Use the (JOG) button and (+) button to display the "DT-TRN" at both transmitter.


When the "DT-TRN" menu is selected when the transmitter power switch is at the transmit (PWR ON) side, the message shown below prompting you to set the switch to the display side is displayed.

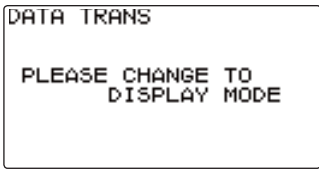

## 2 (Select the setting item )

"MODE" by (JOG) button up or down operation, and select the transfer side and receive side by (+) or (-) button.

"TRANSFER" :Data transfer side  
"RECEIVE" :Data receive side

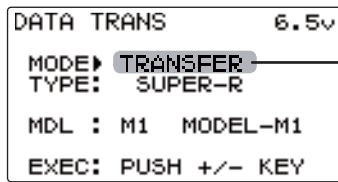

### Setup item selection

- Select by (JOG) button up or down operation.

### Mode change button

- Use the (+) and (-) buttons to make adjustments.

### Mode selection

"TRANSFER" "RECEIVE"

## 3 (Type selection of receiving side at the sending side)

Operate the (JOG) button of the sending side T4PKSR up and down and select the setting item "TYPE" and then select the receiving side transmitter type with the (+) or (-) button.


Since the receiving side T4PKSR automatically recognizes (AUTO) the sending side type, it does not have this setting.

### Model number selection

- Use the (+) and (-) buttons to make adjustments.

## 4 (Model memory selection)

Select the setting item "MDL" by (JOG) button up or down operation of both transmitter, and select the transfer model number and receive side model number by (+) or (-) button.

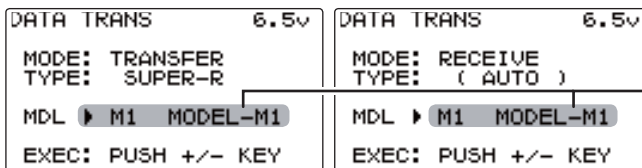

Model# and model name of data sending and receive side.

## 5 (Data transfer execution)

Select the setting item "EXEC" by (JOG) button up or down operation of both transmitter.


First, press the receive side "RECEIVE" transmitter (+) and (-) buttons simultaneously. The message "WAITING! 30S" appears and count down begins.

Within 30 seconds, press the transfer side "TRANSFER" transmitter (+) and (-) buttons simultaneously. (If data transfer is not executed within 30 seconds, an error will be displayed at the receive side "RECEIVE" transmitter.)

- "COMPLETE!" is displayed on the screen of the receive side "RECEIVE" transmitter and data transfer is ended.

- If "RCV ERROR!" is displayed on the screen of the receive side "RECEIVE" transmitter, data transfer was not performed normally. Check the connection and repeat steps 1→4. Since the transfer side "TRANSFER" transmitter only sends, "COMPLETE!" is displayed even when data transfer was not performed normally.




When the receiving side is a T4PK Super and "RCV ERROR!" was displayed on the screen, check that sending side "TRANSFER" T4PKSR TYPE is set to SUPER.

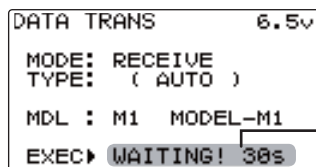

### Transfer execution button

- (+) and (-) buttons pressed simultaneously for about 1 second.


30 seconds wait is displayed on the receive side screen.

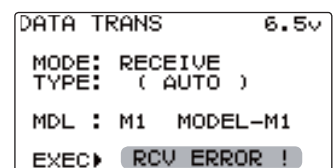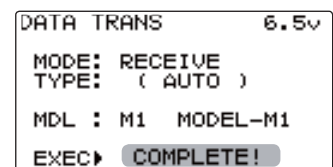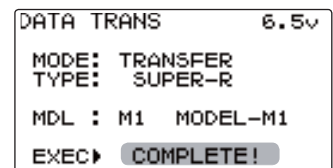

Error

# Adjuster "ADJST"

Steering and throttle correction can be applied. Use this function when a mechanical offset has occurred for some reason.

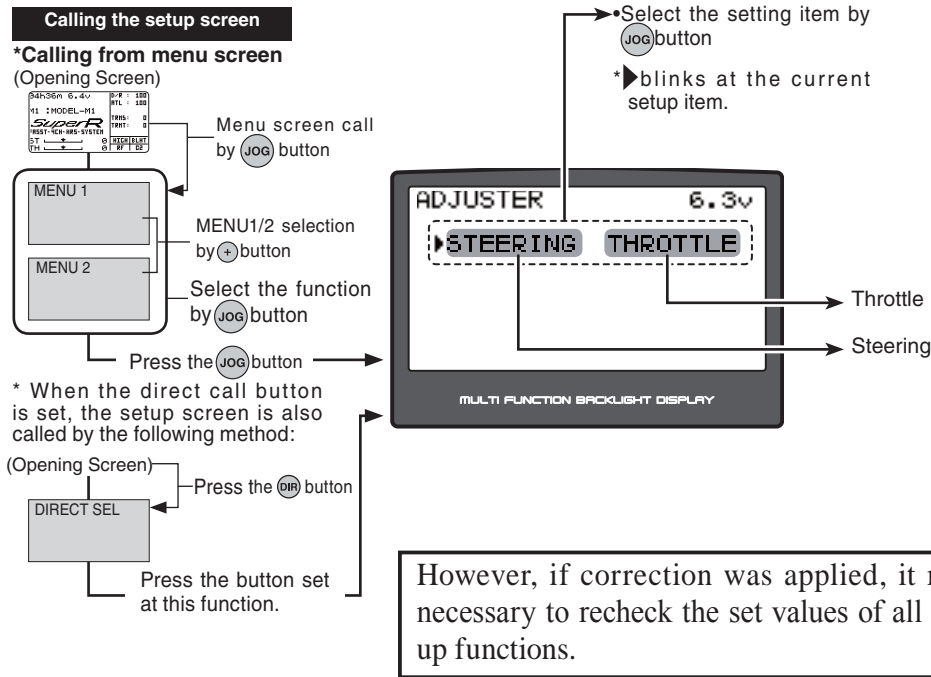

## Steering adjustment

(Preparation)

In the steering side selected state, select the adjustment screen by pressing the (JOG) button.

### 1 (Steering neutral adjustment)

In the neutral setup screen (figure at the right) state, lightly pull the steering wheel and then press the (JOG) button in the state in which the wheel is not being touched.

```
ADJUSTER 6.3v
STEERING
▶NEUTRAL ( 5%)●
```

### 2 (Steering throw adjustment)

In the throw setup screen (figure at the right) state, lightly turn the wheel fully to the left and right and press the (JOG) button.

```
ADJUSTER 6.3v
STEERING
NEUTRAL ( 5%)●
▶RIGHT (107%)●
▶LEFT ( 91%)●
```

### 3 (Correction execution)

At the check screen, and press the (+) and (-) buttons simultaneously.



```
ADJUSTER 6.3v
STEERING
NEUTRAL ( 5%)●
RIGHT (107%)●
LEFT ( 98%)●
▶EXECUTE? >PUSH +/-
(CANCEL >PUSH END)
```



Internal checks are performed automatically and when each adjustment point is in a fixed range, correction is performed and "SUCCESSFUL!" (figure at the right) is displayed.

If an adjustment point is not within a fixed range, an error is displayed (figure at the right) and the correction data is not updated.

- 4** When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

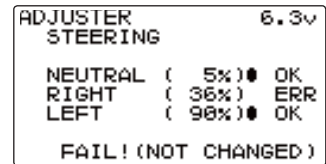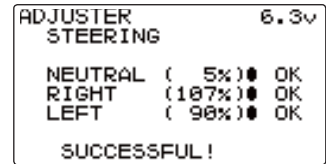


## Throttle adjustment

(Preparation)

In the state in which the throttle side is selected, select the adjustment screen by pressing the (SEL) button.


- 1** (Throttle neutral adjustment)

In the neutral setup screen (figure at the right) state, lightly pull the throttle trigger and then press the (JOG) button in the state in which the trigger is not being touched.

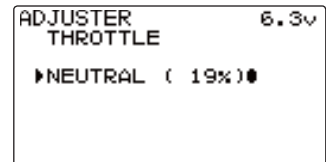


- 2** (Throttle throw adjustment)

In the throw setup screen (figure at the right) state, lightly operate the trigger fully to the brake side and forward side and press the (JOG) button.

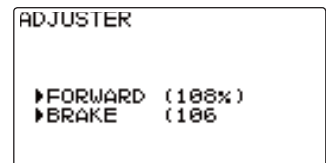


- 3** (Correction execution)


At the check screen (figure at the right), and press the (+) and (-) buttons simultaneously. Internal checks are performed automatically, and when each adjustment point is within a fixed range, correction is performed and "SUCCESSFUL!" (figure at the right) is displayed.

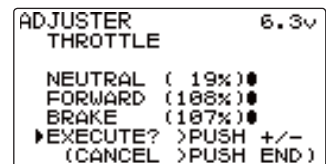

If an adjustment point is not within a fixed range, an error is displayed (figure at the right) and the correction data are not updated.

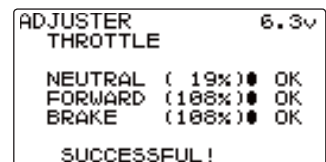

- 4** When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

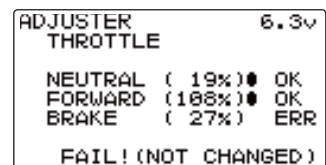


# Vibrator Function "VIBRA"

The vibrator built into the grip can be activated at lap navigation navigate alarm, each racing timer time up, powering ON, push sw on/off and low battery alarm.

The vibrator operation pattern can be selected from among 7 types

## Setup items


TIMER TIME-UP	:Timer time up
LAP-NAVI	:Navigation alarm
FUEL RES-START	:Fuel timer restart
PUSH SW ON	:At push sw on
PUSH SW OFF	:At push sw off
POWER-ON	:At power on
LOW-BATT ALRM	:Low battery

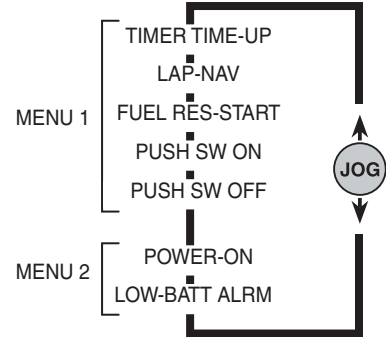




## Calling the setup screen

### \*Calling from menu screen

(Opening Screen)

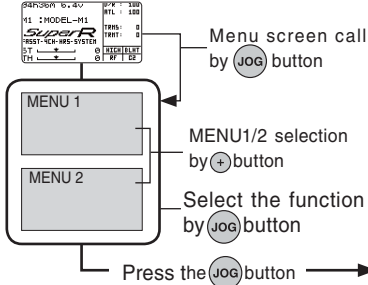

\* When the direct call button is set, the setup screen is also called by the following method:

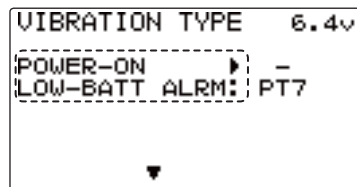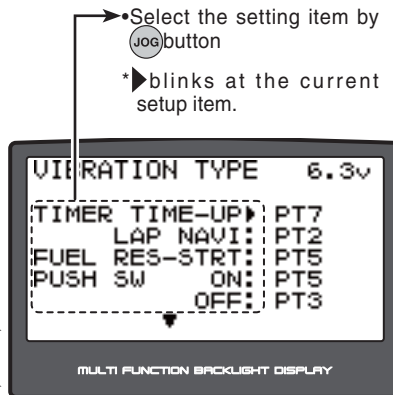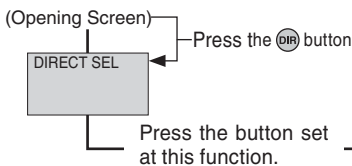

## Setting item selection

The items move in the order shown in the figure above.

## Setup item selection

- Select by (JOG) button up or down operation.

## Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.  
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

## Timer time up (TIME-UP)

OFF, TYPE-1~TYPE-7  
Initialization :OFF

## Navigation alarm (LAP-NAVI)

OFF, TYPE-1~TYPE-7  
Initialization :OFF

## Fuel timer restart

(FUEL RES-START)  
OFF, TYPE-1~TYPE-7  
Initialization :OFF

## At push sw on (PUSH SW ON)

OFF, TYPE-1~TYPE-7  
Initialization :OFF

## At push sw off (PUSH SW OFF)

OFF, TYPE-1~TYPE-7  
Initialization :OFF

## At power on (POWER-ON)

OFF, TYPE-1~TYPE-7  
Initialization :OFF

## Low battery (LOW-BATT)

OFF, TYPE-1~TYPE-7  
Initialization :TYPE-7

## Vibrator setup

### 1 (Setting vibrator)

Select the setting item by (JOG) button up or down operation and select the type by pressing the (+) or (-) button.

2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).


# Steering Dual Rate/Second Dual Rate "D/R"(Steering system)

The steering left and right servo travels are adjusted simultaneously. When you want to increase the servo travel, adjust the + side. When you want to decrease the servo travel, adjust the - side. This setting is linked to transmitter grip dial DL1. When DL1 is assigned another function, dual rate can be adjusted with this screen.

## Calling the setup screen


### \*Calling from menu screen

(Opening Screen)

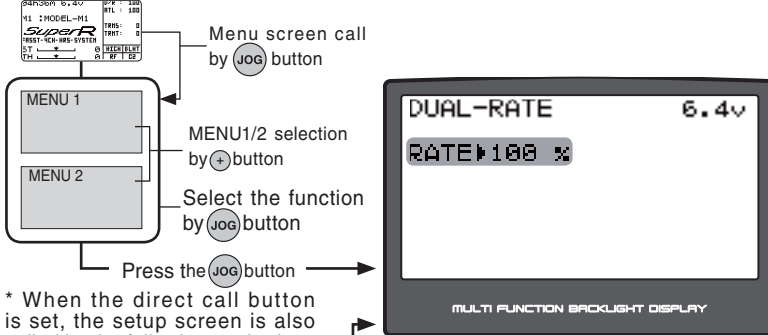

\* When the direct call button is set, the setup screen is also called by the following method:

(Opening Screen)

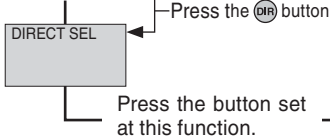

### Setup Item

RATE :Rate setting (D/R)

## Dual rate adjustment

### 1 (Dual rate adjustment)

Select the setting item "RATE" by (JOG) button up or down operation. Adjust the servo travel with the (+) and (-) buttons.

This dual rate servo travel is linked to the grip dial.

### 2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

### Setup item selection

- Select by (JOG) button up or down operation.

### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.  
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

### D/R rate (RATE)

0~100%

Initial value: 100

# Throttle ATL Function "ATL"

(Throttle system)

This function decreases the set value when the braking effect is strong and increases the set value when the braking effect is weak.


This function is linked to transmitter grip dial DL2. When DL2 is assigned another function, this function can be set with this screen.

## Operation

The throttle brake side (when the throttle is pushed forward) brake amount can be adjusted.

### Calling the setup screen


#### \*Calling from menu screen (Opening Screen)

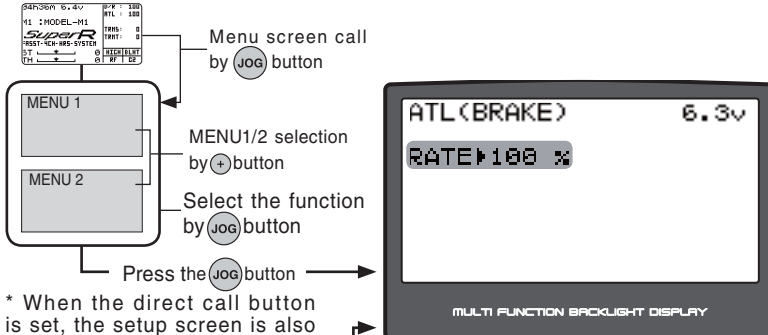

#### Setup Item

RATE :Brake amount

\* When the direct call button is set, the setup screen is also called by the following method:

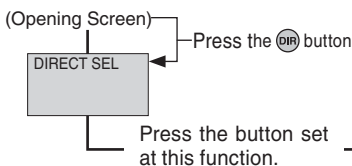

Function

## ATL function adjustment

### 1 (Brake amount adjustment)

Use the (+) and (-) buttons to adjust the brake amount.

Adjust the - side when the braking effect is strong and the + side when the braking effect is weak.

2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen.

#### Brake amount (RATE)


0~100%  
Initial value: 100%

## Channel 3/4 position "CH3", "CH4" (3rd or 4th channel system)

The channel 3/4 servo position can be set from the transmitter. When CH3 is assigned to a dial by the dial function (p.90), this setting is linked to that dial.

When CH3/4 is not assigned to a dial, it can be set with this screen.

When CH3/4 is assigned to a switch by the switch function (p.88), you cannot adjust the CH3/4 via the screen.

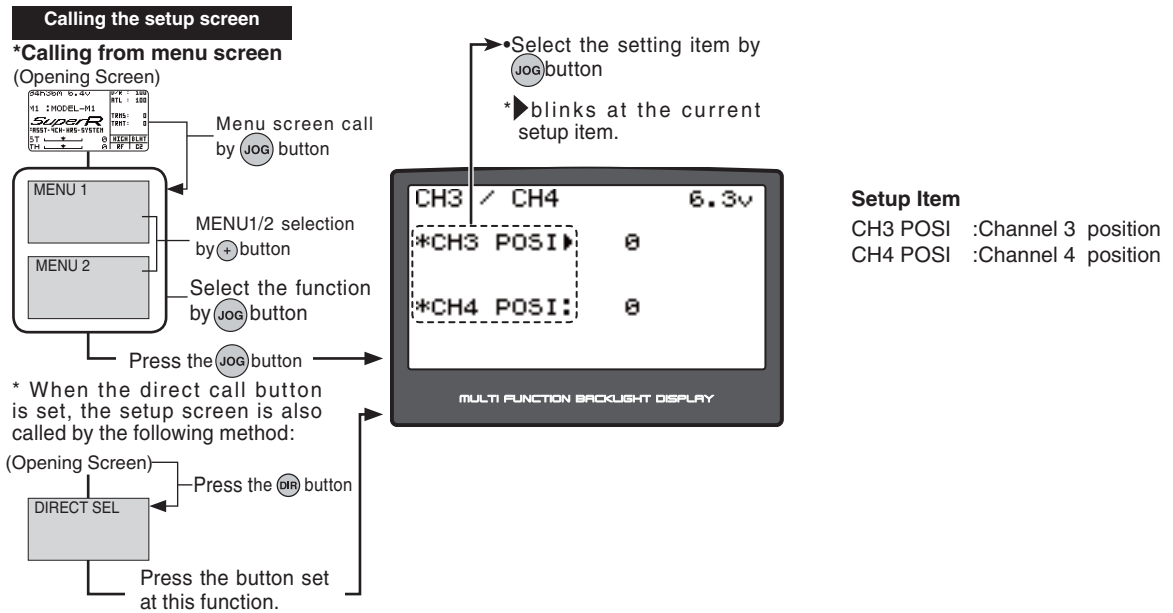

### Channel 3/4 adjustment

#### 1 (Position adjustment)

Use the (+) and (-) buttons to adjust the channel 3 or channel 4 position.

#### 2 When ending setting, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

#### Adjustment buttons

- Use the (+) and (-) buttons to make adjustments.
- Press the (+) and (-) buttons simultaneously (approx. 1 sec) to return to the initial screen

#### Channel 3 position (POSI)

#### Channel 4 position (POSI)


0~100%

Initial value: 100%

# Servo View "SERVO"

Servo operation of each channel can be checked. Operation of the steering angle adjustment, when a mixing function was set, etc. can be easily checked. The servo view can also be displayed on the initial screen by using the system function (p.122).

The neutral position of the throttle channel varies depending on the modes defined by the "THR-MODE". The screen shown below shows an example of "F50/B50" in the "NORMAL" mode.

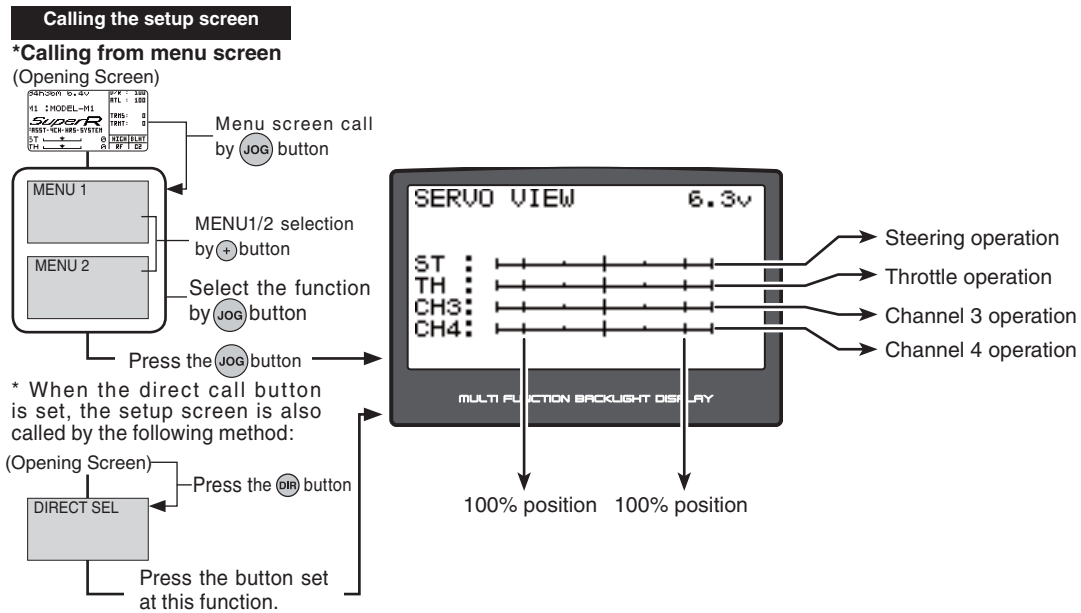

## Ending the "SERVO" screen

- 1 When ending servo operation checks, return to the initial screen by pressing the (END) button twice (for function menu screen, press the (END) button once).

## Specifications

\*Specifications and ratings are subject to change without prior notice.

## Transmitter T4PKSR

(Wheel system, 4 channels)

- Transmitting frequencies 2.4GHz band
- Futaba FASST-C2(R614FF, R604FS/FSE), FASST-C1(R603FS/FF)
- Power requirement
  - (Ni-MH battery) NT5F1700B Ni-MH battery (6V)
  - (Dry cell battery) Penlight x 4 (6V)
- Current drain 250mA or less (Vibration and back lighting off)
- Transmitting antenna  $1/2 \lambda$  dipole

## Receiver R614FS/R614FF-E

(4 channels receiver)

- Receiving frequencies 2.4GHz band
- Power requirement Rated voltage :3.7V~7.4V / Usable voltage :3.5~8.4V

The voltages given above are for the R614FS / R614FF-E. Actually, since the power supply is shared with the servo, use a power supply that takes into account the servo ratings.

- Current drain: 135mA or less
- Size: R614FS 1.38x0.91x0.33" (35.1x23.2x8.5mm)  
R614FF-E- 1.38x0.91x0.35in (35.1x23.2x9.0mm)
- Weight: R614FS 0.28oz(8g) / R614FF-E 0.27oz(7.6g)

## ⚠ Caution

- ❗ When using the T4PKSR in the high speed (HIGH SPEED) mode, always use it under the following conditions:

**Servos** :Futaba digital servo (including BLS Series brushless servos)

**Receiver's battery** :Matched to the ratings of the receiver and connected digital servo (dry cell battery cannot be used).

**Transmitter mode** :HIGH SPEED mode (See page 46 for setting method.)

Under other conditions, the set will not operate, or the specified performance will not be displayed even if it operates. In addition, it may cause servo trouble. Futaba will not be responsible for damage, etc. caused by combination with the products of other companies.

In addition, the FSU1 Fail Safe Unit cannot be used because the system is different. Use the fail safe function of the transmitter.

- ❗ When using analog servos, always switch the T4PKSR servo response to the NORMAL mode.

**Transmitter mode** :NORMAL mode (See p.46 for setting method.)

**Receiver's battery** :Matched to the ratings of the receiver and connected digital servo.

The set cannot operate in the HIGH SPEED mode. Operation in this mode will cause trouble with servos and other equipment. Digital servos (including BLS Series brushless servos) can also be used in the NORMAL mode.

## Optional Parts

The following parts are available as 4PKSR options. Purchase them to match your application. For other optional parts, refer to our catalog.

### Transmitter Ni-MH Battery

When purchasing a transmitter battery as a spare, etc., use the following:

#### Part name

HT5F1700B (6V/1700mAh) Ni-MH battery

FT2F2100B (6.4V/2100mAh) Li-Fe battery (Optional)

Please do not use the transmitter batteries HT5F1700B and FT2F2100B, as the receiver's battery.

Since the transmitter batteries have an overload protection circuit, the output power will be shut down when the high current load is applied. This may result in runaway or fatal crash.


### Battery Holder (Transmitter)

This battery holder is necessary when using the transmitter with a dry cell battery.

For a description of how to install the battery holder to the transmitter, see "Ni-MH Replacement" on page 18.

#### Part name

T4PK transmitter battery holder

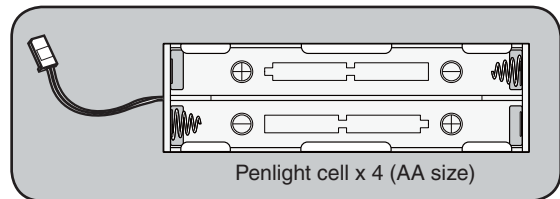

#### <Check>

Turn on the power switch and check the LCD battery voltage display. When the batteries are new, the voltage should be about 6V.

If the voltage does not rise, check for faulty contacts or incorrect polarity.

#### <Disposal of the Dry Cell Batteries>

The method to dispose of used dry cell batteries depends on the area in which you reside. Dispose of the batteries in accordance with the regulations for your area.

### ⚠ Caution

- ⊘ Do not use commercial AA size Ni-cd and Ni-MH batteries.

Quick charging may cause the battery contacts to overheat and damage the battery holder.



Use prohibited

AA size Ni-cd

AA size Ni-MH

- ① Insert the batteries in the correct polarity.  
If the polarity is incorrect, the transmitter may be damaged.


- ① When the transmitter is not in use, remove the batteries.  
If the battery electrolyte leaks, wipe off the case and contacts.





## DSC cord

When the T4PKSR transmitter and R614FF, R604FS or R603FS/FF receiver are connected with the DSC cord, the servos can be operated without emitting radio waves. (DSC function)

### Part name

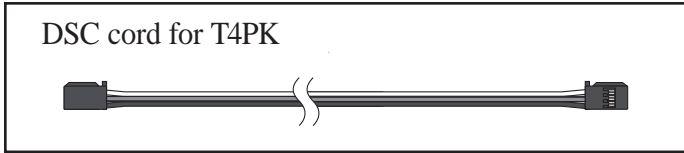

### Connection

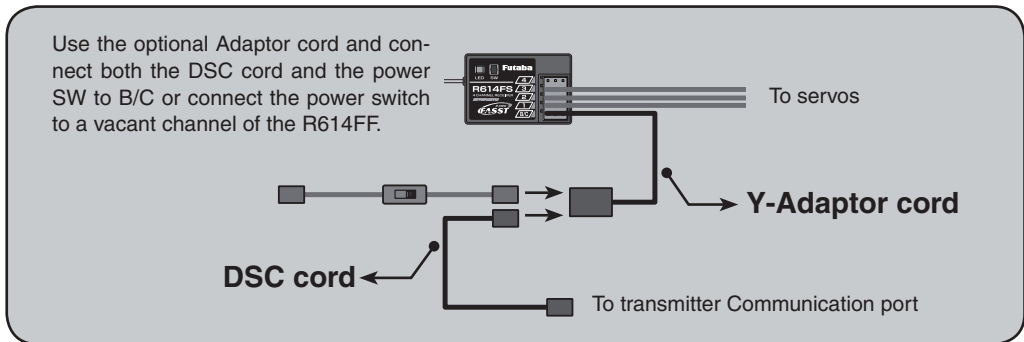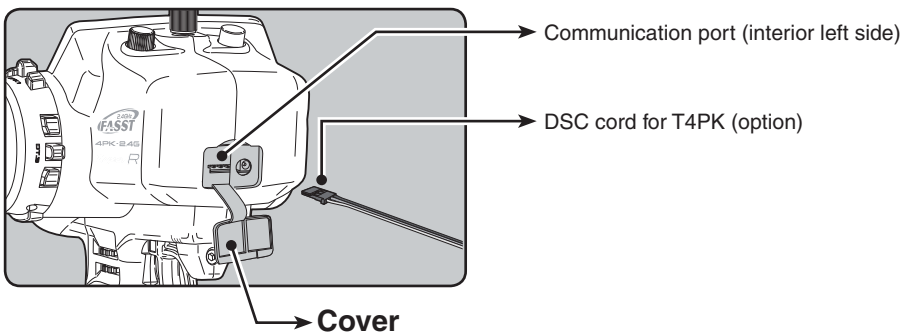

Connect the T4PKSR and receiver using the DSC cord, after turning off the T4PKSR and receiver power switches.

Turn on the display switch of the T4PKSR and then turn on the receiver power. If this sequence is not followed, a malfunction could occur.

You can check the servo operation without emitting radio waves.


After checking the servo operation, disconnect the DSC cord and then cycle power of the receiver before operating the T4PKSR. If this sequence is not followed, a malfunction could occur.

# Warning Displays

## Backup Error

If the data is lost for an unknown reason, an audible alarm will sound and "BACK UP ERROR" will be displayed on the LCD screen.

LCD screen:

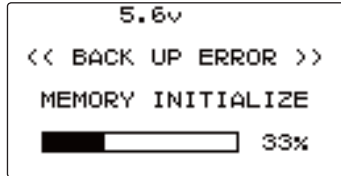

Audible alarm:

Tone will sound (9 times), then repeat.

## Warning


❗ When a backup error is generated, immediately stop using the system and request repair from the Futaba Service Center.

If you continue to use the system, the transmitter may malfunction and cause loss of control

## Low Battery Alarm

If the transmitter battery voltage drops to 4.9V(when using dry cell battery: 4.1V) or less, an audible alarm will sound and "LOW BATTERY" will be displayed on the LCD screen.

LCD screen:

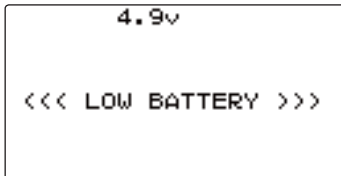

Audible alarm:

Continuous tone.

The vibrator:

Active (initial setting) page 130

## Warning

❗ When a low battery alarm is generated, cease operation immediately and retrieve the model.

If the battery goes dead while in operation, you will lose control.

## Power supply and low battery alarm

Dry cell batteries (alkaline batteries are recommended) can be used with the optional battery box. However, when using dry cell batteries, set BATT-TYPE in the system menu to DRY 4CELL. When using the T4PKSR standard HT5F1700B battery, always set BATT-TYP to NiMH5 LeFe2. (See page 122, for a detailed description of the battery types.)

### High voltage alarm

If a battery exceeding 8V is used with the T4PKSR, an audible alarm will sound and "HIGH VOLTAGE" will be displayed on the LCD screen.

Immediately remove the battery because it may cause the T4PKSR to malfunction.

**LCD screen:**

```
      8.1v
<<< HIGH VOLTAGE >>>
```

**Audible alarm:**

**Tone sounds (7 times) and stops (repeated)**

### Memory Error

If the data in the transmitter is not transferred normally when the power is turned on, an audible alarm will sound and "ACCESS ERROR" will be displayed on the LCD.

- To stop the alarm, turn off the power.
- Turn the power back on. If the alarm is not generated again, there is no problem.

**LCD screen:**

```
      6.8v
    MAIN MEMORY
<< ACCESS ERROR >>
```

**Audible alarm:**

**Tone sounds (7 times) and stops (repeated)**

### MIX Warning

When the power switch is turned on while the idle-up, preset (engine cut) or neutral brake function switch is on, an audible alarm will sound and "MIX WARNING" will be displayed on the LCD. When that function switch is turned off, the alarm will stop.

**LCD screen:**

```
      6.4v
  IDLE UP or PRESET
  or NEUTRAL BRAKE
<< MIX WARNING >>
```

**Audible alarm:**

**Tone sounds (7 times) and stops (repeated)**

### Power off forgotten warning

If the T4PKSR is not operated for 10 minutes, an audible alarm is sounded and "WARNING" is displayed on the screen. The audible alarm stops when the steering wheel, throttle trigger, and any dial, switch, or edit button is operated. If you are not going to use the transmitter, turn the power off. (Setting can be reset at the system menu on page 122.)

**LCD screen:**

```
      6.2v
  NOT OPERATED
  FOR A LONG TIME
<< WARNING >>
```

**Audible alarm:**

**Tone sounds (7 times) and stops (repeated)**

## When requesting repair

Before requesting repair, read this instruction again and recheck your system. Should the problems continue, request as follows.

### **(Information needed for repair)**

Describe the problem in as much detail as possible and send the letter along with the system in question.

- Symptom (Including the conditions and when the problem occurred)
- R/C System (Send transmitter, receiver and servos)
- Model (Type of model, brand name and model number or kit name)
- Detailed packing list (Make a list of all items sent in for repair)
- Your name, address and telephone number.

### **(Warranty)**

Read the Warranty card.

- When requesting warranty service, send the card or some type of dated proof purchase.

## **FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT (for U.S.A.)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **CAUTION:**

To assure continued FCC compliance: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

### **Exposure to Radio Frequency Radiation**

To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons. This device must not be colocated or operating in conjunction with any other antenna or transmitter.

4PK-2.4G  
*SuperR*

**Futaba®**