



ALUMINUM REAR OIL SHOCK

Step 1



2x5mm Screw
(Use threadlock)



2.5x6mm
Washer




Step 2



Step 3



Fill to 90%

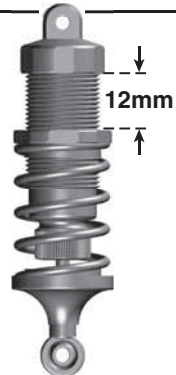

12mm

