




**CARL GOLDBERG PRODUCTS, LTD.**

## ***SOPHISTICATED LADY*** **PRODUCT IMPROVEMENT NOTICE**

### ***Rudder Control Installation***



1. Please use the included 1/16x36" pushrod with 24-1/4x1/8" pushrod tube in place of the 10" threaded wire, 4" wire with wooden dowel, and two pieces of shrink tubing mentioned on page 8, step 8. The included 27-1/2" flex cable with 24-1/4" tube is no longer needed.

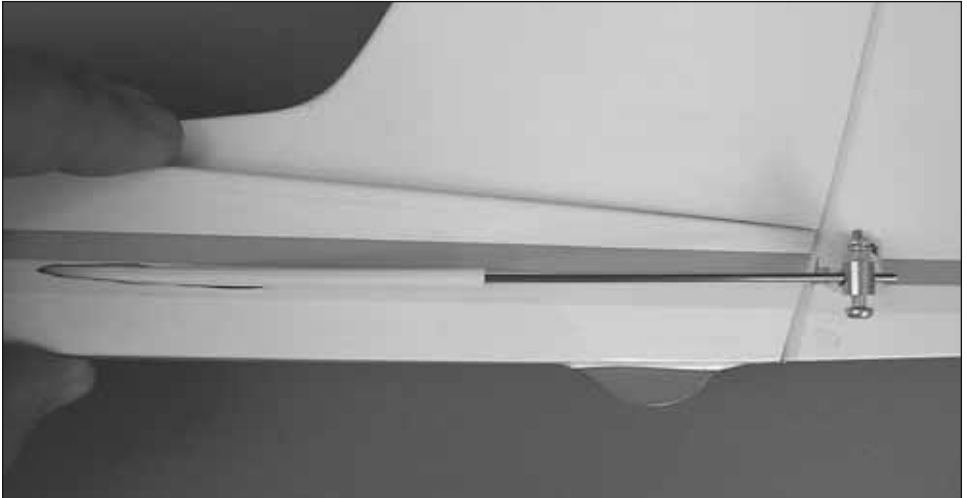

2. Install the pushrod with tube through the fuse by first entering the guide hole and then exiting the fuse through the provided hole under the covering. Once the tube protrudes 1-1/2" from the hole in the fuse CA into place. Remember to also add CA to the tube where it enters the guide hole in the wing saddle former.

3. Use the included brass pushrod connector to attach the 1/16x36" pushrod to the rudder control horn.

4. Trim the 1/16x36" pushrod and 24-1/4x1/8" tube to fit at the servo and install the pushrod to the brass pushrod connector on the servo arm.