


TIGER 60

Instruction manual addendum for GPMA0968

Please refer to this instruction manual addendum before constructing the fuselage on page 21:

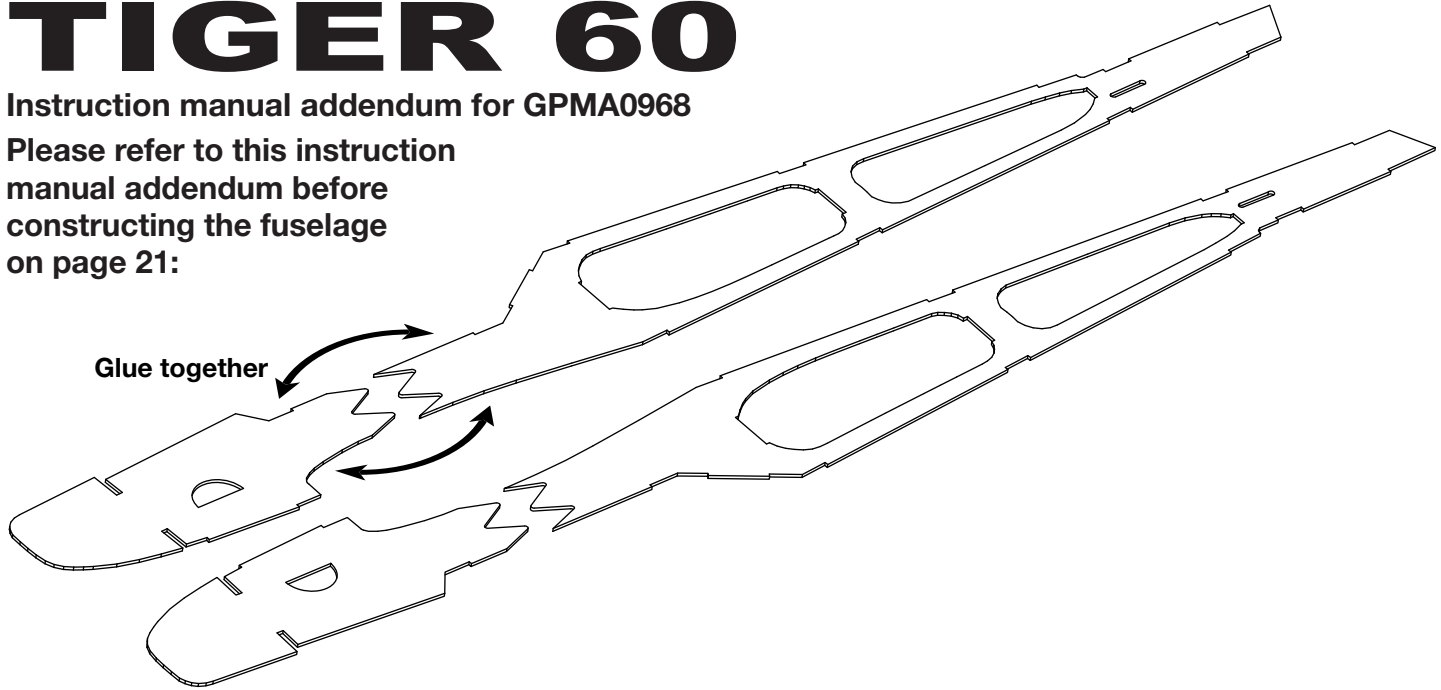

The fuselage sides are now supplied in two pieces which must be glued together before adding the doublers. Working over waxed paper or other thin, protective film, test-fit, then glue together the two pieces of each side with whatever glue is your preference. After the glue has hardened lightly sand the sides to remove excess glue or high spots, then proceed with construction.