


Great Planes Pluma ARF Technical Notice

On page 7, step number 1 should read:

Aileron Link Rods - (4) Required

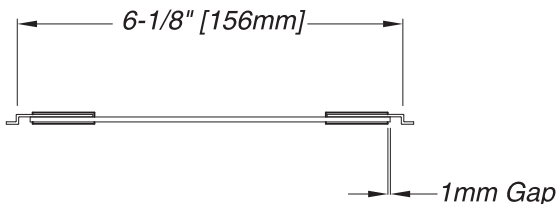

1. Locate four 1 x 145mm carbon pushrods, eight 1 x 30mm Z-bends, and eight 25mm pieces of heat shrink tubing. Assemble four aileron link rods as shown in the sketch above so that they measure **6-1/8" [156mm]** from Z-bend center to Z-bend center. See the **Expert Tip** below on how to assemble pushrods.