


# S.E.5a

## *Pilot Assembly Instructions*

1. Carefully trim the perimeter of the part using a sharp hobby knife.

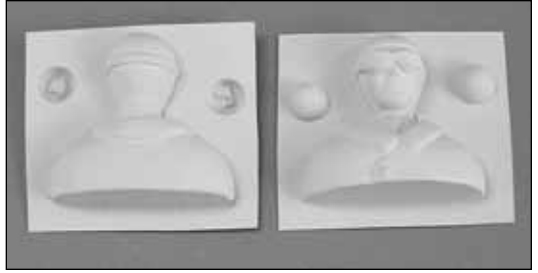

2. Sand each half using 150- or 220-grit sandpaper and a Great Planes® Easy-Touch™ bar sander.



3. Carefully join the halves with thick CA and lightly sand the seam.



4. Paint to suit your taste.

5. After the paint has dried, the pilot can be attached to the former at the back of the cockpit using CA. Before gluing scrape the paint from the pilot where it will attach to the former.