




SOPWITH CAMEL

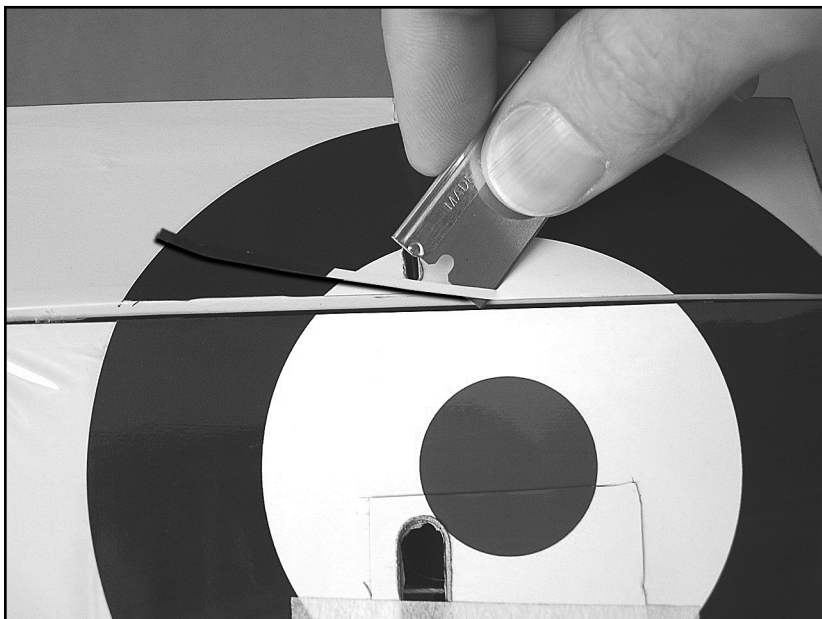

Tech Notice for Great Planes Sopwith Camel

Use a single-edge razor blade or a hobby knife to trim the roundel decals on the top and bottom wings even with the leading edges of the ailerons and/or the trailing edges of the wings. This will allow the ailerons to deflect freely through their entire range.