


# *Super Stearman*

## Great Planes Super Stearman EP ARF Addendum

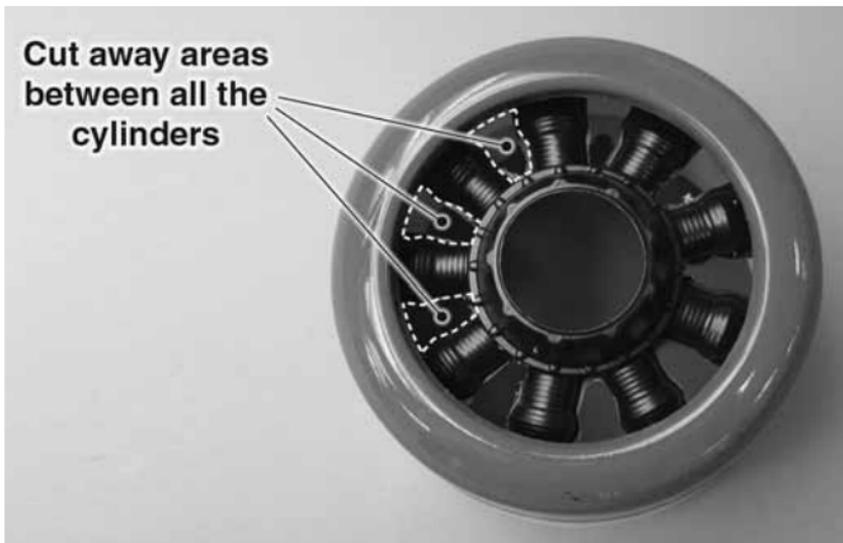

To prevent motor overheating when flying in warm weather we recommend that you cut the area away between the cylinders of the dummy engine. This is best accomplished by cutting the material with a hobby knife or Dremel Tool, cutting inside the cowl and cutting the material away from the back side of the dummy engine.