


# ESCAPADE™

MX 30cc



## TECHNICAL NOTICE

### Page 7, step 11 - Installation of the Aileron Control Horns

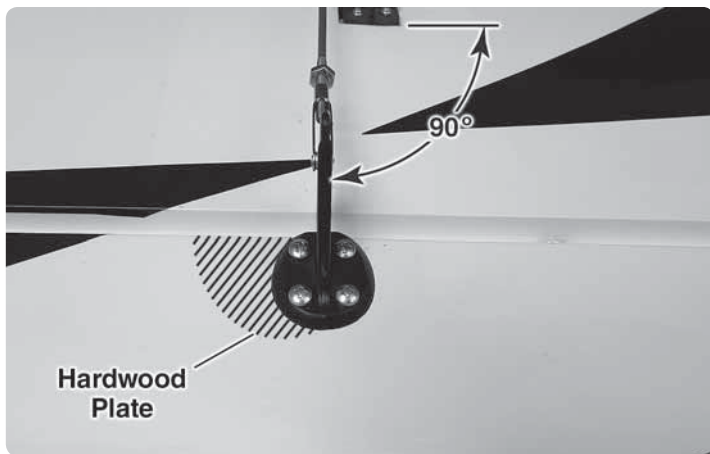

If two of the four mounting holes for the aileron control horn do not line up on the hardwood plate, follow the instruction for drilling the holes. Install the four #4 x 5/8" [16 mm] sheet metal screws. Then, remove the screws and apply a couple of drops of thin CA in each hole and allow the CA to soak into the wood and harden. Reinstall the four screws. This will securely hold the four screws. However, if you are concerned with the two screws that are not in the hardwood plate pulling out, before reinstalling them put a couple drops of 6-minute epoxy in the screw holes and then install the screws before the epoxy cures.