


SUPER SKYBOLT ARF

ALMOST-READY-TO-FLY .60-.91 SPORT AEROBAT

TECH NOTICE

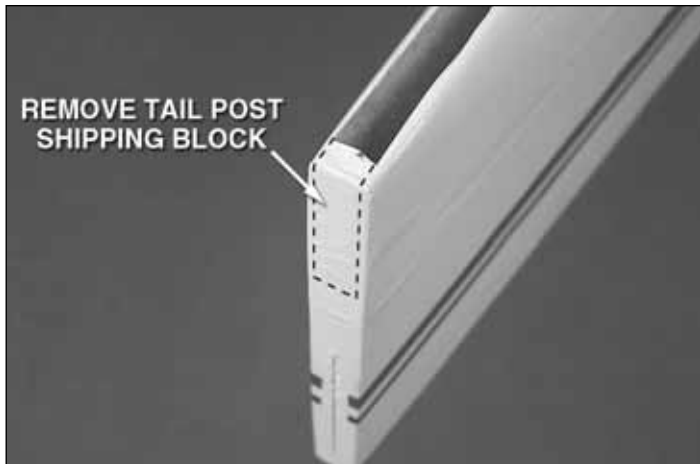

1. Before the vertical fin can be installed in step #8 on page 9, the tail post shipping block must be removed from the slot in the fuselage. Use a sharp hobby knife or razor saw to cut the block from the fin slot.
2. In order to install the assembled cabane struts in step #3 on page 17, insert both left and right strut assemblies into the cutouts before securing them to the fuselage with screws.