



Please insert the following note into the instruction manual before proceeding with the construction of the Lancair.


Before performing Step 1 of "Join the Wings" on page 12 of the instruction manual, read the following Note #1.

Note #1. The holes in the fuselage for the wing dowels may be slightly undersized due to paint and fiberglass resin that may have gotten into the holes. Test fit your wing dowels into the holes. If they do not fit, ream out the holes with a 21/64" [8.4mm] drill bit. There is not room for a power drill but you can ream the holes by grasping the drill bit with a pliers and turning it until the bit has cleared the hole.



Before performing Step 3 of "Install the Horizontal Stab, Elevators, Rudder & Pushrods" on page 15 of the instruction manual, read the following Note #2.

Note #2. Your kit may contain two different size aluminum tubes. Use the 1/4" x 12" [6mm x 305mm] tube. The larger diameter tube was inserted into the kit by mistake. Discard it.

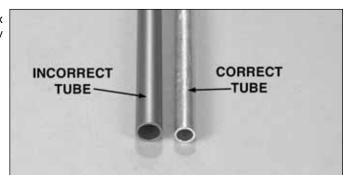

Before performing Step 10 of "Install the Nose Wheel" on page 20 of the instruction manual, read the following Note #3.

Note #3. Your kit may contain two nose gear wires. At first glance they may appear the same but one may be incorrectly bent. Look at them closely and compare them to the following photos. Be sure to install the correct nose gear wire as shown below. The remaining wire can be discarded.

