


Great Planes® RV-4 Technical Notice

Insert the following on page 10, after step one.

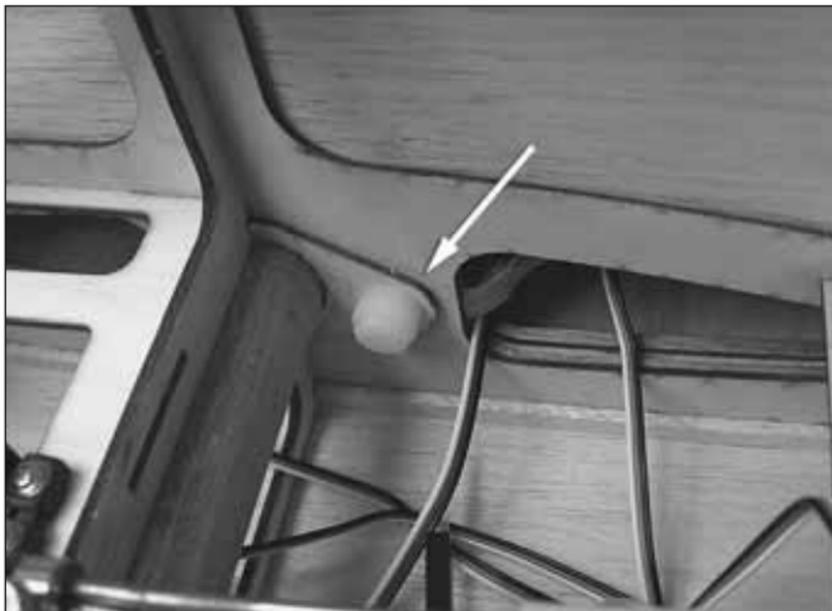

Secure each wing half to the fuselage with a 1/4" x 20" nylon bolt. The bolts only need to be installed and tightened by hand. No screwdriver is required.