


FlyLite™ Rx-R™




TECH NOTICE

To ensure a secure and proper fit between the propeller and the aluminum propeller adapter complete the following steps.

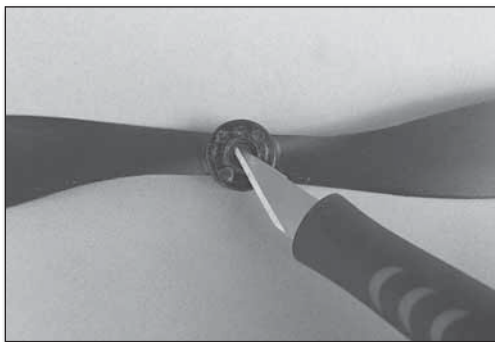

1. Remove the black plastic adapter ring from the rear of the propeller using a hobby knife.

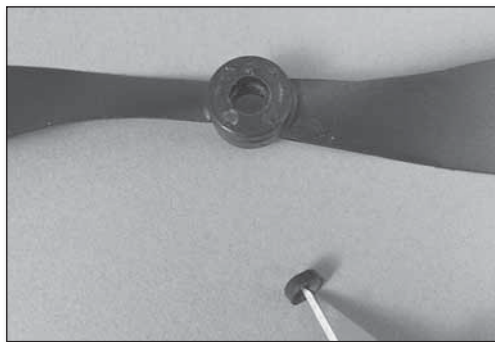

2. Install the black plastic adapter ring on the aluminum propeller adapter with the tapered or beveled edge facing out.
3. Install the propeller over the black plastic adapter ring and secure the propeller with the provided black o-rings.

ElectriFLY™
by Great Planes