



# ULTRA E-BOX


## Recommended Accessories

This ElectriFly™ Ultra E-Box was designed to use one or two Hobbico® TorqMaster™ LC sealed batteries (HCAP0800) or other sealed batteries of the same size, and to fit the Great Planes® Triton™ charger (GPMM3150) or the Hobbico Quick Field Charger™ MKII (HCAP0290). Fitting any other charger may require modifications to the box.

## Get Your Box Ready to Use



- 1. Slide one or two sealed batteries into the battery compartment. Connect the spade connectors to the batteries. Note the polarity of the batteries (the red spade connectors go with the red wires and positive battery terminals)

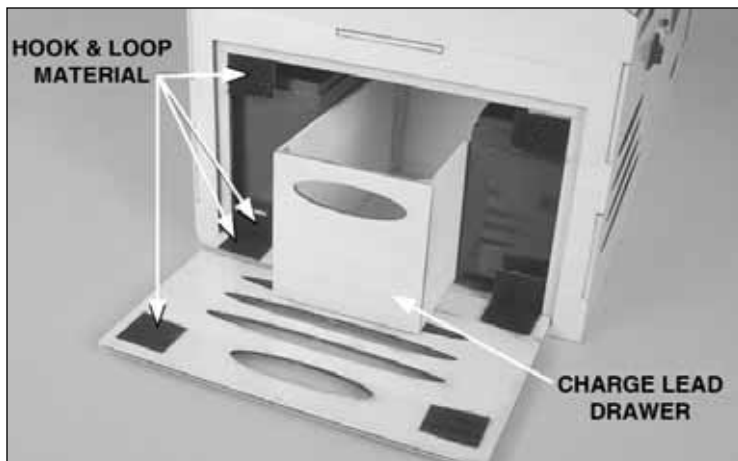


- 2. Replace the charge lead drawer. Cut four 3/4" x 3/4" [19mm x 19mm] pieces of hook and loop material. Remove the protecting

tape on one side and apply them to the tabs in the battery compartment. Remove the tape on the other side and position the hatch. The hook and loop material will stick to the hatch.



- 3. Cut the battery wires on the chargers to the length desired and solder banana plugs (HCAP0310) on them. Plug the chargers in and slide them in place.

- 4. Stock your box with your flight accessories.

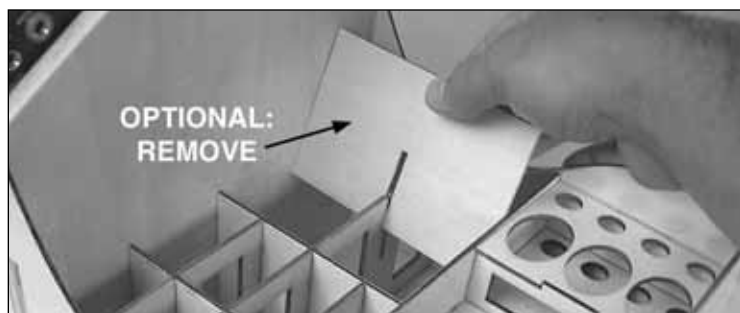

**Optional:** This wall can be removed to enlarge the compartments.