


PRODUCT IMPROVEMENT

HOBBI[★]CO

NexSTAR[★]

Installation Instructions *Mini*

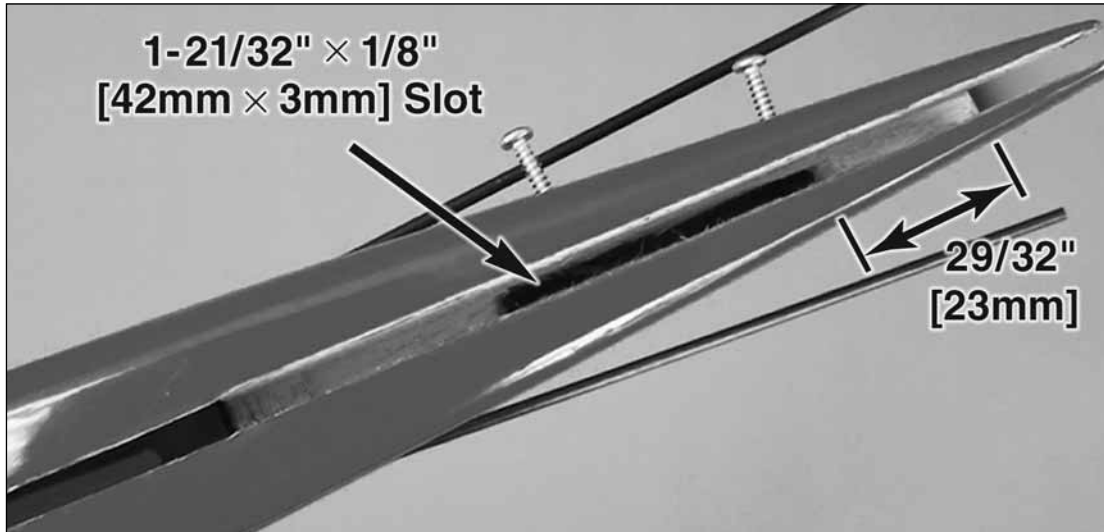

Before installing the tail surfaces, it may be necessary to cut a 1-21/32" × 1/8" [42mm × 3mm] slot at a distance 29/32" [23mm] from the rear of the fuselage, to accept the longer tab on the vertical stabilizer.