

Revell®

KIT 5244

85524410200

Spirit of St. Louis

The Spirit of St. Louis, one of the most famous airplanes of all times, was designed and built for one specific purpose: To carry its lone occupant cross the Atlantic ocean, carrying enough fuel to span the distance between New York and Paris without refueling.

It would not be the first transatlantic crossing; the Navy's Curtiss NC-4 flying boat flew from Newfoundland to Portugal in 1919, by landing in the ocean and refueling twice before completing the trip. Others had successfully made the journey in large planes or dirigibles, but a lone pilot never did it.

With only one pilot and a small airplane, the Spirit had a range of 4,210 miles. 600 miles more than the required distance for the journey.

Our thanks goes out to the San Diego Museum of Flight for their cooperation in helping to develop this model.



* REPEAT SEVERAL TIMES
* A REPETER PLUSIEURS FOIS



* REPEAT PROCEDURE
* RÉPÉTEZ LE PROCÉDÉ



* OPTIONAL PARTS
* PIÈCES EN OPTION



* DECAL
* DECAL COMMANIE



* ASSEMBLY CAUTION
* ATTENTION D'ASSEMBLÉE



* CEMENT TOGETHER
* A COLLER



* REMOVE AND THROW AWAY
* A RETIRER ET JETER



* DO NOT CEMENT
* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkyness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIT AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixation ou les solvants.





This paint guide is provided to complete this kit as shown on the box.

Ce guide de peinture est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.

SILVER	Argent
ALUMINUM	Aluminium
LIGHT BLUE	Bleu lite
TAN	Brun clair
BROWN	Brun
FLAT BLACK	Noir mat
FLAT WHITE	Blanc mat
FLESH	Chair


If you have any questions or comments, call our hotline at: **(800) 833-3570**
or, please write to:

Revell Inc Consumer Service Department, 1850 Howard Street Unit A, Elk Grove Village, Illinois 60007
Be sure to include the plan number (85524410200), part number, description, your return address and phone number.
Visit our website: www.revell.com

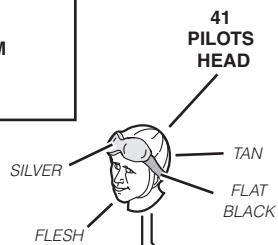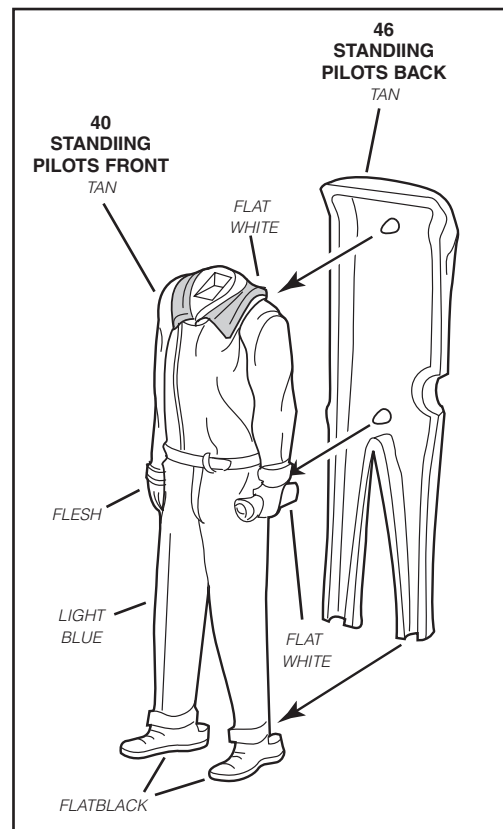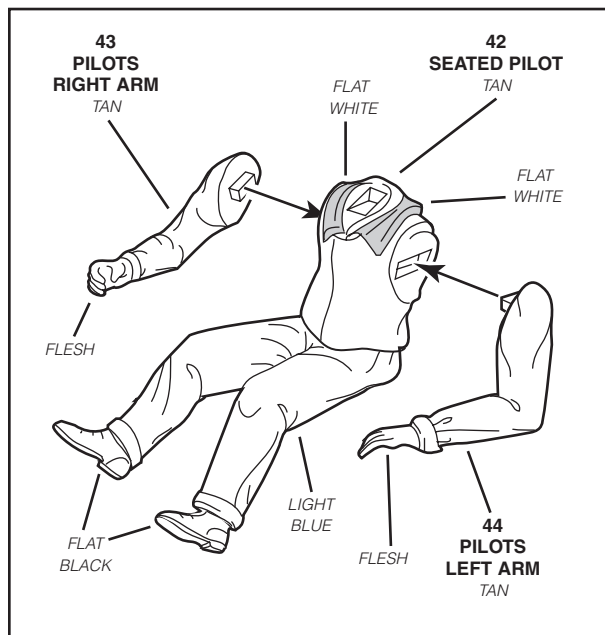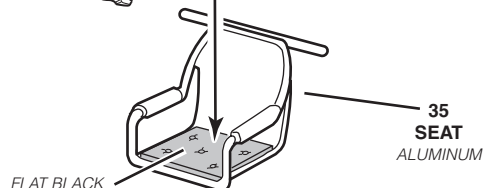**SEATED PILOT****STANDING PILOT**

2


COCKPIT ASSEMBLY

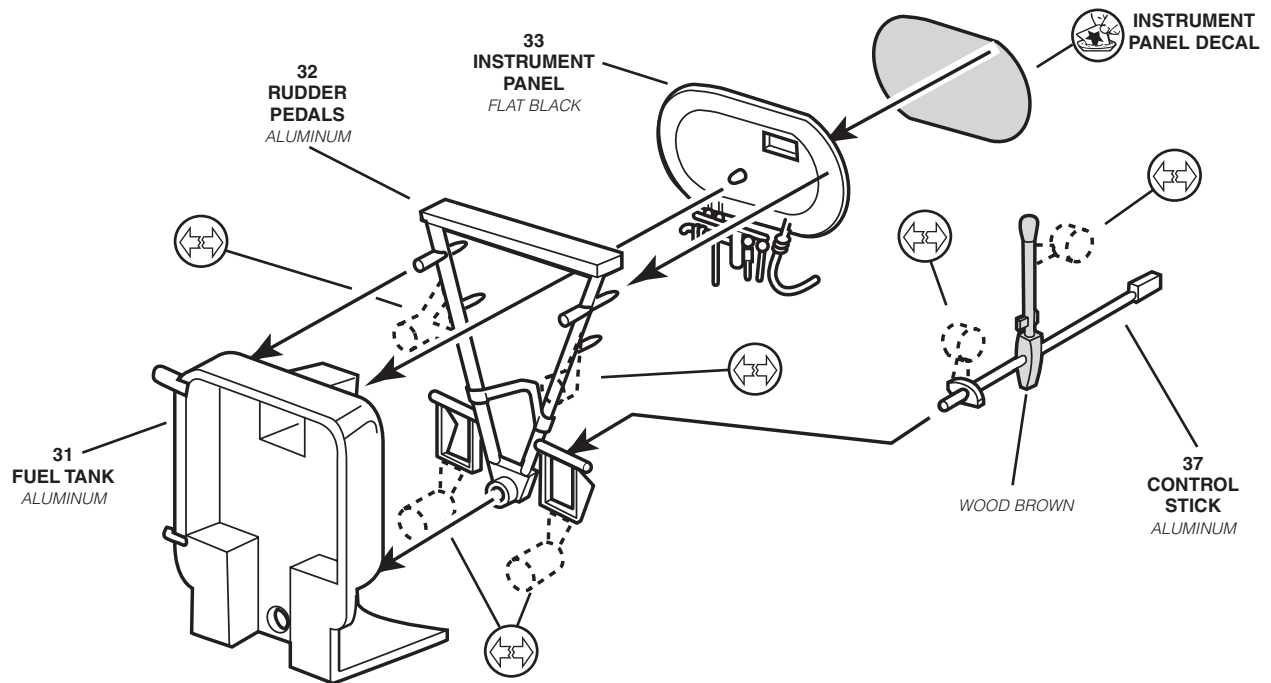

3

FUSELAGE ASSEMBLY


RIGHT

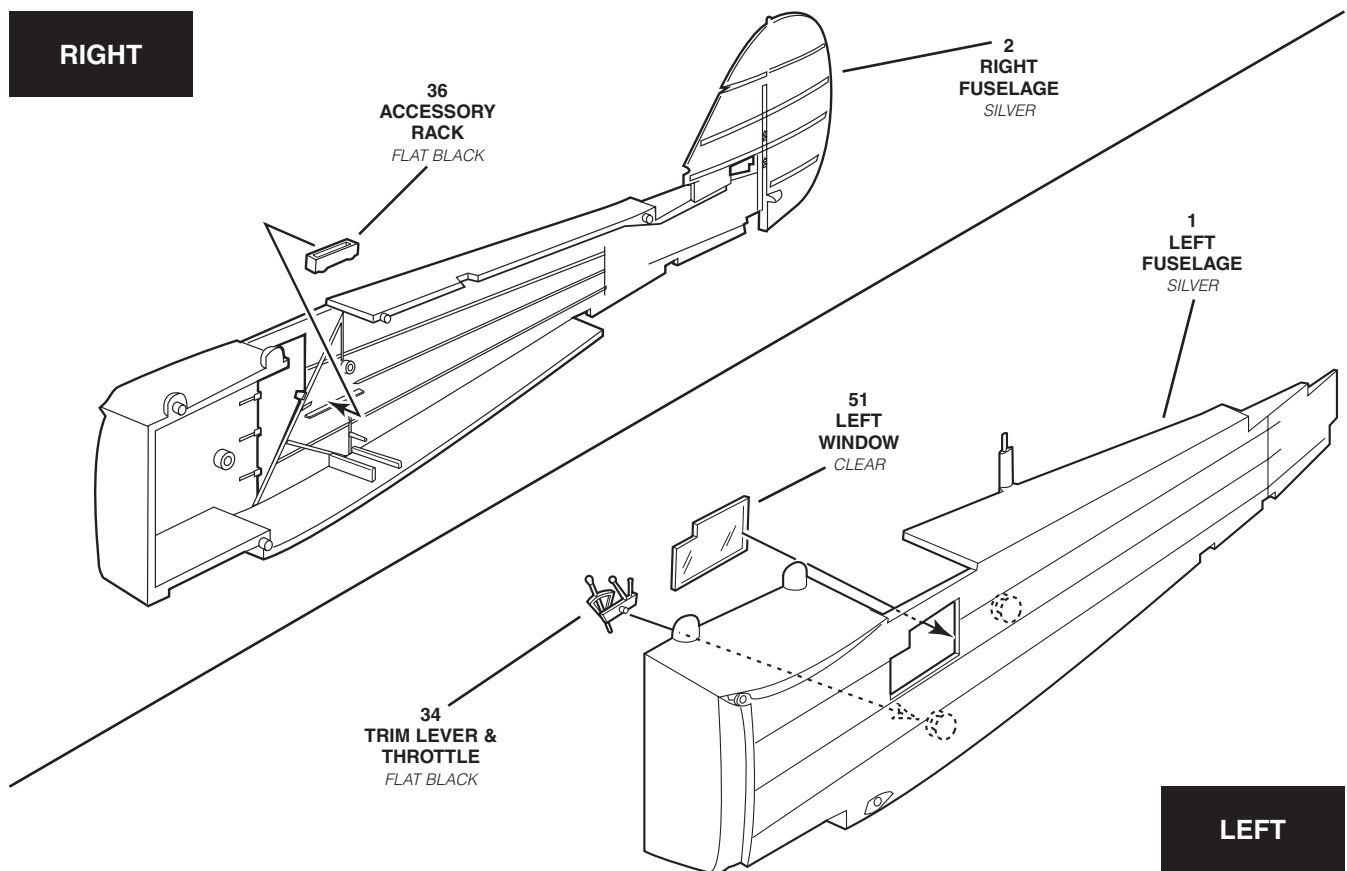

LEFT




3

FUSELAGE ASSEMBLY CONTINUED

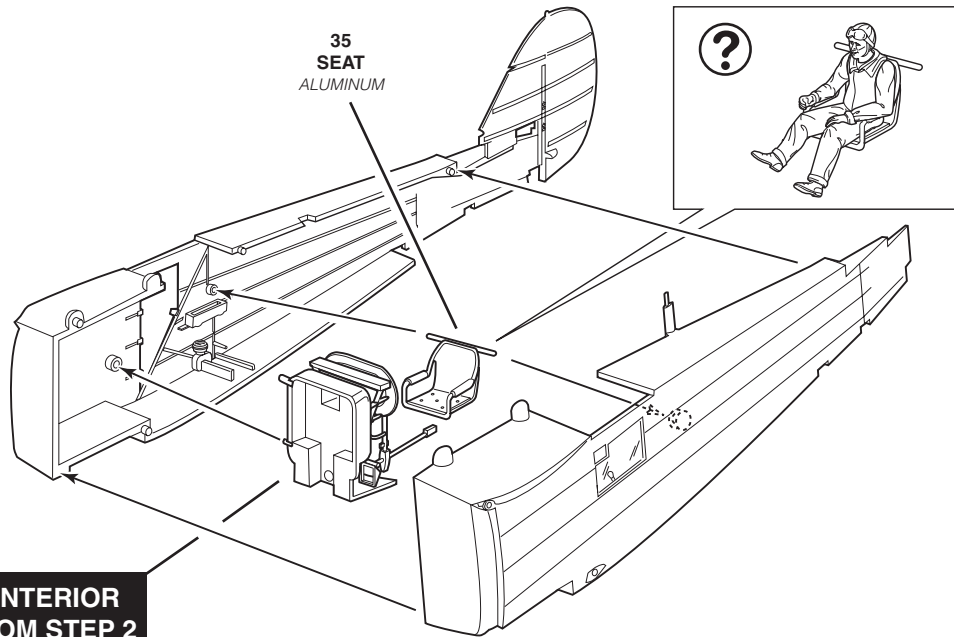






4

REAR / STABLIZER ASSEMBLY

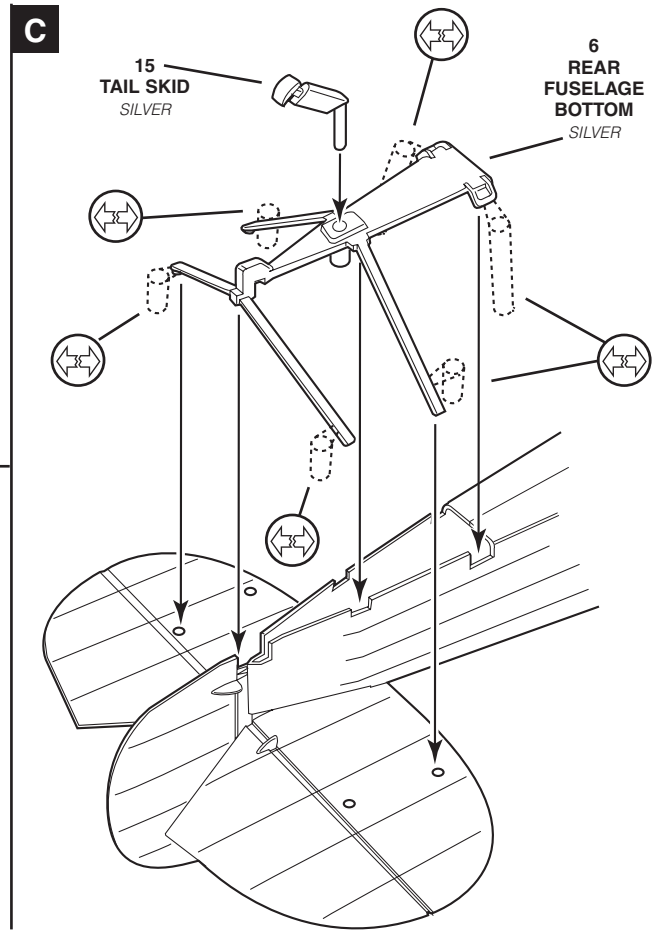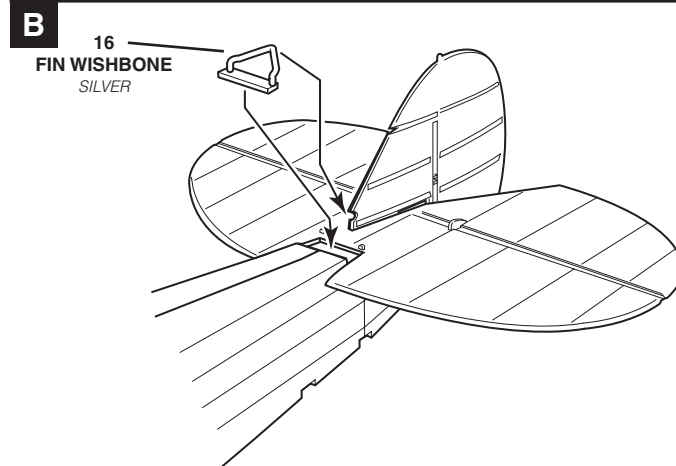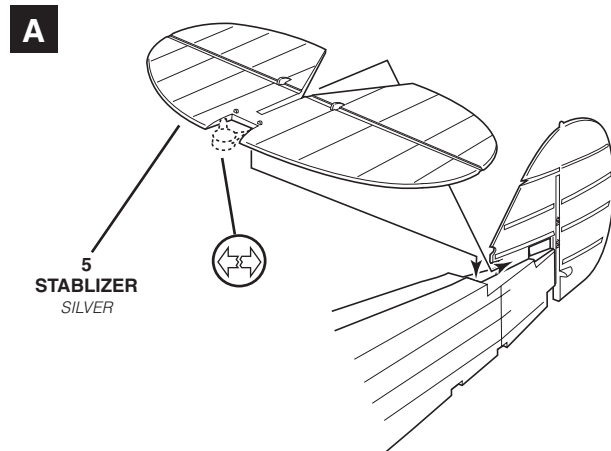


5

LANDING GEAR ASSEMBLY

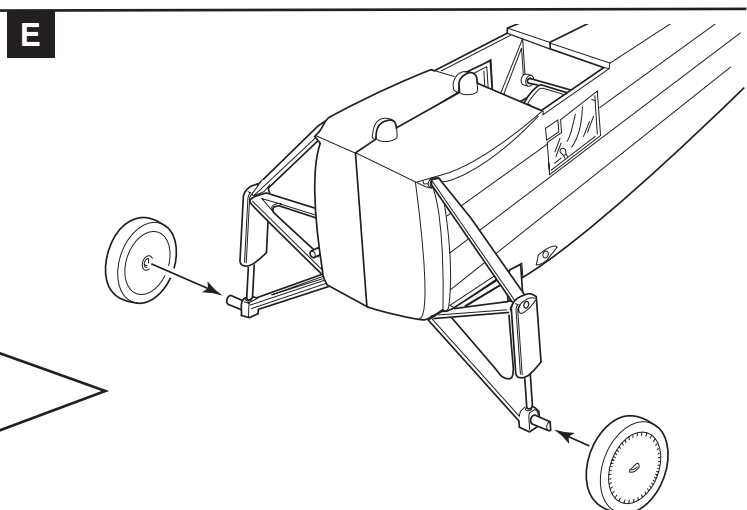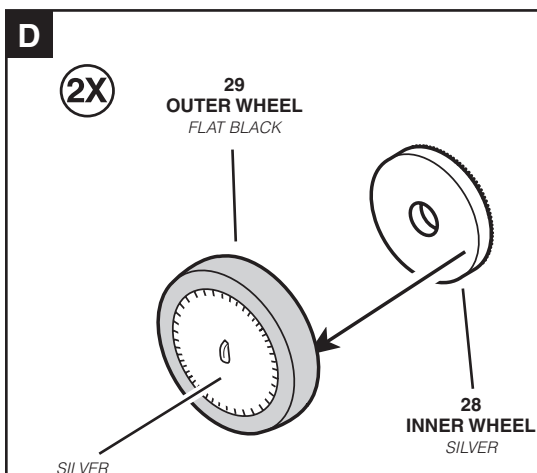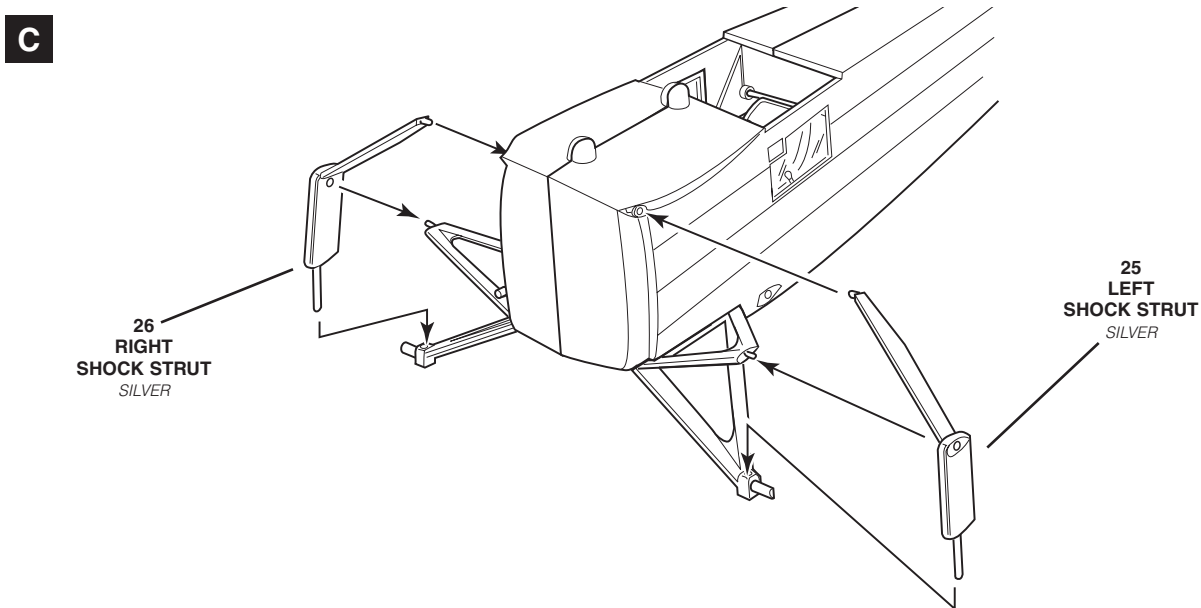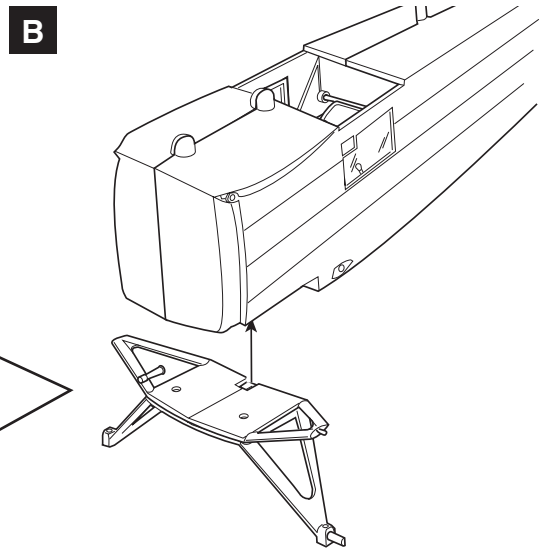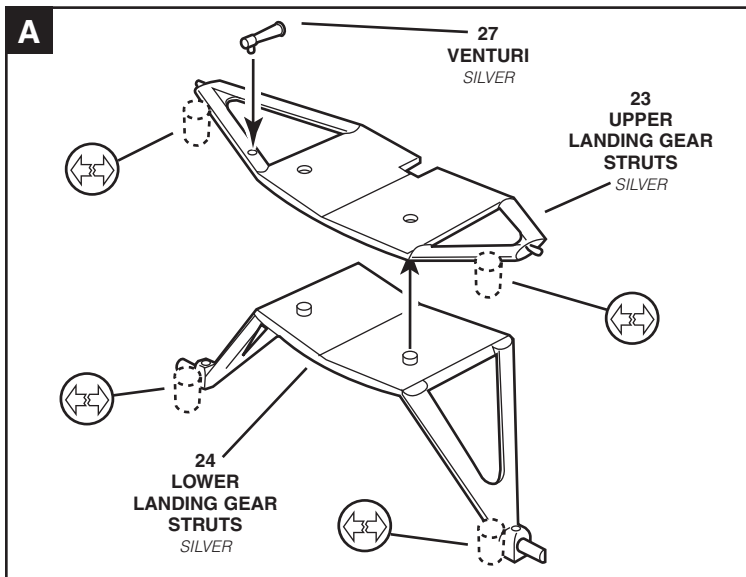


6

ENGINE ASSEMBLY

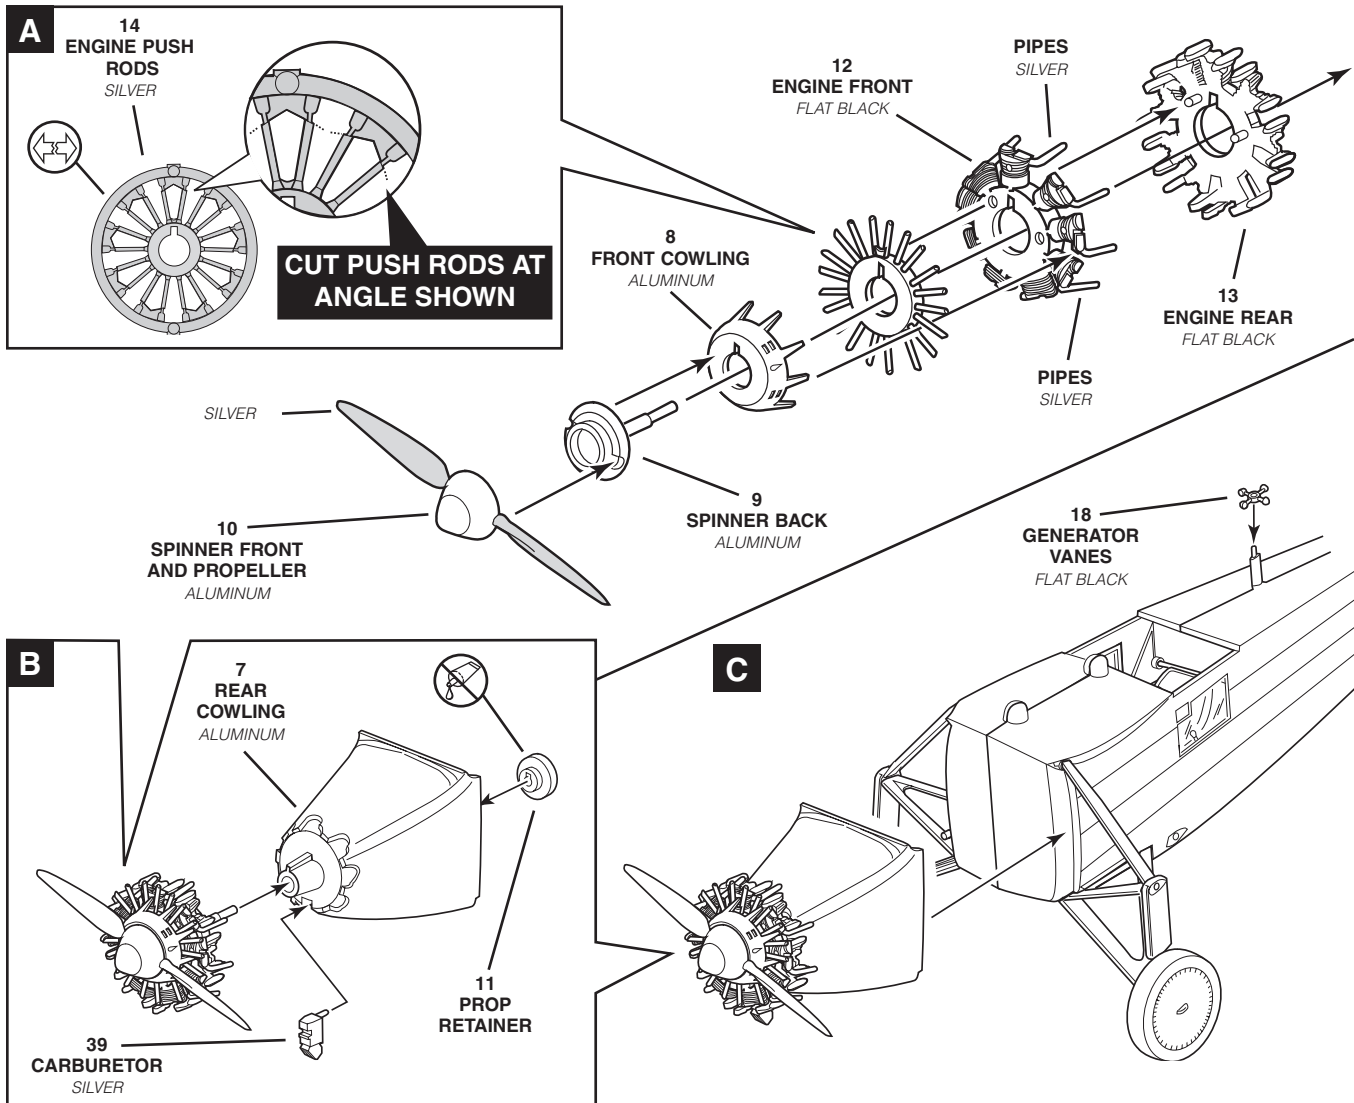

7

WING ASSEMBLY

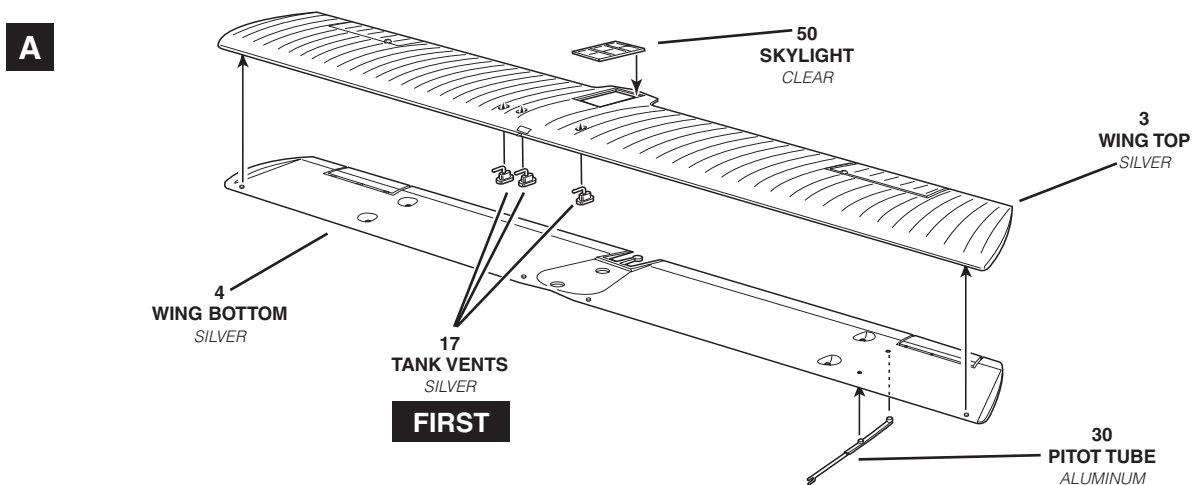


7


WING ASSEMBLY CONTINUED

B


**WING TO
FUSELAGE**

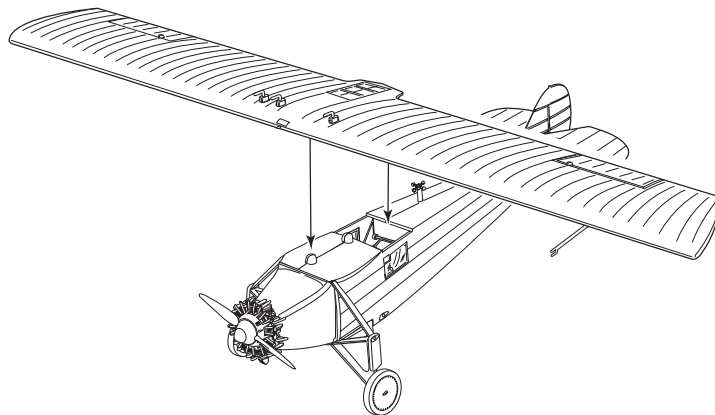

C

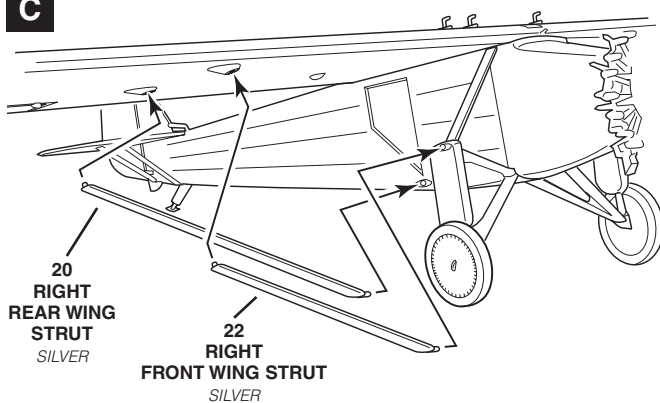

D

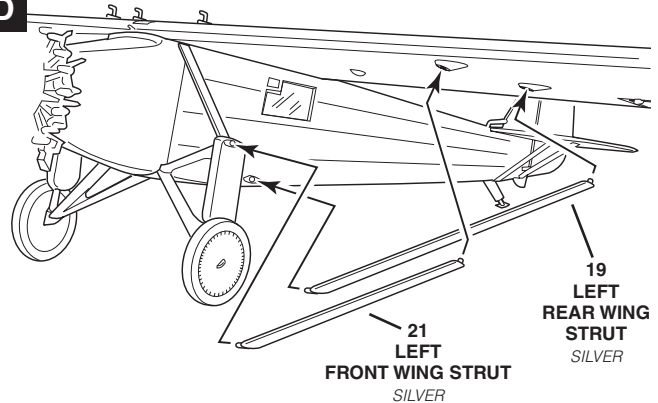




8

DOOR FINAL ASSEMBLY

?

52 RIGHT WINDOW
CLEAR

38 RIGHT SIDE DOOR
SILVER

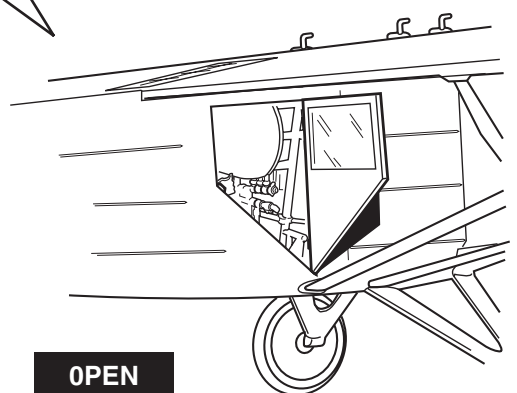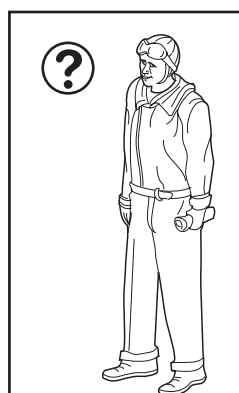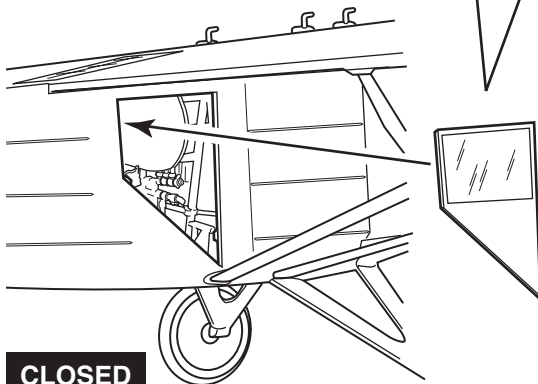

DECAL PLACEMENT

CHARLES LINDBERGH'S SPIRIT OF ST. LOUIS
MAY 20, 1927

