

Revell

KIT 5858

85585800200

DORNIER Do 335 ARROW

One of several advanced fighter designs under development by the Luftwaffe at the end of WWII, the Dornier DO 335 was characterized by its unusual engine placement. With the engines located at each end of the fuselage it had a considerable reduction in wind drag, thus allowing speeds in excess of 470 miles per hour. The DO 335 was one of the fastest propeller driven aircraft ever built.

Your Revell model features detailed engines with optional open or closed fuselage access panels and movable wing flaps, optional single or tandem seat versions with three figures and authentic decal markings for 4 variants is also included.



* REPEAT SEVERAL TIMES
* A REPETER PLUSIEURS FOIS



* OPTIONAL PARTS
* PIECES EN OPTION



* DECAL
* DECAL COMANIE



* ALTERNATIVE ASSEMBLY
* ENSEMBLAGE ALTERNATIVE



* CEMENT TOGETHER
* A COLLER



* REMOVE AND THROW AWAY
* A RETIRER ET JETER



* DO NOT CEMENT
* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkyness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIT AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixation ou les solvants.

This paint guide is provided to complete this kit as shown on the box.

Ce guide de peintures est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.

Light Blue	Bleu Clair
Dark Green	Vert foncé
Brown-Violet	Violet-brun
Black Green	Vert noir
Dark Gray	Gris foncé
Light Gray	Gris clair
Silver	Argent
Gunmetal	Bronze
Rust	Rouille
Red	Rouge
White	Blanc
Flat Black	Noir mat

If you have any questions or comments, call our hotline at: **(800) 833-3570**
or, please write to:








Revell Inc Consumer Service Department, 1850 Howard Street Unit A, Elk Grove Village, Illinois 60007

Be sure to include the plan number (85585800200), part number, description, your return address and phone number.

Visit our website: www.revell.com


1

FUSELAGE ASSEMBLY

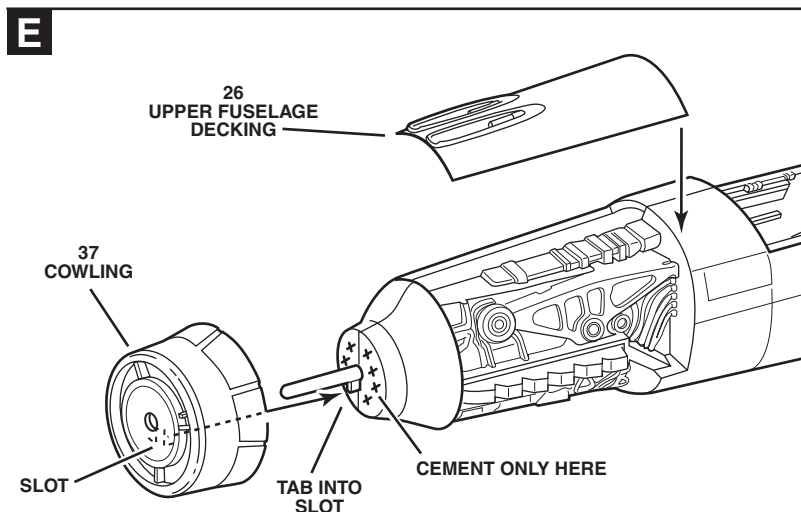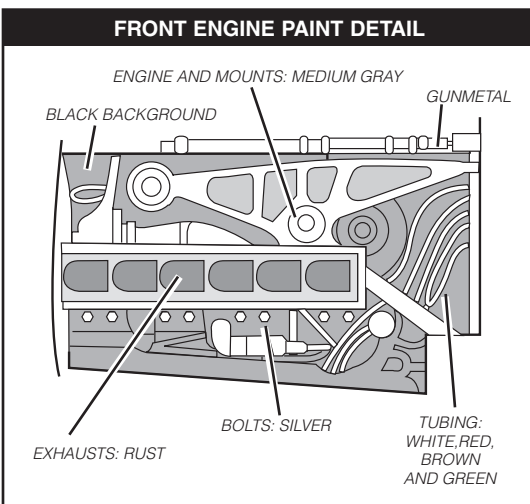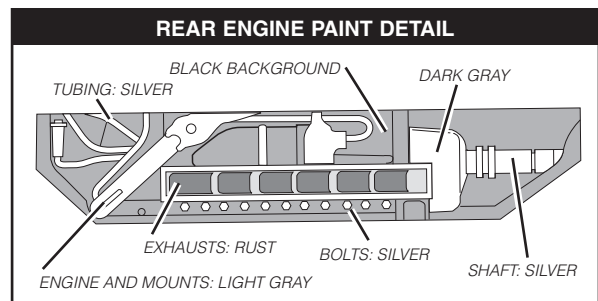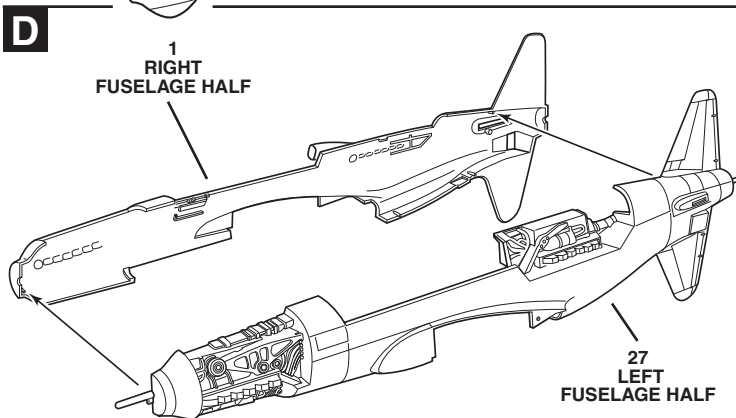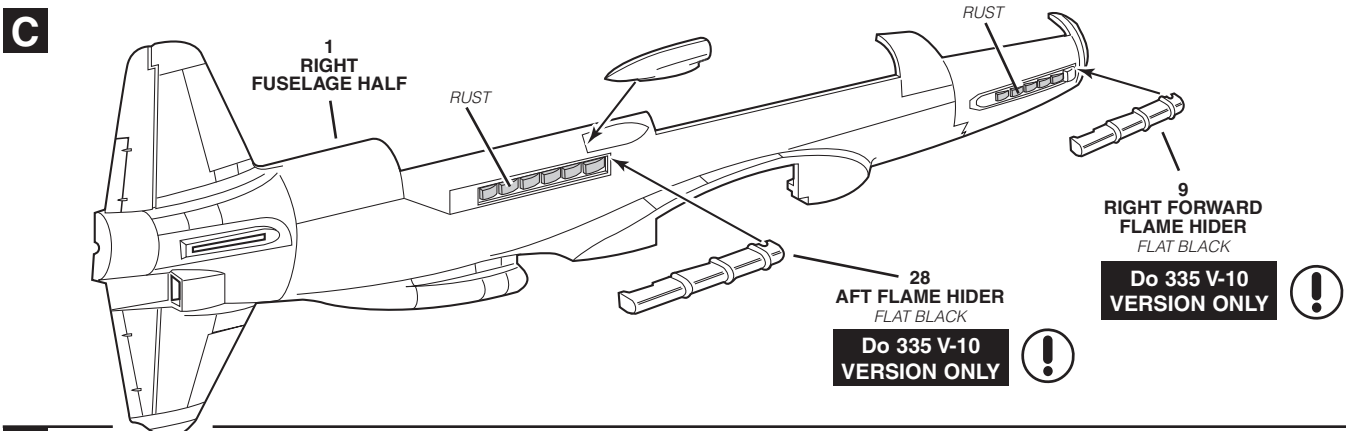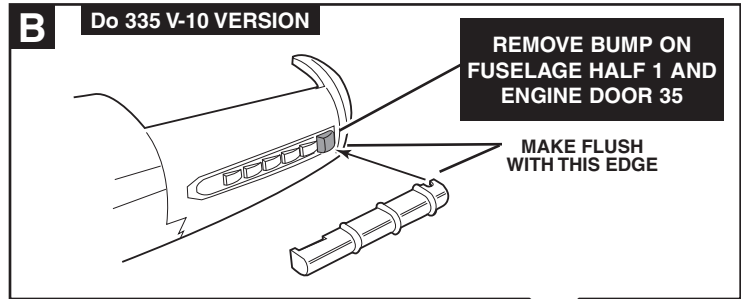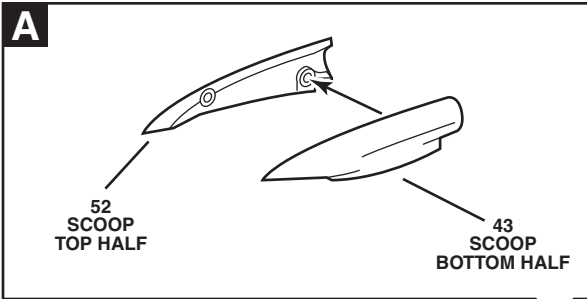


2




FRONT COCKPIT ASSEMBLY

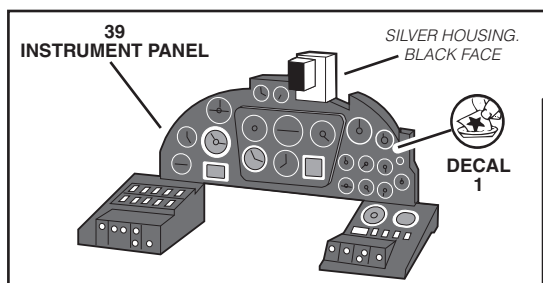


PAINT DETAIL:
BLACK PANEL WITH SILVER DIAL OUTLINES

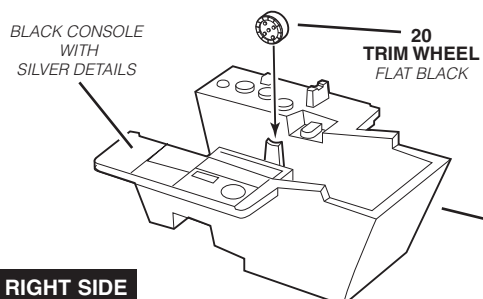

RIGHT SIDE

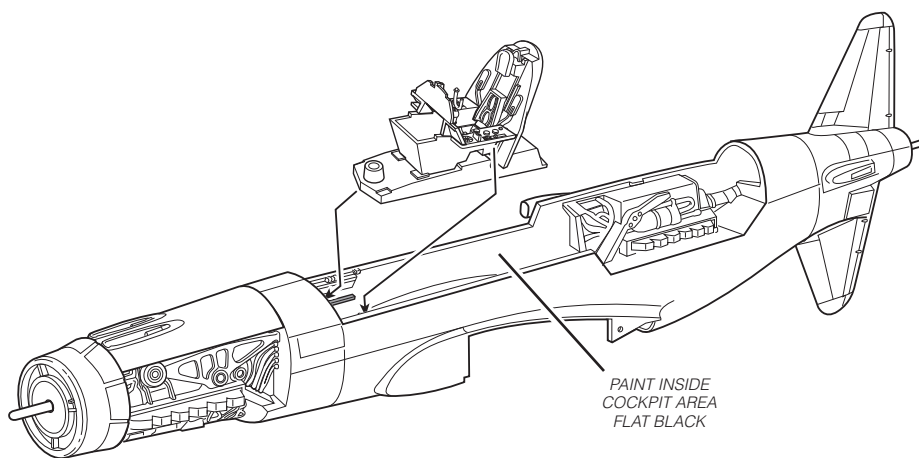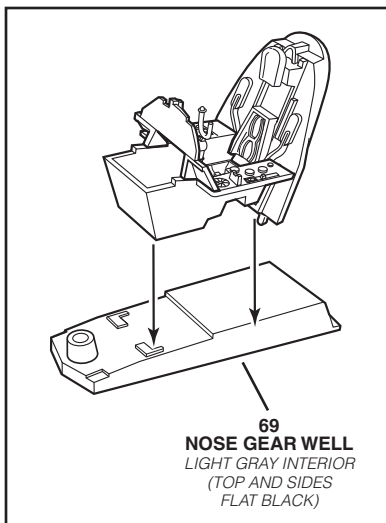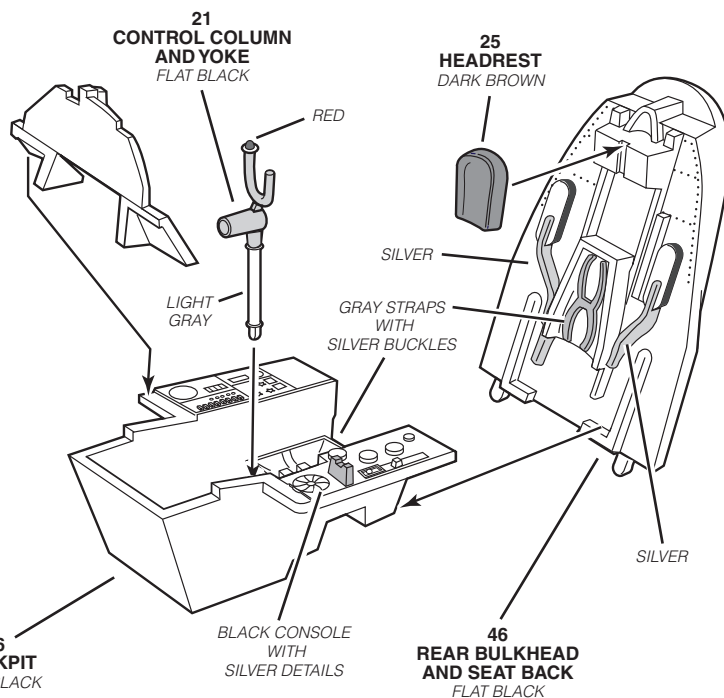


Do 335 A-O VERSION

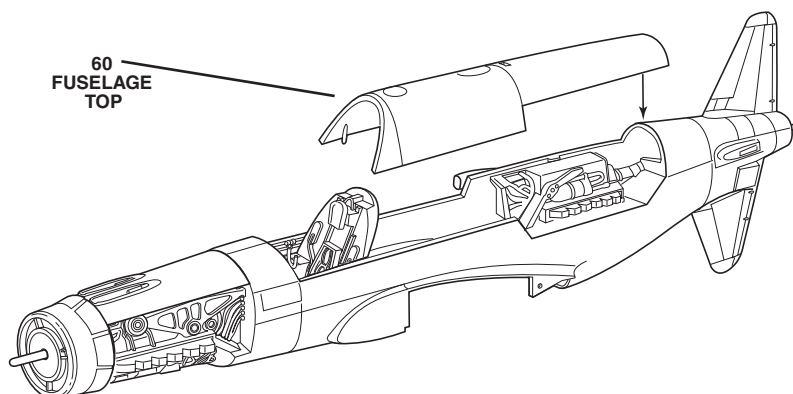

3

REAR COCKPIT ASSEMBLY

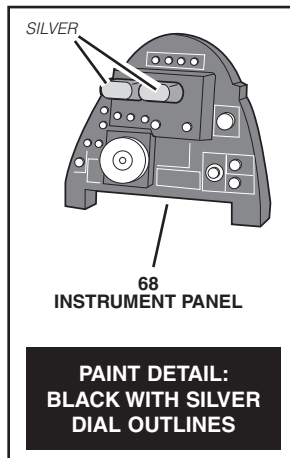

Do 335 V-10 VERSION



BLACK CONSOLE
WITH
SILVER DETAILS

50
COCKPIT
FLAT BLACK

25
HEADREST
DARK BROWN

RED

BLACK CONSOLE
WITH
SILVER DETAILS


34
REAR BULKHEAD
AND SEAT BACK
FLAT BLACK

GRAY STRAPS
WITH
SILVER BUCKLES

Do 335 V-10 VERSION



61
FUSELAGE TOP

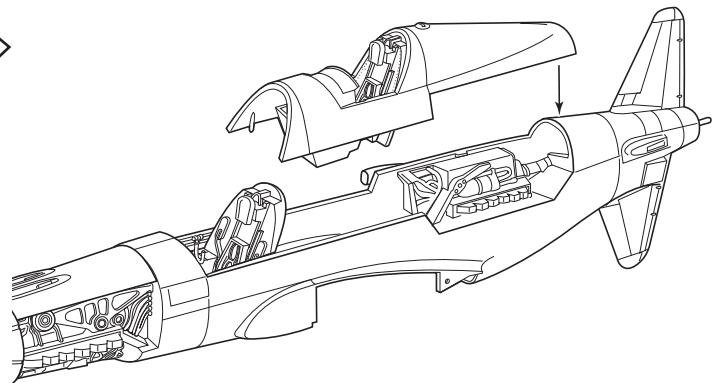

4

LOWER WING ASSEMBLY


Do 335 V-10 VERSION

73
WING BOTTOM


Do 335 V-10 VERSION

5


UPPER WING ASSEMBLY

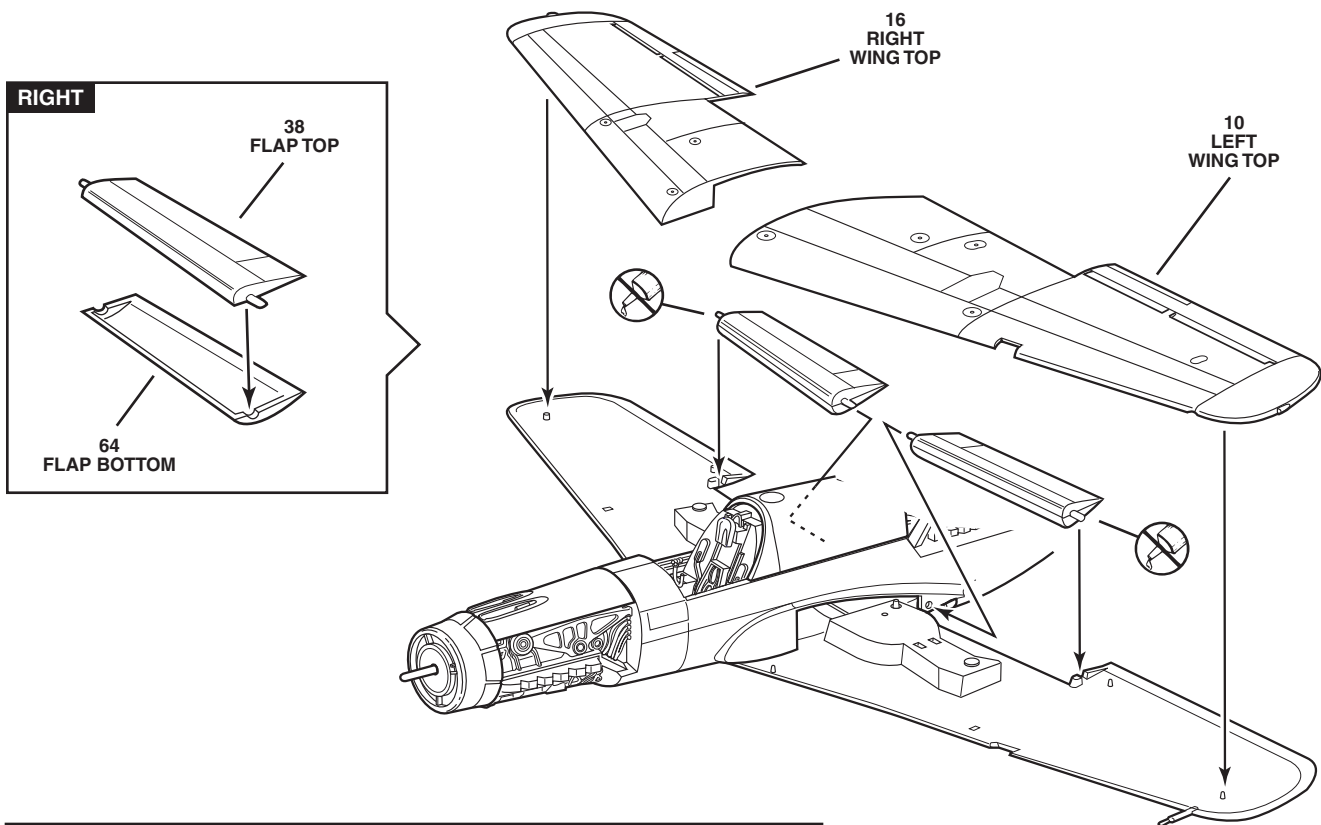

STRETCH TAPE FROM ONE WING TIP TO THE OTHER AS SHOWN. THIS ACHIEVES THE PROPER DIHEDRAL (WING ANGLE TO THE FUSELAGE) WHILE THE GLUE IS DRYING.

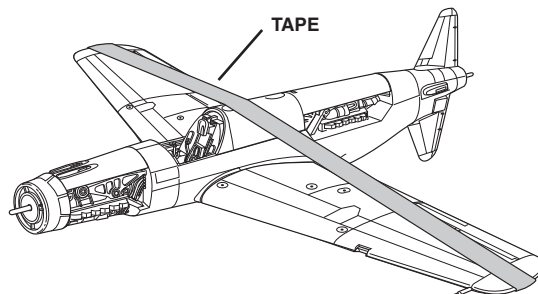


LEFT

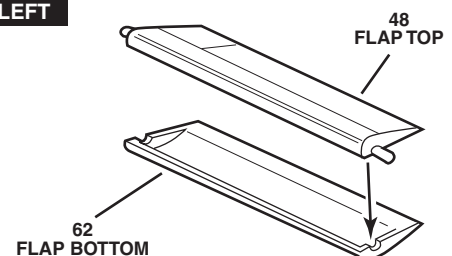

6



INTAKE COVER ASSEMBLY

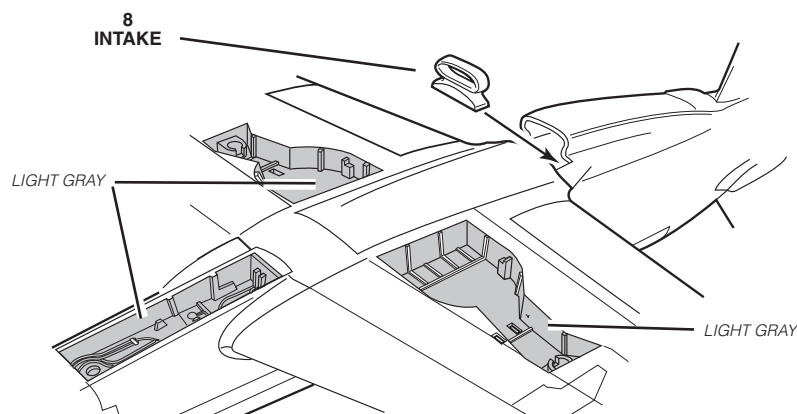

7


NOSE WHEEL / STRUT ASSEMBLY

ON #4 SHOW DIRECTON ARROW
POINTING TOWARDS NOSE WHEEL

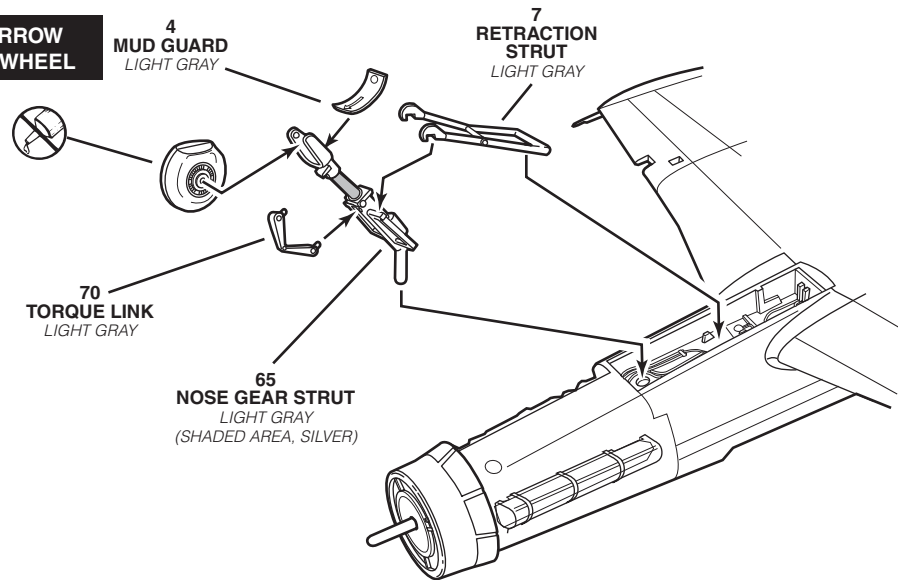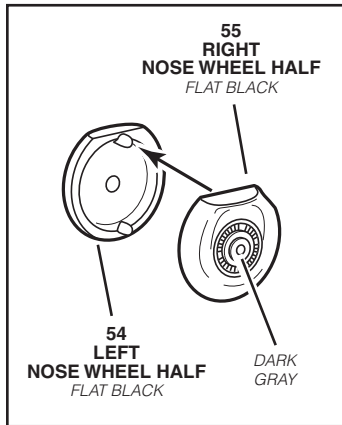


8

MAIN WHEEL / STRUT ASSEMBLY

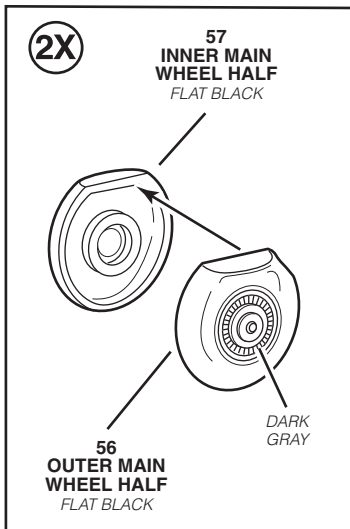


NOTE:
BE SURE FLATTENED SIDE OF TIRES IS FLAT ON THE
SURFACE WHEN GLUING THE MAIN GEAR TIRES.

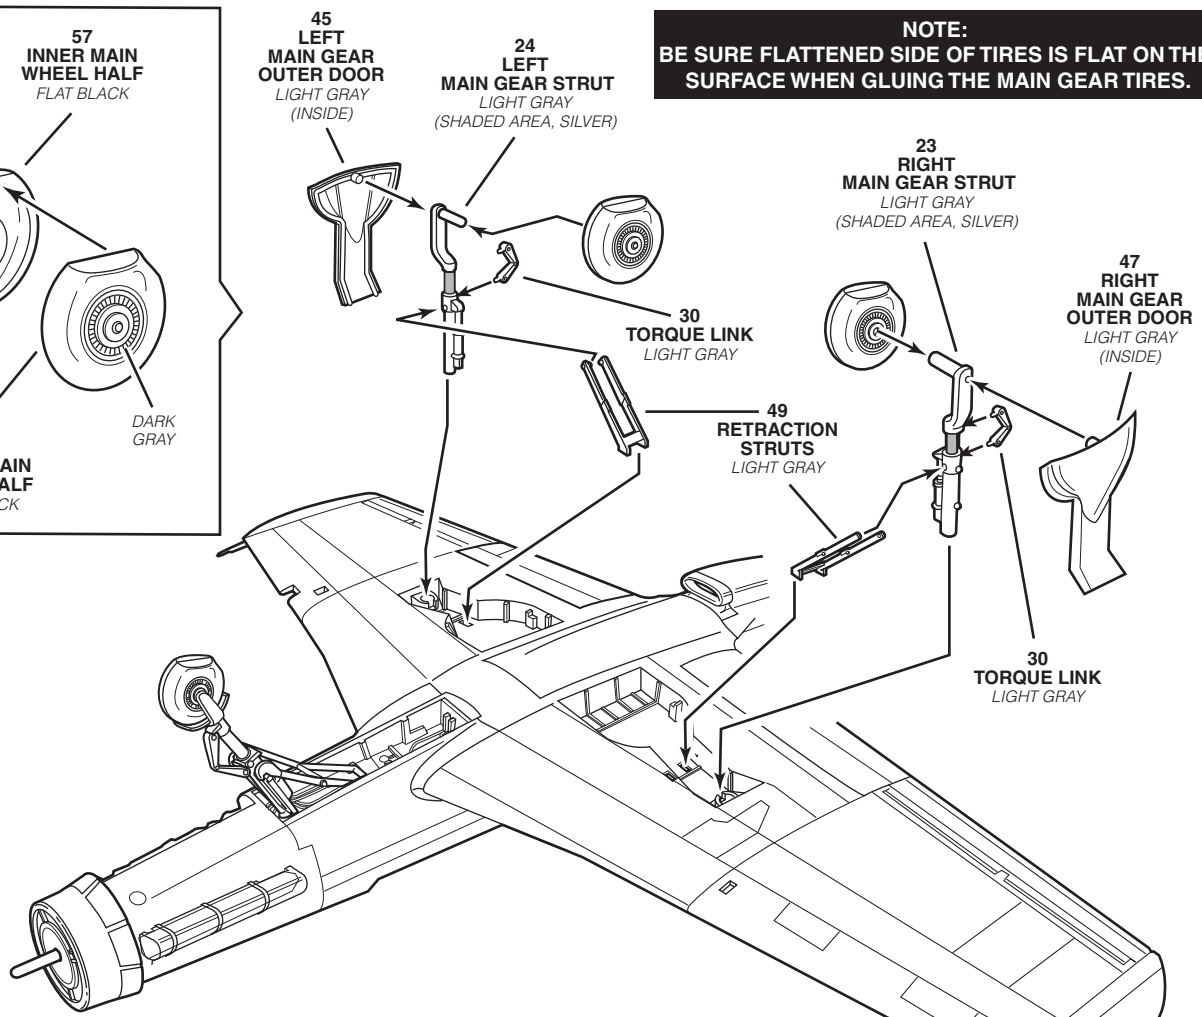


9

INNER DOOR ASSEMBLY

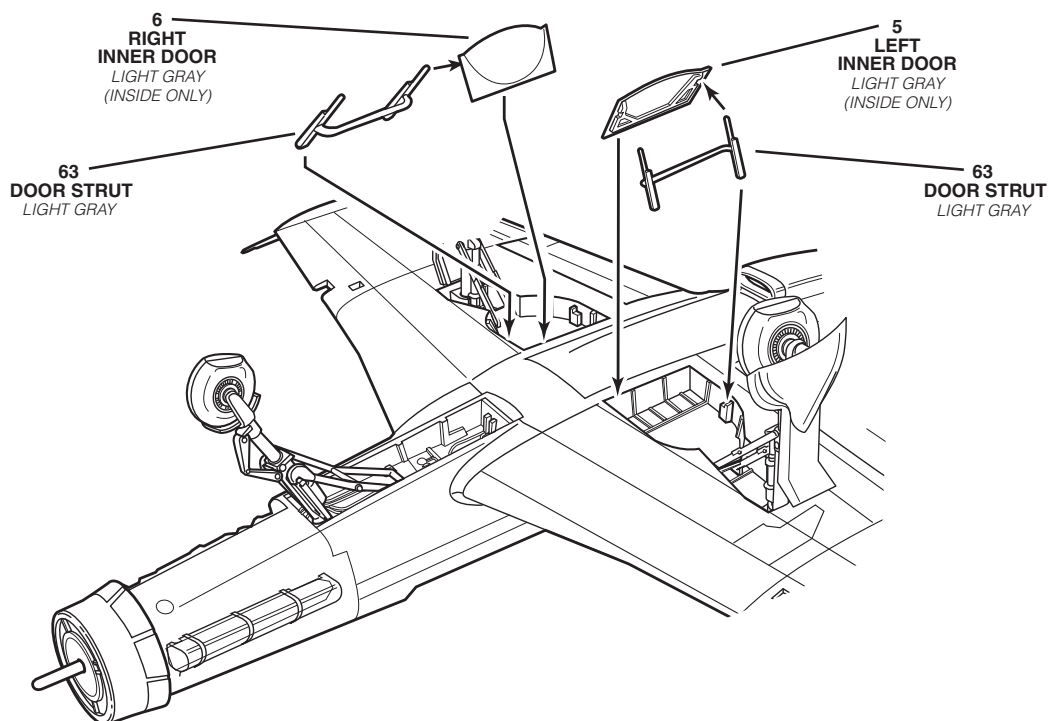

10


ANTENNA / DOOR ASSEMBLY

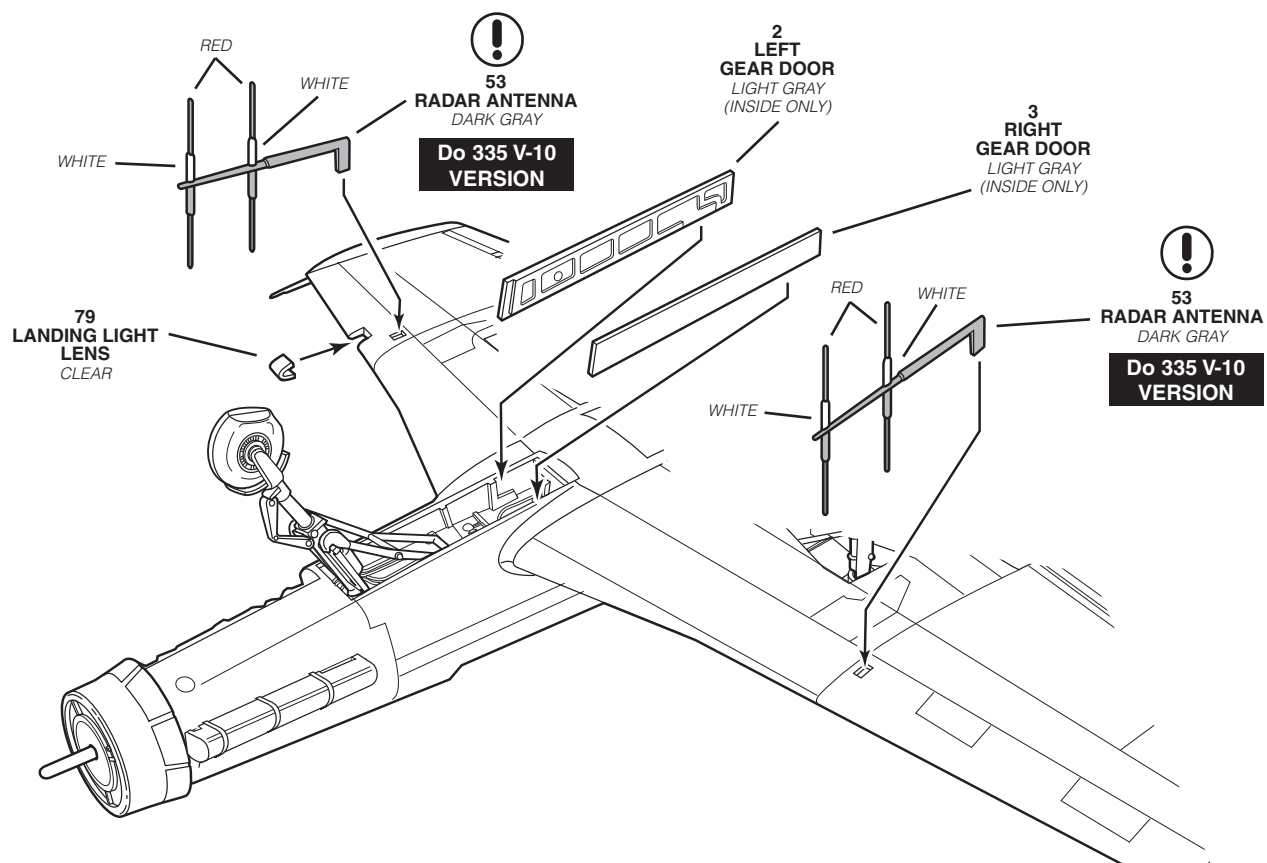



11

STABILIZER ASSEMBLY

RIGHT

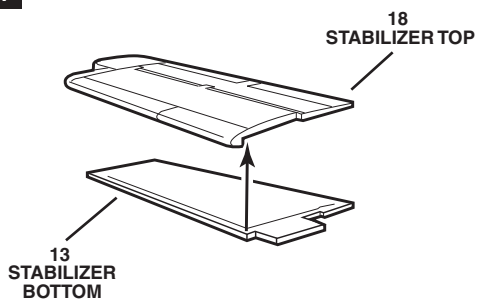


LEFT

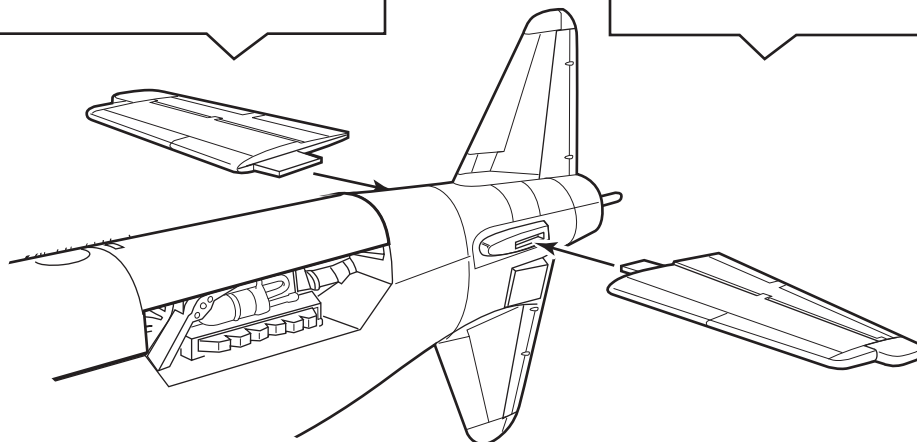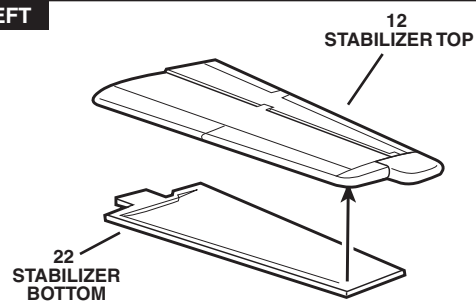

12

PROPELLER ASSEMBLY

FRONT

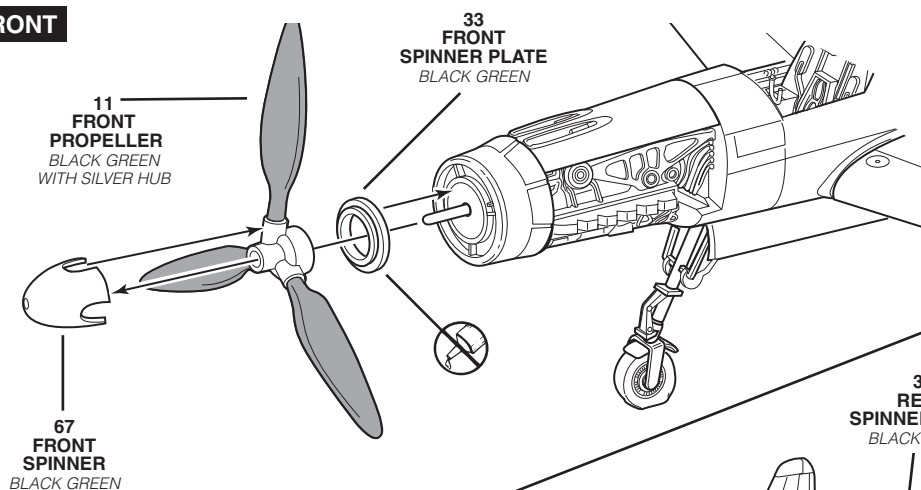


17
REAR
PROPELLER-
BLACK GREEN
WITH SILVER HUB


32
REAR
SPINNER PLATE
BLACK GREEN

66
REAR
SPINNER
BLACK GREEN


REAR

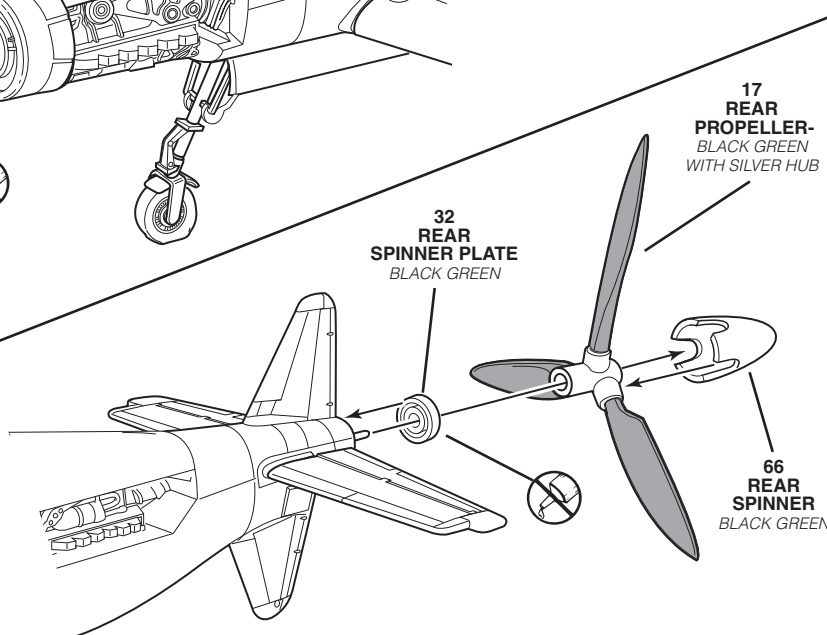


Do 335 A-O VERSION

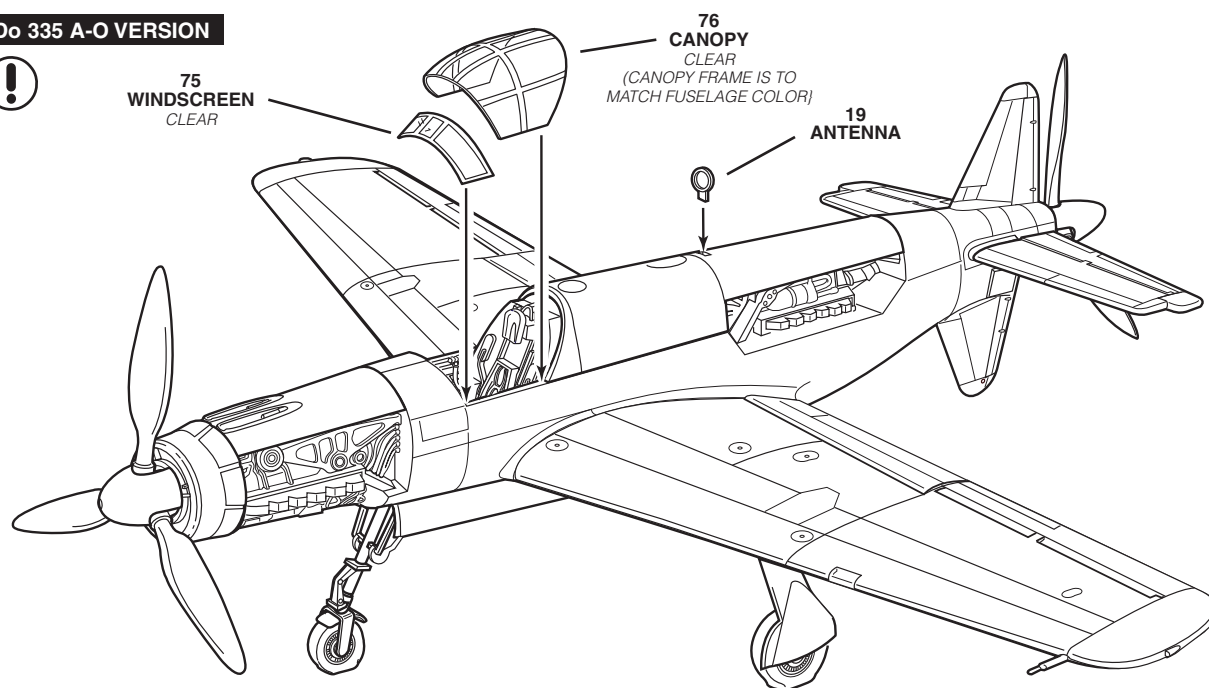

Do 335 V-10 VERSION

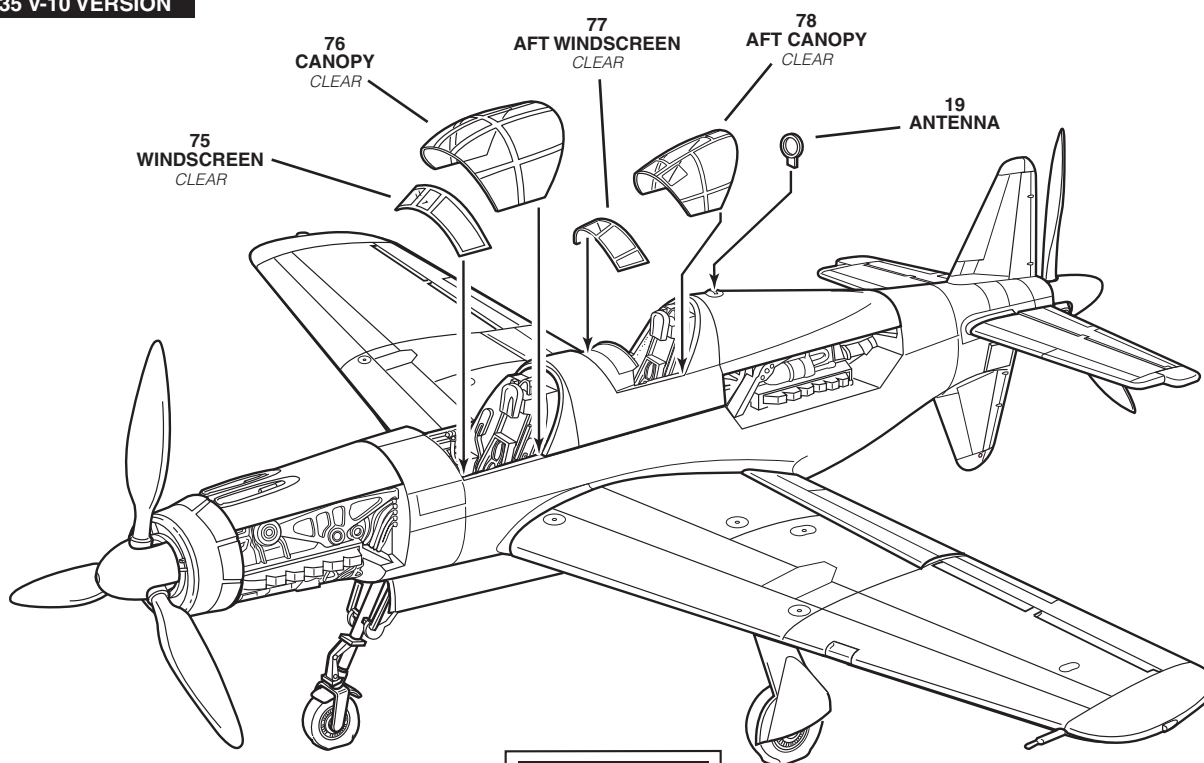


OPEN CANOPIES

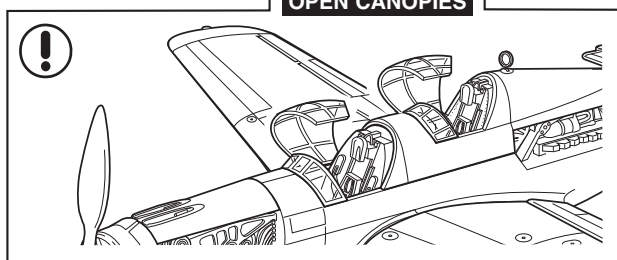

14

ENGINE DOOR / FINAL ASSEMBLY

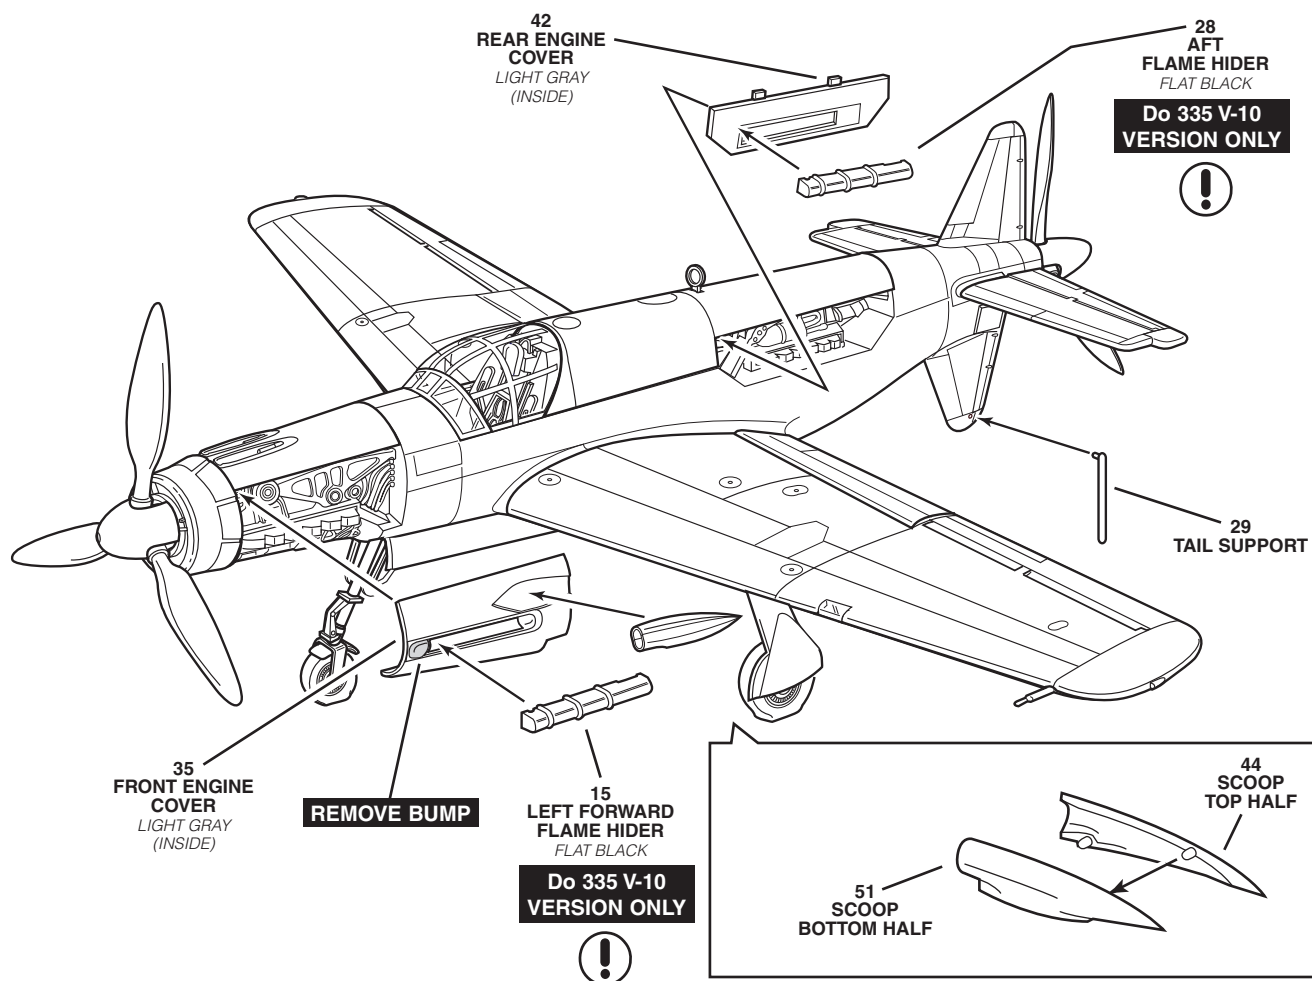

15


FIGURES




Paint hands and faces: FLESH COLOR. Shirts: WHITE. Uniform and Caps: CHARCOAL GRAY. Ammunition Belt: SILVER. Shoes: BLACK. Can and Wrench: STEEL

DORNIER Do 335A-0, FOURTH PROTOTYPE



**1. STAFFEL, VERSUCHSVERBAND DES
OBERBEFEHLSHABERS DER LUFWAFFE, 1944**



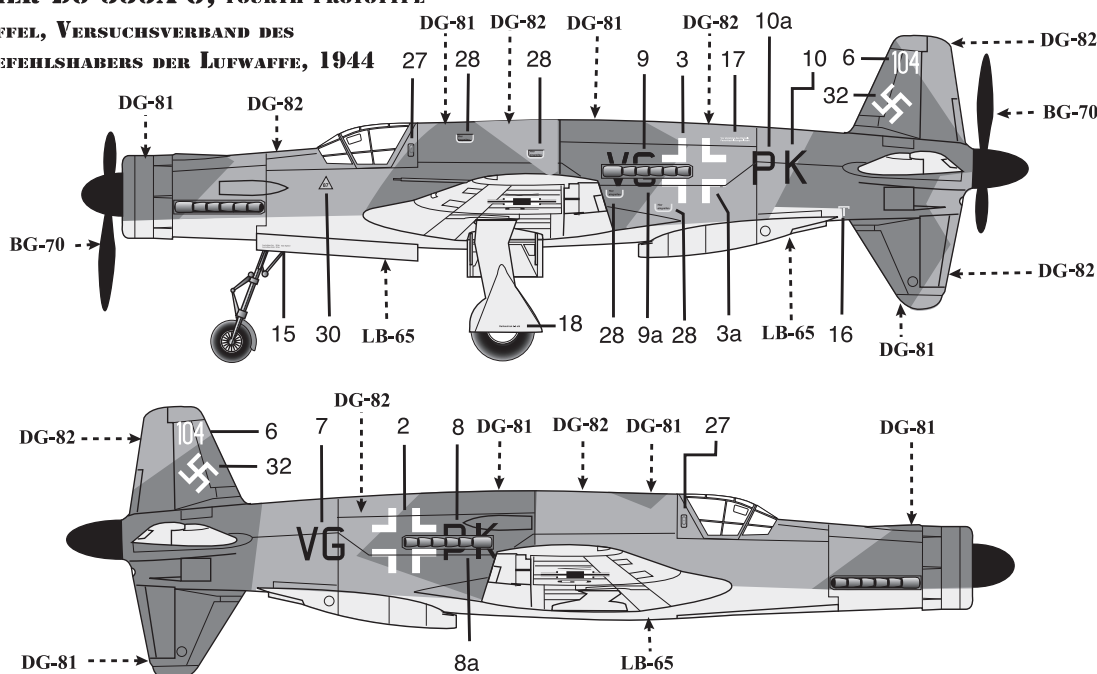
**DORNIER Do 335 A-6 (V-10)**

TWO SEAT NIGHT FIGHTER PROTOTYPE

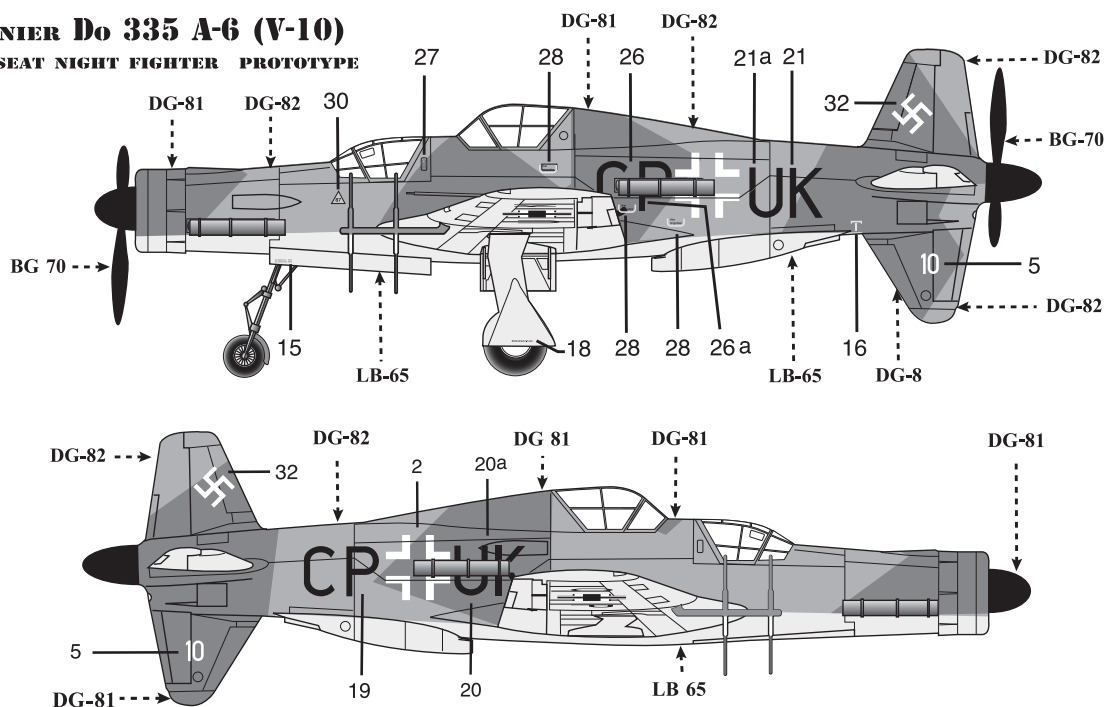**PAINT COLORS**

LB-65		LIGHT BLUE RLM 65
DG-81		DARK GREEN RLM 81
DG-82		DARK GREEN RLM 82
BG-70		BLACK GREEN RLM 70
DG-66		DARK GRAY RLM 66

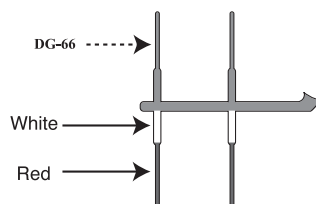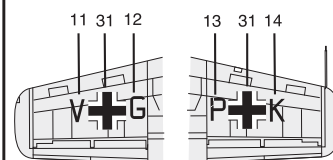RADAR ANTENNA DETAIL**DORNIER Do 335A-0
WING CODES**

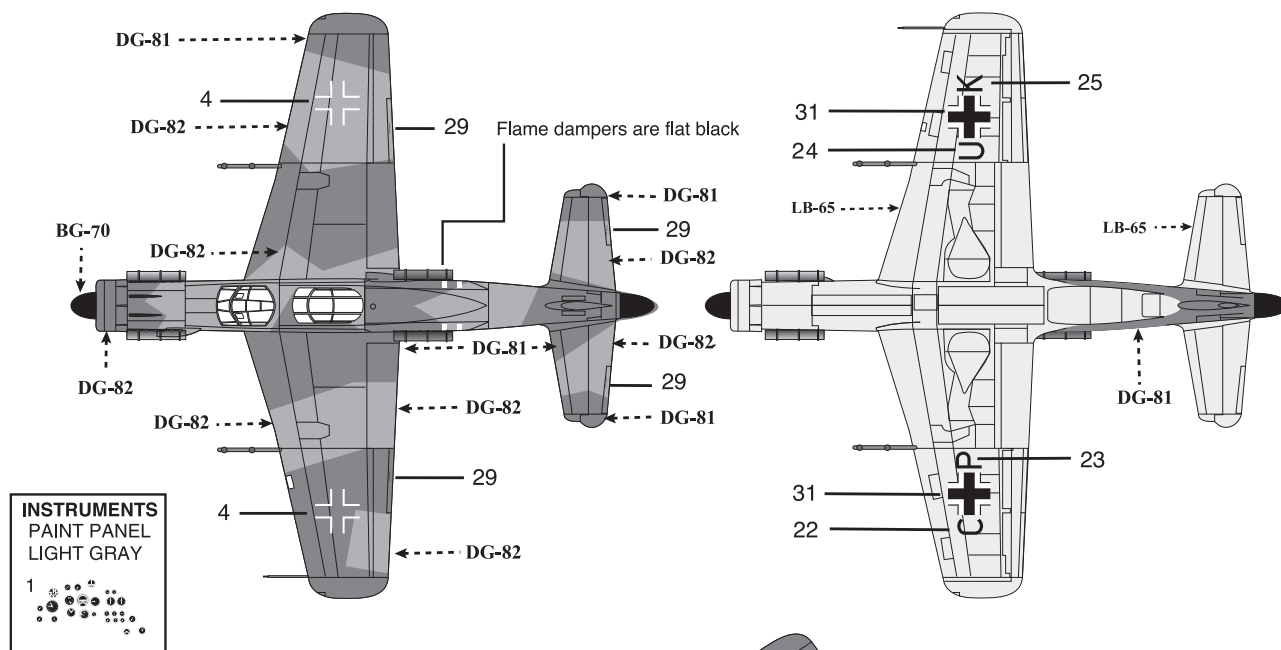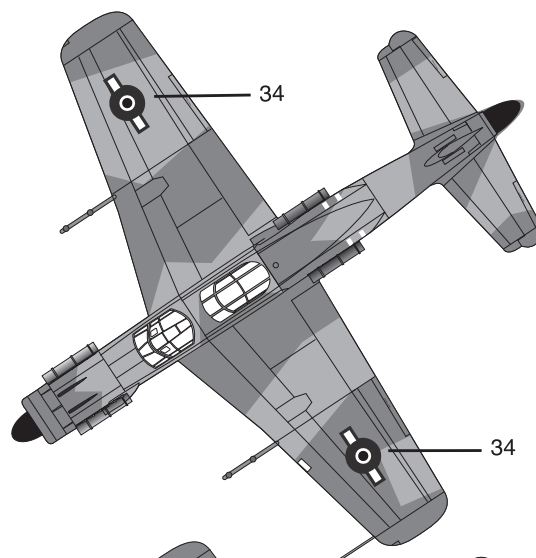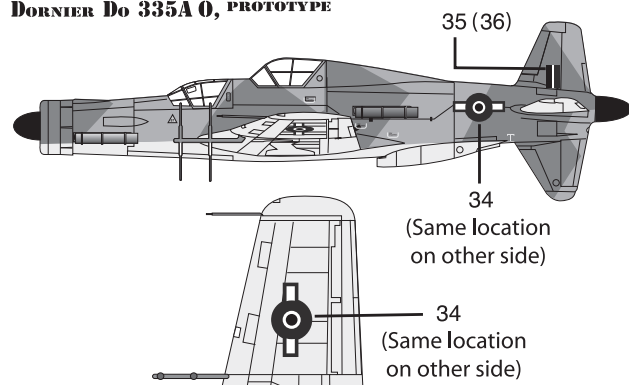DORNIER Do 335 A-6 (V-10), TWO SEAT NIGHT FIGHTER PROTOTYPE**DORNIER Do 335 A-6 (V-10)****ROYAL AIR FORCE POSTWAR TEST MARKINGS****DORNIER Do 335A 0, PROTOTYPE****SECOND****USAF POSTWAR TEST MARKINGS**

ORIGINAL PAINT SCHEME RETAINED
ON CAPTURED AIRCRAFT

