


Revell

KIT 5983

85598300200

SB2C-4 HELLDIVER

After a lengthy development period, the first Curtiss SB2C Helldivers sailed for the Pacific aboard the USS Bunker Hill in late 1943. By mid-1944, the Helldiver had replaced the SBD Dauntless as the U.S. Navy's primary dive bomber. The SB2C-4 incorporates changes starting with the -3 version including a more powerful engine, 4 bladed prop and perforated dive brakes. Helldivers participated in every major naval action in the Pacific during World War II, and they continued in service with the U.S. Navy until 1949. The SB2C-4 Helldiver was produced in greater quantities than any other Helldiver variant. The French used them in combat in Indo-China during the mid-1950s, and this marked the end of the Helldiver's service life.

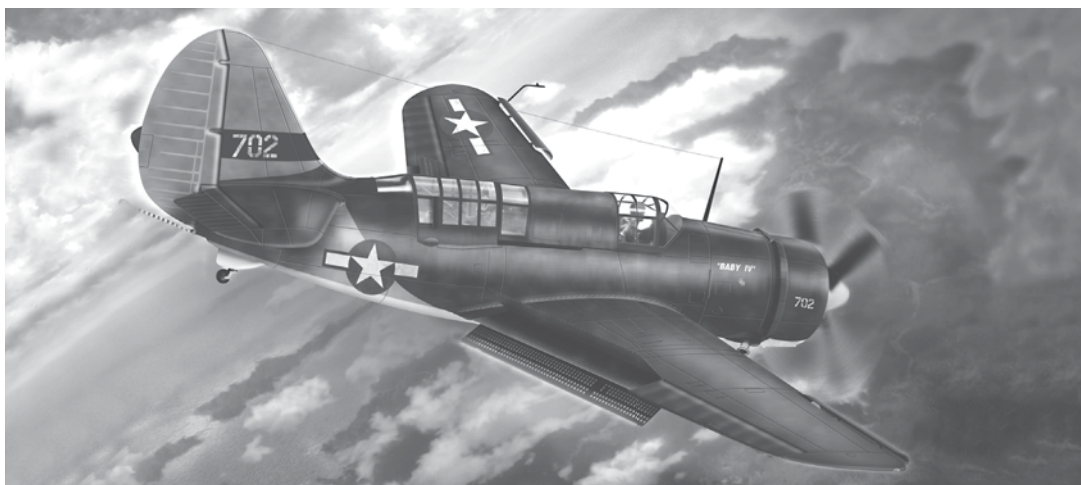

* REPEAT SEVERAL TIMES

* A REPETER PLUSIEURS FOIS



* REPEAT PROCEDURE

* RÊPÊTEZ LE PROCÉDÉ



* OPTIONAL PARTS

* PIÈCES EN OPTION



* DECAL

* DECAL COMANIE



* ASSEMBLY CAUTION

* ATTENTION D'ASSEMBLÉE



* CEMENT TOGETHER

* A COLLER



* REMOVE AND THROW AWAY

* A RETIRER ET JETER



* DO NOT CEMENT

* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkiness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIV AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixation ou les solvants.

This paint guide is provided to complete this kit as shown on the box.

Ce guide de peintures est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.

Aluminum	Aluminium
Chromate Green - Primer	Vert chromate - apprêt
Dark Brown	Brun foncé
Flat Black	Noir mat
Flat Red	Rouge mat
Flat White	Blanc mat
Flesh	Chair
Gloss Green	Vert brillant
Gloss Red	Rouge brillant
Gray	Gris
Intermediate Blue	Bleu intermédiaire
Khaki	Kaki
Olive Drab	Gris vert
Rubber	Caoutchouc
Sea Blue	Bleu de mer
Semi Gloss Black	Noir satiné
Steel	Acier
Yellow	Jaune

If you have any questions or comments, call our hotline at: **(800) 833-3570**
or, please write to:




Revell Inc Consumer Service Department, 1850 Howard Street Unit A, Elk Grove Village, Illinois 60007

Be sure to include the plan number (85598300200), part number, description, your return address and phone number.

Visit our website: www.revell.com

1


FRONT COCKPIT ASSEMBLY

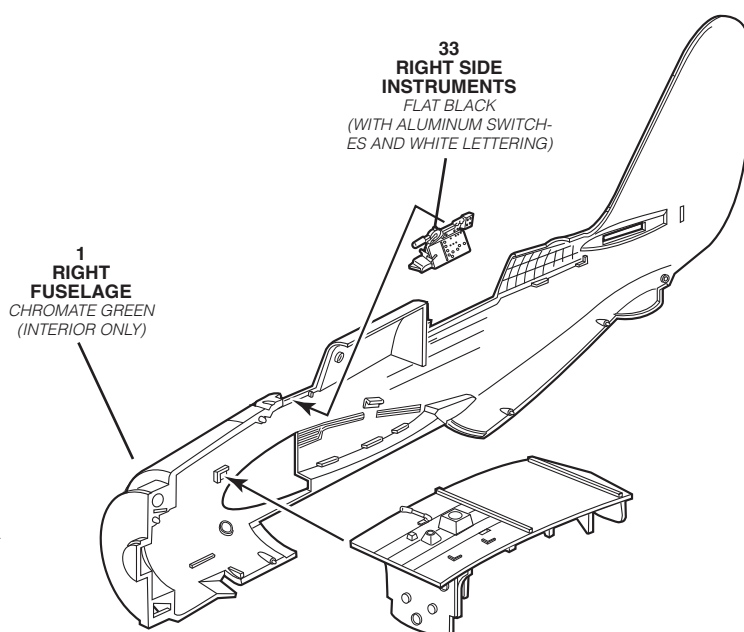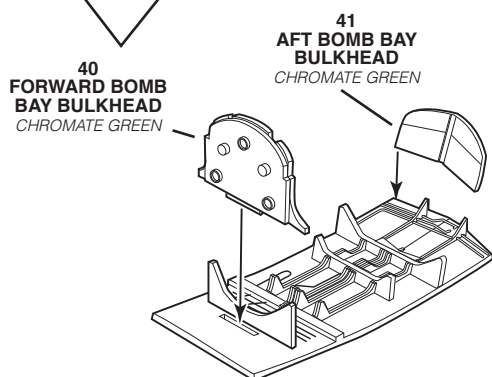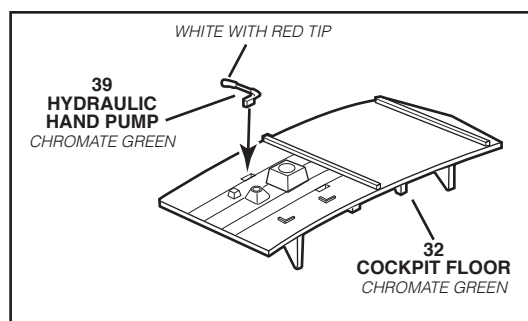



FOR ADVANCED MODELERS, OPTIONAL PHOTO ETCHED METAL PARTS, IF NOT USING PILOT SHOWN IN STEP 3.

This kit contains photo etched parts for added realism. Use a sharp knife to remove the parts from their tree and cut against a hard surface like a piece of glass. Stick a piece of tape to the back of the photo etch tree so the parts don't fly off and get lost. Carefully sand the photo etch pieces to remove any remnants of their mounting points. Some photo-etched parts will need to be sanded to fit properly. To attach the photo etched pieces to your model, use a toothpick or piece of wire to apply a small amount of CA superglue, two-part epoxy, or clear enamel paint to your model. Then the photo etched pieces can be put into place using tweezers or a toothpick dipped in candle wax.

PHOTO ETCHED METAL PARTS

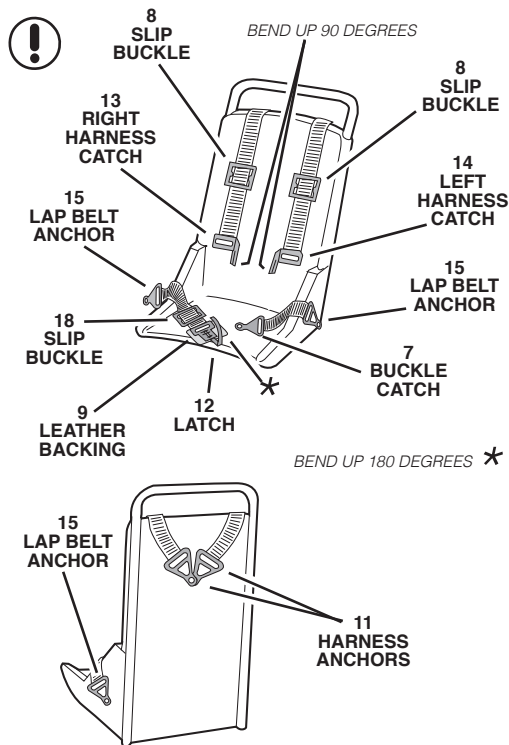


MAKE HARNESES AND LAP BELTS FROM STRIPS OF PAPER

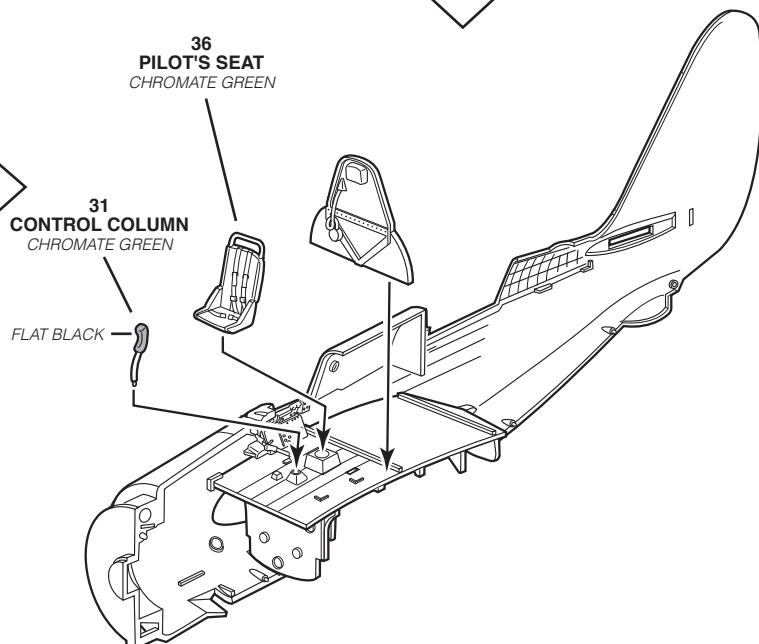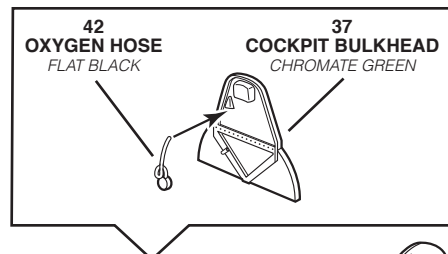




1

FRONT COCKPIT ASSEMBLY CONTINUED

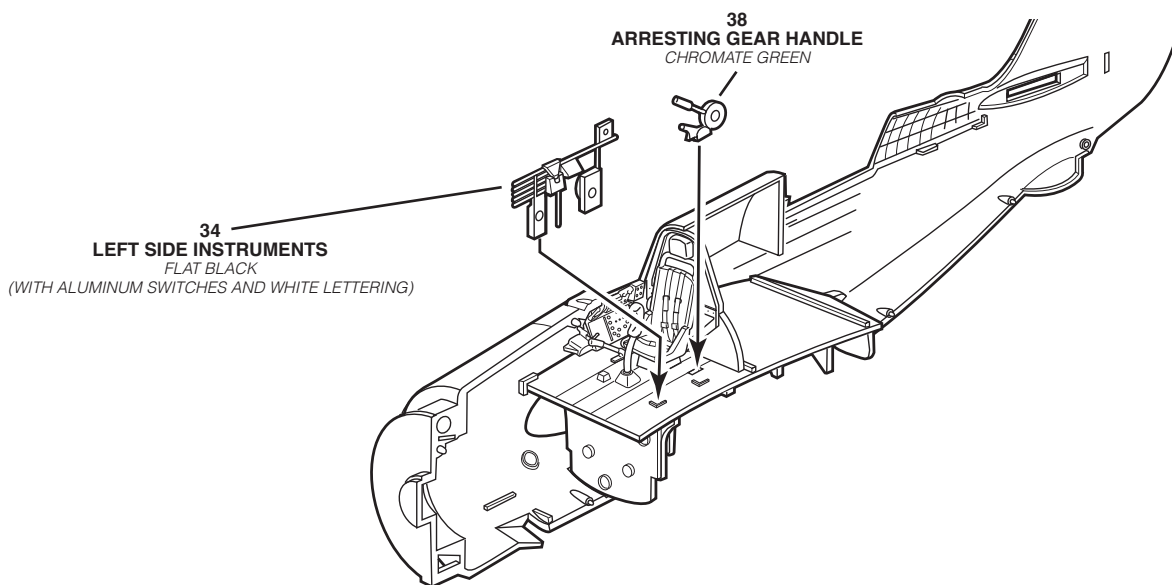


2

REAR COCKPIT ASSEMBLY

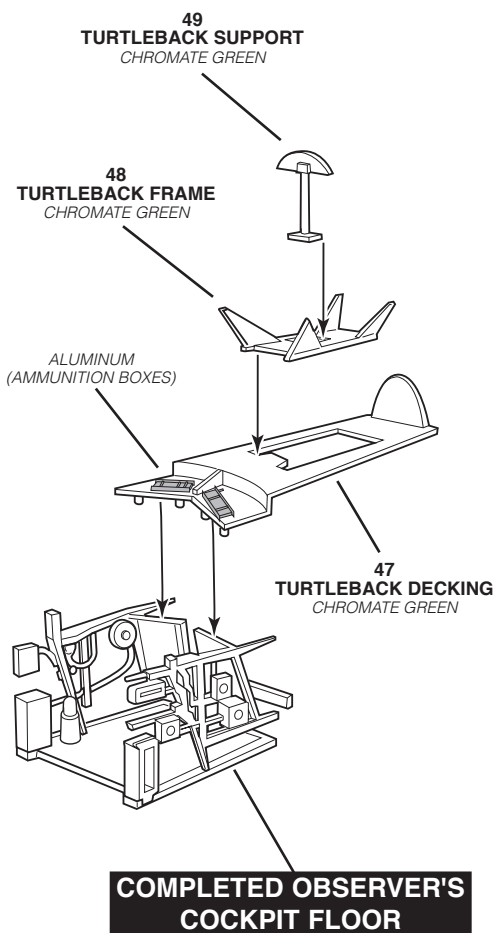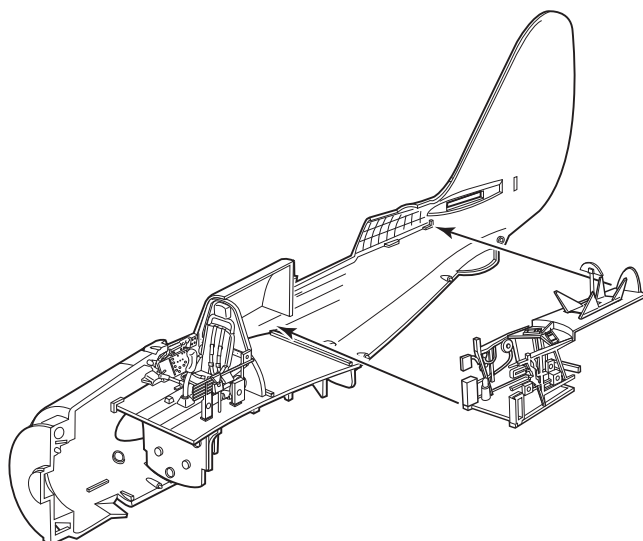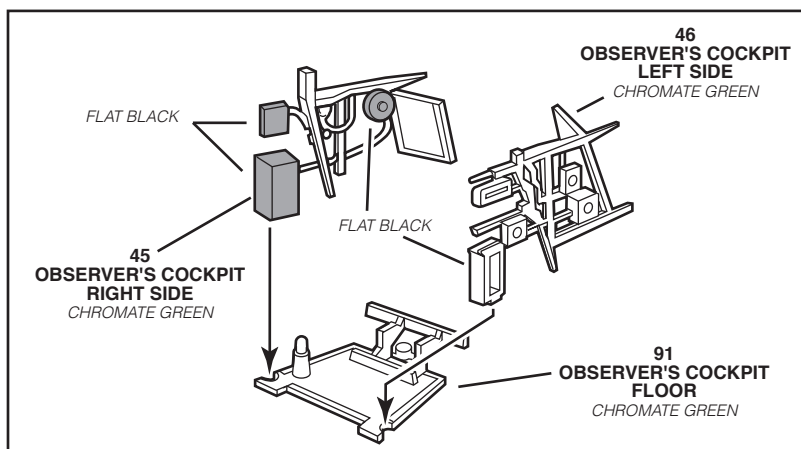

3


PILOT / FUSELAGE ASSEMBLY

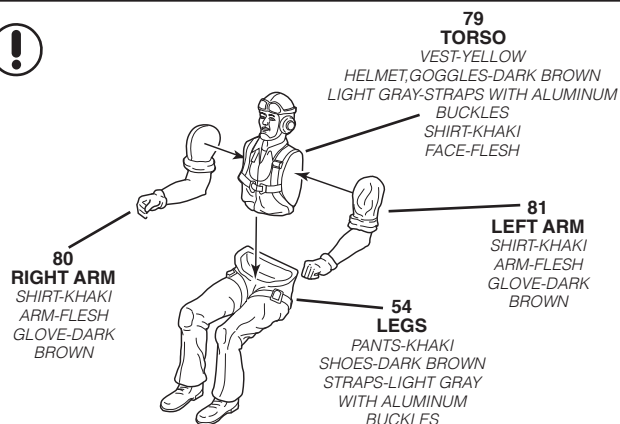

43 RADIO AND RADAR EQUIPMENT
FLAT BLACK

89 OIL COOLER INNER BOX
CHROMATE GREEN


90 OIL COOLER FRONT PANEL
CHROMATE GREEN

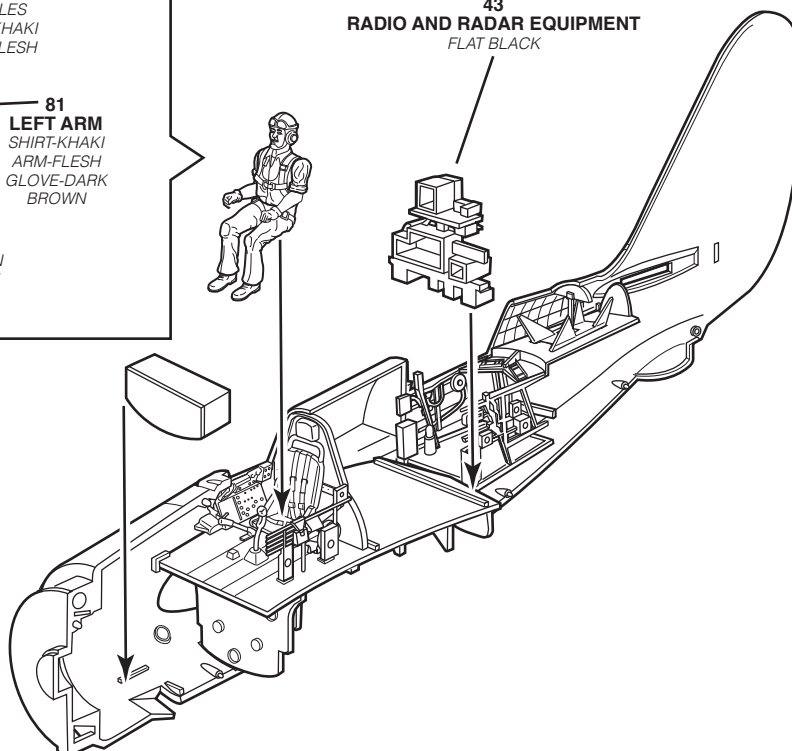

21 ARRESTING HOOK
FLAT BLACK

35 PILOT'S INSTRUMENT PANEL
FLAT BLACK
(NEEDLES AND LETTERING-OFF WHITE)


2 FUSELAGE HALF
CHROMATE GREEN
(INTERIOR ONLY)

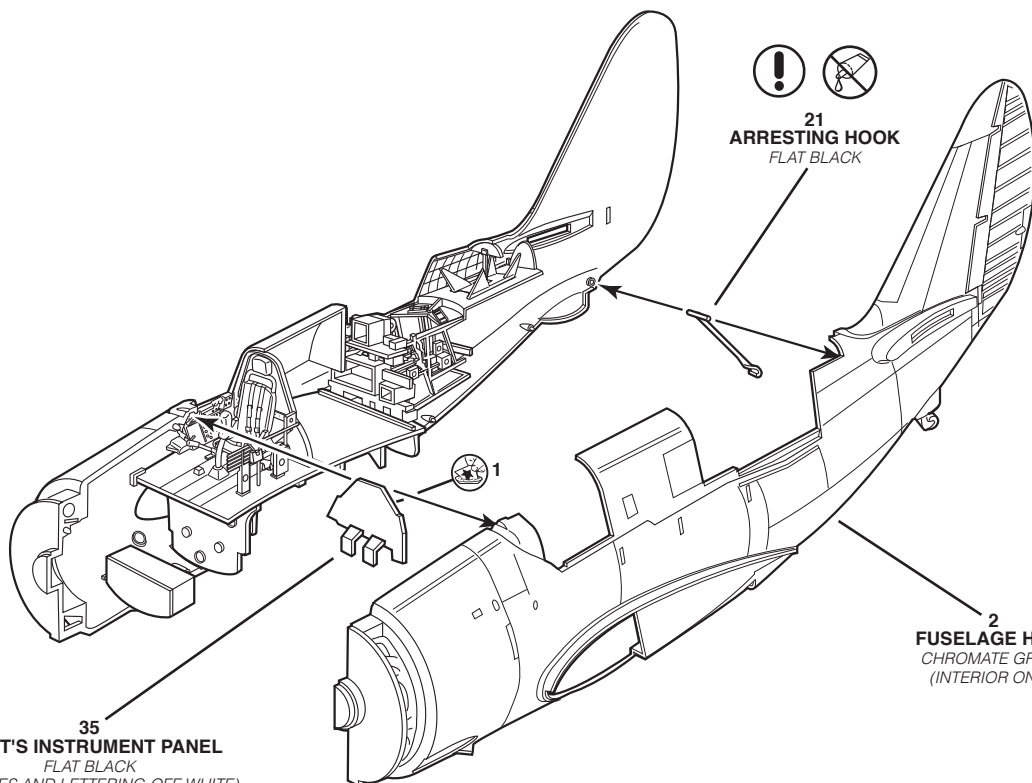

4

ENGINE ASSEMBLY


ENGINE REAR VIEW

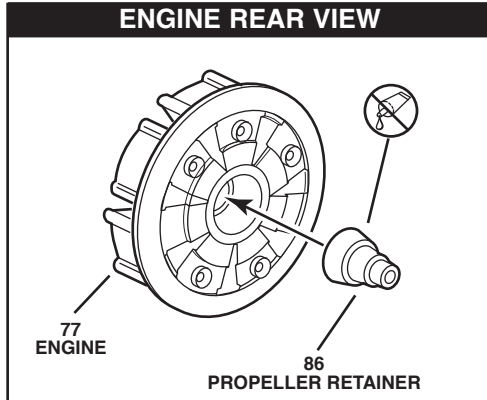

78 CARBURETOR AIR FILTER CONTROL
GRAY


19 HARNESS WIRING
STEEL
(WITH ALUMINUM RING)

PHOTO ETCHED
METAL PART

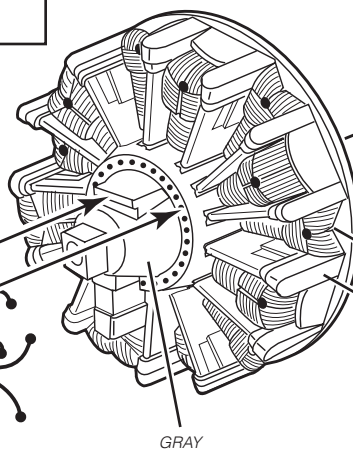


STEEL
SEMI
GLOSS
BLACK

18 RIGHT EXHAUST FAIRING

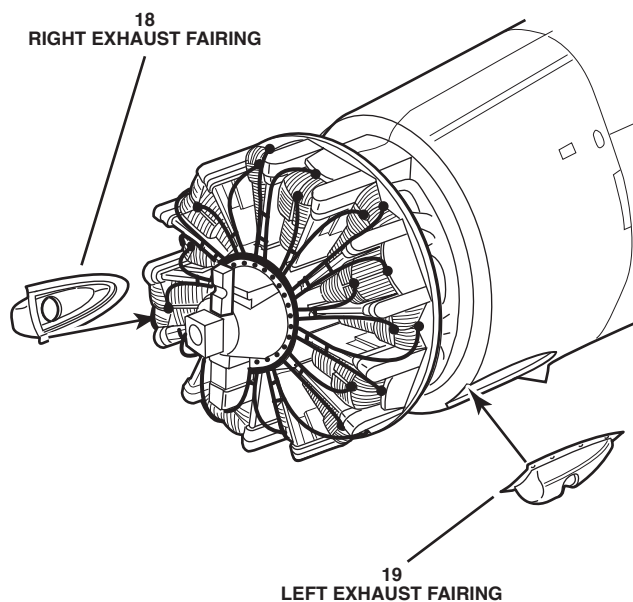


20 EXHAUST STUB
STEEL

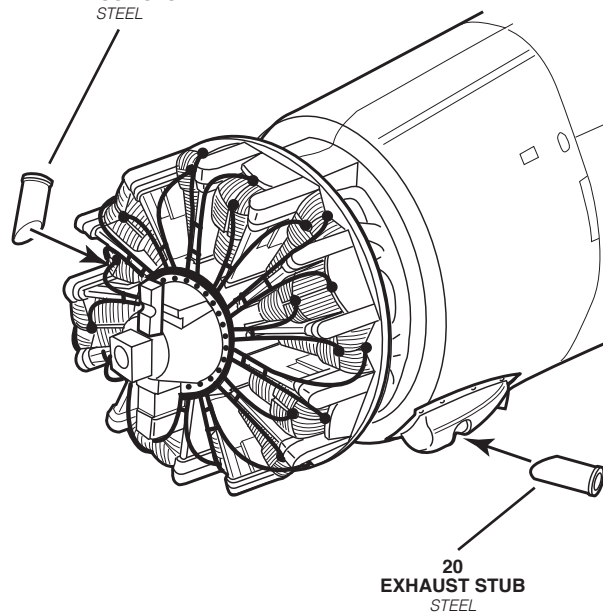

5

BOMB BAY DOOR ASSEMBLY

BOMB BAY DOORS CLOSED

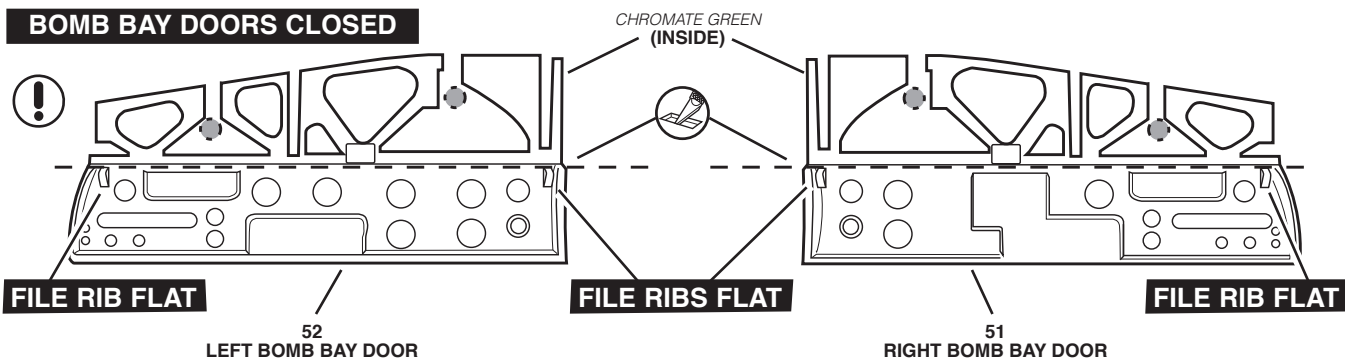


52
LEFT BOMB BAY DOOR

FORWARD




51
RIGHT BOMB BAY DOOR

DOORS OPEN

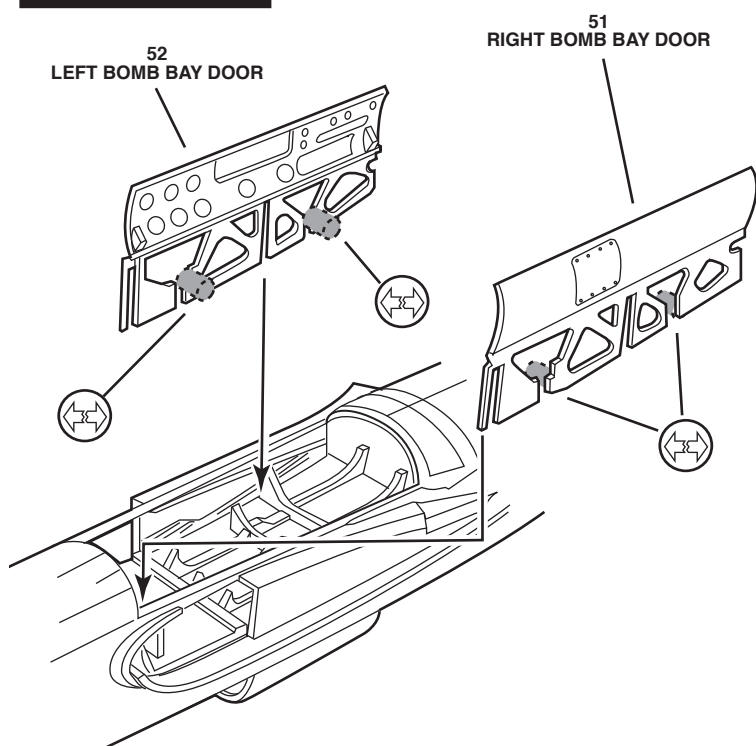






53
ACTUATORS
CHROMATE GREEN

FLAT BLACK STEEL

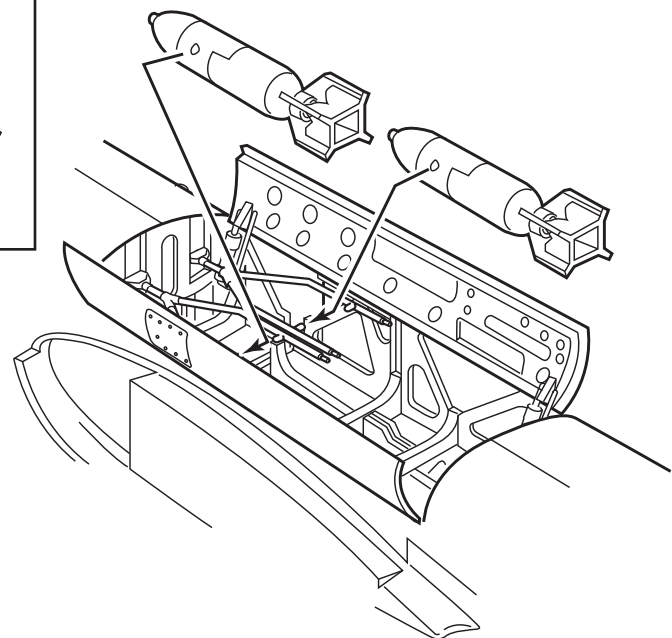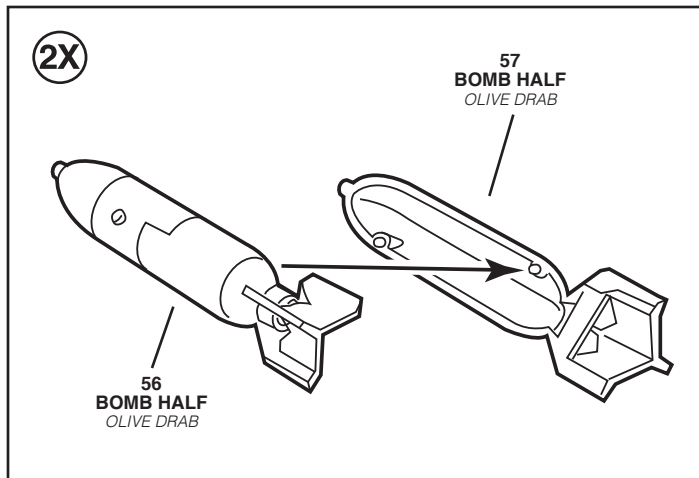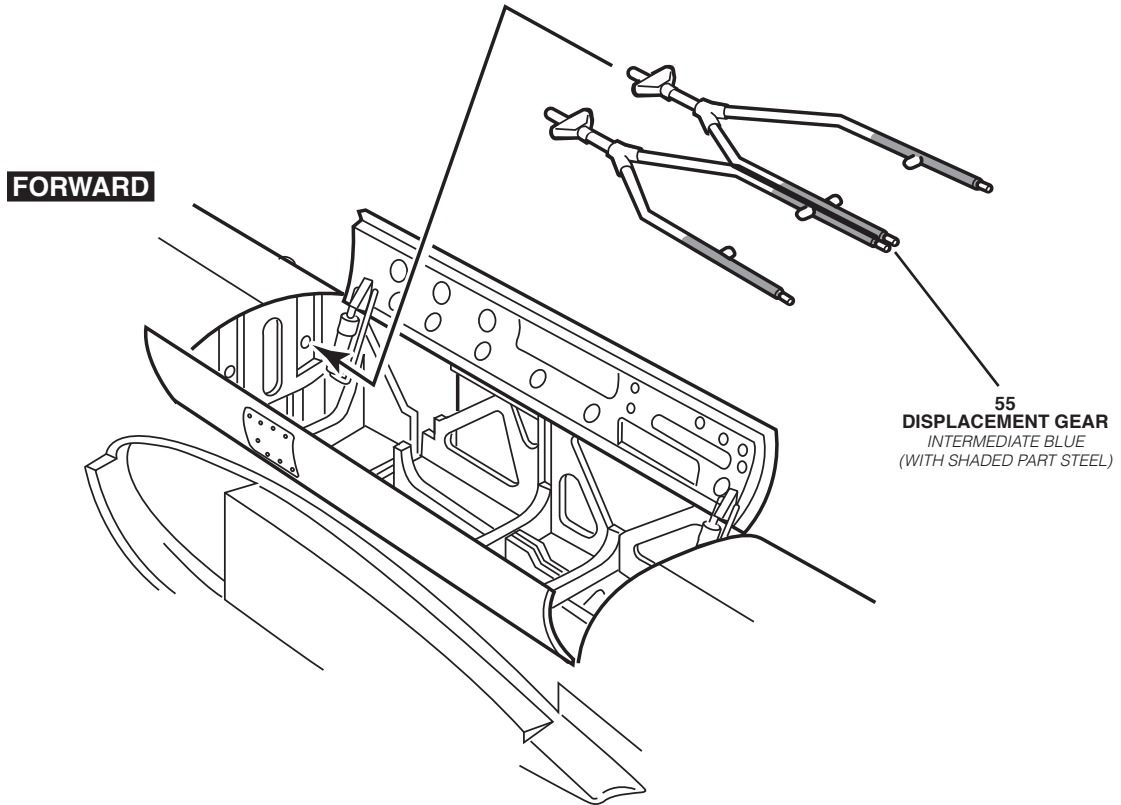


7

WING / STABILIZER ASSEMBLY

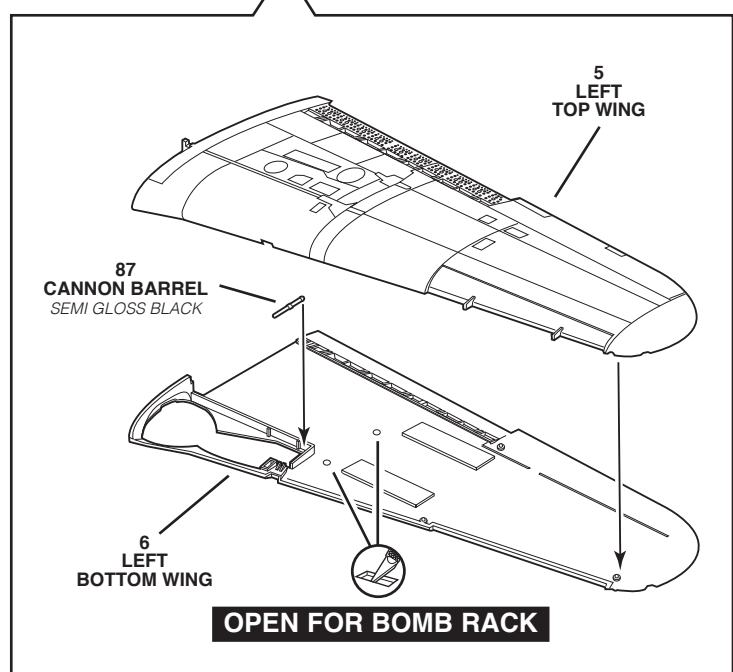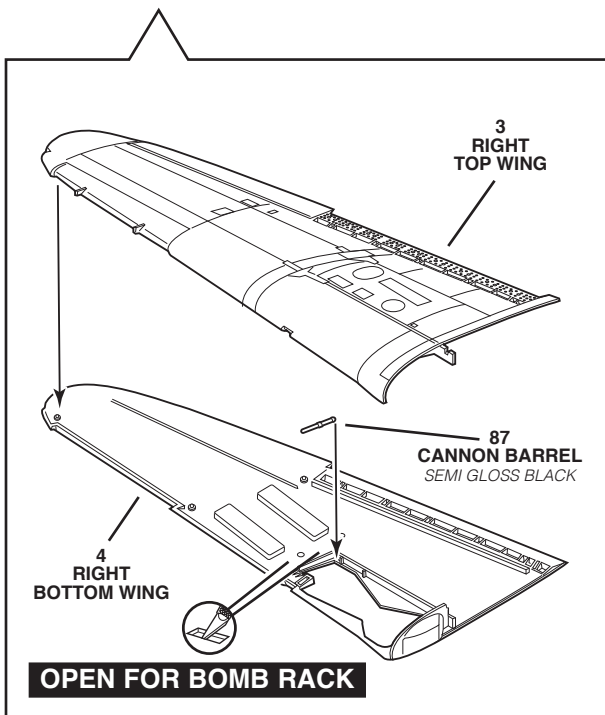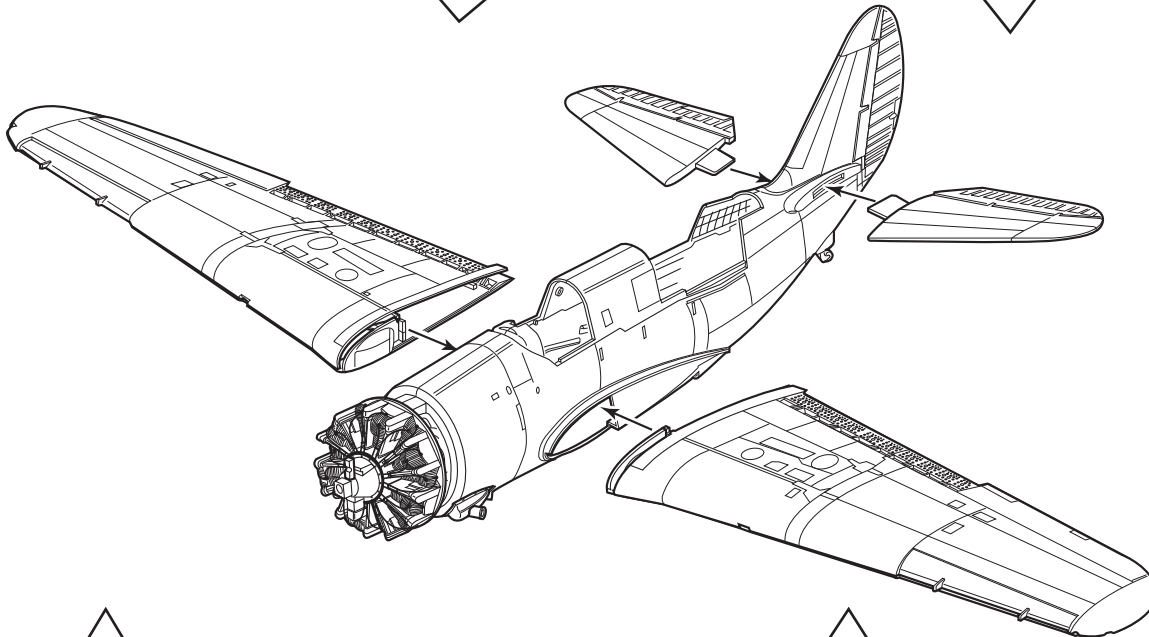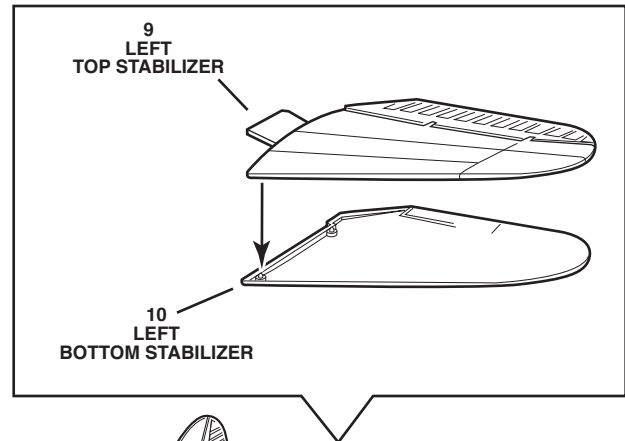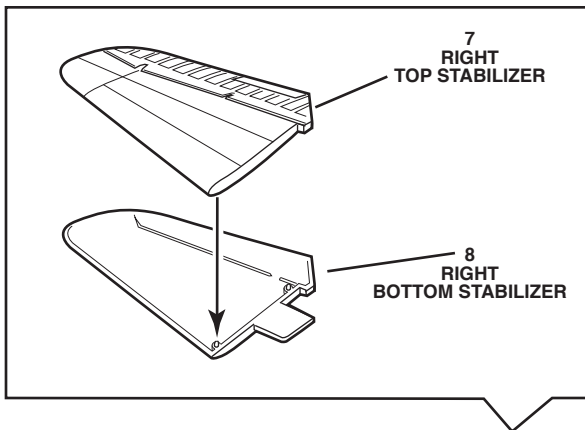


8

STRUT ASSEMBLY

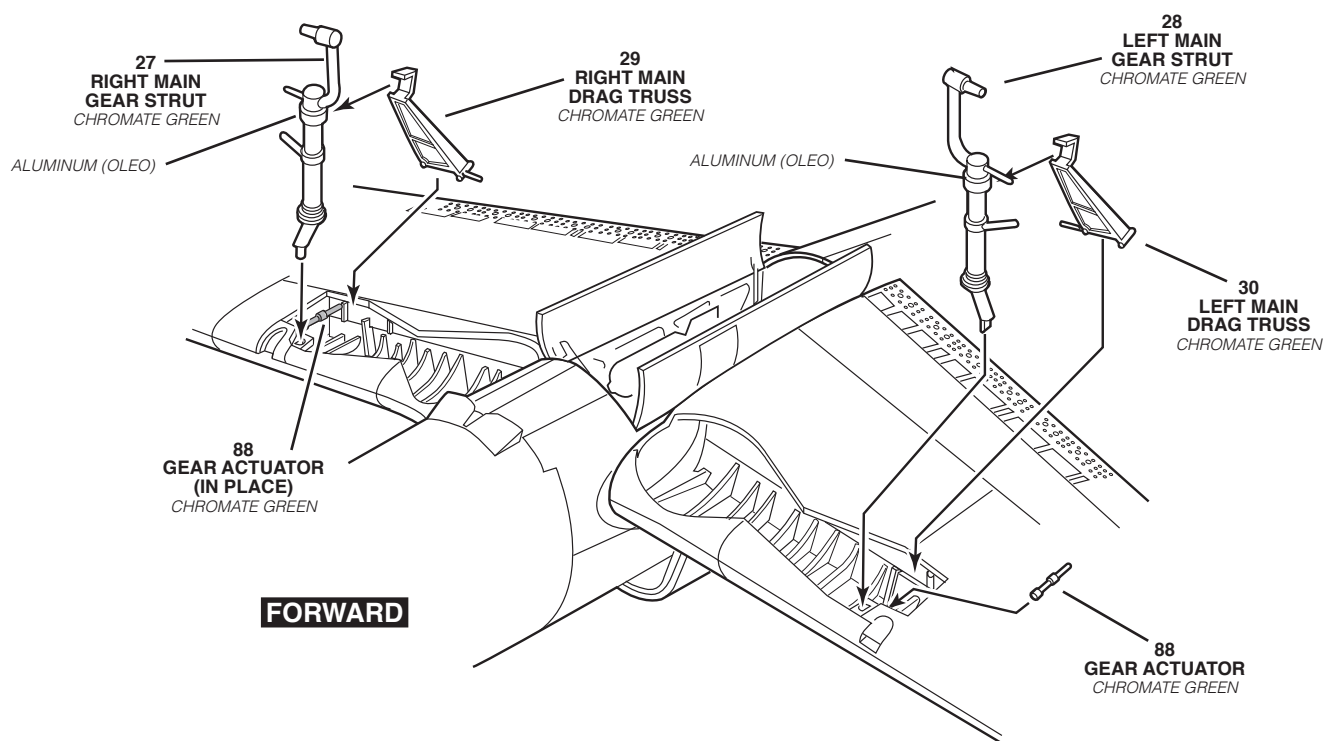

9

WHEEL ASSEMBLY

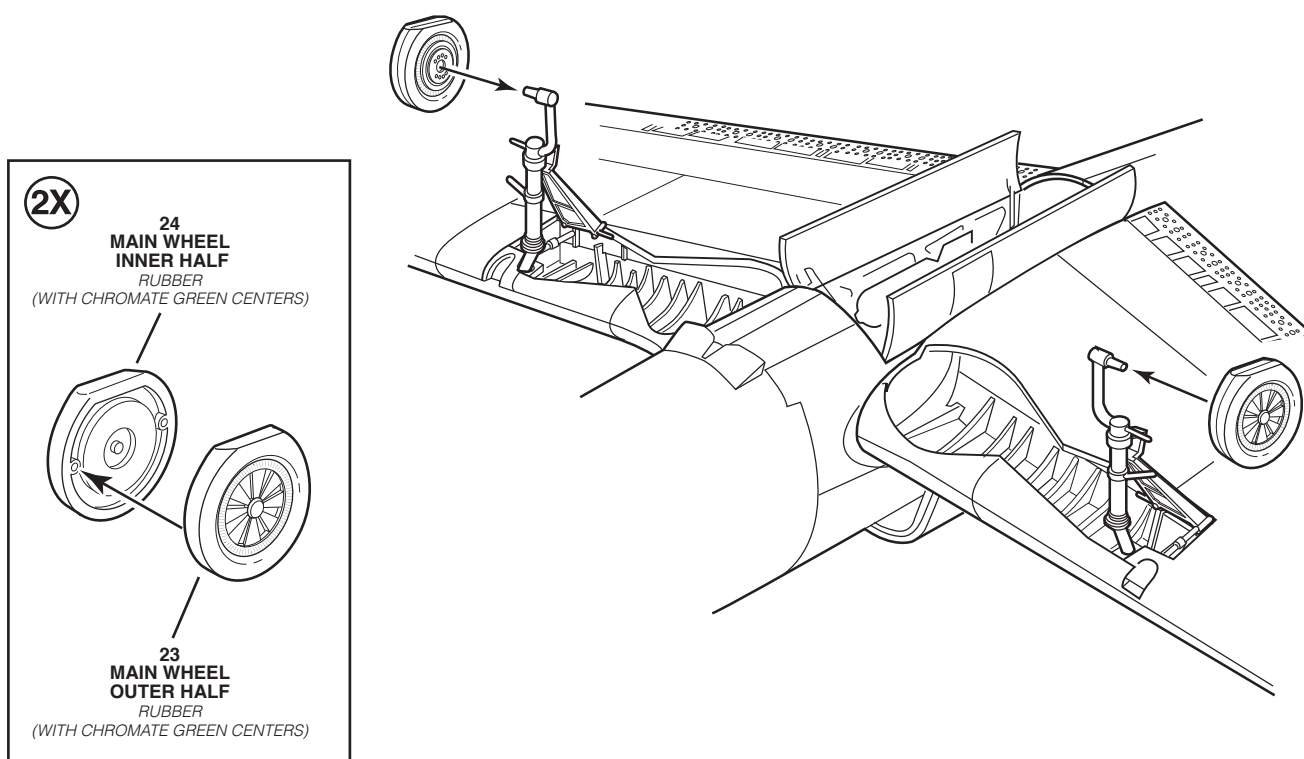



83
LOWER LEFT GEAR DOOR
CHROMATE GREEN
(INTERIOR ONLY)


DOORS OPEN

26
UPPER LEFT GEAR DOOR
CHROMATE GREEN
(INTERIOR ONLY)

82
LOWER RIGHT GEAR DOOR
CHROMATE GREEN
(INTERIOR ONLY)

25
UPPER RIGHT GEAR DOOR
CHROMATE GREEN
(INTERIOR ONLY)

DOORS CLOSED

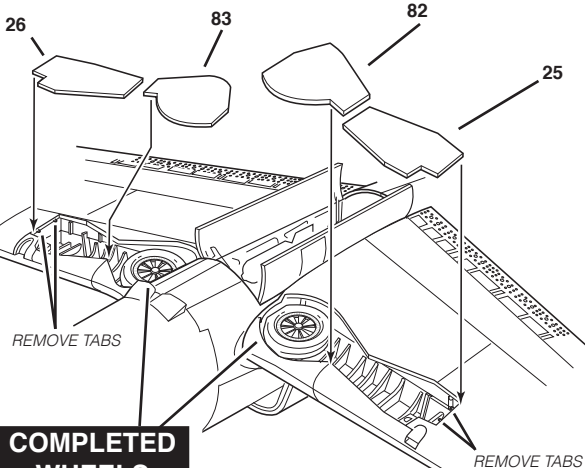

2X

59
ANTI-SWAY BRACE

58
BOMB RACK

2X

16
YAGI ANTENNA

17
ANTENNA MOUNT

71
LEFT FORWARD
ROCKET STUBS

73
LEFT AFT
ROCKET STUBS

70
RIGHT FORWARD
ROCKET STUB


72
RIGHT AFT
ROCKET STUBS

FORWARD

22
CANNON MUZZLES
SEMI GLOSS BLACK

11


FLAP ASSEMBLY

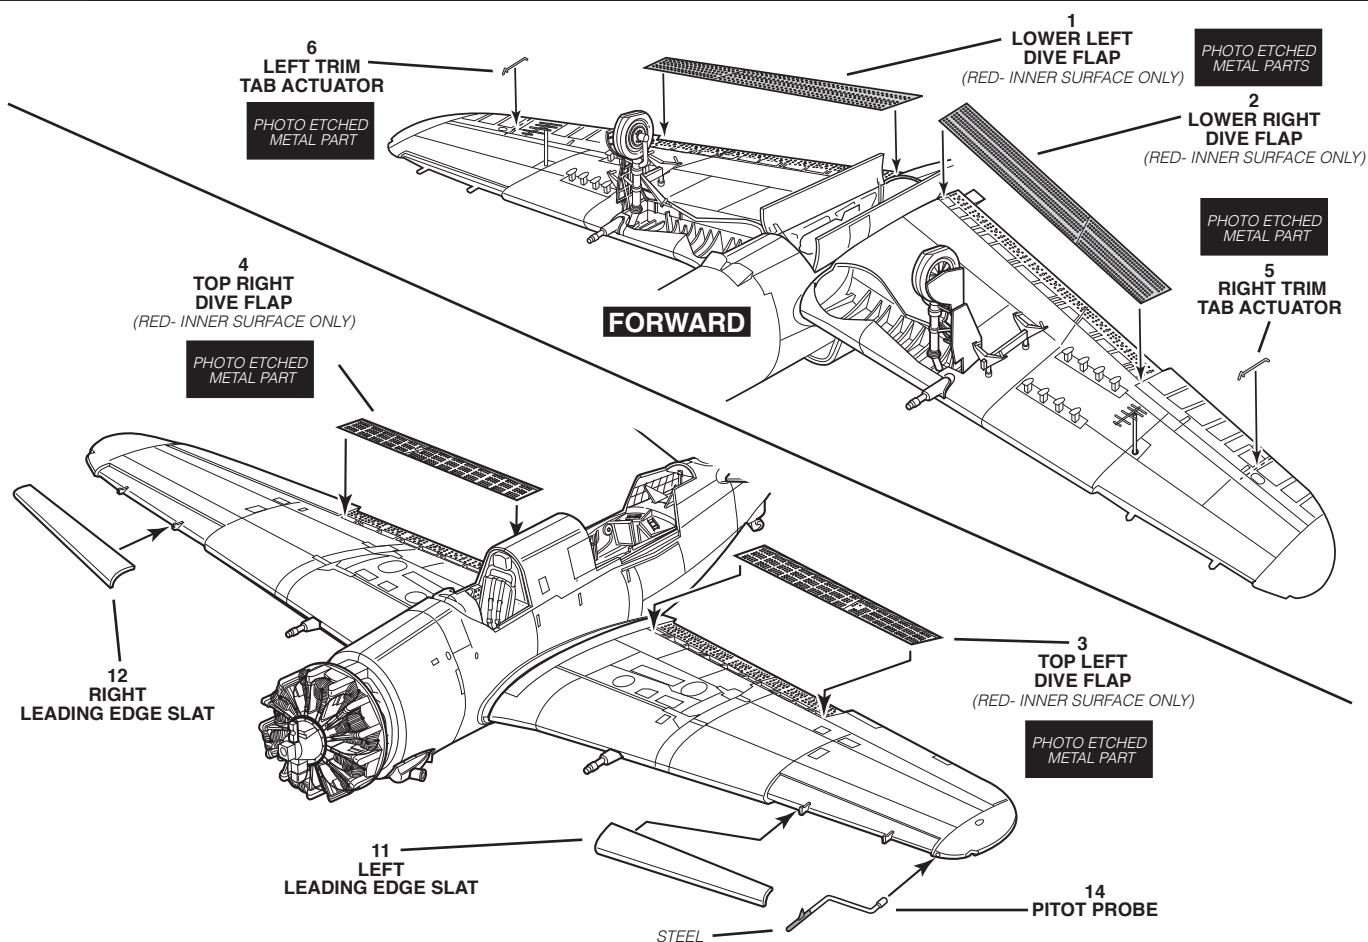


12

FRONT CANOPY ASSEMBLY

CLOSED

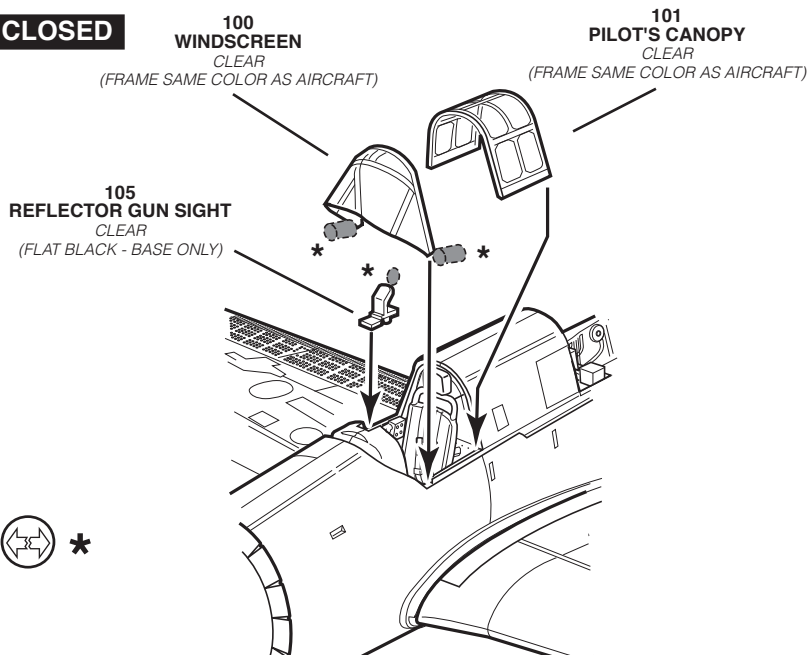


OPEN

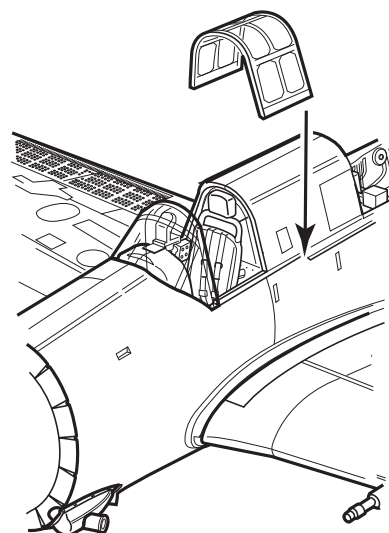


13

FIXED REAR WINDOW ASSEMBLY

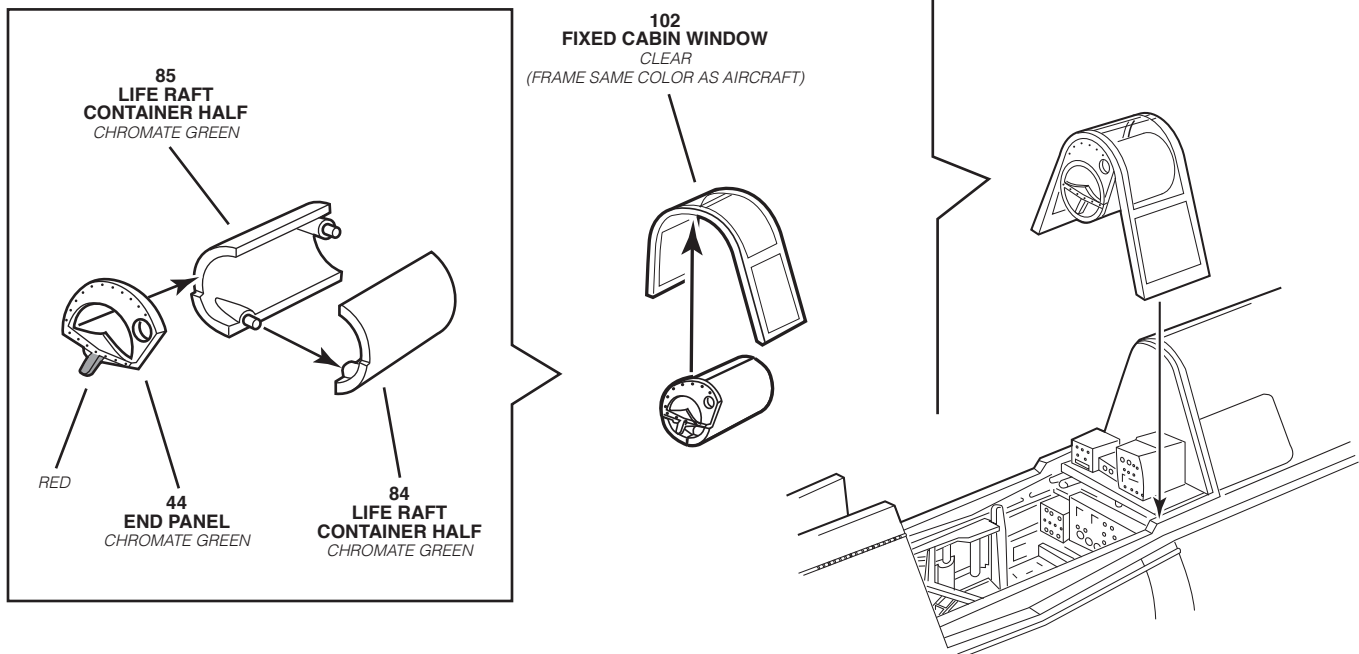

14

GUN ASSEMBLY

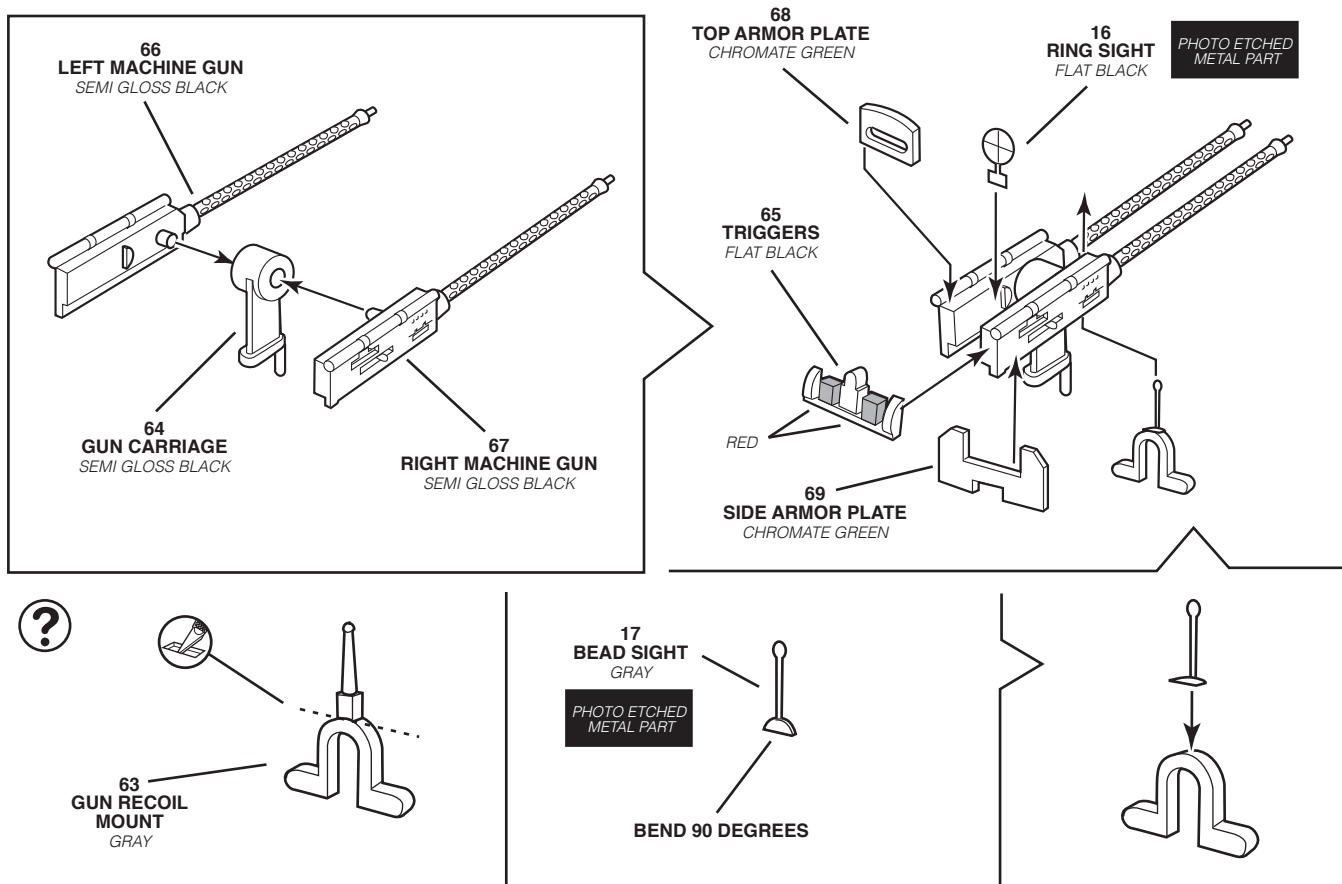

62
OUTER RING
CHROMATE GREEN

10
OUTER RING
CHROMATE GREEN

PHOTO ETCHED
METAL PART

60
INNER RING
CHROMATE GREEN

61
SEAT
CHROMATE GREEN

PHOTO ETCHED
METAL PART

MAKE BELTS
FROM STRIPS OF
PAPER

15
ANCHOR
(NOT VISIBLE)

18
SLIP BUCKLE

7
BUCKLE CATCH


9
LEATHER
BACKING

12
LATCH

FOLD UP 180 DEGREES

15
ANCHOR

COMPLETED GUN

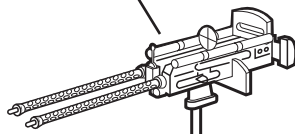


104
TURTLEBACK WINDOW
CLEAR
(FRAME SAME COLOR AS AIRCRAFT)



16



OBSERVER'S CANOPY ASSEMBLY

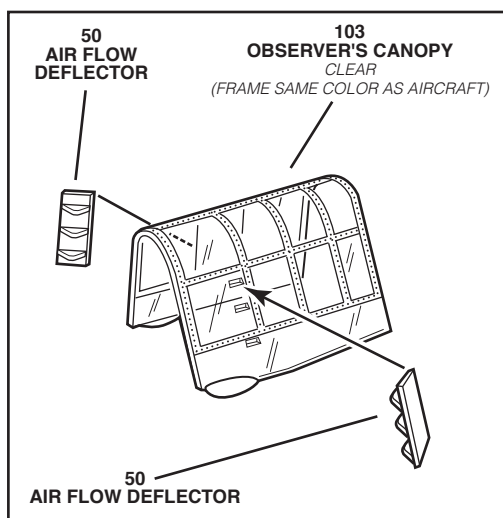

CLOSED






OPEN

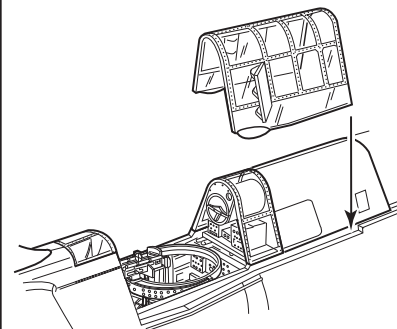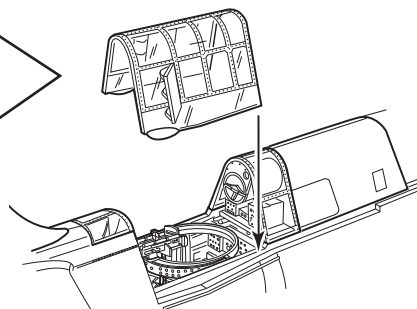


17

PROPELLER ASSEMBLY

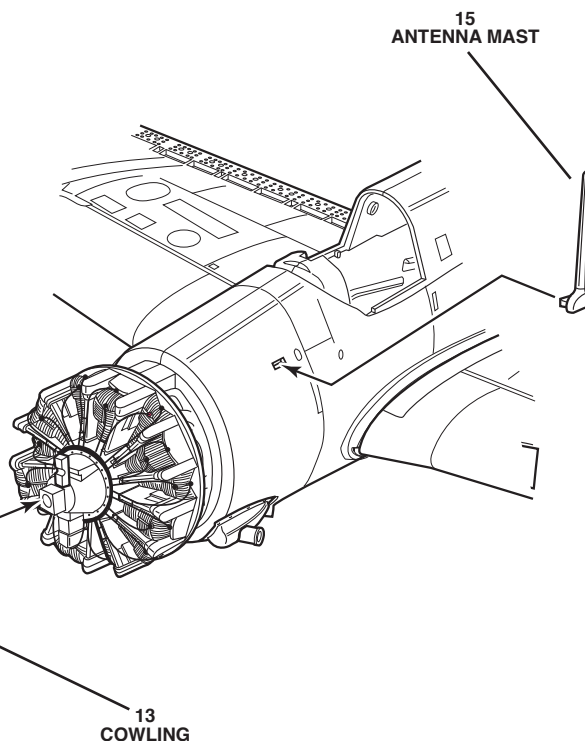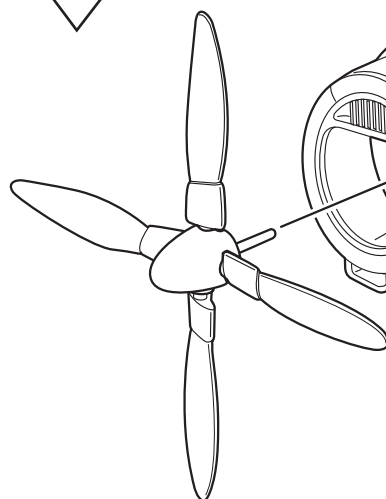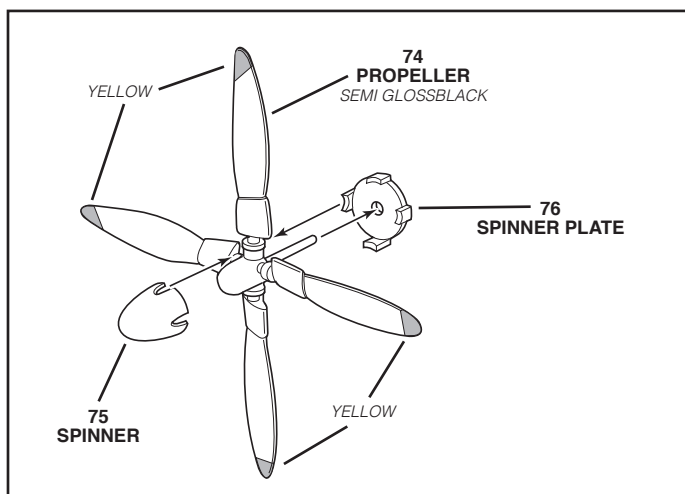

[illegible]


PROPELLER

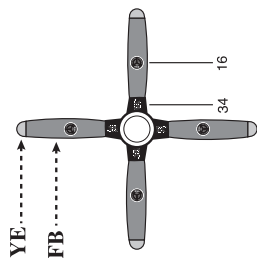


STENCIL LOCATIONS

Use white stencils on blue airplane, and black stencils on white areas of tri-color plane.


RIGHT SIDE

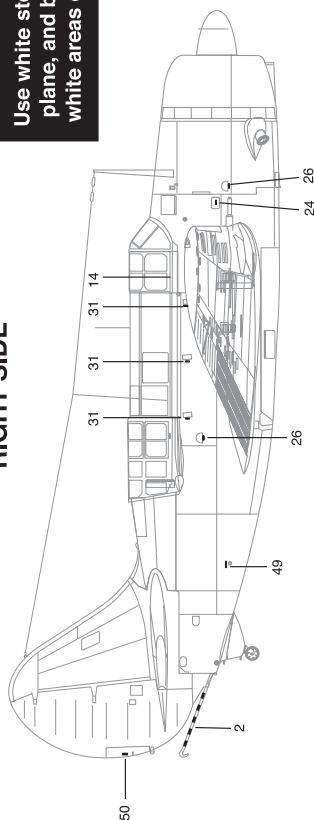


TOP VIEW

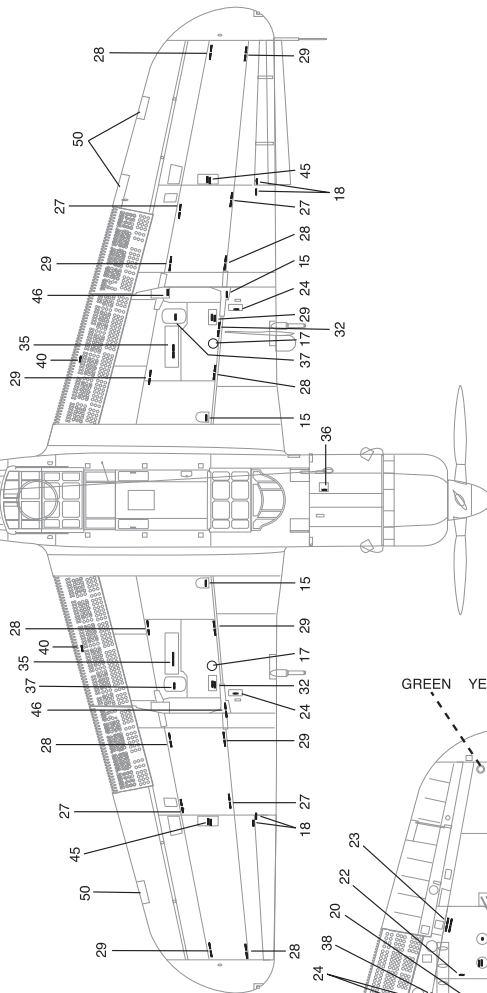

BOTTOM VIEW

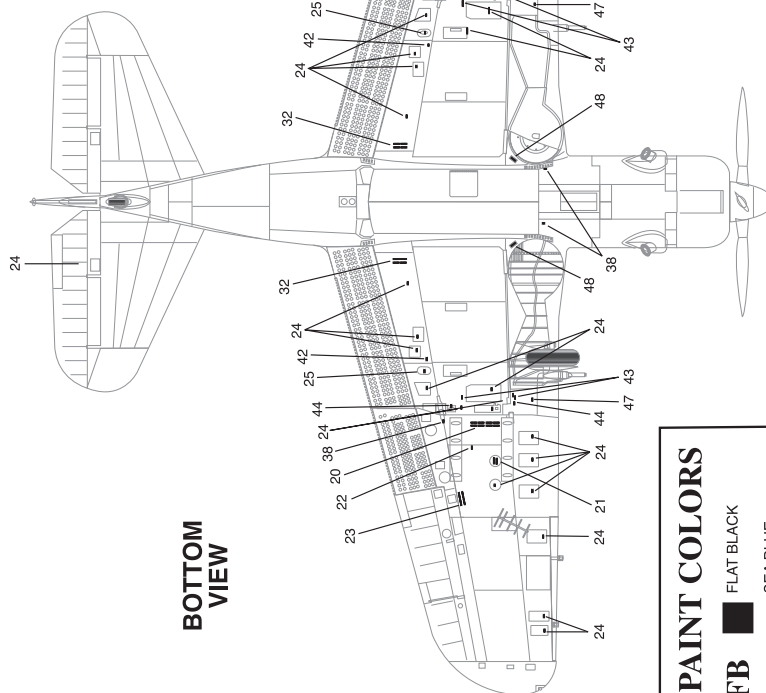

LEFT SIDE

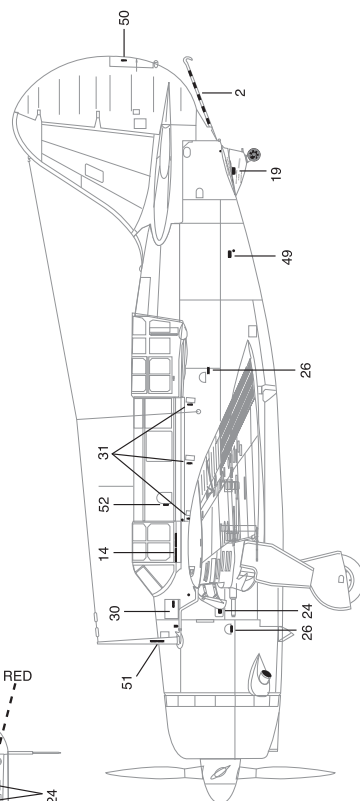

NOTE: Although the stencilling was applied to the aircraft when new, often it was overpainted after delivery to the squadrons or when a new scheme was adopted.

PAINT COLORS

FB	FLAT BLACK
SB	SEA BLUE FS 35042
IB	INTERMEDIATE BLUE FS 35164
WH	FLAT WHITE
YE	YELLOW FS 13538