



## TECHNICAL NOTICE FOR CESSNA 310 (TOPA0910)


On page 20, **INSTALL THE LANIDNG GEAR, STEP 4** and on page 22, **RETRACTABLE LANDING GEAR, STEP 4** you are instructed to insert the pull pull wire into the nylon tubes. In a few kits the manufacturer neglected to install the tubes. The following outlines how you can install the tubes.

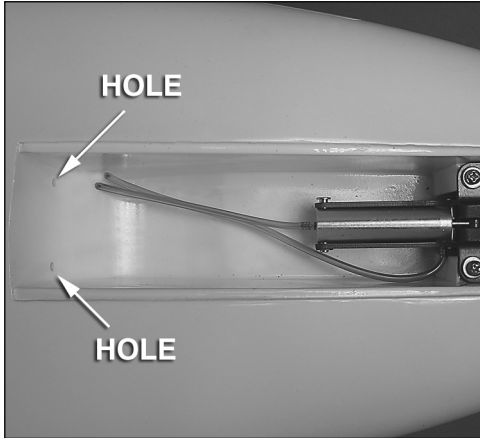

1. Located at the rear of the nose wheel compartment, are two small holes. Slide a tube into each hole.

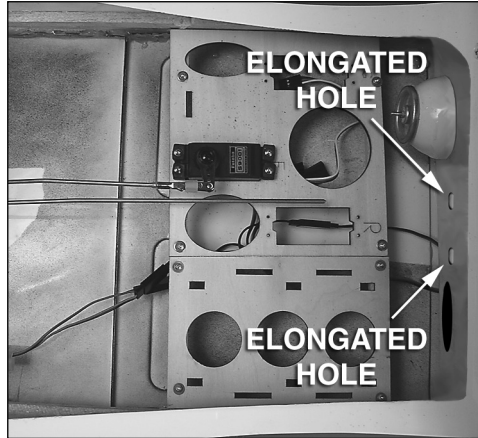

2. On the forward bulkhead you will see two elongated holes. Slide the tubes forward so they extend past the bulkhead approximately 1/4" [6mm].

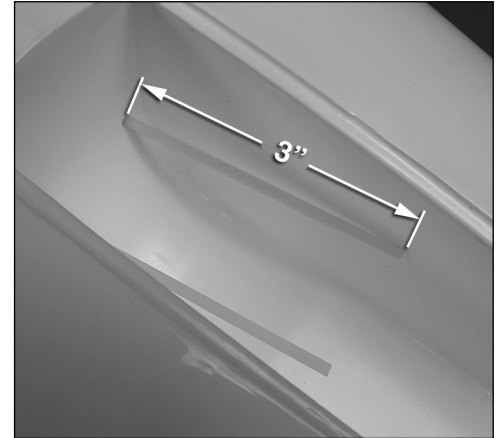

3. This should leave approximately 3" [76mm] of the tube extending into the nose wheel compartment. Secure the tubes to the hole in the nose wheel compartment with a couple of drops of thin CA. Do not glue the tubes to the elongated hole in the plywood bulkhead.