


# F4U CORSAIR

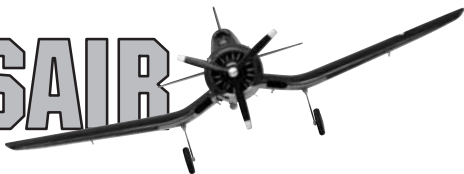

## INSTRUCTION MANUAL ADDENDUM

### Page 23, Step 8

Note that the **mounting screw hole doublers** included with this kit are plastic, not wood as shown in the photo. Medium CA should still be used to glue the doublers into position, **but first** use medium-grit sandpaper to roughen the inside of the cowl and the plastic doublers.