

Great Planes Ultra Sport + Product Improvement Sheet

Introduction

The first run of Ultra Sport Plus kits inadvertently was shipped with the wrong main landing gear wire. The 5/32" steel wire labeled as WBNT315 (main gear wire) has one leg that is longer than it should be. The length of the legs should be: 3-1/3" (85mm) for the short leg and 3-15/16" (100mm) for the long leg. Please check if your main landing gear wire is of the correct dimensions. If it is not, you will need to following in order to be able to use this landing gear wire in your kit.


Fix for the Main Landing Gear Wire (WBNT315)



- ❑ 1. Cut the long leg of the wire at the bend as indicated above on both landing gear wires.



- ❑ 2. Draw a line 1-1/4" [32mm] away from the end of the long leg as indicated above on both main landing gear wires.

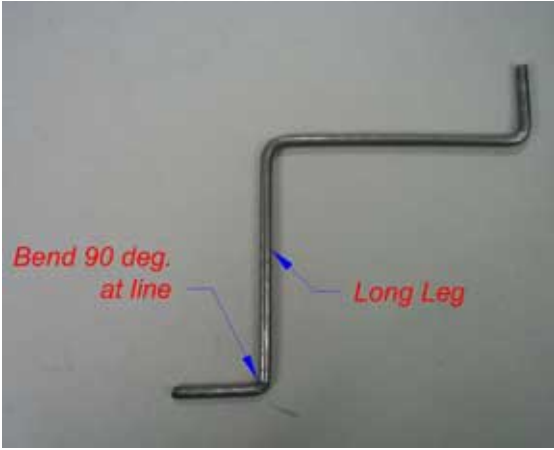

□ 3. Bend each wire 90 degrees at the line as shown above. Install the wire as per instructions. The bend just made goes into the wing mounting blocks.