


EP YAK 55 3D ARF

INSTRUCTION MANUAL

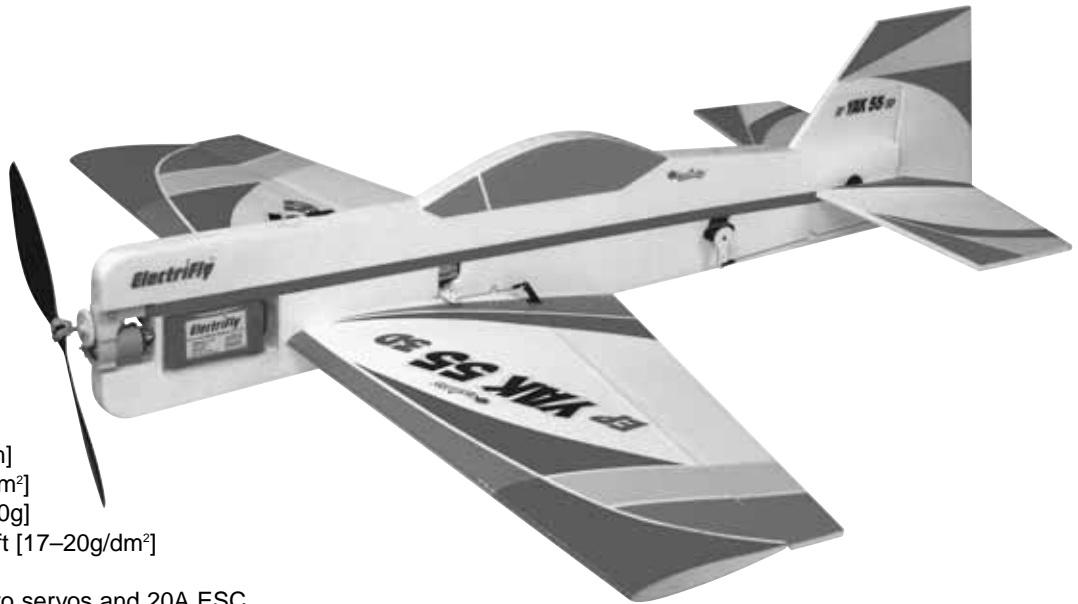

Wingspan: 33.5 in [850mm]
Wing Area: 297 sq in [19dm²]
Weight: 12–14 oz [330–380g]
Wing Loading: 6–7 oz/sq ft [17–20g/dm²]
Length: 33 in [840mm]
Radio: 4-channel w/ 3 micro servos and 20A ESC
Power System: Ball-bearing 280-sized motor, 5:1 reduction gearbox

WARRANTY

Great Planes® Model Manufacturing Co. guarantees this kit to be free from defects in both material and workmanship at the date of purchase. This warranty does not cover any component parts damaged by use or modification. **In no case shall Great Planes' liability exceed the original cost of the purchased kit.** Further, Great Planes reserves the right to change or modify this warranty without notice.

In that Great Planes has no control over the final assembly or material used for final assembly, no liability shall be assumed nor accepted for any damage resulting from the use by the user of the final user-assembled product. By the act of using the user-assembled product, the user accepts all resulting liability.

If the buyer is not prepared to accept the liability associated with the use of this product, the buyer is advised to return this kit immediately in new and unused condition to the place of purchase.

To make a warranty claim send the defective part or item to Hobby Services at the address below:

Hobby Services
3002 N. Apollo Dr., Suite 1
Champaign, IL 61822
USA

Include a letter stating your name, return shipping address, as much contact information as possible (daytime telephone number, fax number, e-mail address), a detailed description of the problem and a photocopy of the purchase receipt. Upon receipt of the package the problem will be evaluated as quickly as possible.

READ THROUGH THIS MANUAL BEFORE STARTING CONSTRUCTION. IT CONTAINS IMPORTANT INSTRUCTIONS AND WARNINGS CONCERNING THE ASSEMBLY AND USE OF THIS MODEL.



Champaign, IL
(217) 398-8970, Ext. 5
airsupport@greatplanes.com

TABLE OF CONTENTS

INTRODUCTION	2
AMA	2
SAFETY PRECAUTIONS	2
LITHIUM BATTERY HANDLING & USAGE	3
ADDITIONAL ITEMS REQUIRED	3
Radio Equipment & Electronics	3
Adhesives & Building Supplies	3
Optional Supplies & Tools	3
IMPORTANT BUILDING NOTES	4
COMMON ABBREVIATIONS	4
ORDERING REPLACEMENT PARTS	4
KIT CONTENTS	5
METRIC/INCH RULER	5
BUILDING INSTRUCTIONS	6
Join the Wing Halves	6
Prepare the Fuselage	6
Assemble the Stabilator	6
Assemble the Fin & Rudder	7
Join the Wing to the Fuselage	8
Hinge the Ailerons	8
Install the Servos	8
Install the Control Horns & Pushrods	9
Install the Motor & Speed Control	10
Final Setup	11
Apply the Decals	11
GET THE MODEL READY TO FLY	12
Check the Control Directions	12
Set the Control Throws	12
Balance the Model (C.G.)	12
Balance the Model Laterally	13
PREFLIGHT	13
Identify Your Model	13
Charge the Batteries	13
Balance the Propellers	13
Range Check	13
MOTOR SAFETY PRECAUTIONS	14
AMA SAFETY CODE (excerpts)	14
CHECK LIST	14
FLYING	15
Launch	15
Flight	15
Landing	15
Troubleshooting	Back Cover Page

INTRODUCTION

The YAK 55 EP 3D ARF is an excellent way to enjoy 3D aerobatics without the cost and headaches of giant-scale gasoline-powered models. A couple of hours on the workbench, and your YAK 55 ARF will be ready to tackle torque rolls, walls, harriers, high-alpha rolling circles, and more! This airplane is a virtually unlimited 3D aerobat, but flying it only involves plugging in the battery, throttling up, and letting go!

Take care to build straight and true as you complete the airplane. Misaligned parts will hurt the airplane's ability to perform the extreme aerobatics it is designed for.

For the latest technical updates or manual corrections to the YAK 55 ARF visit the Great Planes web site at www.greatplanes.com. Open the "Airplanes" link, then select the YAK 55 ARF. If there is new technical information or changes to this model a "tech notice" box will appear in the upper left corner of the page.

AMA

We urge you to join the AMA (Academy of Model Aeronautics) and a local R/C club. The AMA is the governing body of model aviation and membership is required to fly at AMA clubs. Though joining the AMA provides many benefits, one of the primary reasons to join is liability protection. Coverage is not limited to flying at contests or on the club field. It even applies to flying at public demonstrations and air shows. Failure to comply with the Safety Code (excerpts printed in the back of the manual) may endanger insurance coverage. Additionally, training programs and instructors are available at AMA club sites to help you get started the right way. There are over 2,500 AMA chartered clubs across the country. Contact the AMA at the address or toll-free phone number below:



Academy of Model Aeronautics
5151 East Memorial Drive
Muncie, IN 47302
Tele: (800) 435-9262
Fax (765) 741-0057
Or via the Internet at:
<http://www.modelaircraft.org>

IMPORTANT!!! Two of the most important things you can do to preserve the radio controlled aircraft hobby are to avoid flying near full-scale aircraft and avoid flying near or over groups of people.

**PROTECT YOUR MODEL, YOURSELF
& OTHERS...FOLLOW THESE
IMPORTANT SAFETY PRECAUTIONS**

1. Your YAK 55 ARF should not be considered a toy, but rather a sophisticated, working model that functions very much like a full-size airplane. Because of its performance capabilities, the YAK 55 ARF, if not assembled and operated correctly, could possibly cause injury to yourself or spectators and damage to property.

2. You must assemble the model **according to the instructions**. Do not alter or modify the model, as doing so may result in an unsafe or unflyable model. In a few cases

the instructions may differ slightly from the photos. In those instances the written instructions should be considered as correct.

3. You must take time to **build straight, true and strong.**

4. You must use an R/C radio system that is in first-class condition, and a correctly sized motor and components throughout the building process.

5. You must correctly install all R/C and other components so that the model operates correctly on the ground and in the air.

6. You must check the operation of the model before **every** flight to insure that all equipment is operating and that the model has remained structurally sound. Be sure to check clevises or other connectors often and replace them if they show any signs of wear or fatigue.

7. If you are not an experienced pilot or have not flown this type of model before, we recommend that you get the assistance of an experienced pilot in your R/C club for your first flights. If you're not a member of a club, your local hobby shop has information about clubs in your area whose membership includes experienced pilots.

8. While this kit has been flight tested to exceed normal use, if the plane will be used for extremely high-stress flying, such as racing, or if a motor larger than one in the recommended range is used, the modeler is responsible for taking steps to reinforce the high-stress points and/or substituting hardware more suitable for the increased stress.

We, as the kit manufacturer, provide you with a top quality, thoroughly tested kit and instructions, but ultimately the quality and flyability of your finished model depends on how you build it; therefore, we cannot in any way guarantee the performance of your completed model, and no representations are expressed or implied as to the performance or safety of your completed model.

Remember: Take your time and follow the instructions to end up with a well-built model that is straight and true.

LITHIUM BATTERY HANDLING & USAGE

WARNING!! Read the entire instruction sheet included with this battery. Failure to follow all instructions could cause permanent damage to the battery and its surroundings, and cause bodily harm!

- ONLY use a Li-Po approved charger. NEVER use a NiCd/NiMH peak charger!
- NEVER charge in excess of 4.20V per cell.

- ONLY charge through the "charge" lead. NEVER charge through the "discharge" lead.
- NEVER charge at currents greater than 1C.
- ALWAYS set charger's output volts to match battery volts.
- ALWAYS charge in a fireproof location.
- NEVER trickle charge.
- NEVER allow the battery temperature to exceed 150°F (65°C).
- NEVER disassemble or modify pack wiring in any way or puncture cells.
- NEVER discharge below 2.5V per cell.
- NEVER place on combustible materials or leave unattended during charge or discharge.
- ALWAYS KEEP OUT OF REACH OF CHILDREN.

ADDITIONAL ITEMS REQUIRED

Radio Equipment & Electronics

(Note: Recommended part numbers are include in parentheses)

- 4-Channel radio
- 3 Sub-micro servos (0.3 oz [9g] or less each) (FUTM0042)
- Micro receiver (FUTL0442-3)
- 6" Servo extension (HCAM2000)
- 12" Servo extension (HCAM2100)
- 20-amp Brushed ESC (GPMP2020)
- 1200–1500mAh 3-series Lithium Polymer battery pack (GPMP0821, GPMP0831)
- Deans Ultra Male plug (WSDM1302)
- Lithium-Polymer Charger (GPMP3150, GPMP3010)

Adhesives & Building Supplies

In addition to common household tools and hobby tools, this is the "short list" of the most important items required to build the YAK 55 ARF. **Great Planes Pro™ CA and Epoxy glue are recommended.**

- 6-minute Epoxy and/or foam safe CA
- 60/40 Tin/lead solder
- Soldering iron
- Covering iron (or household iron)
- Hobby knife with #11 blade

Optional Supplies & Tools

Here is a list of optional tools mentioned in the manual that will help you build the YAK 55 ARF.

- Great Planes C.G. Machine™

IMPORTANT BUILDING NOTES

- When you see the term **test fit** in the instructions, it means that you should first position the part on the assembly **without using any glue**, then slightly modify or *custom fit* the part as necessary for the best fit.
- Whenever the term **glue** is written you should rely upon your experience to decide what type of glue to use. When a specific type of adhesive works best for that step, the instructions will make a recommendation. Since this model is constructed from foam, we recommend the use of foam-safe CA glues and epoxy *only*. **Do not use standard CA glue on this model as it will dissolve the structure.**
- Whenever just **epoxy** is specified you may use **either** 30-minute (or 45-minute) epoxy **or** 6-minute epoxy. When 30-minute epoxy is specified it is **highly** recommended that you use only 30-minute (or 45-minute) epoxy, because you will need the working time and/or the additional strength.

- **Photos** and **sketches** are placed **before** the step they refer to. Frequently you can study photos in following steps to get another view of the same parts.

COMMON ABBREVIATIONS

- Fuse = Fuselage
- Stab = Horizontal Stabilizer
- Fin = Vertical Fin
- LE = Leading Edge
- TE = Trailing Edge
- LG = Landing Gear
- Ply = Plywood
- " = Inches
- mm = Millimeters
- SHCS = Socket Head Cap Screw

ORDERING REPLACEMENT PARTS

Replacement parts for the Great Planes YAK 55 ARF are available using the order numbers in the **Replacement Parts List** that follows. The fastest, most economical service can be provided by your hobby dealer or mail-order company.

To locate a hobby dealer, visit the Hobbico web site at www.hobbico.com. Choose "Where to Buy" at the bottom of the menu on the left side of the page. Follow the instructions provided on the page to locate a U.S., Canadian or International dealer. If a hobby shop is not available, replacement parts may also be ordered from Tower Hobbies at www.towerhobbies.com, or by calling toll free (800) 637-6050.

Parts may also be ordered directly from Hobby Services by calling (217) 398-0007, or via facsimile at (217) 398-7721, but full retail prices and shipping and handling charges will apply. Illinois and Nevada residents will also be charged sales tax. If ordering via fax, include a Visa® or MasterCard® number and expiration date for payment.

Mail parts orders and payments by personal check to:

Hobby Services
3002 N. Apollo Drive, Suite 1
Champaign, IL 61822

Be certain to specify the order number exactly as listed in the **Replacement Parts List**. Payment by credit card or personal check only; no C.O.D.

If additional assistance is required for any reason contact Product Support by e-mail at productsupport@greatplanes.com, or by telephone at (217) 398-8970.

Replacement Parts List


Because the Yak 55 ARF is built as a one-piece airframe, there are no replacement airframe parts available. Replacements for small parts are available, however:

<u>Order Number</u>	<u>Description</u>	<u>How to purchase</u>
	Missing pieces.....	Contact Product Support
	Instruction manual.....	Contact Product Support
	Full-size plans	Not available
GPMG0215	Gear Drive	} Contact Your Hobby Supplier to Purchase These Items
GPMG0860	Replacement Shaft with Spur Gear	
GPMG0239	Pinion Gear	
GPMG0311	Replacement Motor	
GPMQ1682	10x4.75 Propeller	
GPMQ4620	Prop Saver	
GPMA2792	Hardware Bag	
GPMA2793	Decal Set	
GPMG0216	Motor/Gear Drive Assembly	
GPMQ4619	Prop Saver Rubber Bands	

KIT CONTENTS

Before starting to build, take an inventory of this kit to make sure it is complete, and inspect the parts to make sure they are of acceptable quality. If any parts are missing or are not of acceptable quality, or if you need assistance with assembly, contact **Product Support**. When reporting defective or missing parts, use the part names exactly as they are written in the Kit Contents list.


Great Planes Product Support:
3002 N Apollo Drive, Suite 1
Champaign, IL 61822
Telephone: (217) 398-8970, ext. 5
Fax: (217) 398-7721
E-mail: airsupport@greatplanes.com

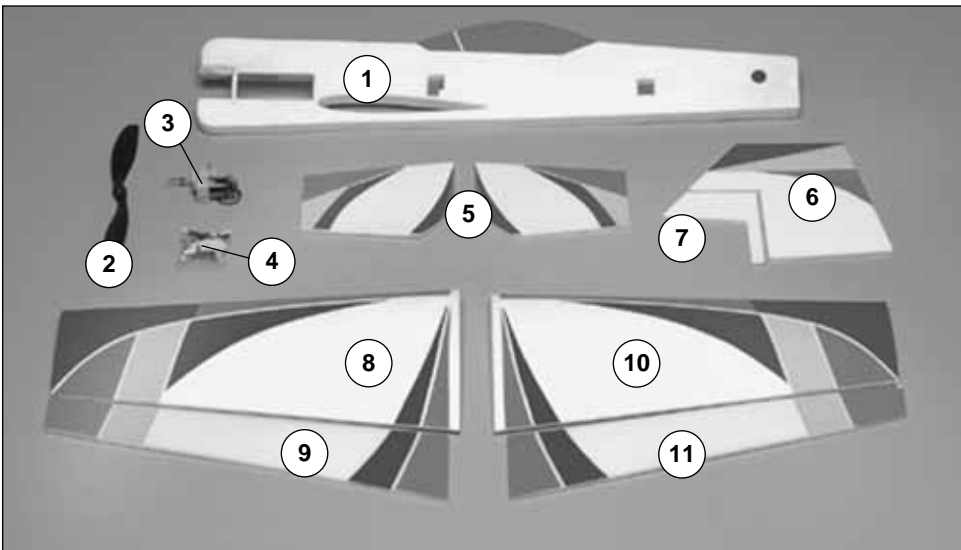

- Kit Contents**
1. Fuselage
 2. Propeller
 3. Motor & Gear Drive
 4. Hardware Bag
 5. Horizontal Stab (L&R)
 6. Rudder
 7. Fin
 8. Left Wing Half
 9. Left Aileron
 10. Right Wing Half
 11. Right Aileron


Kit Contents (not photographed)

- | | |
|--|--|
| <ul style="list-style-type: none"> (3) Control Horns (3) Control Horn Retainers (2) Stabilator Spacer/Control Horns (2) Nylon Pin Hinges (4) Micro FasLinks (5) Propeller Rubber Bands (1) Double-sided Control Horn Extension (2) Single-sided Control Horn Extension (1) Hook and Loop Fastener | <ul style="list-style-type: none"> (1) Elevator Pushrod (1) Rudder Pushrod (2) Aileron Pushrods (1) Prop Saver (1) Tape |
|--|--|

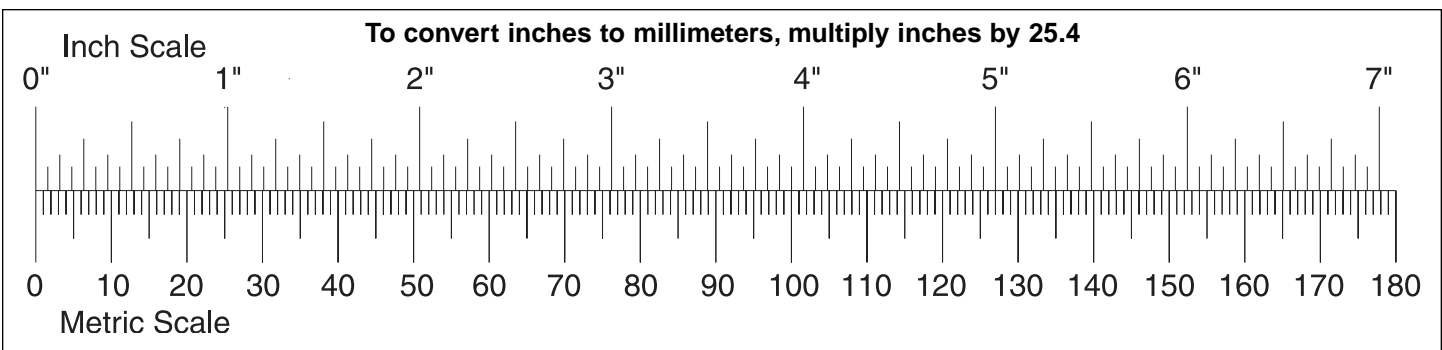


BUILDING INSTRUCTIONS


Join the Wing Halves

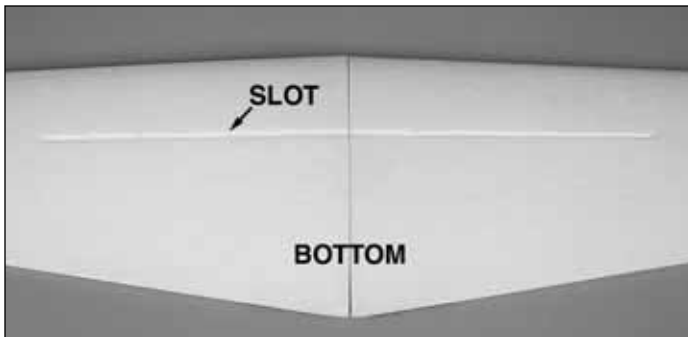

- 1. Glue the two wing halves together, making sure to align the root sections.


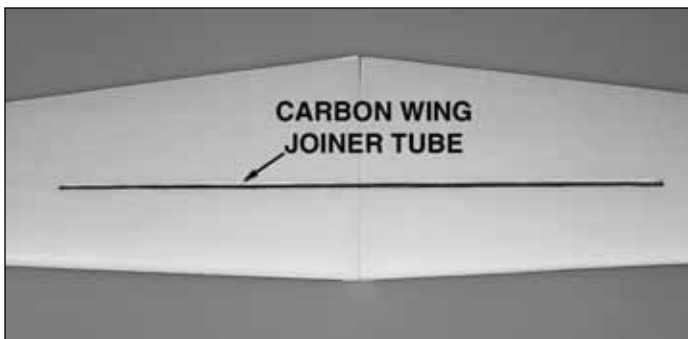


- 2. Glue the carbon wing joiner tube into the slot on the bottom of the wing. Make sure it is fully seated in the slot.

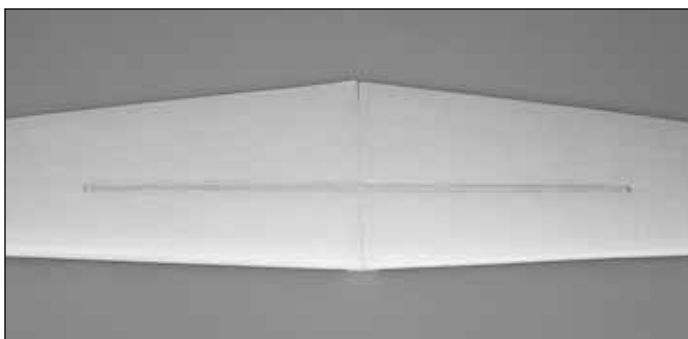

- 3. Glue the foam inserts into the wing slot over the carbon joiner. Make sure they are fully seated against the joiner. The foam inserts will not be flush with the bottom of the wing.

Prepare the Fuselage

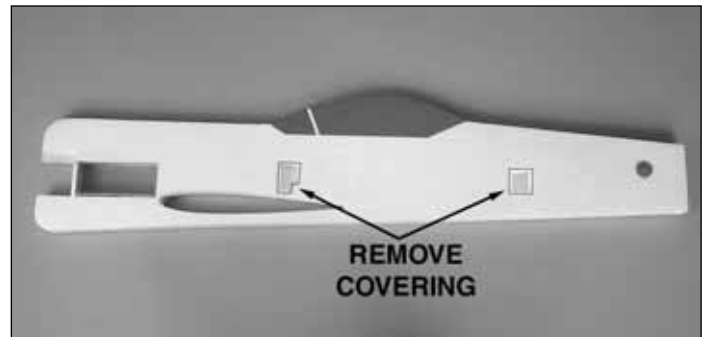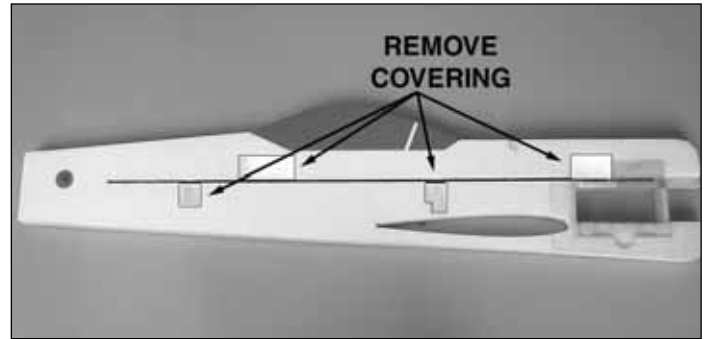


- 1. Cut away the covering from the fuse in the openings shaded above.


Assemble the Stabilator




- 1. Slide a control horn/spacer onto the stab joiner. Do not glue it in place yet.

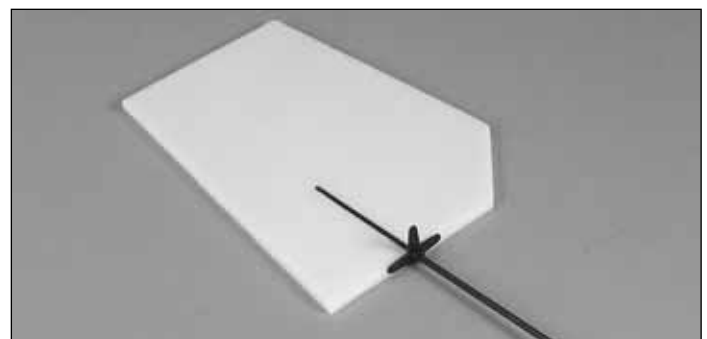


- 2. Use 6-minute epoxy to glue the joiner into the bottom of one stabilator half. Slide the flat side of a control horn/spacer against the stabilator. Glue it to the stabilator half.

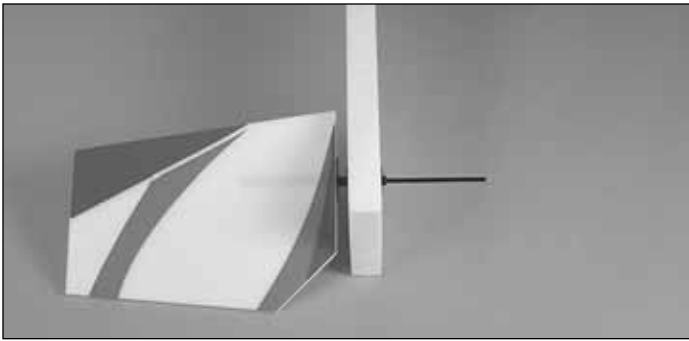


❑ 3. Slide the joiner tube through the fuselage bushings.

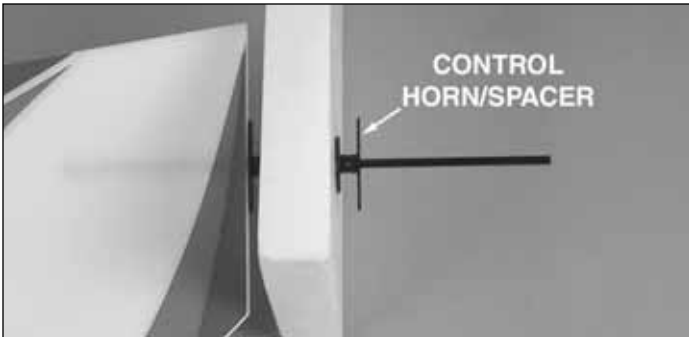

❑ 4. Slide the other control horn/spacer onto the joiner tube. Do not glue it in place yet.

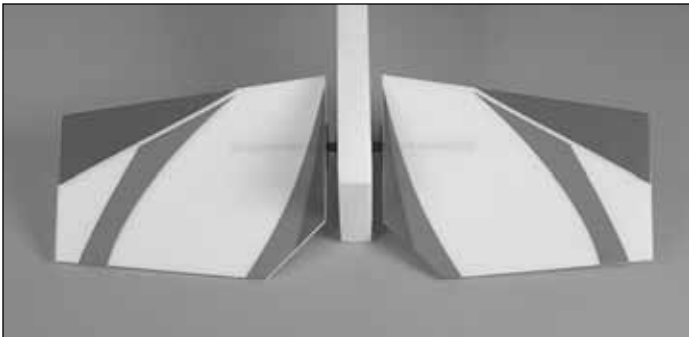


❑ 5. Test fit the other stabilator half onto the joiner rod. Lengthen the slot in the stabilator half if necessary to allow it to fit snugly against the spacer.

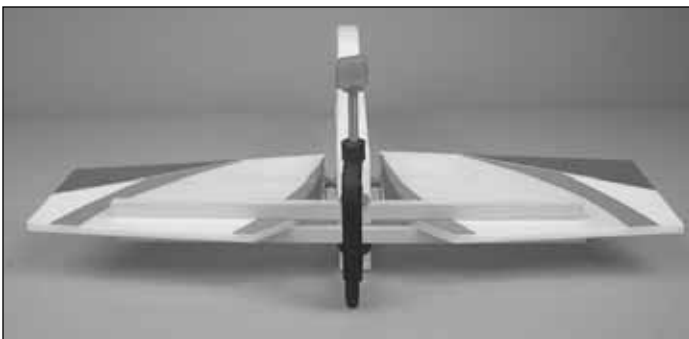


❑ 6. *Tip: Use 6-minute epoxy for this step to allow yourself enough working time.* Glue the stabilator half and spacer to the joiner tube. Use two square sticks (any scrap you have will do) and *lightly* clamp the stabilator halves between them to align everything while the glue hardens.


Assemble the Fin & Rudder

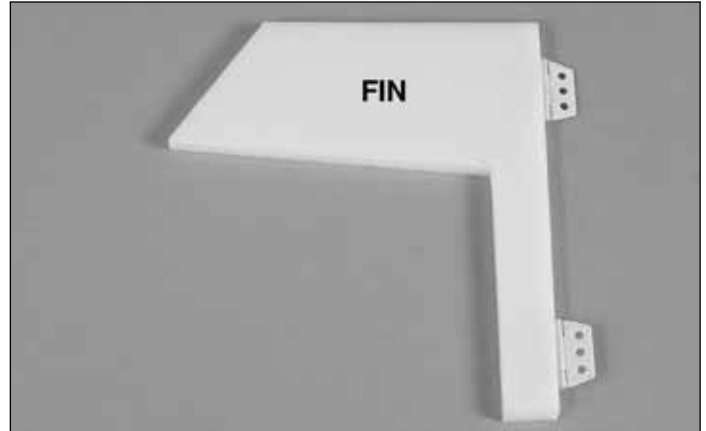

❑ 1. Glue two nylon pin hinges into the precut slots in the fin. Be careful not to get glue into the pivoting section of the hinge.

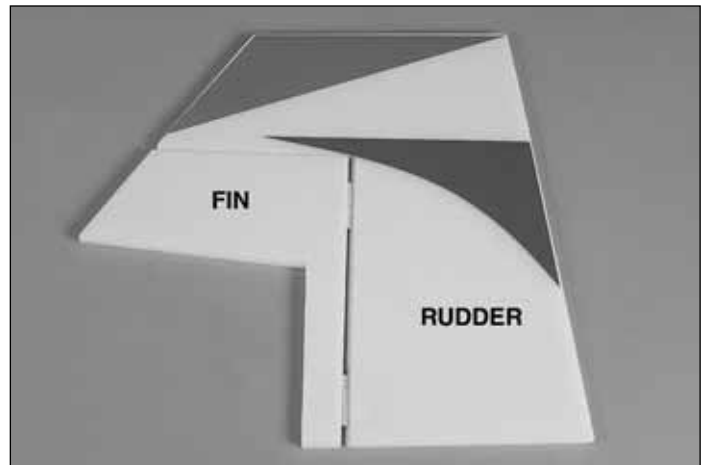


❑ 2. Glue the hinges into the precut slots in the rudder.


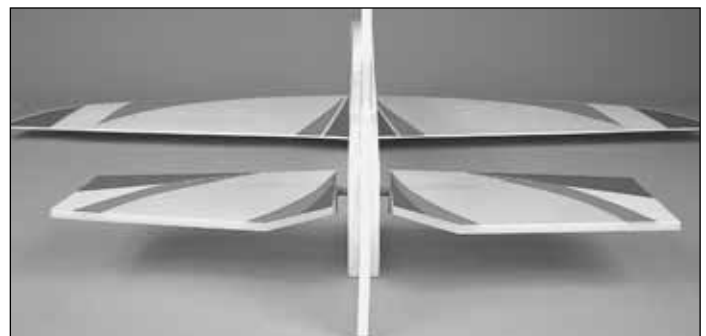


❑ 3. Glue the fin to the fuselage. Make sure that it is straight and centered both vertically and longitudinally.

Join the Wing to the Fuselage


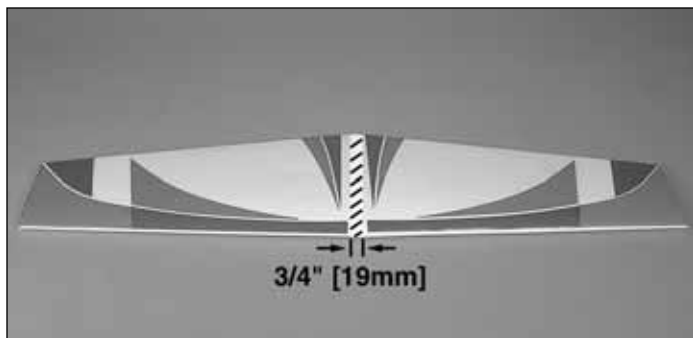


- 1. Cut the covering away from the wing in the shaded area shown. Do this on both the top and the bottom.

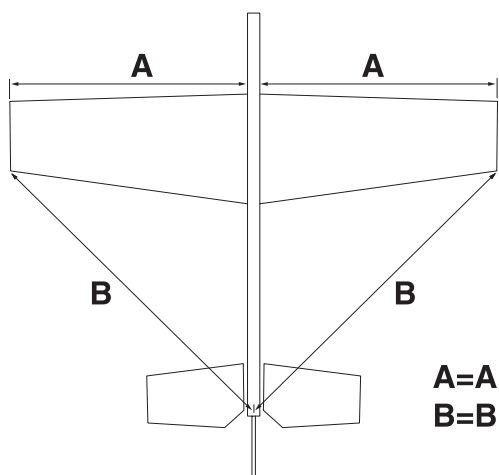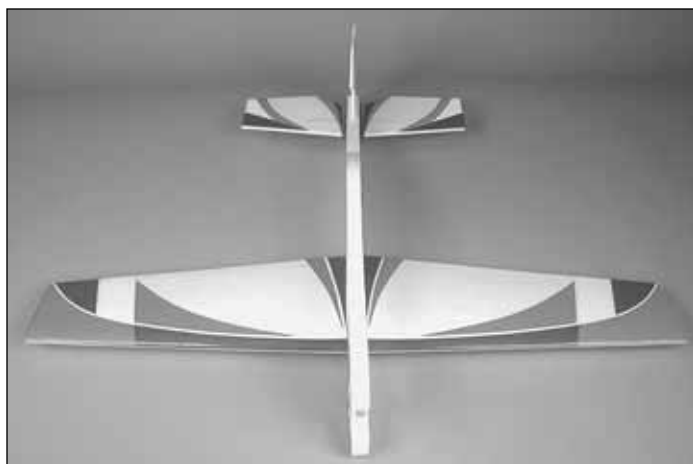


- 2. Glue the wing into the fuselage, making sure that it is centered and square.

Hinge the Ailerons

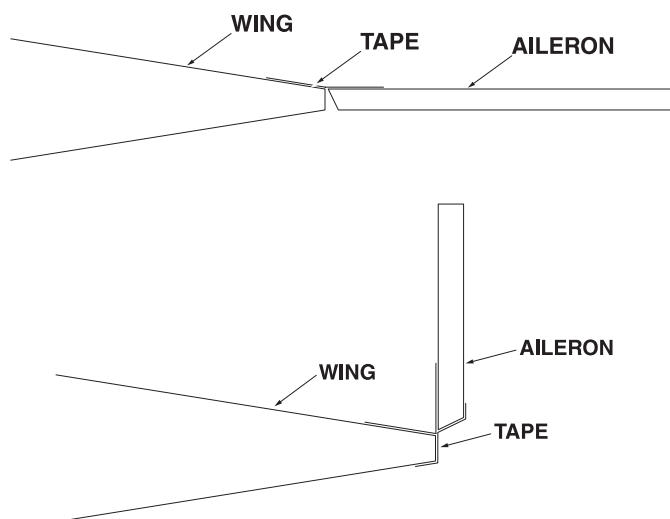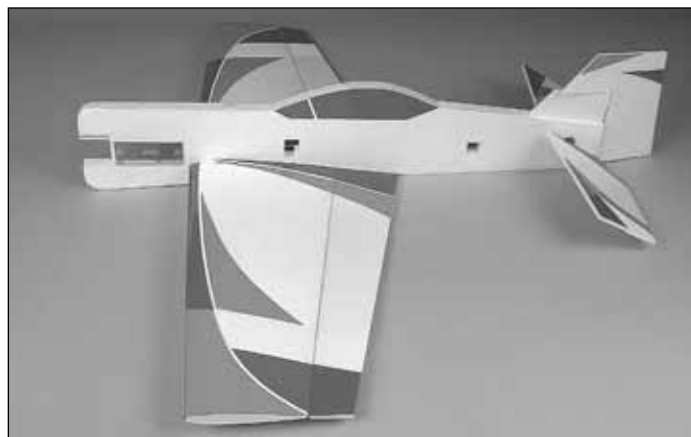


- 1. Use the included clear tape to hinge the ailerons to the wing. Tape the top of the hinge first, then fold the aileron up as far as possible and tape the bottom side.


Install the Servos

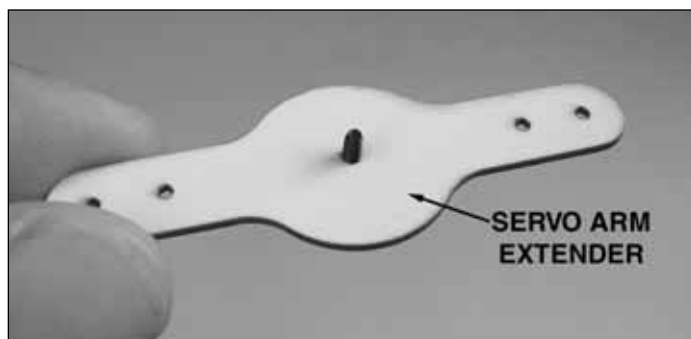

- 1. Remove the screws and servo arms from your servos. Push each screw through the center hole of a servo arm extender (1 double-sided and 2 single-sided).

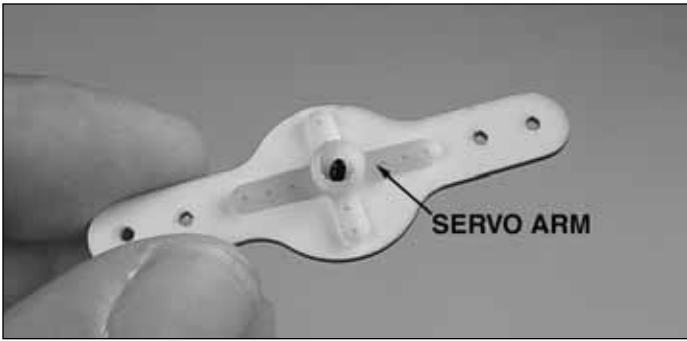


❑ 2. Place the original servo arm over the screw, and glue the top of the arm to the extender with thin CA. *Some servo arms have small flanges projecting from the top. If your servo arms have these flanges, sand them off before gluing.*

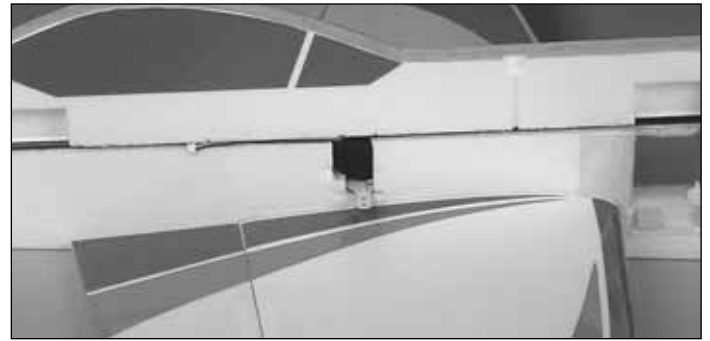

❑ 5. Center your aileron servo with your radio and screw the extended double-sided arm onto the servo. Glue the aileron servo into the cut out in the fuselage.


Install the Control Horns & Pushrods

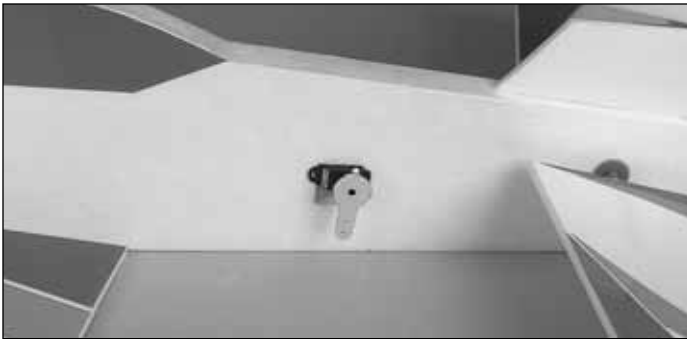


❑ 3. Glue a servo into the top of the rear servo cutout from the left side of the plane. The output shaft should be toward the rear. Center the servo with your radio and screw the extended arm onto the output shaft with the arm oriented straight down.




❑ 1. Install the Z-bend end of the elevator pushrod into the elevator servo arm.

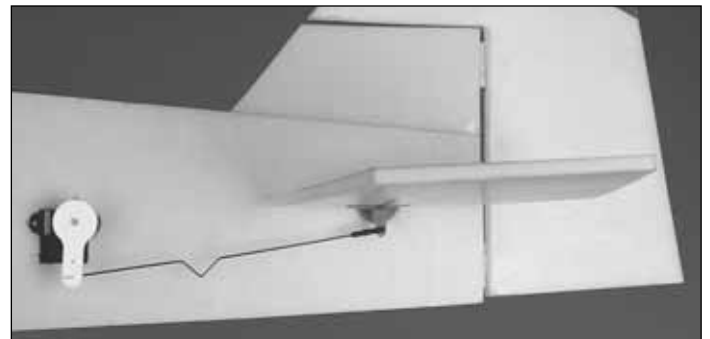


❑ 2. Connect the other end of the elevator pushrod to the outer hole on the elevator control horn using a micro FasLink.

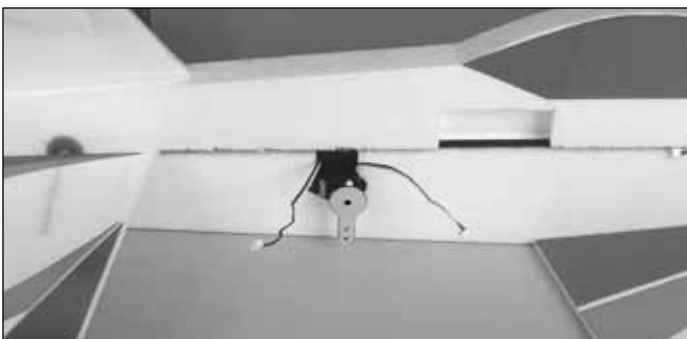


❑ 4. Glue the other tail servo into the cutout from the right side of the plane side with the output shaft toward the rear. Center the servo with your radio and screw the extended arm onto the output shaft with the arm oriented straight down.

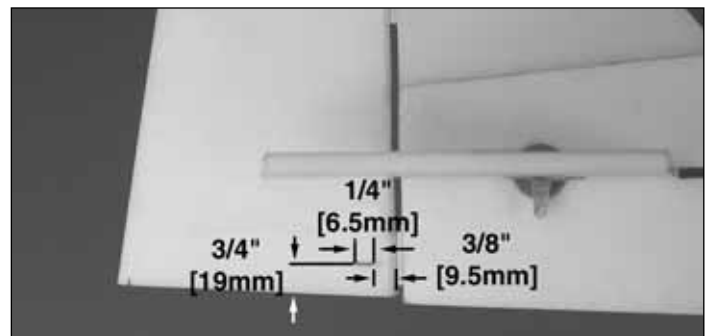


❑ 3. Cut a slot in the rudder in the location shown. This slot cuts through part of the rudder hinge for strength.

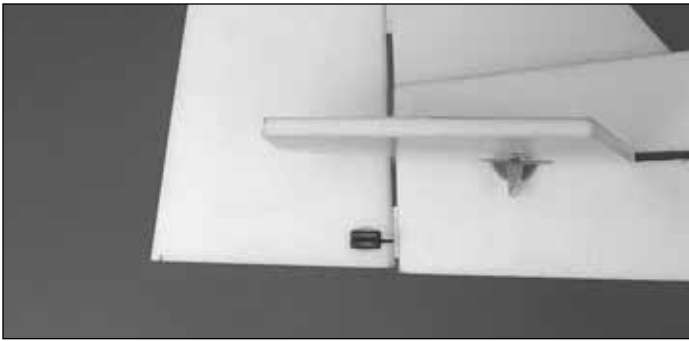


❑ 4. Glue a control horn into this slot from the right side of the airplane.

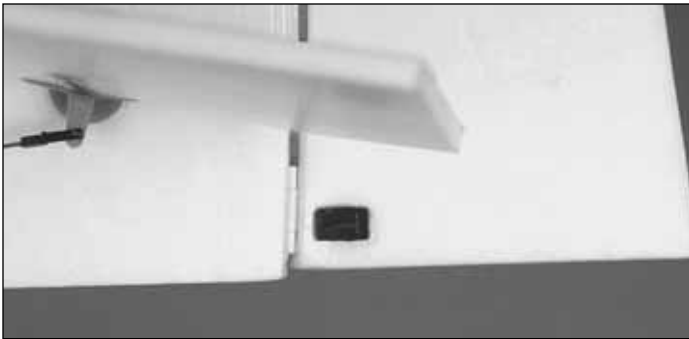

❑ 5. Push a control horn retainer onto the back side of the rudder control horn. Secure it with a drop of glue.

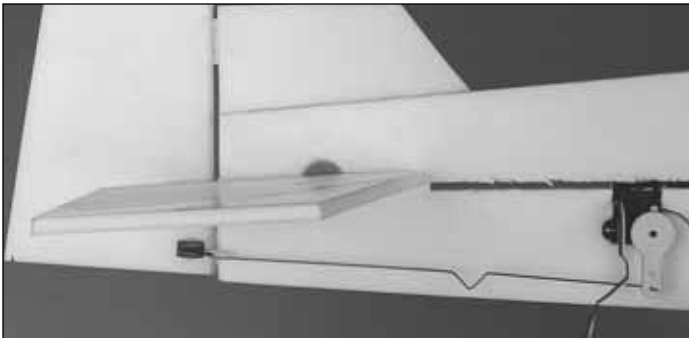


❑ 6. Install the rudder pushrod in the same manner as the elevator pushrod.

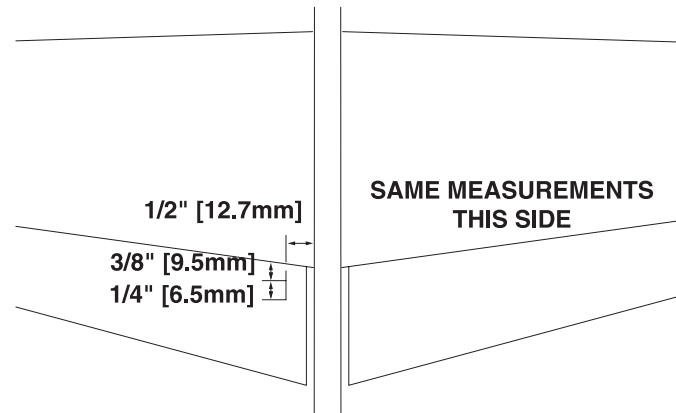


❑ 7. Cut slots in the ailerons in the positions shown.



❑ 8. Glue control horns into these slots from the top.

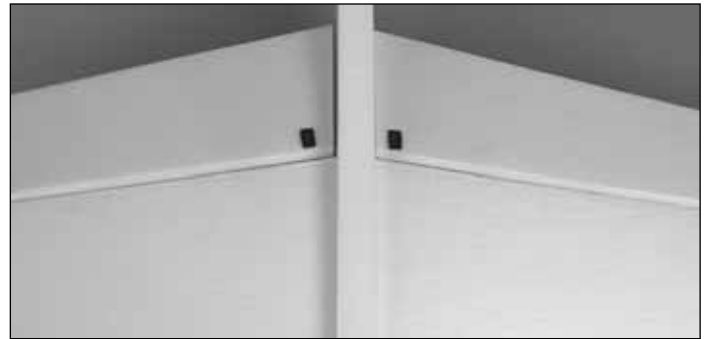


❑ 9. Push control horn retainers onto the backs of the aileron control horns. Secure the retainers with a drop of glue each.

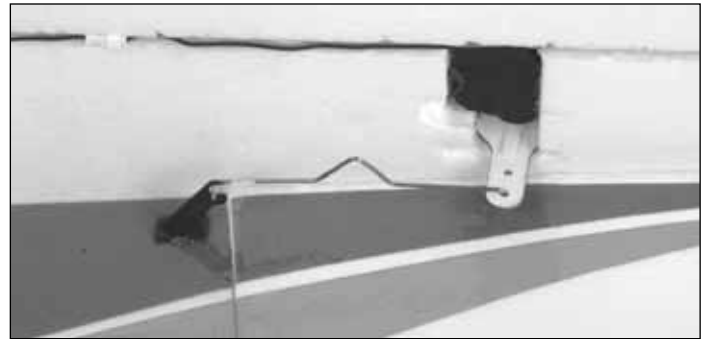


❑ 10. Install the aileron pushrods with the Z-bend through the servo arm. Secure the pushrods to the control horn with a micro FasLink.

Install the Motor & Speed Control


❑ 1. Solder the output wires of your ESC to the motor. The positive side of the motor is marked with a red dot. The output wires should be soldered to the same connection post as the presoldered capacitors and brush wires.

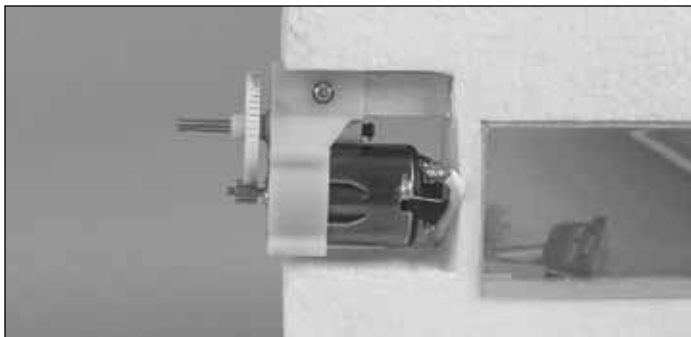

❑ 2. Slide the gearbox onto the 10mm square stick in the nose. Secure it with a screw.

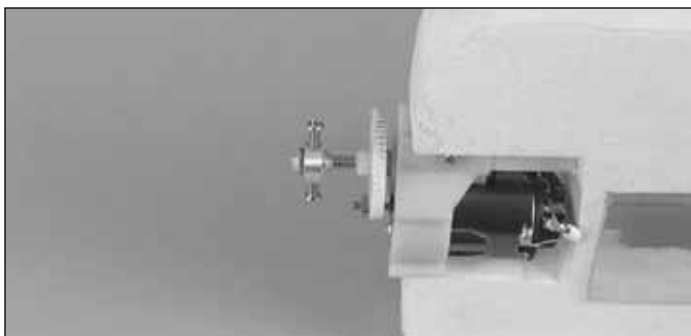

❑ 3. Install the prop saver onto the gearbox output shaft. The screws should seat down into the flat spots on the shaft.

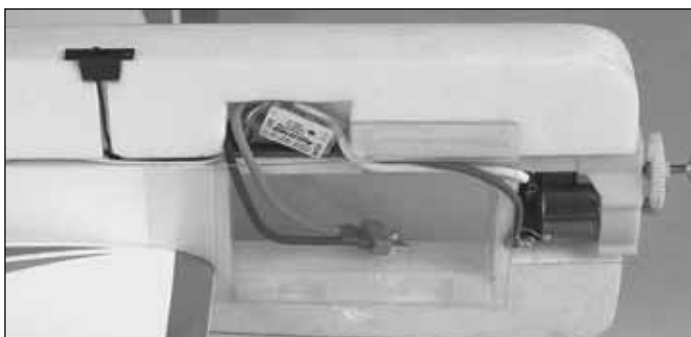


❑ 4. Install the ESC as shown. If your ESC has a BEC switch, install it in the provided cutout.



❑ 5. Attach the propeller to the prop saver with two rubber bands.

Final Setup

❑ 1. Connect the servos and ESC to their channels on the receiver. You may need to use extensions to allow the aileron servo and ESC lead to reach the receiver. Power up your radio system and center the servos. If necessary, adjust the center point of the control surfaces by tightening or enlarging the "V" bend in each pushrod.

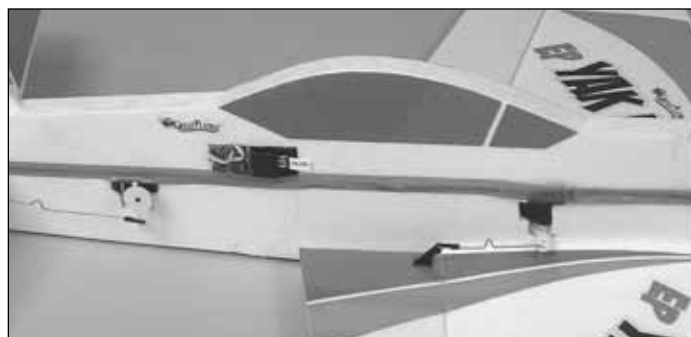

❑ 2. Tape the receiver into its cavity on the fuselage, and cover the servo wires in the groove with the red trim tape provided.



❑ 3. Apply the other piece of trim tape to the other side of the fuselage to match.



❑ 4. Apply the red triangle trim to the bottom of the wing

Apply the Decals

1. Use scissors or a sharp hobby knife to cut the decals from the sheet.

2. Be certain the model is clean and free from oily fingerprints and dust. Prepare a dishpan or small bucket with a mixture of liquid dish soap and warm water—about one teaspoon of soap

per gallon of water. Submerge the decal in the soap and water and peel off the paper backing. **Note:** Even though the decals have a “sticky-back” and are not the water transfer type, submersing them in soap & water allows accurate positioning and reduces air bubbles underneath.

3. Position the decals on the model where desired. Holding the decal down, use a paper towel to wipe most of the water away.


4. Use a piece of soft balsa or something similar to squeegee remaining water from under the decal. Apply the rest of the decals the same way.

GET THE MODEL READY TO FLY

Check the Control Directions

❑ 1. Turn on the transmitter and receiver and center the trims. If necessary, remove the servo arms from the servos and reposition them so they are centered. Reinstall the screws that hold on the servo arms.

❑ 2. With the transmitter and receiver still on, check all the control surfaces to see if they are centered. If necessary, adjust the clevises on the pushrods to center the control surfaces.

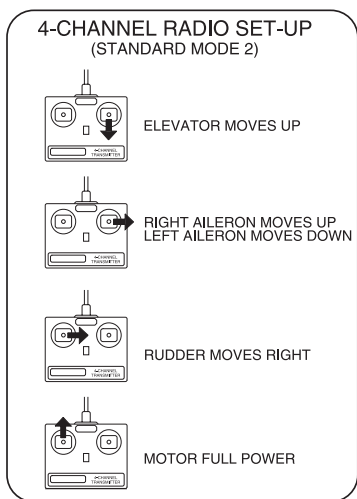

❑ 3. Make certain that the control surfaces respond in the correct direction as shown in the diagram. If any of the controls respond in the wrong direction, use the servo reversing in the transmitter to reverse the servos connected to those controls. Be certain the control surfaces have remained centered. Adjust if necessary.

Set the Control Throws

Use a ruler to accurately measure and set the control throw of each control surface as indicated in the chart that follows. If your radio does not have dual rates, we recommend setting the throws at the **high** rate setting.

Note: The throws are measured at the **widest part** of the elevators, rudder and ailerons.


These are the recommended control surface throws:		
	High Rate	Low Rate
ELEVATOR:	2-1/2" [63.5mm] up 2-1/2" [63.5mm] down	3/4" [19mm] up 3/4" [19mm] down
RUDDER:	2-1/2" [63.5mm] right 2-1/2" [63.5mm] left	1" [25.4mm] right 1" [25.4mm] left
AILERONS:	2" [50.8mm] up 1-1/2" [38mm] down	1" [25.4mm] up 7/8" [22mm] down

IMPORTANT: The YAK 55 ARF has been extensively flown and tested to arrive at the throws at which it flies best. Flying your model at these throws will provide you with the greatest chance for successful first flights. If, after you have become accustomed to the way the YAK 55 ARF flies, you would like to change the throws to suit your taste, that is fine. However, too much control throw could make the model difficult to control, so remember, “more is not always better.”

Balance the Model (C.G.)

More than any other factor, the **C.G.** (balance point) can have the **greatest** effect on how a model flies, and may determine whether or not your first flight will be successful. If you value this model and wish to enjoy it for many flights, **DO NOT OVERLOOK THIS IMPORTANT PROCEDURE.** A model that is not properly balanced will be unstable and possibly unflyable.

At this stage the model should be in ready-to-fly condition with all of the systems in place including the motor, propeller, battery, and the radio system.

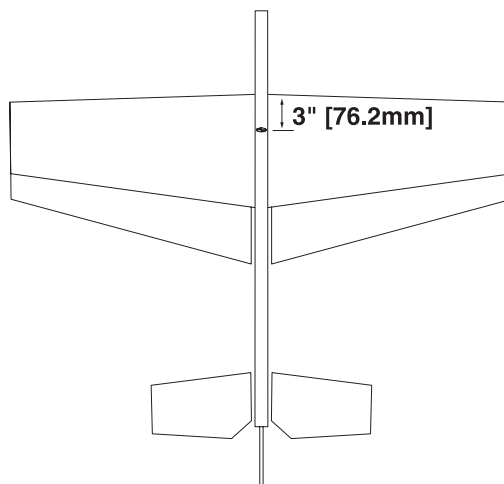

❑ 1. Use a felt-tip pen or 1/8" [3mm]-wide tape to accurately mark the C.G. on the top of the wing on both sides of the

fuselage. The C.G. is located 3" [76.2mm] back from the leading edge of the wing.

This is where your model should balance for the first flights. Later, you may wish to experiment by shifting the C.G. up to 1/2" [13mm] forward or 1/2" [13mm] back to change the flying characteristics. Moving the C.G. forward may improve the smoothness and stability, but the model may then require more speed for takeoff and make it more difficult to slow for landing. Moving the C.G. aft makes the model more maneuverable, but could also cause it to become too difficult to control. In any case, start at the recommended balance point and do not at any time balance the model outside the specified range.

❑ 2. With all parts of the model installed, including the battery (ready to fly) lift it upside-down on your fingertips at the balance point you marked.

❑ 3. If the tail drops, the model is "tail heavy" and the battery pack and/or receiver must be shifted forward or weight must be added to the nose to balance. If the nose drops, the model is "nose heavy" and the battery pack and/or receiver must be shifted aft or weight must be added to the tail to balance. If possible, relocate the battery pack and receiver to minimize or eliminate any additional ballast required. If additional weight is required, begin by placing incrementally increasing amounts of weight on the bottom of the fuse until the model balances. Once you have determined the amount of weight required, it can be permanently attached.

❑ 4. **IMPORTANT:** If you found it necessary to add any weight, recheck the C.G. after the weight has been permanently installed.

Balance the Model Laterally

❑ 1. With the wing level, have an assistant help you lift the model by the motor propeller shaft and the bottom of the fuse under the TE of the fin. Do this several times.

❑ 2. If one wing always drops when you lift the model, it means that side is heavy. Balance the airplane by adding weight to the other wing tip. An airplane that has been laterally balanced will track better in loops and other maneuvers.

PREFLIGHT

Identify Your model

No matter if you fly at an AMA sanctioned R/C club site or if you fly somewhere on your own, you should always have your name, address, telephone number and AMA number on or inside your model. It is required at all AMA R/C club

flying sites and AMA sanctioned flying events. Fill out the identification tag on the decal sheet and place it on or inside your model.


Charge the Batteries

Follow the battery charging instructions that came with your radio control system to charge the batteries. You should always charge your transmitter batteries the night before you go flying, and at other times as recommended by the radio manufacturer.

Charge the flight battery using a charger designed for Lithium-Polymer batteries. Charging with any other type of charger is very dangerous, and may cause the batteries to combust violently.

CAUTION: Unless the instructions that came with your radio system state differently, the initial charge on new transmitter batteries should be done for 15 hours using the slow-charger that came with the radio system. This will "condition" the batteries so that the next charge may be done using the fast-charger of your choice. If the initial charge is done with a fast-charger the batteries may not reach their full capacity and you may be flying with batteries that are only partially charged.

Balance the Propellers

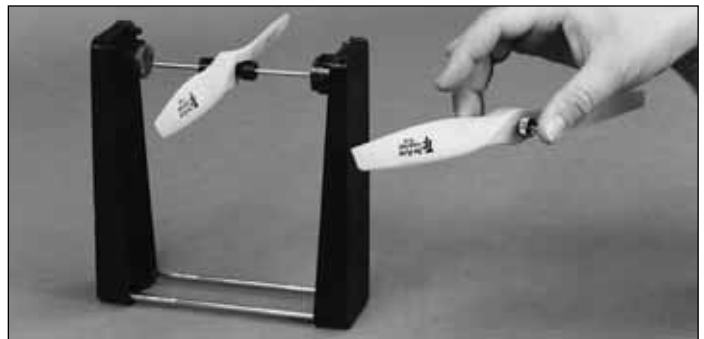

Carefully balance your propeller and spare propellers before you fly. An unbalanced prop can be the single most significant cause of vibration that can damage your model and may also damage your radio receiver and battery.

We use a Top Flite Precision Magnetic Prop Balancer™ (TOPQ5700) in the workshop and keep a Great Planes Fingertip Prop Balancer™ (GPMQ5000) in our flight box.

Range Check

Ground check the operational range of your radio before the first flight of the day. With the transmitter antenna collapsed and the receiver and transmitter on, you should be able to

walk at least 100 feet away from the model and still have control. Have an assistant stand by your model and, while you work the controls, tell you what the control surfaces are doing. Repeat this test with the motor running at various speeds with an assistant holding the model, using hand signals to show you what is happening. If the control surfaces do not respond correctly, do not fly! Find and correct the problem first. Look for loose servo connections or broken wires, corroded wires on old servo connectors, poor solder joints in your battery pack or a defective cell, or a damaged receiver crystal from a previous crash.

MOTOR SAFETY PRECAUTIONS

Failure to follow these safety precautions may result in severe injury to yourself and others.

Keep your face and body as well as all spectators away from the plane of rotation of the propeller whenever the battery is connected.

Keep these items away from the prop: loose clothing, shirt sleeves, ties, scarfs, long hair or loose objects such as pencils or screwdrivers that may fall out of shirt or jacket pockets into the prop.

AMA SAFETY CODE (excerpts)

Read and abide by the following excerpts from the Academy of Model Aeronautics Safety Code. For the complete Safety Code refer to *Model Aviation* magazine, the AMA web site or the Code that came with your AMA license.

GENERAL

1. I will not fly my model aircraft in sanctioned events, air shows, or model flying demonstrations until it has been proven to be airworthy by having been previously, successfully flight tested.

2. I will not fly my model aircraft higher than approximately 400 feet within 3 miles of an airport without notifying the airport operator. I will give right-of-way and avoid flying in the proximity of full-scale aircraft. Where necessary, an observer shall be utilized to supervise flying to avoid having models fly in the proximity of full-scale aircraft.

3. Where established, I will abide by the safety rules for the flying site I use, and I will not willfully and deliberately fly my models in a careless, reckless and/or dangerous manner.

5. I will not fly my model unless it is identified with my name and address or AMA number, on or in the model. **Note:** This does not apply to models while being flown indoors.

7. I will not operate models with pyrotechnics (any device that explodes, burns, or propels a projectile of any kind).

RADIO CONTROL

1. I will have completed a successful radio equipment ground check before the first flight of a new or repaired model.

2. I will not fly my model aircraft in the presence of spectators until I become a qualified flier, unless assisted by an experienced helper.

3. At all flying sites a straight or curved line(s) must be established in front of which all flying takes place with the other side for spectators. Only personnel involved with flying the aircraft are allowed at or in the front of the flight line. Intentional flying behind the flight line is prohibited.

4. I will operate my model using only radio control frequencies currently allowed by the Federal Communications Commission.

5. I will not knowingly operate my model within three miles of any pre-existing flying site except in accordance with the frequency sharing agreement listed [in the complete AMA Safety Code].

9. Under no circumstances may a pilot or other person touch a powered model in flight; **nor should any part of the model other than the landing gear, intentionally touch the ground, except while landing.**

CHECK LIST

During the last few moments of preparation your mind may be elsewhere anticipating the excitement of the first flight. Because of this, you may be more likely to overlook certain checks and procedures that should be performed before the model is flown. To help avoid this, a check list is provided to make sure these important areas are not overlooked. Many are covered in the instruction manual, so where appropriate, refer to the manual for complete instructions. Be sure to check the items off as they are completed (that's why it's called a *check list!*).

- 1. Check the C.G. according to the measurements provided in the manual.
- 2. Be certain the battery and receiver are securely mounted in the fuse. Simply stuffing them into place with foam rubber is not sufficient.
- 3. Extend your receiver antenna and make sure it has a strain relief inside the fuselage to keep tension off the solder joint inside the receiver.
- 4. Balance your model *laterally* as explained in the instructions.
- 5. Make sure all hinges are **securely** glued in place.
- 6. Confirm that all controls operate in the correct direction and the throws are set up according to the manual.
- 7. Secure connections between servo wires and Y-connectors or servo extensions, and the

connection between your battery pack and the on/off switch with vinyl tape, heat shrink tubing or special clips suitable for that purpose.

- 8. Make sure any servo extension cords you may have used do not interfere with other systems (servo arms, pushrods, etc.).
- 9. Balance your propeller (and spare propellers).
- 10. Place your name, address, AMA number and telephone number on or inside your model.
- 11. If you wish to photograph your model, do so before your first flight.
- 12. Range check your radio when you get to the flying field.

FLYING

The YAK 55 ARF is a great-flying model that flies smoothly and predictably. The YAK 55 ARF does not, however, possess the self-recovery characteristics of a primary R/C trainer and should be flown only by experienced R/C pilots.

CAUTION (THIS APPLIES TO ALL R/C AIRPLANES): If, while flying, you notice an alarming or unusual sound such as a low-pitched "buzz," this may indicate control surface *flutter*. Flutter occurs when a control surface (such as an aileron or elevator) or a flying surface (such as a wing or stab) rapidly vibrates up and down (thus causing the noise). In extreme cases, if not detected immediately, flutter can actually cause the control surface to detach or the flying surface to fail, thus causing loss of control followed by an impending crash. The best thing to do when flutter is detected is to slow the model **immediately** by reducing power, then land as soon as safely possible. Identify which surface fluttered (so the problem may be resolved) by checking all the servo grommets for deterioration or signs of vibration. Make certain all pushrod linkages are secure and free of play. If it fluttered once, under similar circumstances it will probably flutter again unless the problem is fixed. Some things which can cause flutter are; Excessive hinge gap; Not mounting control horns solidly; Poor fit of clevis pin in horn; Side-play of wire pushrods caused by large bends; Excessive free play in servo gears; Insecure servo mounting; and one of the most prevalent causes of flutter; Flying an over-powered model at excessive speeds.

Launch



For the first flight, it is a good idea to have a friend launch the airplane for you. This allows you to keep your hands on the radio sticks and correct any trim problems that are present.

Have your friend hold the YAK 55 ARF by the canopy. Throttle up to full power, and have your friend give the plane a gentle underhanded toss at about a 30° angle upward. Since the YAK 55 ARF has a very high thrust to weight ratio, the plane will accelerate to flying speed almost instantly. Climb to a comfortable altitude and throttle back to a lower power setting. This plane flies great at about half-throttle when in standard forward flight.

Flight

For reassurance and to keep an eye on other traffic, it is a good idea to have an assistant on the flight line with you. Tell him to remind you to throttle back once the plane gets to a comfortable altitude. While full throttle is usually desirable for takeoff, most models fly more smoothly at reduced speeds.

Take it easy with the YAK 55 ARF for the first few flights, gradually getting acquainted with it as you gain confidence. Adjust the trims to maintain straight and level flight. After flying around for a while, and while still at a safe altitude with plenty of fuel, practice slow flight and execute practice landing approaches by reducing the throttle to see how the model handles at slower speeds. Add power to see how she climbs as well. Continue to fly around, executing various maneuvers and making mental notes (or having your assistant write them down) of what trim or C.G. changes may be required to fine tune the model so it flies the way you like. Mind your fuel level, but use this first flight to become familiar with your model before landing.

Landing

To initiate a landing approach, lower the throttle while on the downwind leg. Allow the nose of the model to pitch downward to gradually bleed off altitude. Continue to lose altitude, but maintain airspeed by keeping the nose down as you turn onto the crosswind leg. Make your final turn toward the landing area (into the wind) keeping the nose down to maintain airspeed and control. Level the attitude when the model reaches an altitude of about 10 feet, modulating the

throttle as necessary to maintain your glide path and airspeed. If you are going to overshoot, smoothly advance the throttle (always ready on the right rudder to counteract torque) and climb out to make another attempt. When you're ready to make your landing flare and the model is a foot or so off the deck, cut your throttle and smoothly increase up elevator until it gently touches down on its belly. *Make sure that you cut your power completely before touchdown, or gearbox damage may result.*

One final note about flying your model. Have a goal or flight plan in mind for **every** flight. This can be learning a new maneuver(s), improving a maneuver(s) you already know, or learning how the model behaves in certain conditions (such as on high or low rates). This is not necessarily to improve your skills (*though it is never a bad idea!*), but more importantly so you do not surprise yourself by impulsively attempting a maneuver and suddenly finding that you've run out of time, altitude or airspeed. Every maneuver should be deliberate, not impulsive. For example, if you're going to do a loop, check your altitude, mind the wind direction (anticipating rudder corrections that will be required to maintain heading), remember to throttle back at the top, and make certain you are on the desired rates (high/low rates). A flight plan greatly reduces the chances of crashing your model just because of poor planning and impulsive moves. **Remember to think.**

Troubleshooting

The Yak 55 ARF is primarily designed for low-speed 3D aerobatics, and has an all-flying stabilator to give it very strong pitch authority. In some cases, the elevator pushrod can become flexible over time, allowing the stabilator to oscillate when the plane is flown at high speed. If this problem appears when flying the plane at high speed, simply stiffen the pushrod by securing a second length of 1/16" [1.5mm] wire to the original pushrod with thread and thin CA. This will stiffen the pushrod sufficiently to eliminate the problem.

Have a ball! But always stay in control and fly in a safe manner.

GOOD LUCK AND GREAT FLYING!

OTHER ITEMS AVAILABLE FROM GREAT PLANES



ElectriFly™ by Great Planes Triton™ Peak Charger

Imagine a charger so versatile it can be used with lithium-ion and lead-acid batteries as effectively as NiCd and NiMH cells. A unit that can peak charge tiny park flyer packs and 24V car batteries alike. A charger that can discharge as well as charge, cycle packs from 1 to 10 times automatically, memorize peak and average battery voltages for each cycle – and constantly display battery capacity, voltage, current and time as each cycle progresses. Then, imagine that the charger, which can do all this, is about the size of a thick paperback book, and weighs just over a pound. The advanced computer technology in the Triton Peak Charger makes it possible to accomplish all this and more, through controls and menus so simple that programming is a breeze. For more information, log on at www.electrifly.com – and be amazed. 1-year warranty. **GPMM3150**



Great Planes ElectriFly 1500mAh Lithium Polymer Battery

Lithium-Polymer (Li-Po) cells provide three times the voltage of NiCd and NiMH cells – at less than half the weight! Exclusive SafeCharge™ circuitry protects ElectriFly Li-Po packs by preventing any cell from overcharging. This 11.1V, 3 series pack includes a 2-pin red charge connector and separate discharge connector. **GPMP0831**