

Futaba

DIGITAL PROPORTIONAL
RADIO CONTROL

AM CONQUEST


INSTRUCTION MANUAL

FP-6NLK AM6 CHANNEL
FP-4NL AM4 CHANNEL



FUTABA CORPORATION OF AMERICA
FUTABA CORPORATION

D60403

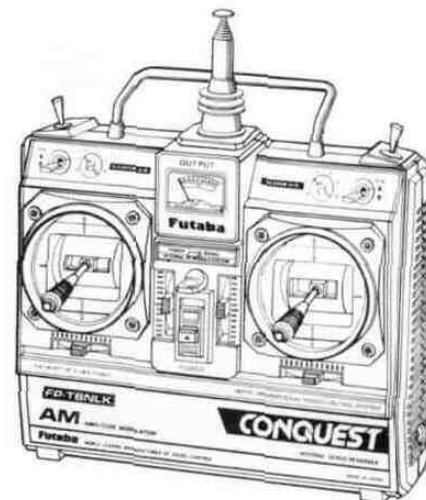

*Thank you for purchasing a Futaba digital proportional radio control set.
Please read this manual carefully before using your set.*

FEATURES OF FP-6NLK/4NL

The CONQUEST FP-6NLK and FP-4NL are 6 channel (6NLK) and 4 channel (4NL) AM proportional radio control set with a ergonomic case created as a result of the exhaustive pursuit of easier operation, newly designed sticks for smooth and positive operation, servo reversing switch for each channel, and other innovations based on the opinions and needs of many RC modelers.

Please read this manual before using your new set.

TRANSMITTER FP-T6NLK/T4NL

- Reliability substantially improved by using industrial robots to assemble the PC board.
- Servo reversing **switch for each channel. Servos are reversed** by using this switch.
- Newly **designed open gimbal sticks operate smoothly and positively.** Spring tension mechanism allows adjustment of the operating feel of the stick lever.
- Nonslip adjustable lever head allows adjustment of the stick length as desired.
- RF PC board module style system in transmitter.
- Functional case, created as a result of the exhaustive pursuit of easier operation, has evolved a thick case which fits into the palm of the hand.
- Aileron, Elevator dual rate function. (Dual rate ON, OFF) (6NLK)
- Easy to read square transmitter battery voltage/output level meter.
- Excellent radiation efficiency, strong 8-stage telescoping antenna.
- Neck strap bracket provided as standard. Operation is easier if the transmitter is hung from your neck by using the optional neck strap.
- Built-in NiCad battery.

RECEIVER FP-R7H (6NLK)

- A compact, lightweight, rugged 7-channel receiver virtually invulnerable to power supply voltage changes thanks to new Futaba Custom 1/C, IR-2501.
- Newly designed AGC circuit minimizes interference and dead points.
- Fiberglass reinforced epoxy resin PC board with thru-the-hole plating improves vibration and shock resistance.
- Three-wire gold-plated mini block connector is compatible with all Futaba servos.

RECEIVER FP-R4F (4NL)

- Compact, lightweight, rugged construction.
- Three-wire gold-plated **mini block connector is compatible** with all Futaba servos.
- Four channel.

RECEIVER FP-R4H, (4NL)

- High performance AM 4 channel receiver in which miniature size and light weight have been achieved by using the PC board space to the maximum.
- Narrow band design using a narrow band **ceramic filter** resists adjacent channel interference.
- Noise resistance achieved by using a pulse noise rejection circuit.
- New C MOS miniature **IC used in the data coder increases** reliability substantially.
- **New** type subminiature, highly reliable **pins used at the** crystal socket also increase **reliability. The crystal can be** changed from the outside.
- Thick film gold-plated connector pins eliminate poor contact and improve reliability against shock and vibration.

SERVO FP-S38

Very-precise neutral, small, rugged servo

- New indirect drive potentiometer improves vibration and shock resistance and neutral accuracy.
- Futaba low-power custom 1C provides extremely high torque, narrow dead band, and superior tracking.
- Fiberglass reinforced PBT (polybutylene terephthalate) injection molded servo case is mechanically strong and invulnerable to glow fuel.
- Strong polyacetal resin ultra-precision servo gear features smooth operation, positive neutral, and very little backlash.
- Fiberglass reinforced epoxy resin PC board with thru-the-hole plating improves servo amp vibration and shock resistance.
- Three wire-gold-plated 3p mini connector.
- Special grommet simplifies mounting of the **servo and has** an excellent cushioning effect.
- Six special adjustable splined horns.
- High 34.8 oz. in (2.5kg-cm) maximum output torque allows use in almost any model.

SET CONTENTS AND RATINGS

(Specifications are subject to change without prior notice.)

	CONQUEST FP-6NLK	CONQUEST FP-4NL
Transmitter	FP T6NLK x 1	FP-T4NL x 1
Receiver	FPR7H x 1	FP.R4F x 1/FP-R4HX 1
Servo	FP-S38 x 4	FP S38 x 3
NiCad Battery	NR 4M x 1	
Switch	SSW-Hx 1	
Others	Charger. Frequency flag. Mounting screw.	Spare horn, Mounting screw.

TRANSMITTER FP-T6NLK /T4ML

Operating System	2 stick, servo reverse Aileron, Elevator dual switch. Landing gear switch (5ch) & switch (6ch) 6NLK only
Transmitting frequency	: 72MHz bands, 75MHz bands
Modulation system	: AM
Power requirement	: 9, 6V, NiCad battery (NT-8LP)
Current drain	: 190mA

RECEIVER FP-R7H / R4F/ R4H

Receiving frequency	: 72MH/ bands, 75MHz bands
Crystal replacement system:	Frequency can be changed within the same frequency band by changing the pre- cision crystal.
Intermediate frequency	: 455kHz
Power requirement	: 4, 8V, NiCad battery Common use with servo
Current drain	: 4.8V, 10mA

Dimensions	R7H 1.6x 2.6 x 0.8 inch (41 x 69 x 21 mm)	Weight	R7H 1.7oz(50g)
	R4F 1.6 x 2.3 x 0.7 inch (40.2 x 58.5 x 19 mm)		R4F 1.6oz (46g)
	R4H 1.26x 2.05 x 0.77 inch (32 x 52 x 19.4 mm)		R4H 1.06oz (30g)

Receiving range : 550 yards (500m) on the ground. 1,100 yards (1,000m) in the air. (at the best conditions)

TRANSMITTER FP-T6NLK/T4NL CONTROLS

Fig. 1 shows the name of each part of the transmitter.

Memorize the position and operation of each switch and control.

14 Elevator dual trimmer (6NLK only)

5 Landing gear switch (5ch) (6NLK only)

13 Elevator dual switch (6NLK only)

16 Level meter

9 Throttle trim lever

10 Rudder trim lever

4 Rudder

20 Nonslip adjustable lever head

18 Antenna

19 Handle

12 Aileron dual trimmer

6 6th CH switch (6NLK only)

11 Aileron dual switch (6NLK only)

17 Neck strap bracket

8 Elevator trim lever

7 Aileron trim lever

21 Charging jack

24 Transmitter NiCad battery NT-8LP

23 Servo reversing switches

23) Battery cover

In the following descriptions, all the servo reversing switches are assumed to be in the normal position. When they are in the reverse position, operation is the opposite of that described.

- 1 Aileron Aileron operation
- 2 Elevator Elevator operation
- 3 Throttle Throttle operation
- 4 Rudder Rudder operation

5 Landing gear switch (6NLK only)

Raising and lowering the landing gear.

6 6chCH switch (6NLK only)

Use for controlling model airplane flaps, etc. The servo is operated at the **A** and **C** positions. The **B** position is off.

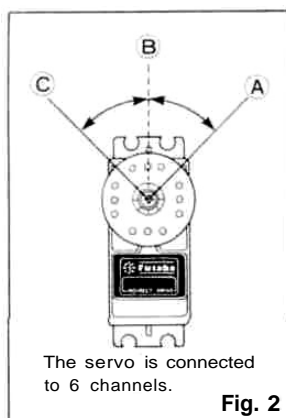


Fig. 2

- 7 Aileron trim lever Aileron trimmer
- 8 Elevator trim lever Elevator trimmer
- 9 Throttle trim lever Throttle trimmer
- 10 Rudder trim lever Rudder trimmer
- 11 Aileron dual rate switch (6NLK only)

Aileron dual rate ON-OFF switch. When set to the upper position, dual rate is turned on, and when set to the lower position, dual rate is turned off.

12 Aileron dual rate trimmer (6NLK only)

This trimmer sets the aileron travel when the aileron dual switch is set to on. When the dual switch is set to ON, the servo throw can be set to an arbitrary angle smaller than when the dual switch is OFF (normal) as shown in the figure. Use the throw matched to the aircraft and the maneuvers to be performed.

Fig. 1

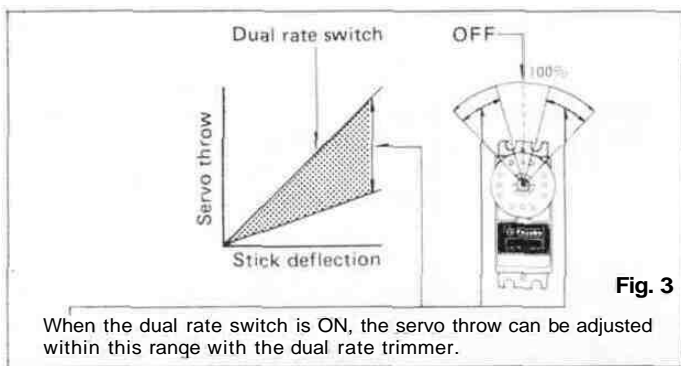


Fig. 3

13 Elevator dual rate switch (6NLK only)

This switch turns the elevator dual rate function on and off. The lower position is dual rate OFF and the upper position is dual rate ON.

14 Elevator dual rate trimmer (6NLK only)

This trimmer sets the elevator deflection angle when the elevator dual rate switch is in the ON position. It has the same functions as aileron dual rate.

15 Power switch

The upper position is ON.

16 Level meter

This level meter indicates the transmitter battery voltage.

17 Neck strap bracket

Bracket for the neck strap (optional).

18 Antenna

Strong telescoping antenna. Extend it to its full length when using the transmitter.

19 Handle

Use this bar to carry the transmitter.

20 Nonslip adjustable lever head

The length of the lever head can be adjusted to fit the operator.

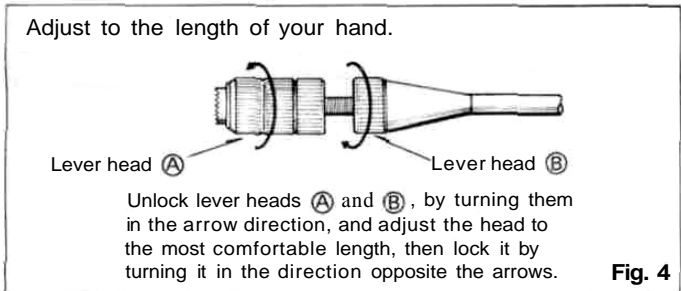


Fig. 4

21 Charging jack

Battery charge jack for built-in NiCad battery.

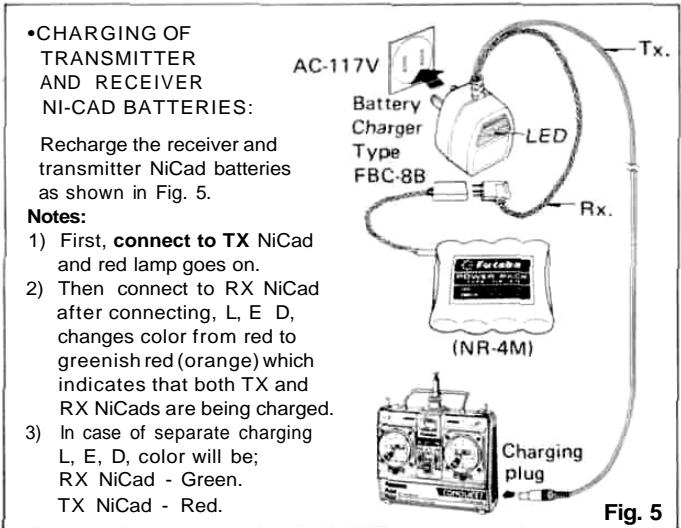


Fig. 5

- Connect the charging plug of the FBC-8B charge to the transmitter charging jack, connect the 3P connector of the FBC-8B to the receiver NiCad battery (NR-4M), and plug the FBC-8B to a 117VAC outlet as shown in this figure.
- The Receiver battery can be used about 10 times at 10 minutes per flight between rechargings.

- Charge the batteries for about 15 hours. When the set is not in use for some time, repeat discharge and charge two to three times before use. (If the batteries are not used for a long time, their capacity will go down).

- FBC-8B charges transmitter and receiver NiCad batteries independently or simultaneously.

22 Battery cover

Remove this cover when switching the servo reversing switches.

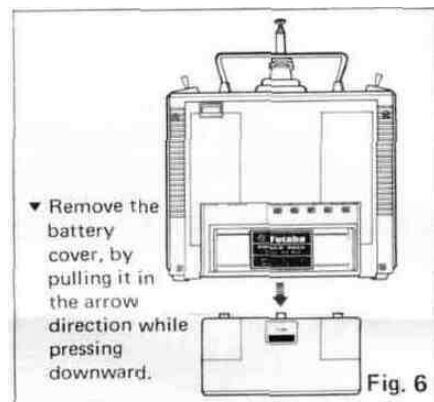


Fig. 6

23 Servo reversing switches

Using the servo reversing switches

- The left side of each switch is the normal position.
- The servo reversing switches reverse the direction of operation of the servos.

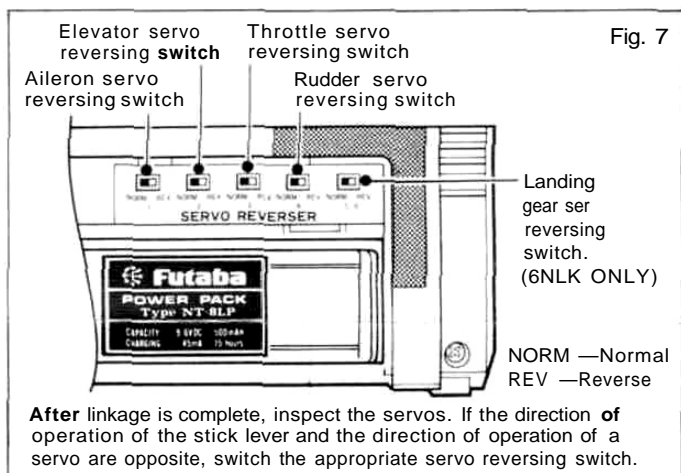


Fig. 7

24 Transmitter NiCad battery NT-8LP

The tension of the stick lever spring can be adjusted.



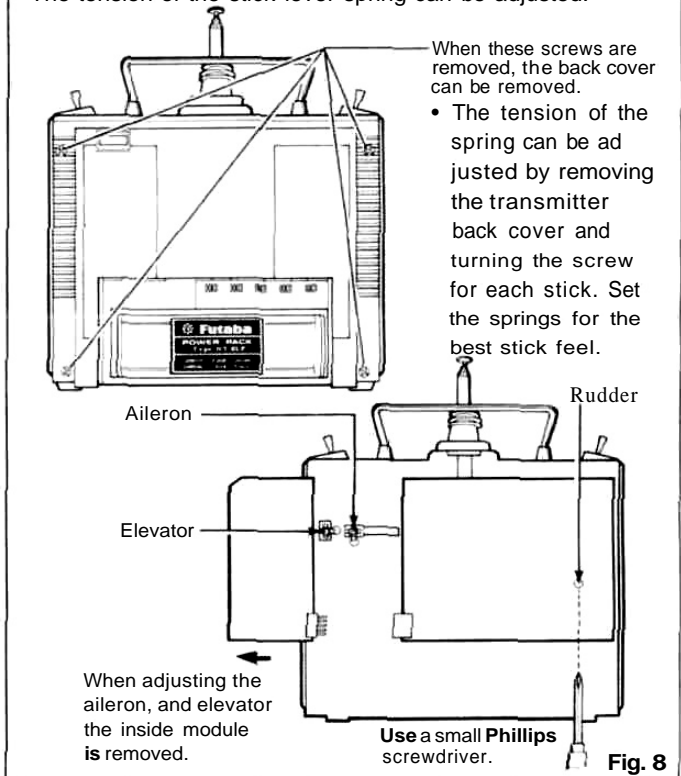



Fig. 8

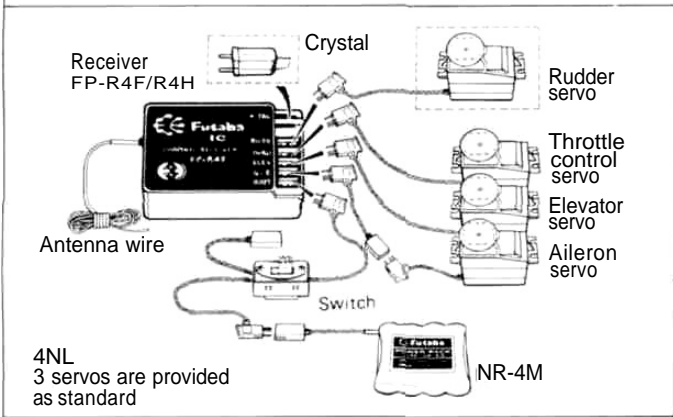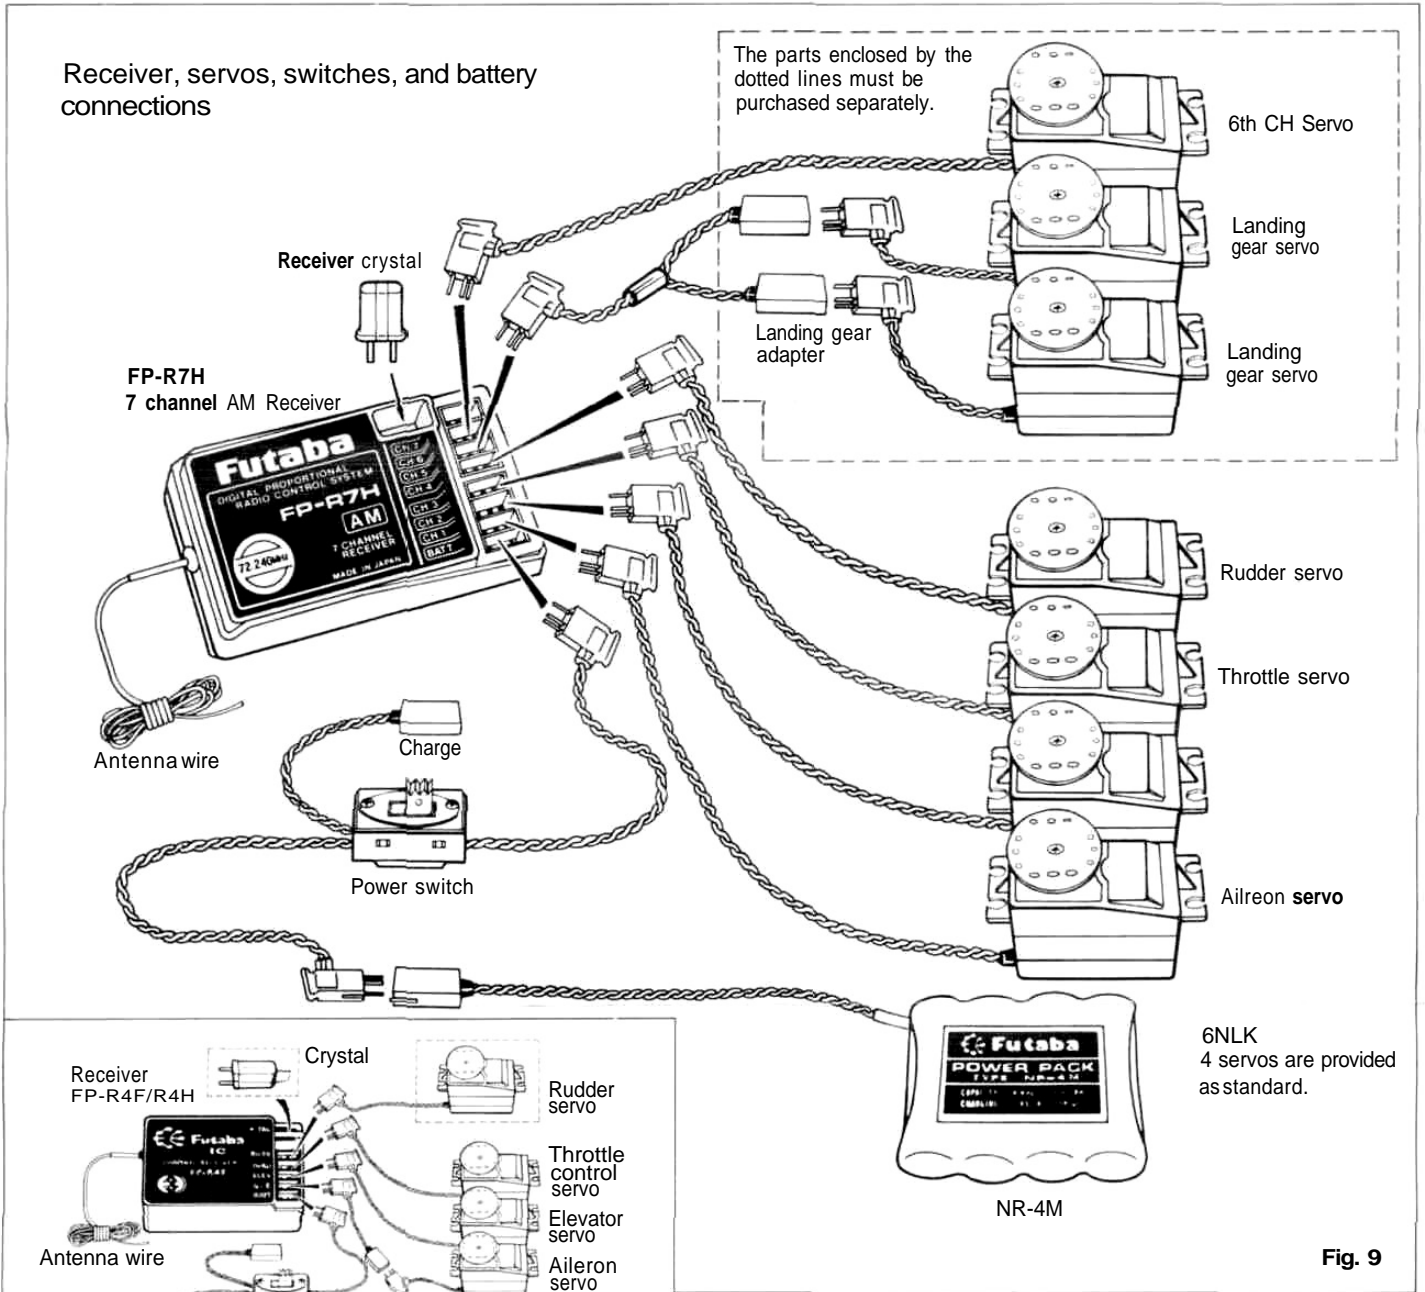

PRECAUTIONS

- Connect the receiver, servos, switches, and battery firmly as shown in Fig. 9. Then extend the transmitter and receiver antennas fully.
- Set the transmitter power switch to **ON**. Then set the receiver power switch to ON. The servos stop near the neutral position. Operate the transmitter sticks and check that each servo follows the movement of the stick.
- Connect the pushrod to each servo horn, then check if the direction of travel of each servo matches the direction of operation of its transmitter stick. To reverse the direction of servo travel, switch the servo reversing switch.
- Operate each servo over its full stroke, and check if the pushrod binds or is too loose. Applying unreasonable force to the servo horn will adversely affect the servo and quickly drain the battery. Always make the travel of each control mechanism somewhat larger than the full travel (including trim) of the servo horn. Adjust the servo horns so that they move smoothly even when the trim lever and stick are operated simultaneously in the same direction.

- Be alert for noise.
This set is noise-resistant, but is not completely **immune** to noise. We recommend the use of noiseless parts.
- When installing the switch harness, cut a rectangular hole somewhat larger than the full stroke of the switch and install the switch so that it moves smoothly from ON to OFF. This also applies to the switch mount when the switch is installed inside the fuselage and is turned on and off from the outside with a piece of wire, etc. Install the switch where it will not be exposed to engine oil, dust, etc.

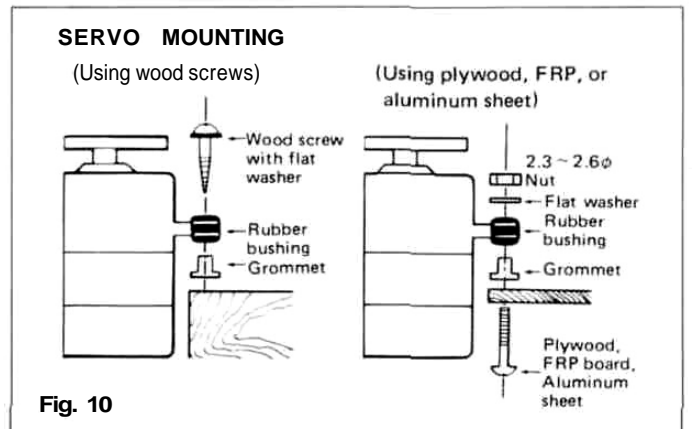

- Even though the receiver antenna is long, do not cut or bundle it.
- Install the servos securely. Tighten the mounting screws until the rubber grommet is crushed slightly. If the screws are too tight, the cushioning effect will be adversely affected.
- The crystal can be changed from the outside of the receiver case. Always use the Futaba transmitter/receiver matched crystal set to change the band.
- Spare servo horns are supplied. Use them as needed.
- Wrap the receiver in sponge rubber. Waterproof and dust-proof the receiver by placing it in a plastic bag and wrapping a rubber band around the open end of the bag. Do the same with the receiver/servo battery.
- Use the rubber bands wrapped around the receiver to hold the servo and switch leads.
- After mounting is complete, recheck each part, then check the range by making the transmitter antenna as short as possible, extending the receiver antenna fully, and operating the set from a distance of 20m to 30m. The movement of each servo should follow the movement of each stick of the transmitter.
- After mounting and checking are complete, take your model to the shop where you purchased the set, or to an experienced radio control modeler, and ask them to teach you how to handle your radio control set in the proper manner and to inspect your set-up carefully.
- To enjoy radio control models fully, be sure to observe all safety standards.

AILERON AND ELEVATOR DUAL (dual rate ON, OFF) ADJUSTMENT (6NLKonly)

When the dual switch is set to ON, the servo throw is made smaller by the amount shown by the hatched lines in Fig. 10. The servo throw can be set from 40% to 100% of the total travel by adjusting the trimmer next to the switch with a flat bladed screwdriver. When the dual rate switch is set to OFF, the throw is normal. When desiring a larger throw, such as for spins, etc., set the dual rate switch to OFF and adjust the throw mechanically by horn and rod adjustment. Set the dual rate switch to on for level flight and adjust the trimmer for the required amount of throw.

When the dual rate switch is set to OFF, dual rate is set and the throw becomes large.

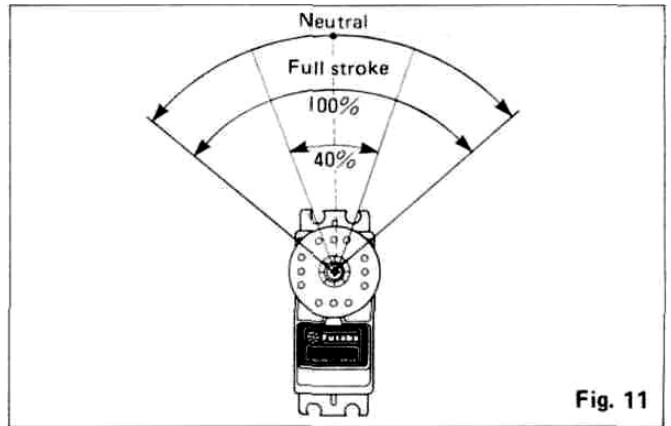


Fig. 11

SPLINED HORNS

This horn permits shifting of the servo neutral position at the servo horn. Setting and shifting the neutral position

a) Angle divisions

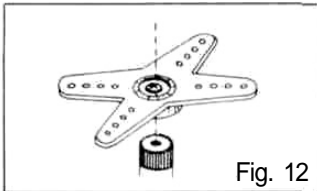


Fig. 12

1) The splined horn has 25 segments. The amount of change per segment is; $360 \div 25 = 14.4^\circ$

2) The minimum adjustable angle is determined by the number of arms or number of the holes. For four arms, the minimum adjustable angle is:

$$360^\circ \div \frac{(25 \times 4)}{\text{Number of divisions}} = 3.6^\circ$$

b) Effect

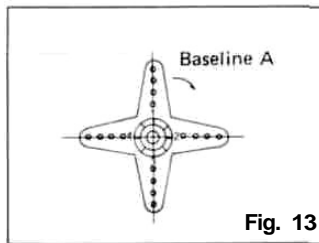


Fig. 13

To shift the holes center line to the right (clockwise) relative to baseline A, shift arm 2 to the position of arm 1 and set it to the position closest to baseline A.

(Example] For a four arm horn, the angular shift per segment is 14.4° . The shift to the right is $90^\circ - (14.4 \times 6) = 3.6^\circ$

To shift by the same angle in the opposite direction, use the opposite arm number.

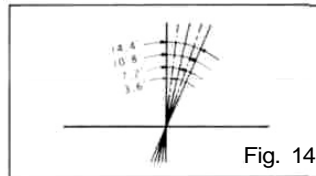


Fig. 14

For a six arm horn, turn the arm counterclockwise and set arm 2 to the position of arm 1. The adjustable angle is $60^\circ - (14.4 \times 4) = 2.4^\circ$.

Arm 3 shift 4.8° to the right, arm 6 shifts 2.4° to the left, and arm 4 shifts 7.2° to the right and left.


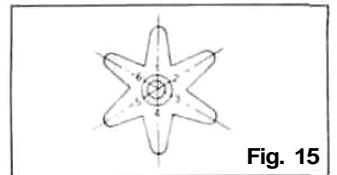


Fig. 15


The following splined horns are optional.

Fig. 16

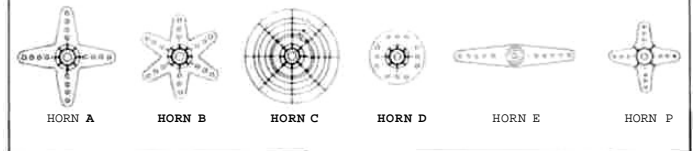

USING THE ANTENNA FREQUENCY FLAG


Insert the frequency flag into the flag holder as shown here.

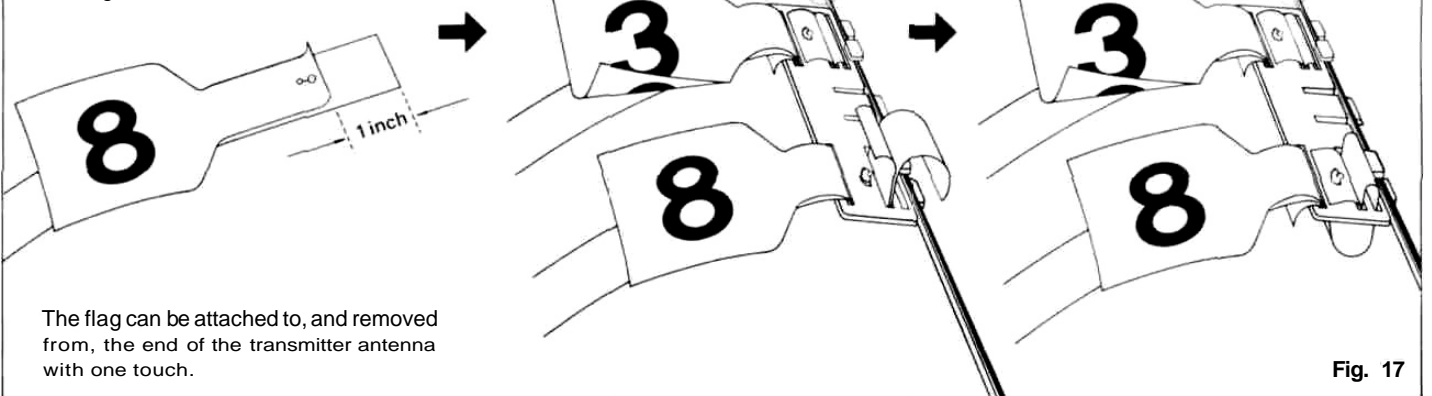

The flag can be attached to, and removed from, the end of the transmitter antenna with one touch.

Fig. 17

FP-S38

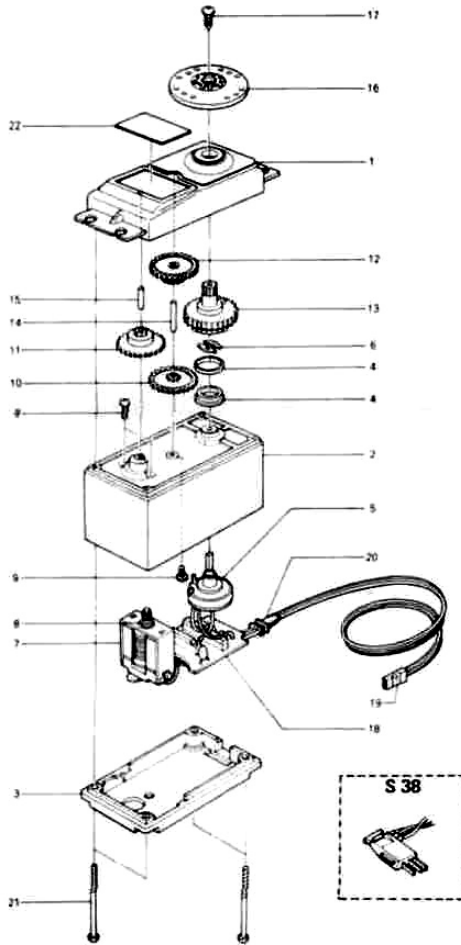

No.	Part Name	Part No.
1.	Upper case	
2.	Middle case	PCS-38
3.	Bottom case	
4.	Metal bearing	S04134
5.	Potentiometer	139995
6.	Potentiometer drive plate	S02753
7.	Motor	S91218
8.	Motor pinion	S02461
9.	Screw	J55016
10.	1 st gear	FGS-38
11.	2nd gear	FGS-38
12.	3rd gear	FGS-38
13.	Final gear	FGS-38
14.	Intermediate shaft	S02495
15.	2nd shaft	S02494
16.	Servo horn D	FSH.6W
17.	Binding head tapping screw 2.6 x 8	FSH-41
18.	Printed wiring board S138	AS1305
	Printed wiring board S38	AS 1304
19.	S38 with 3PC cord	FPC-3M
20.	w/gum bush	S90045
21.	Pan head truss screw	J50360
22.	Nameplate S38	S60147

REPAIR SERVICE

To insure prompt service, please follow the instructions given below.

1. Charge the batteries for at least 18 hours prior to shipment.
 2. Return the system only. Not your complete installation. Remove the servos from their mounts and remove the foam padding from the receiver.
 3. Plugs or other modifications which interfere with factory test procedures will be returned to factory standard at your expense.
 4. Carefully pack all components individually, using sufficient packing material to prevent damage during shipment.
 5. Include a brief but thorough explanation of all problems and service required and tape it to the back of the transmitter. Place a label describing the function of the servo on each servo.
 6. **Be** sure to include your full address and tel. No., zip code inside the box as well as on the outside.
 7. Include a packing list of all items being returned, and double check to make sure that all items are packed.
 8. Upon receipt of your equipment at the Futaba factory, an estimate of the cost of repair (over \$25.00 only) will be sent to you. Your equipment will then be repaired and returned to you upon receipt of payment or C.O.D. (cash).
- This factory repair service applies only to the continental U.S.A., Hawaii, and Alaska.

GUARANTEE

- When requesting repair of trouble that has occurred suddenly or from long use, describe the trouble symptoms in as much detail as possible. This will facilitate detection of the trouble point and shorten the repair period greatly.
- Defects caused by faulty materials or workmanship will be corrected free of charge.
- Always send the guarantee provided with this manual together with the set to be repaired.
- This limited warranty is null and void if the set has been tampered with or disassembled. Refer to warranty statement for details.

WORLD SALES & SERVICE FACILITIES

- Australia:** FUTABA SALES AUSTRALIA PTY. LTD., MELBOURNE TEL: 211-4788
- Argentina:** MODELISMO AERONAUTICO DEGA SRL. BUENOS AIRES TEL: 393-2299
- Canada:** UDISCO LTD., MONTREAL TEL: 481-8109
- Chile:** HOBBY LANDIA, SANTIAGO TEL: 743957
- Denmark:** FUTABA IMPORT DENMARK, COPENHAGEN TEL: 02-91-0101
- England:** RIPMAX LIMITED, LONDON TEL: 01 8048272
- Finland:** NORETRON KY, HELSINKI TEL: 90 488880
- Greece:** C. & G. MACRIYIANNIS CO., PIRAEUS TEL: 021-3604 391 • or 021-4176191
- Hong Kong:** RADAR CO. LTD. TEL: 3-680507
- Italy:** RADIOSISTEMI SRL, Carrara TLX: 500494 FORTIM I FAX: 0039-585-52247
- Lebanon:** KHAIRALLAH MODEL CRAFT, BEIRUT TEL: 326-681
- New Zealand:** AMALGAMATED WIRELESS (AUSTRALIA) N.Z. LTD. WELLINGTON TEL: 58 979
- Norway:** HARALD LYCHE CO. A/S, Drammen TEL: (03) 833970
- Singapore:** SINGAPORE HOBBY SUPPLIES TEL: 533 0337
- South Africa:** REDIPAK (PTY.) LTD., JOHANNESBURG TEL: 21-1511
- Spain:** HOBBY & TOY INTERNATIONAL, VALENCIA TEL: (96) 357 23 93
- Sweden:** RADIO CONTROL CENTER, JONKOPING TEL: 036-145360
- U.S.A.:** FUTABA CORPORATION OF AMERICA, CALIFORNIA TEL: 213-537-9610
- W.Germany:** ROBBE MODELLSPORT GMBH, GREBENHAIN TEL: 06644-870



FUTABA CORPORATION OF AMERICA
 555 West Victoria Street, Compton, Calif. 90220, U.S.A.
 Phone: 213-537-9610 Telex: 23-0691227 Facsimile: 213-637-8529

FUTABA CORPORATION
 Tokyo Office: Inagaki Bldg., 1-21-3, Kanda Suda-cho, Chiyoda-ku, Tokyo 101, Japan
 Phone: (03) 255-6811 Facsimile: (03) 255-6880