

Heli-Max™



INSTRUCTION MANUAL



Rotor Diameter: 27.5 in [700mm]
Weight: 19–22 oz [580–760g]
Length: 25.4 in [645mm]
Height: 9 in [225mm]
Motor: ElectriFly Ammo 28-45-2700kV (GPMG5215)

WARRANTY

Heli-Max™ guarantees this kit to be free from defects in both material and workmanship at the date of purchase. This warranty does not cover any component parts damaged by use or modification. **In no case shall Heli-Max's liability exceed the original cost of the purchased kit.** Further, Heli-Max reserves the right to change or modify this warranty without notice.

In that Heli-Max has no control over the final assembly or material used for final assembly, no liability shall be assumed nor accepted for any damage resulting from the use by the user of the final user-assembled product. By the act of using the user-assembled product, the user accepts all resulting liability.

If the buyer is not prepared to accept the liability associated with the use of this product, the buyer is advised to return this kit immediately in new and unused condition to the place of purchase.

To make a warranty claim, send the defective part or item to Hobby Services at this address.

**Hobby Services
3002 N. Apollo Dr. Suite 1
Champaign IL 61822
USA**

Include a letter stating your name, return shipping address, as much contact information as possible (daytime telephone number, fax number, e-mail address), a detailed description of the problem and a photocopy of the purchase receipt. Upon receipt of the package the problem will be evaluated as quickly as possible.

READ THROUGH THIS INSTRUCTION MANUAL FIRST. IT CONTAINS IMPORTANT INSTRUCTIONS AND WARNINGS CONCERNING THE ASSEMBLY AND USE OF THIS MODEL.

Heli-Max™

Champaign, Illinois
(217) 398-8970

E-mail: helicoptersupport@greatplanes.com

HMXZ7012 for HMXE0210 V1.0

INTRODUCTION	2
DECISIONS YOU MUST MAKE	2
ASSEMBLE THE TAIL	3
INSTALL THE PUSHRODS	4
INSTALL THE SERVOS	5
INSTALL LINKAGES	6
INSTALL GYRO, ESC & RECEIVER	6
FINAL ASSEMBLY & SETUP	7
CHECK THE CONTROL DIRECTIONS	9
BLADE BALANCING	9
ADJUST COLLECTIVE PITCH	9
SET CONTROL THROWS	10
ADJUST BLADE TRACKING	10
RANGE CHECK	10
SAFETY PRECAUTIONS	10
MX400 PARTS LIST	11
PARTS DRAWINGS	12
PITCH GAUGE	20

INTRODUCTION

The Heli-Max MX450 is a fully aerobatic-capable helicopter, offering the performance and flying manners of a 60-sized machine in a smaller, more convenient package. The MX450 is fully loaded with precision machined aluminum parts for smooth control without flexing along with a carbon fiber tail boom and fin set to keep the MX450 light and more agile. The recommended power system will give you explosive power off the ground and more than enough power to do tick tocks, tornado's, chaos's, and much more.

Take care to build straight and true. Misaligned parts will hurt the helicopter's ability to perform the extreme aerobatics it is designed for.

For the latest technical updates or manual corrections to the MX450 visit the Heli-Max web site at www.bestrc.com/helimax. Open the "Helicopters" link, and then select the MX450 ARF. If there is new technical information or changes to this model a "tech notice" box will appear in the upper left corner of the page.

CAUTION: Be aware that the MX450 is operated on the same frequency band as larger R/C models. If flying your heli within five miles of an R/C site, there is a real possibility that you could be operating your model on the same frequency (channel) as another R/C pilot. If this happens, a crash will result—with the person flying the more expensive model suffering the greater loss (and having greater potential for property damage or injury). The best thing to do is to join an R/C club and fly at the site where frequency control measures will be in effect. If you insist on flying elsewhere, **always be aware of your proximity to R/C flying sites.**

DECISIONS YOU MUST MAKE

In the hands of a capable pilot, the MX450 is an impressive 3D performer. But for this helicopter to perform to its full potential, it must be properly equipped with all the right gear (servos, batteries, receiver, speed control). There may be more than one type and brand of radio equipment that can be used. But based on extensive testing, following is the equipment we recommend so you can get the most performance out of your MX450 and assemble it as shown in this instruction manual.

Transmitter

At a minimum, this helicopter requires the use of a six-channel helicopter transmitter capable of mixing between the throttle and collective pitch channels. However, to unleash the full aerobatic potential of the MX450, you will need a computer radio capable of at least two sets of throttle and pitch curves. The Futaba® 6EXH radio (FUTK60** or FUTK61**) is an excellent entry-level radio for use with this helicopter. For more programming capability, any of Futaba's higher channel-count computer helicopter radios will work very well.

Servos

You will need four servos for the MX450. The servos should weight less than 10 grams apiece, and should have a minimum torque output of 14 oz-in. A good speed rating is also important for helicopters, and we recommend that you choose servos with a speed of 0.12sec/60deg or less. We recommend the Futaba S3103 (FUTM0037) or S3107 (FUTM0025) for use with this helicopter. Note: The Futaba S3108 servo will not mount to this helicopter without modification, and is therefore not recommended.

Receiver

You will need a 6-channel receiver for this helicopter. A small PCM receiver is strongly recommended for the noise rejection and failsafe capabilities that PCM offers. We recommend the Futaba R146iP receiver (FUTL0601) You will also need a single conversion crystal to use with this receiver. While most Futaba receivers are sold on high and low bands, the R146iP is not banded and can use either high or low band crystals.

Low band (channels 11 – 35)	Crystal FUTL62**
High band (channels 36 – 60)	Crystal FUTL63**

Replace the "*" in the order number for the crystals with the preferred channel number. For example, if you want to fly on channel 33, order crystal number FUTL6233.

Gyro Recommendation

We recommend the use of a heading-hold gyro with this helicopter. The Futaba GY240 gyro (FUTM0809) is an excellent choice.

Battery

The MX450 requires a 1200-2000 mAh 3-cell Lithium-Polymer (LiPo) battery capable of delivering 15A of current continuously. We recommend the ElectriFly™ 11.1V 2100 mAh pack (GPMP0841). This battery will deliver approximately 7 minutes of flight time with the recommended motor and speed control.

Motor

You will need a brushless motor capable of handling 15A of continuous current, and up to 22A in bursts. The motor should also have a kV rating of 2500-3000 RPM/V for use with the included pinion. We recommend the ElectriFly Ammo 28-45-2700kV (GPMG5215).

Speed Control

A 35-Amp or better brushless electronic speed control (ESC) is required for this helicopter. We recommend the Heli-Max 40A Brushless ESC (HMXM3004).

Charger

A charger capable of charging 3-cell (11.1V) LiPo batteries such as the ElectriFly PolyCharge 1-3-cell LiPo charger (GPMM3010) must be used. If using another charger, it **must** be a LiPo charger or have a LiPo charge mode. Never charge LiPo batteries with chargers not intended for LiPo batteries or chargers on NiMH or NiCd settings. Overcharging or explosion may result. In addition to the PolyCharge, the ElectriFly Triton™ (GPMM3150) and Accu-Cycle Elite™ (HCAPO280) are also suitable chargers.

Battery Charging Leads


Many chargers (including the Triton and Accu-Cycle Elite listed above) do not include charging leads, but rather have banana jacks to plug the leads into. If this is the case with your charger, you will need to purchase a charge lead to match your battery. For the recommended battery pack, the correct lead is GPMM3105.

IMPORTANT!


INSPECT YOUR HELICOPTER

Check all screws on the helicopter for tightness. If any screws are loose, tighten them before flying. If any machine screw that threads into a metal part is loose, be sure to secure it with a drop of threadlocking compound. This check should include the tail blade grip screws, which will require removal of the tail rotor blades.


ASSEMBLE THE TAIL

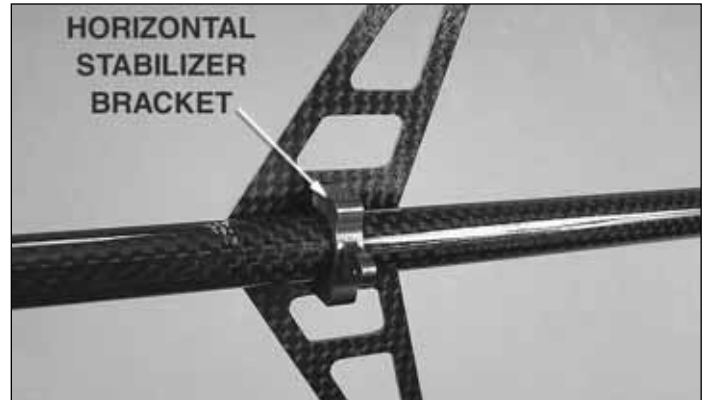


1. Install the aluminum horizontal stabilizer and the horizontal stabilizer bracket onto the tail boom with two 2 x 8mm metal screws. Do not fully tighten the screws at this time. Be sure to add a drop of threadlocker to each screw.

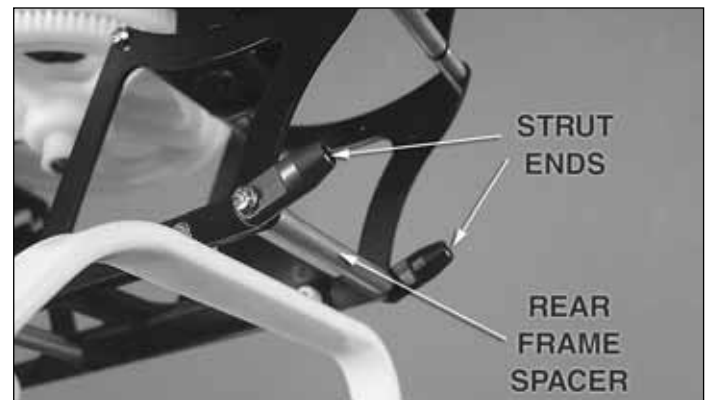


2. Secure two aluminum tail strut ends and the rear frame spacer to the frames with two 2x10mm machine screws as shown. Use a drop of threadlocker to secure each screw.

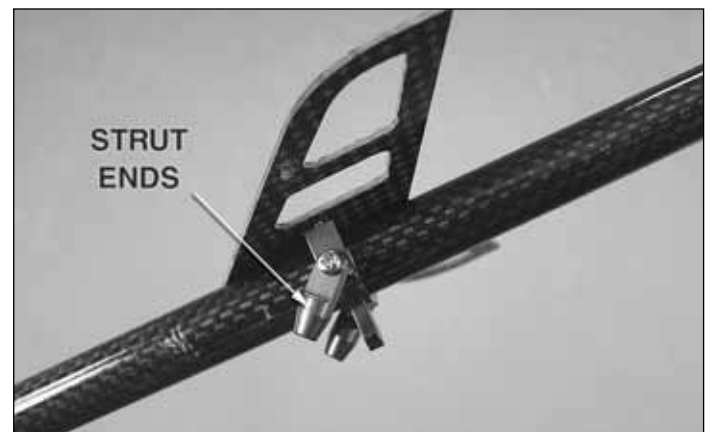

3. Secure two tail strut ends to the aluminum horizontal stabilizer bracket with 2x8mm metal screws. Use a drop of threadlocker to secure each screw.

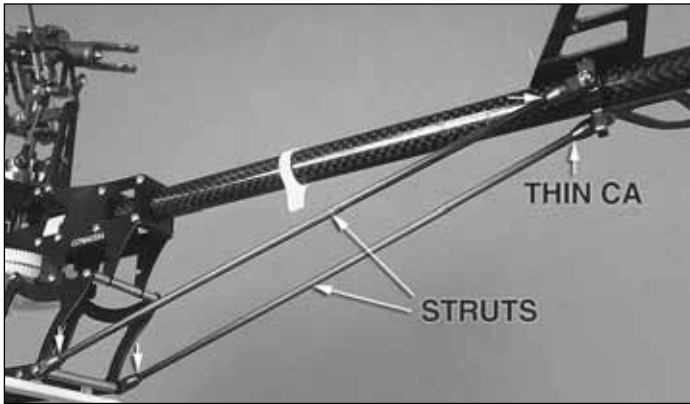


4. Insert the carbon fiber tail struts into the aluminum strut ends. Secure each end with a drop of thin CA.

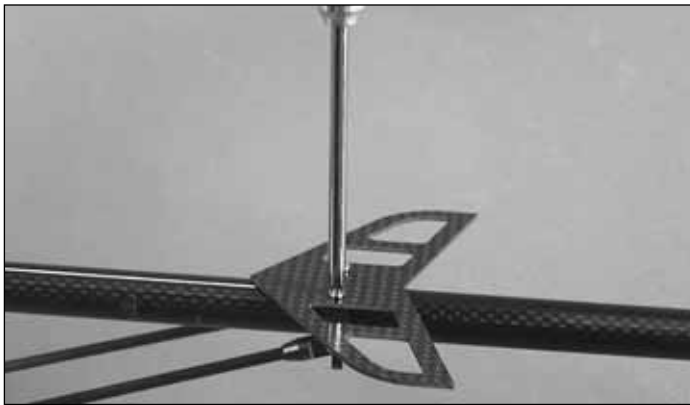


5. Finalize the position of the horizontal stabilizer bracket, and tighten the horizontal stabilizer screws to hold the assembly firmly in place. Do not over tighten. Use a drop of threadlocker to secure each screw.


INSTALL THE PUSHRODS

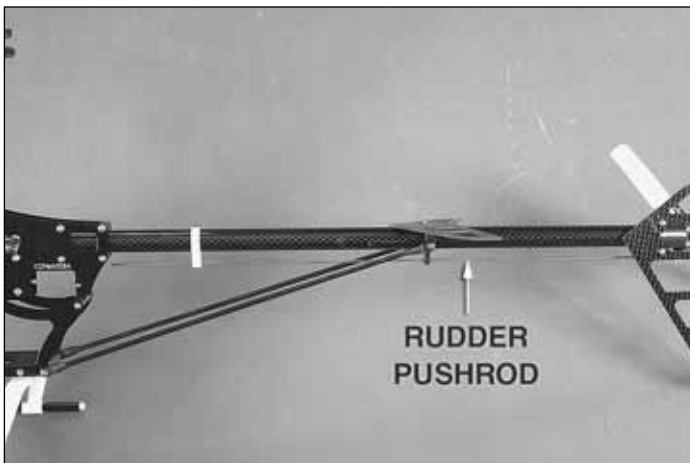


1. Slide the rudder pushrod back through both supports on the tail boom.

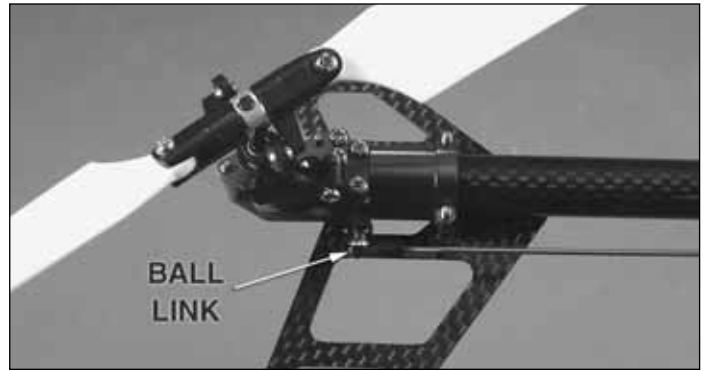

2. Screw a ball link onto the threaded end of the rudder pushrod.

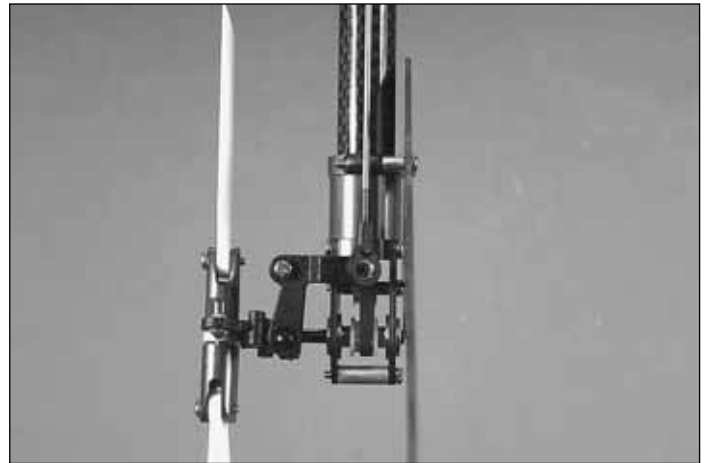

3. Connect the ball link to the ball on the tail rotor pitch control horn. Check to see that the ball link runs freely on the ball, and loosen it if necessary using the following Heli-Max Tip.

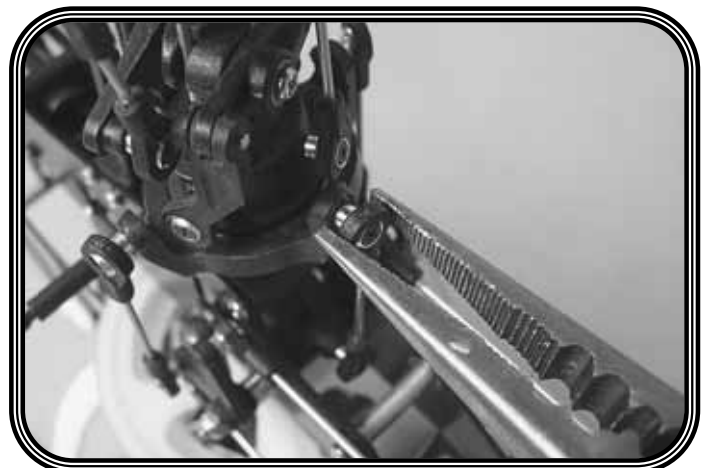


HELI-MAX TIP

How to adjust the fit of ball links.


If a ball link does not twist freely on its ball, squeeze it firmly with a pair of needle-nose pliers *while it is installed on the ball*.

HR3 (120°)


Front

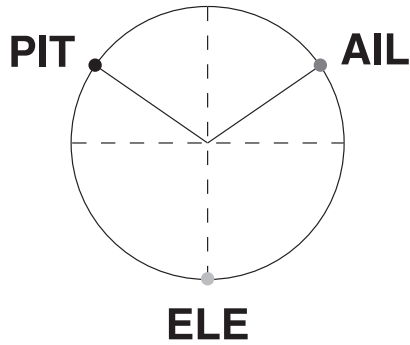

Use this swash plate diagram in your radio for proper setup.

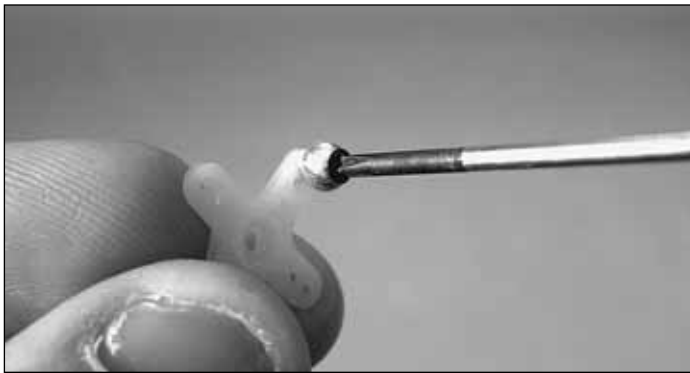

1. Locate the 4 aluminum balls and the 4 2mm x 6mm machine screws. Install the 4 ball links onto all 4 control horns (AIL, ELE, PIT, RUD).

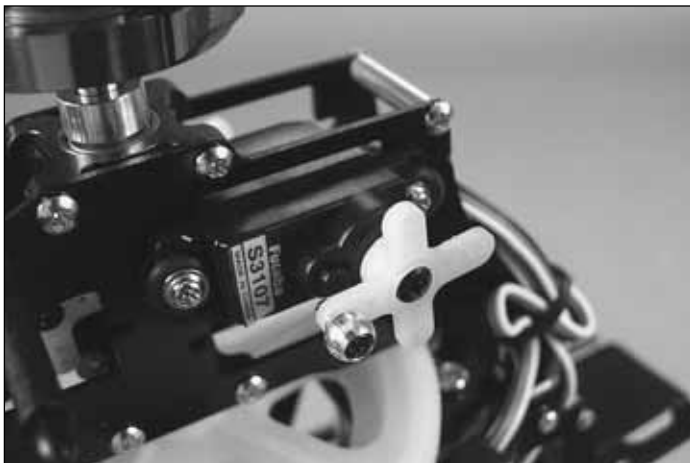


2. Using two plastic servo screw nuts, install the Aileron servo as shown. With the aileron servo centered, the servo arm should be completely horizontal with the ball end to the rear as shown.



3. Using two plastic servo screw nuts, install the pitch servo as shown. With the pitch servo centered, the servo arm should be completely horizontal with the ball end to the rear as shown.




4. Using two plastic servo screw nuts, install the elevator servo as shown. With the elevator servo centered, the servo arm should be completely horizontal with the ball end to the rear. The output shaft of the servo should point towards the front of the heli.

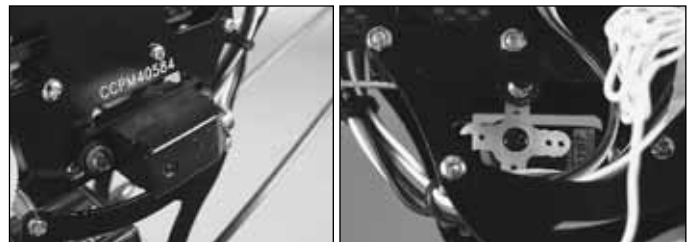

5. Using two plastic servo screw nuts, install the rudder servo as shown. With the rudder servo centered, the servo arm should be completely horizontal with the ball end up as shown. The output shaft of the servo should point towards the rear of the heli.


INSTALL LINKAGES

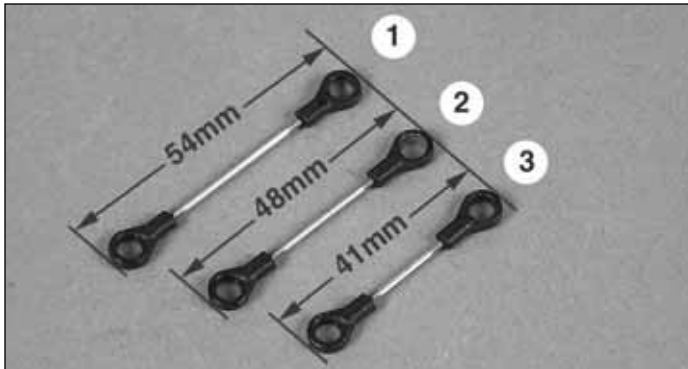

6. Locate the 3 control rods and the 6 ball link ends.

- 1) Pitch (54mm)
- 2) Elevator (48mm)
- 3) Aileron (41mm)


All measurements are overall length with the ball links threaded on to the metal rods.

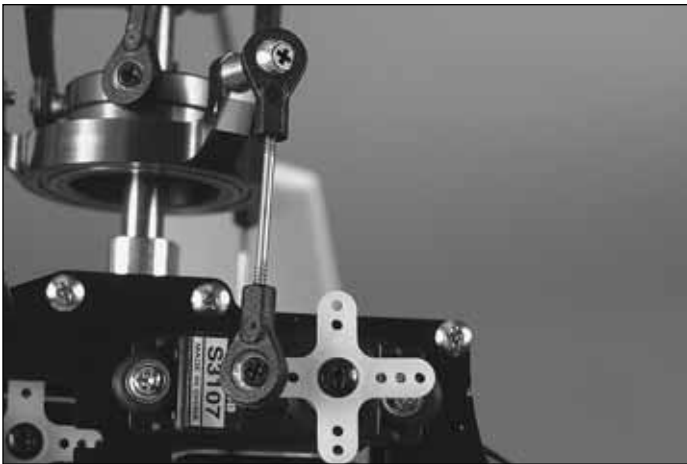

7. Install the Aileron control linkage as shown.



8. Install the Pitch control linkage as shown.

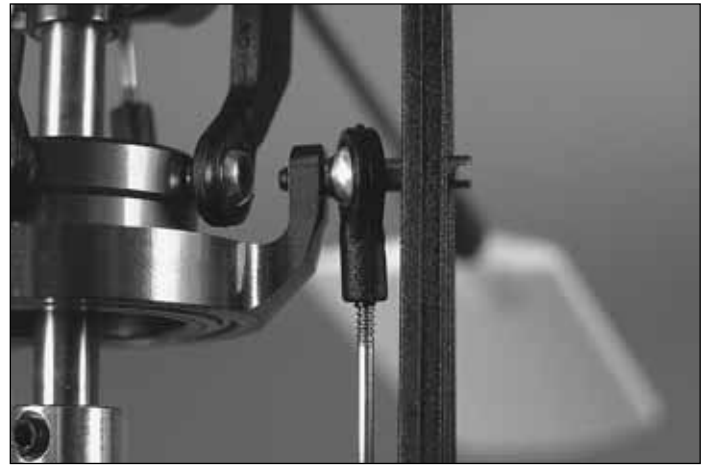

9. Install the elevator control linkage as shown. Be sure that the swash plate is level with all the control arms and the servos are horizontal. If they are not, remove and adjust accordingly.



10. Install the ball link to the rudder control linkage and snap it on the ball attached to the control arm.

INSTALL GYRO, ESC & RECEIVER





11. Install the Futaba 401 gyro on the top of the frames as shown with double sided foam tape. Be sure the surface is clean to get a good bond. An optional mount (HMXE7921) is available for a more secure mounting, if desired.

FINAL ASSEMBLY & SETUP



12. Install the receiver in the bay under the spur gear. Be sure to keep the receiver towards to rear of the bay as show. Attach with double sided foam tape or Velcro. Make sure that the receiver antenna is routed so that it cannot possibly interfere with the main or tail rotor blades. There are many possible ways to route the antenna, and you may have to try different methods to get interference-free operation, but it is essential that the antenna be constrained from contact with the blades

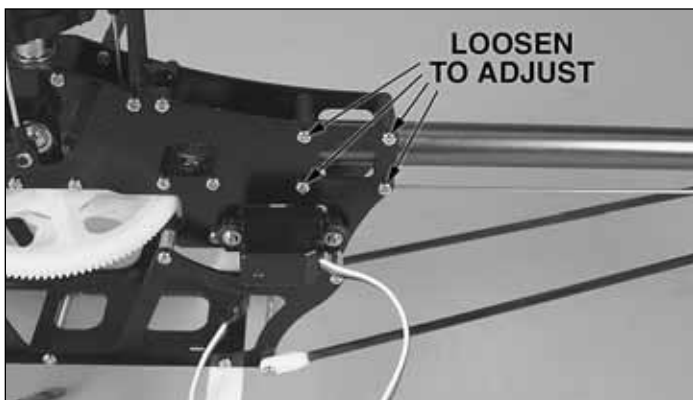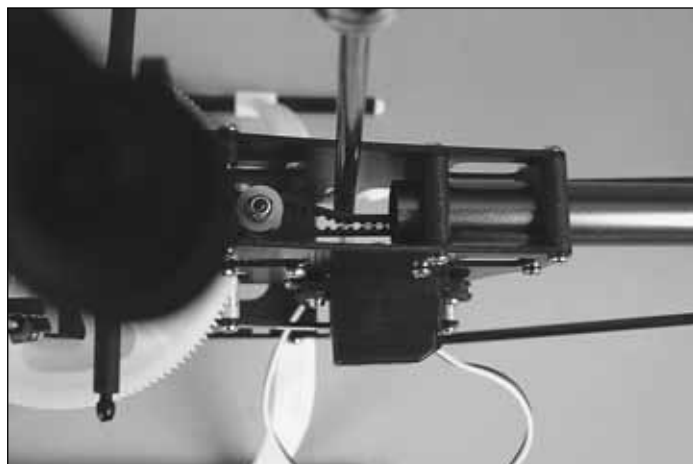


1. Check the tail drive belt tension by pressing on one side of the belt with a screwdriver. With gentle pressure, it should be possible to push the belt approximately as far as the picture shows. If you can easily push the belt against itself, it is too loose. If it does not deflect easily, then it is too tight. If you need to adjust the belt tension, simply loosen the screws shown and slide the tail boom in or out. When you have the tension correct, retighten the screws. Recheck the rudder pushrod adjustment.




13. Install the pinion onto the motor, and install the motor in the helicopter. Be sure to set the gear mesh properly. This can be done by pushing the pinion and spur together with a strip of typing paper between them and tightening the motor screws. The paper can then be removed by turning the gears to eject it.




14. Install the ESC to the bottom of the frames as shown with hook and loop material or double sided foam tape.

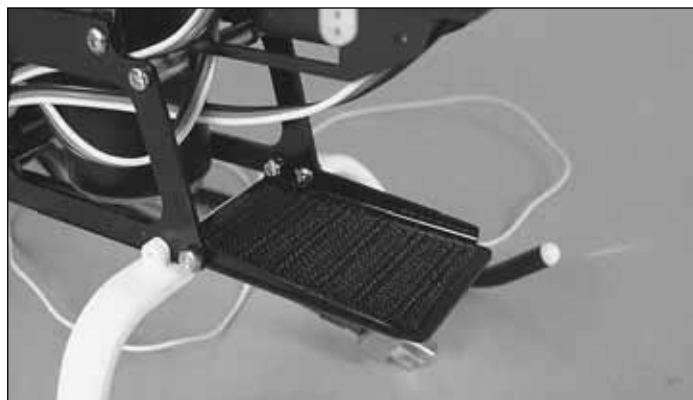

2. Attach the hook side of hook and loop fastener to the battery tray.

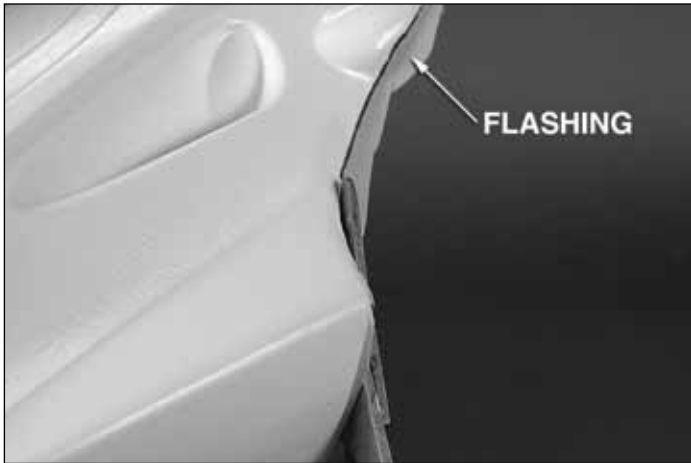

3. Cut the window out of the canopy, and trim the flashing from around the rear opening.

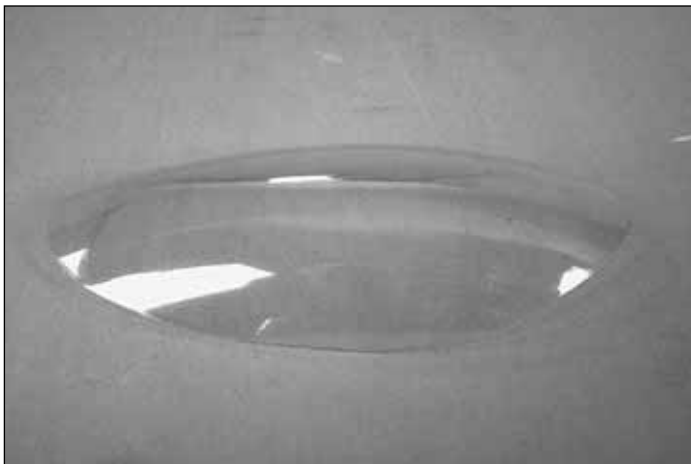

4. Cut the clear shield out along the molded-in cut lines.



5. Secure the shield to the canopy with the two small screws packaged with the shield.




6. Install the canopy onto the helicopter.

7. Apply decals as desired.

CHECK THE CONTROL DIRECTIONS

- ❑ 1. Attach the “loop” side of the hook-and-loop material to the battery. Mount the battery to the battery tray.
- ❑ 2. For safety, do not install the main blades while performing bench setup.
- ❑ 3. Lower the throttle stick all the way and turn on the transmitter. Connect your battery to the ESC. If the ESC has a BEC switch, turn it on.
- ❑ 4. Check all the servos to see if they are centered. Since you set the center points as you set up the linkages, they should already be very close. Use the trims or subtrims on the transmitter to center the controls.

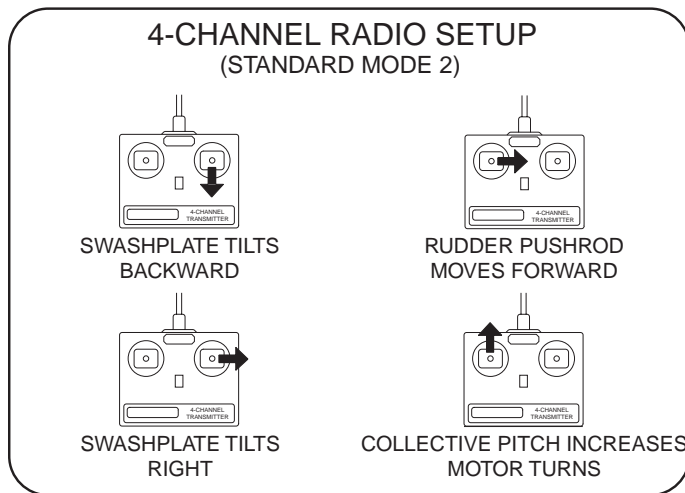

- ❑ 5. Make certain that the swash plate and the motor respond in the correct direction as shown in the diagram. To operate the motor, you may have to “arm” your ESC. Follow the instructions that came with your ESC to do this. If any of the controls respond in the wrong direction, use the servo reversing in the transmitter to reverse the servos connected to those controls. Be certain the servos have remained centered. Adjust if necessary.

BLADE BALANCING & INSTALLATION

- ❑ 1. Balance your main blades using the Heli-Max Blade Balancer (HMXR4855). Do so according to the instructions that came with your balancer.




- ❑ 2. Attach the main rotor blades. The blades should be tight enough in the grips to hold their position when moved, but still move easily by hand.

ADJUST COLLECTIVE PITCH

WARNING: Disconnect the motor from the ESC to prevent accidental startup while performing pitch adjustment.

- ❑ 1. Cut out the pitch template from the last page of this manual and slip it over one of the main blades.

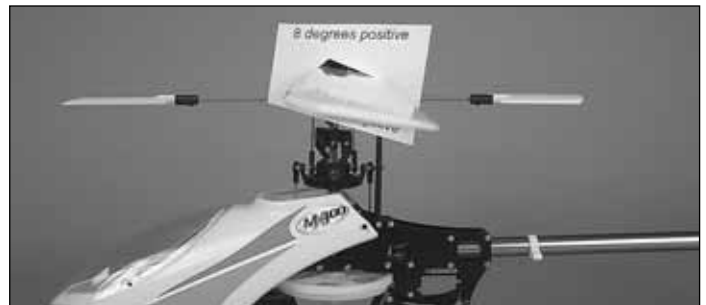

- ❑ 2. We recommend 8 degrees of maximum collective pitch in both directions as a starting point. Check to see that the bottom of the pitch template is level with the flybar at maximum positive pitch and the top of the template is level with the flybar at full negative collective pitch. Adjust your linkages or radio endpoints if necessary to achieve these values.

- ❑ 3. Once you are comfortable with the helicopter, feel free to increase or decrease this pitch value to suit your flying style.

SET CONTROL THROWS




To set rates on the elevator and aileron, check to see that the control rates are set to maximum for high rates. This can be verified by checking that the ball link attached to the seesaw is close to touching the main rotor grips at full input. Check the elevator rate with the flybar perpendicular to the tailboom, and check the aileron rate with the flybar parallel to the tailboom. These maximum deflections work well for high rates, and we recommend 60% of these values for low rates.

Rudder control throw will be affected by your gyro settings, and will need to be tuned to suit your flying style.

ADJUST BLADE TRACKING

1. Apply the two different colored stripe decals to the tips of your main rotor blades.

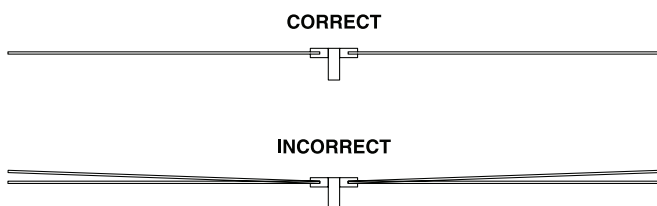

2. At zero pitch, bring the main rotor up to speed and observe whether the rotational planes of the blades are the same. If they are not, adjust one of the linkages to bring the blades into the same plane.

RANGE CHECK

Ground check the operational range of your radio before the first flight of the day. With the transmitter antenna collapsed and the receiver and transmitter on, you should be able to walk at least 50 feet away from the model and still have control. Have an assistant stand by your model and, while you work the controls, tell you what the servos are doing. Repeat this test **with the motor running** at various speeds. If the control surfaces do not respond correctly, **do not fly!** Find and correct the problem first. Look for loose servo connections or broken wires, corroded wires on old servo connectors, poor solder joints in your battery pack or a defective cell, or a damaged receiver crystal from a previous crash.

SAFETY PRECAUTIONS

Failure to follow these safety precautions may result in severe injury to yourself and others.

Keep your face and body as well as all spectators away from the plane of rotation of the rotors whenever the battery is connected.

Keep these items away from the rotors: loose clothing, shirt sleeves, ties, scarfs, long hair or loose objects such as pencils or screwdrivers that may fall out of shirt or jacket pockets into the rotors.

The spinning blades of a model helicopter can cause serious injury. When choosing a flying site for your MX450, stay clear of buildings, trees and power lines. **AVOID** flying in or near crowded areas. **DO NOT** fly close to people, children or pets. Maintain a safe pilot-to-helicopter distance while flying.

MX450 XS Parts List


SKU	Mfr #	DESCRIPTION
HMXE77014001-106Stabilizer Blade
HMXE82104001-110Auto-Rotation Gear Set
HMXE97134001-111Drive Pulley 11T
HMXE97144001-112Counter Gear 21T
HMXE84024001-113Main Shaft Collar
HMXE76104001-114Stabilizer Control Rod
HMXE76144001-116Mixing Arm Rod
HMXE76224001-120Pitch Rod
HMXE76264001-125Control Rod CCPM
HMXE71014002-204Anti-Rotation Guide
HMXE79024002-205Lower Frame Set
HMXE79104002-206Motor Mount Set
HMXE72014002-207Battery Mount
HMXE79304002-210Skid Set
HMXE74134002-211Canopy MX450 XS
HMXE74154002-212Windshield MX450 XS
HMXE79064002-213Upper Frame
HMXE97104003-304Tail Shaft w/Pulley 11T
HMXE97114003-305Guide Pulley w/Bearing
HMXE95214003-309Tail Rotor Hub
HMXE95014003-311Tail Rotor Blade
HMXE96224003-313Tail Pitch Lever Set
HMXE97024003-314Tail Boom Brace Set
HMXE97154003-315Tail Drive Belt (L)
HMXE96234003-316Rudder Control Rod (L)
HMXE94224003-318Tail Gear Case Plate w/Bearing Alum
HMXE95314003-320Tail Pitch Plate Full Set
HMXE95304003-321Tail Pitch Plate
HMXE75074004-066Decal MX450 XS
HMZ70124004-067Instruction Manual MX450 XS
HMXE83124011-001Bearing Collar 3x5x4mm
HMXE73154011-010Bearing Spacer
HMXE90654012-008Radius Arm
HMXE86304012-112Spindle Bushing
HMXE88044012-019Seesaw (L)
HMXE86354013-001Feathering Spindle
HMXE86124013-002Anti-Rotation Pin
HMXE84014013-003Main Shaft
HMXE78014013-006Stabilizer Bar
HMXE88084013-010Seesaw Standoff
HMXE88074014-001Stand Off
HMXE90664016-001Needle Pin 1.5x7mm
HMXE86084016-002Center Hub Pin 1.5x18mm
HMXE79034021-009Cross member M2x34
HMXE79044021-010Cross member M2x16
HMXE79054021-011Cross member M2x8
HMXE80134021-014Motor Pinion 14T
HMXE80124021-016Motor Pinion 13T
HMXE80114021-018Motor Pinion 12T
HMXE80104021-019Motor Pinion 11T
HMXE80094021-020Motor Pinion 10T
HMXE80084021-021Motor Pinion 9T
HMXE80074021-022Motor Pinion 8T
HMXE82054022-008Main Gear 138T (w/One Way Bearing)
HMXE82064022-009Autorotation Gear 105T
HMXE79204022-013Gyro Mount
HMXE74304022-017Canopy Mount
HMXE73814022-018Servo Nut Plastic
HMXE84104023-003Auto-rotation drive shaft
HMXE94234031-001Tail Gear Case Mount Aluminum
HMXE79084031-004Cross Member 2 x 10.4mm
HMXE79094031-010Cross Member 2 x 4mm
HMXE76234043-002Rod End 1.2mm
HMXE73574043-007Ball 4.6mm
HMXE73054045-001Bearing 2x5x2.5mm

HMXE73064045-002Bearing 3x8x3mm
HMXE73074045-003Bearing 3x8x4mm
DTXC15474045-004Bearing 5x11x5mm
HMXE73084045-005Bearing Flanged 3x8x3mm
HMXE73044045-006Bearing Flanged 2x5x2.3mm
HMXE73434102-004Pan Head Screw 2x4mm
HMXE73444102-005Pan Head Screw 2x5mm
HMXE73454102-008Pan Head Screw 2x8mm
HMXE73464102-010Pan Head Screw 2x10mm
HMXE73474102-012Pan Head Screw 2x12mm
HMXE73484102-014Pan Head Screw 2x14mm
HMXE73504102-022Pan Head Screw 2x21mm
HMXE73514202-007Flat Head Screw 2x7mm
HMXE73524202-015Flat Head Screw 2x15mm
HMXE73754302-006Tapping Screw 2x6mm
HMXE73534402-005Button Head Screw 2x5mm
HMXE73544502-006Cap Screw 2x6mm
HMXE73774603-003Set Screw 3x3mm
HMXE73554702-004Nylon Nut 2mm
HMXE73784702-045Nut 2mm
HMXE73794703-055Nylon Nut 3mm
HMXE73614925-002Flat Washer 2x3.5x0.2mm
HMXE73564925-003Flat Washer 2x4x0.3mm
HMXE73804925-004E-ring 2.5mm
HMXE73604935-005Washer
HMXE73585400-115O-ring
HMXE73595801-011Washer 3x4.5x0.5mm
HMXE9007ARK-202Swash Plate Aluminum CCPM
HMXE8620ARK-203Top Dome Aluminum
HMXE9421ARK-204Tail Gear Case Set Aluminum
HMXE7907ARK-208Lower Frame Full Set
HMXE9103ARK-215Carbon Tail Boom 345mm
HMXE9625ARK-218Carbon Tail Fin Set
HMXE8611ARK-220Center Hub Set Aluminum
HMXE9057ARK-221Slide Block Aluminum
HMXE8806ARK-222Seesaw w/Bearing Aluminum
HMXE8811ARK-223Stabilizer Control Arm Aluminum
HMXE8821ARK-224Mixing Arm w/Bearing Aluminum
HMXE9061ARK-225Washout Control Arm w/Bearing Alum
HMXE9107ARK-228Horizontal Stabilizer Mount Aluminum
HMXE9703ARK-229Tail Boom Brace End Aluminum
HMXE9062ARK-230Washout Control Set w/Bearing Alum
HMXE8311ARK-231Main Blade Holder w/Bearing Alum
HMXE9524ARK-232Tail Blade Holder w/Bearing Aluminum
HMXE7319ARK-233Bearing Block w/Bearing Aluminum
HMXE7322ARK-234Counter Gear Case w/Bearing Alum
HMXE9104ARK-235Tail Boom Mount Aluminum
HMXE8307ARK-237Main Rotor Blade Fiberglass 325mm


Option Parts

SKU	Mfr #	Description
HMXE79214012-021Upper Gyro Mount Aluminum
HMXM3004ARK-131Brushless ESC w/Heatsink 40A
HMXE7951ARK-210Carbon Frame Full Set CCPM
HMXE8306ARK-212Carbon Main Blade Set 325mm
HMXE7702ARK-213Carbon Stabilizer Blade Set
HMXE9502ARK-214Carbon Tail Blade Set
HMXE7412ARK-217Fiberglass Canopy MX400 Style
HMXE7414ARK-236Fib/glass Canopy MX450 XS Painted
HMXE9109ARK-238Tail Boom Servo Mount Aluminum
HMXE9535ARK-239Tail Pitch Plate Aluminum
HMXE9536ARK-240Tail Pitch Plate Full Set Aluminum
HMXE1007		Mini Blade Holder
HMXE4304		Carbon Main Blades 315mm
HMXE4305		Carbon Main Blades 325mm
GPMP0841		11.1V 2100mAh LiPo Battery
GPMG5215		Ammo 28-45-2700KV Brushless Motor


ROTOR HEAD

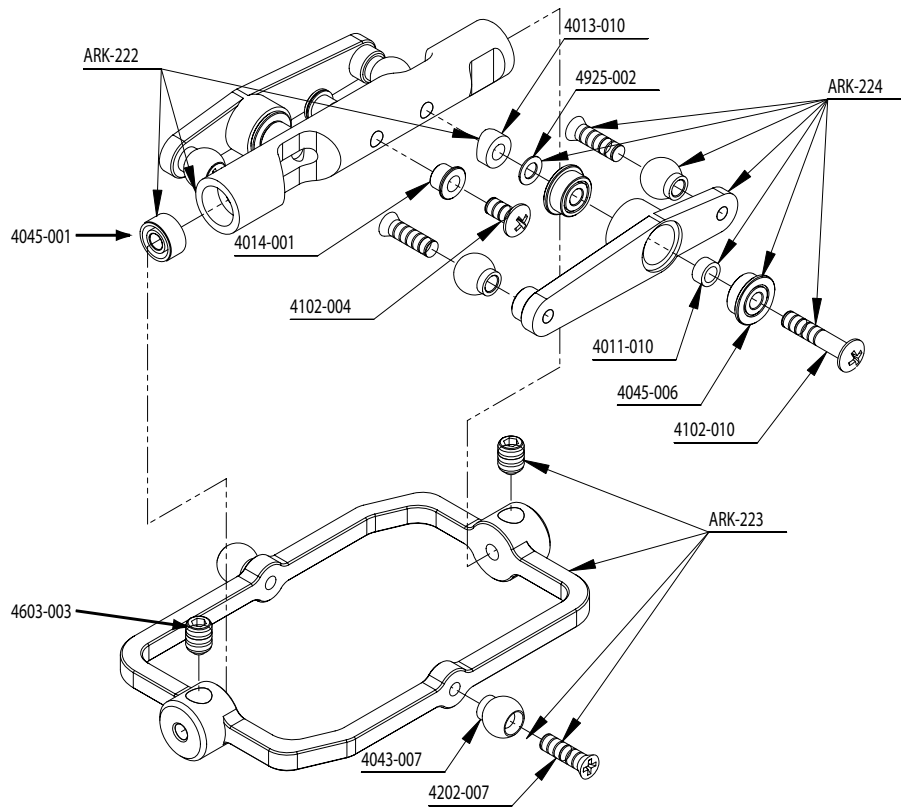


MIXING LEVERS

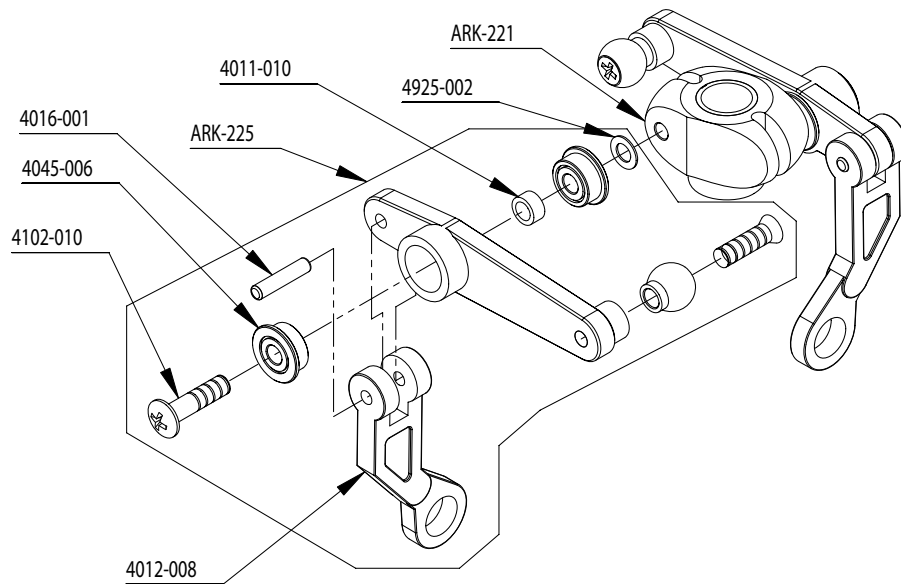


BLADE GRIPS

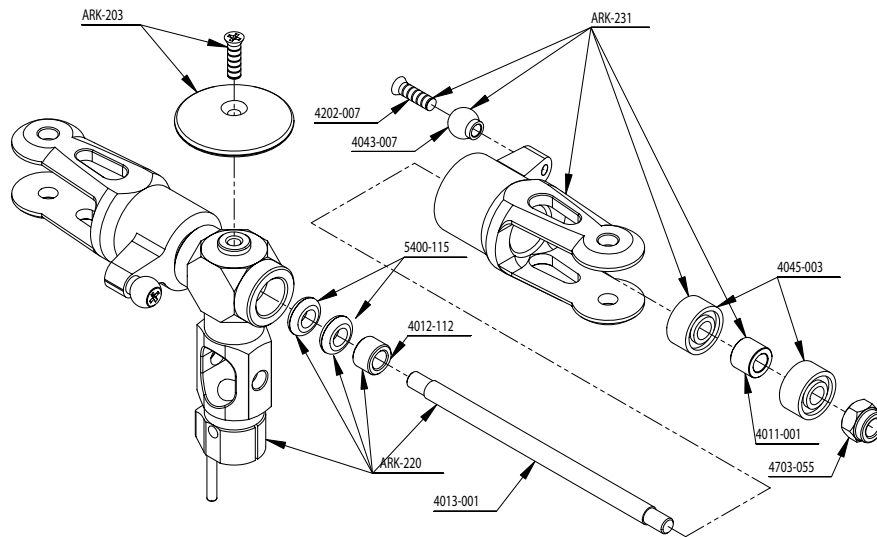



BLADE ATTACHMENT

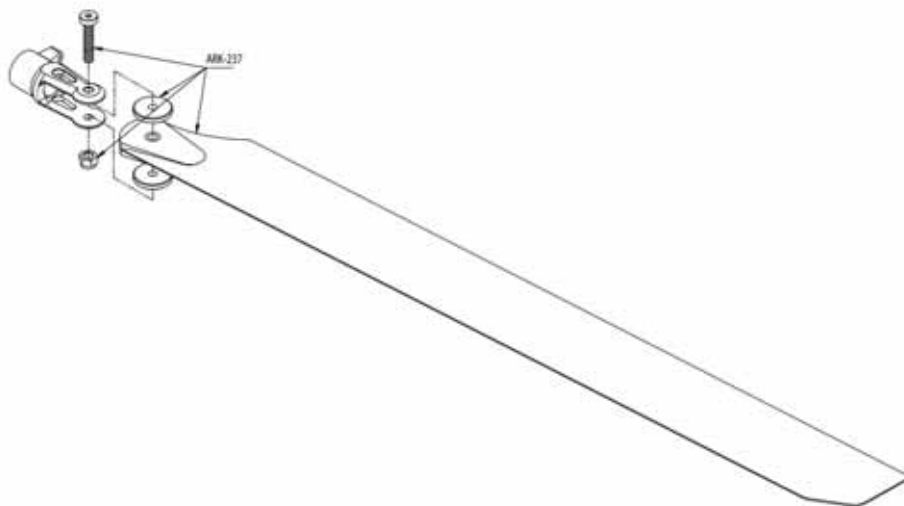


CCPM SWASH PLATE

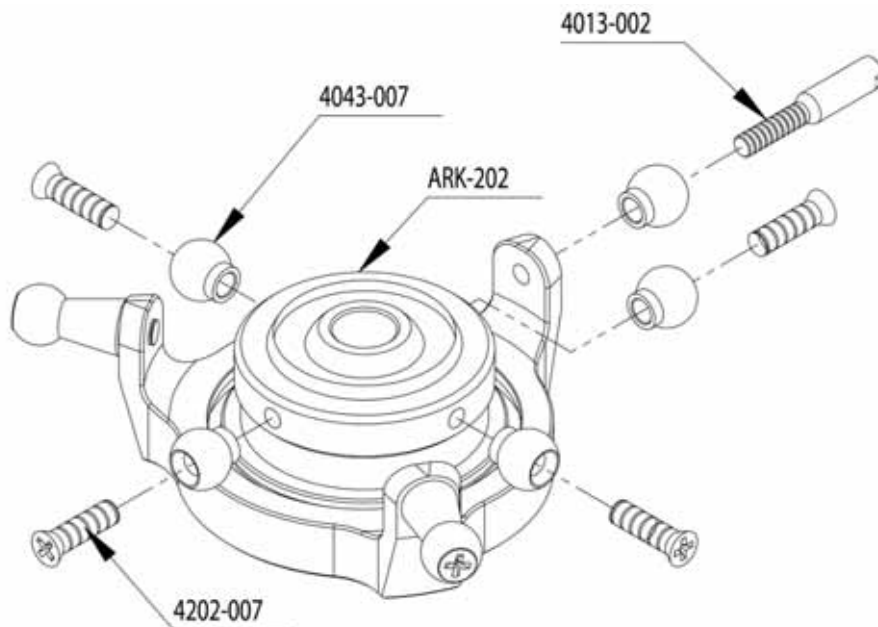


LINKAGES

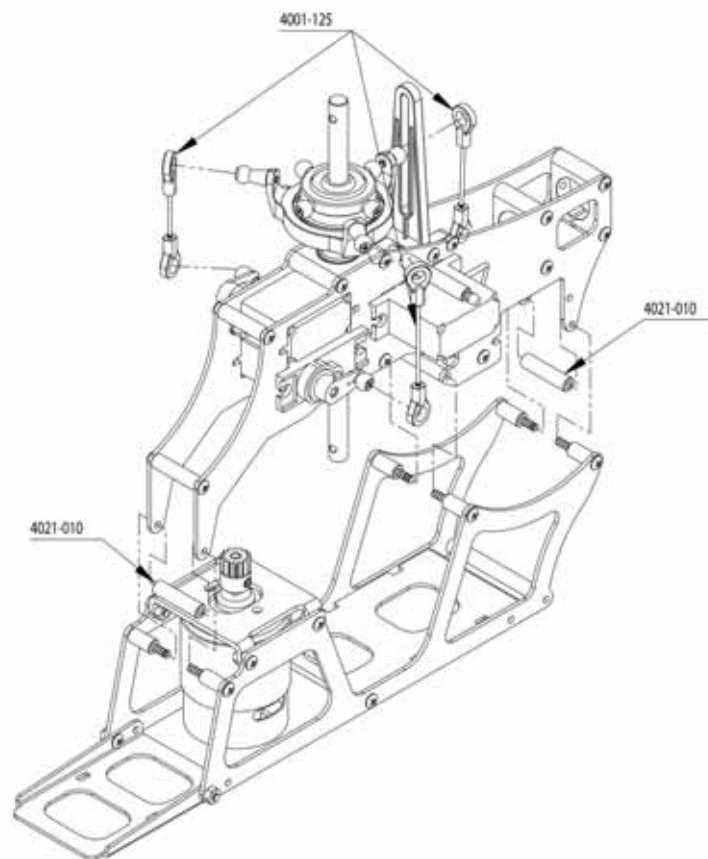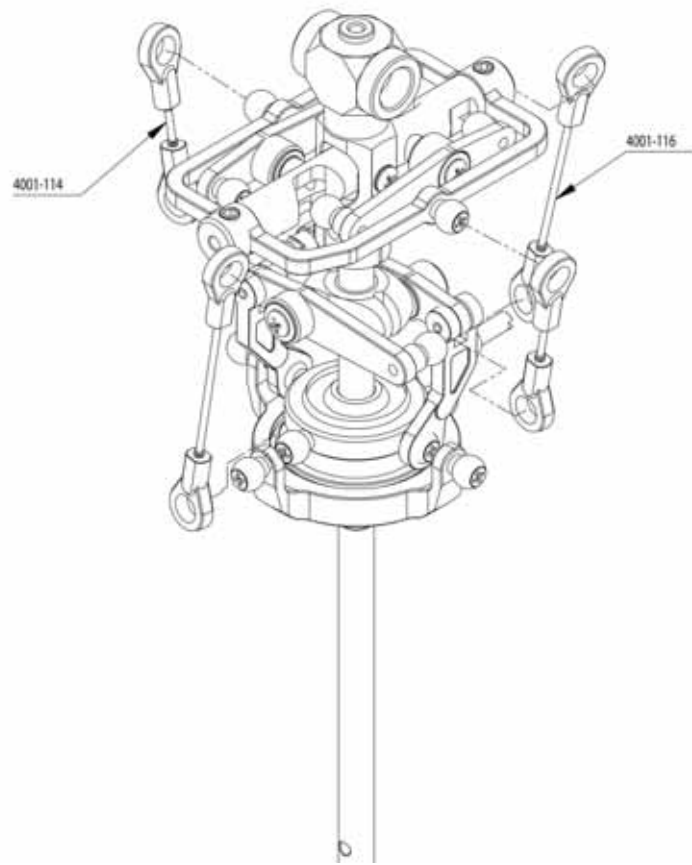


MAIN SHAFT

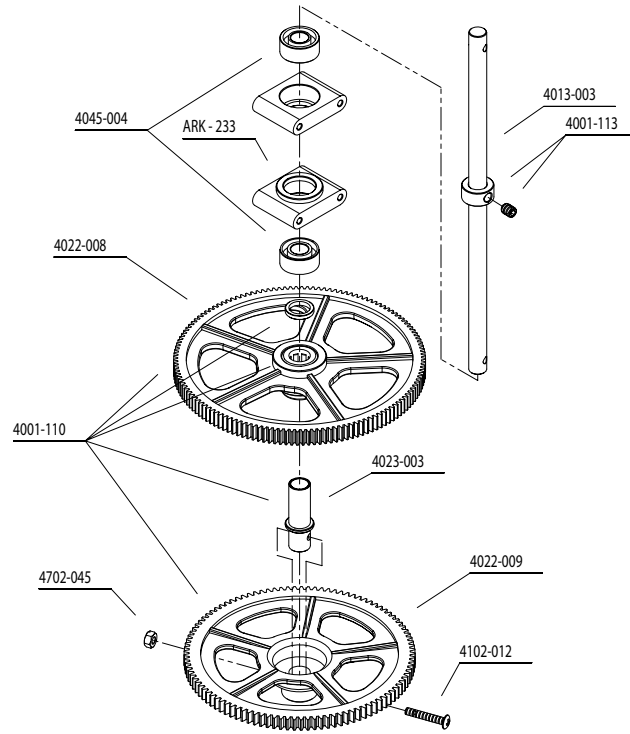


TAIL DRIVE

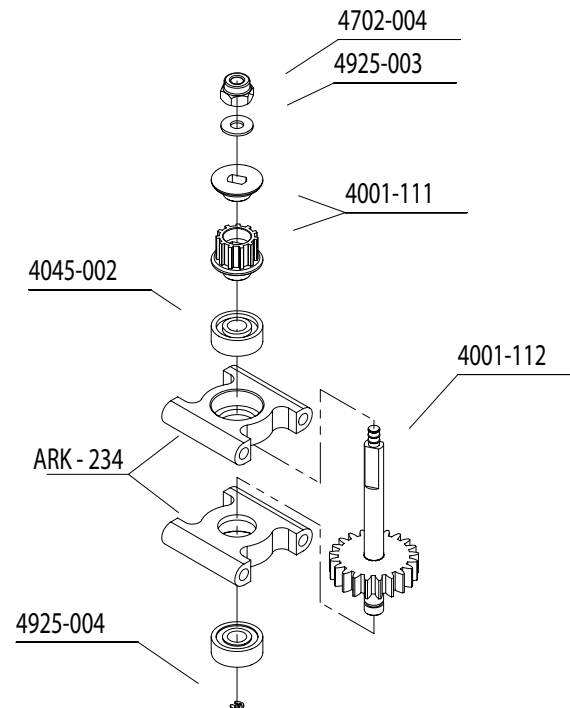


UPPER FRAME

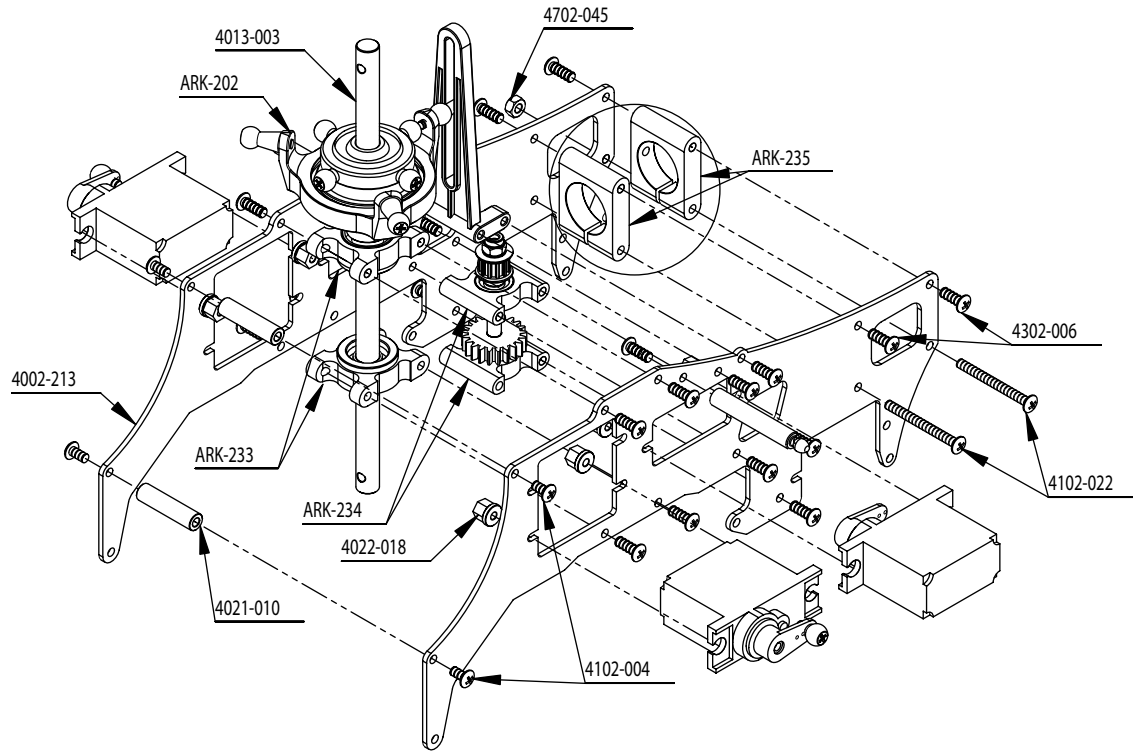


LOWER FRAME

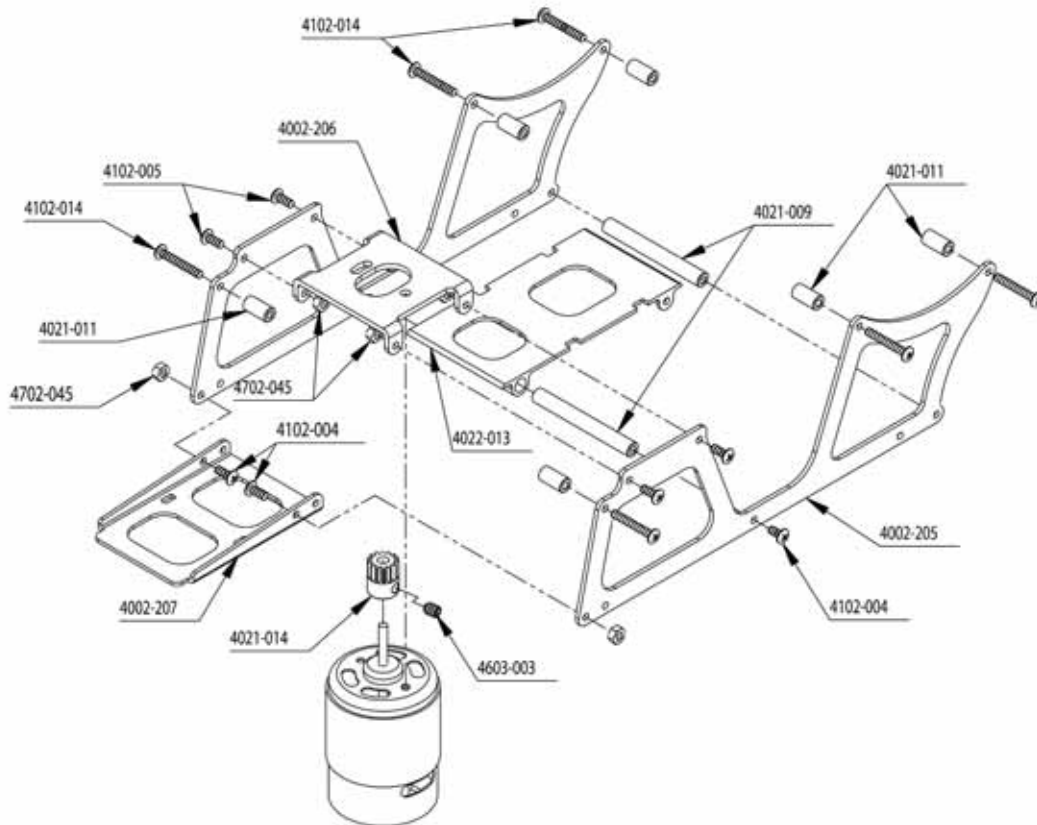


LANDING GEAR

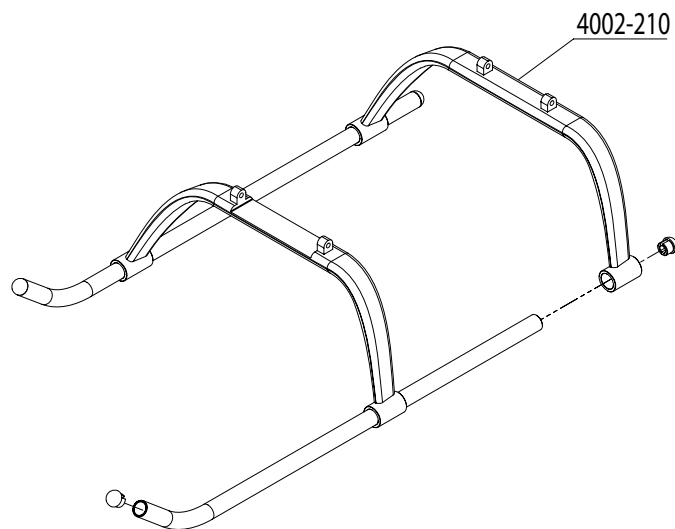


TAIL BOOM

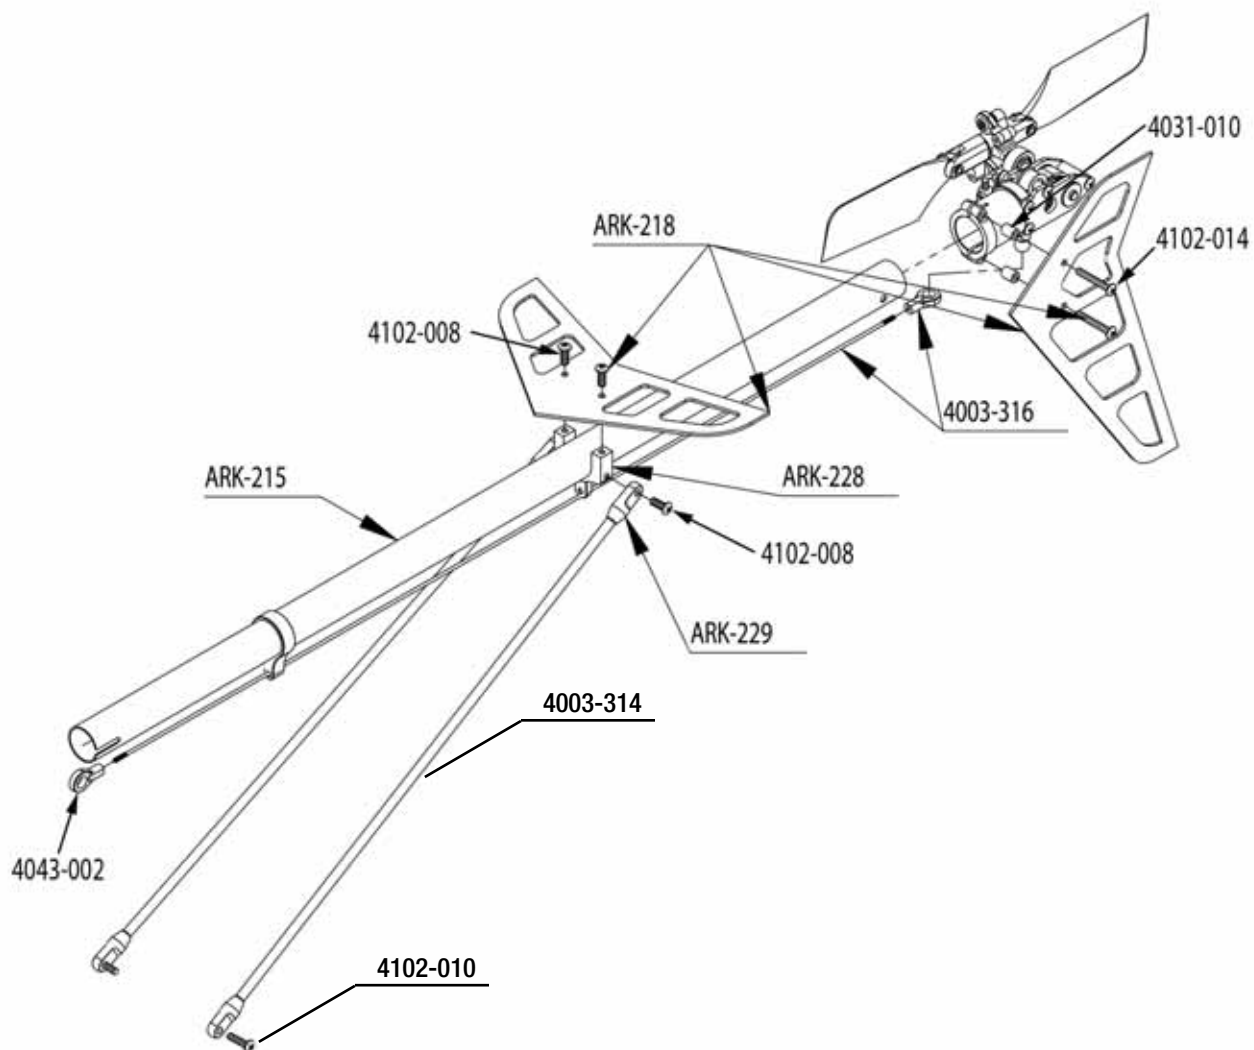


TAIL DRIVE GEARBOX

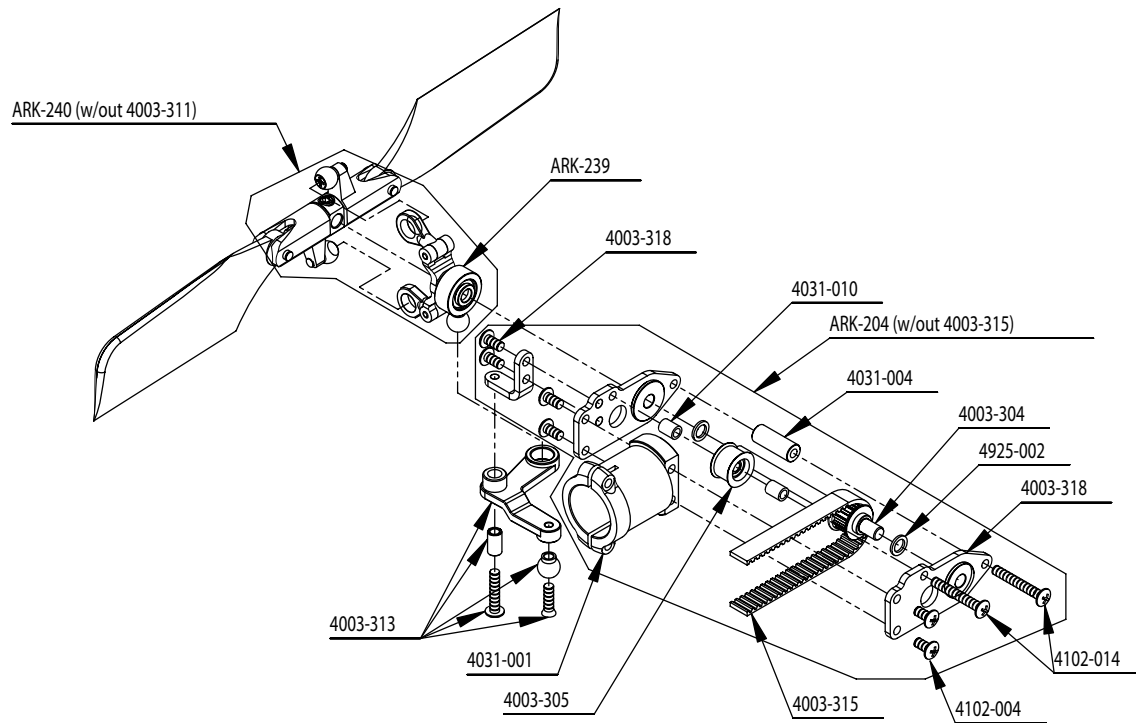

TAIL ROTOR

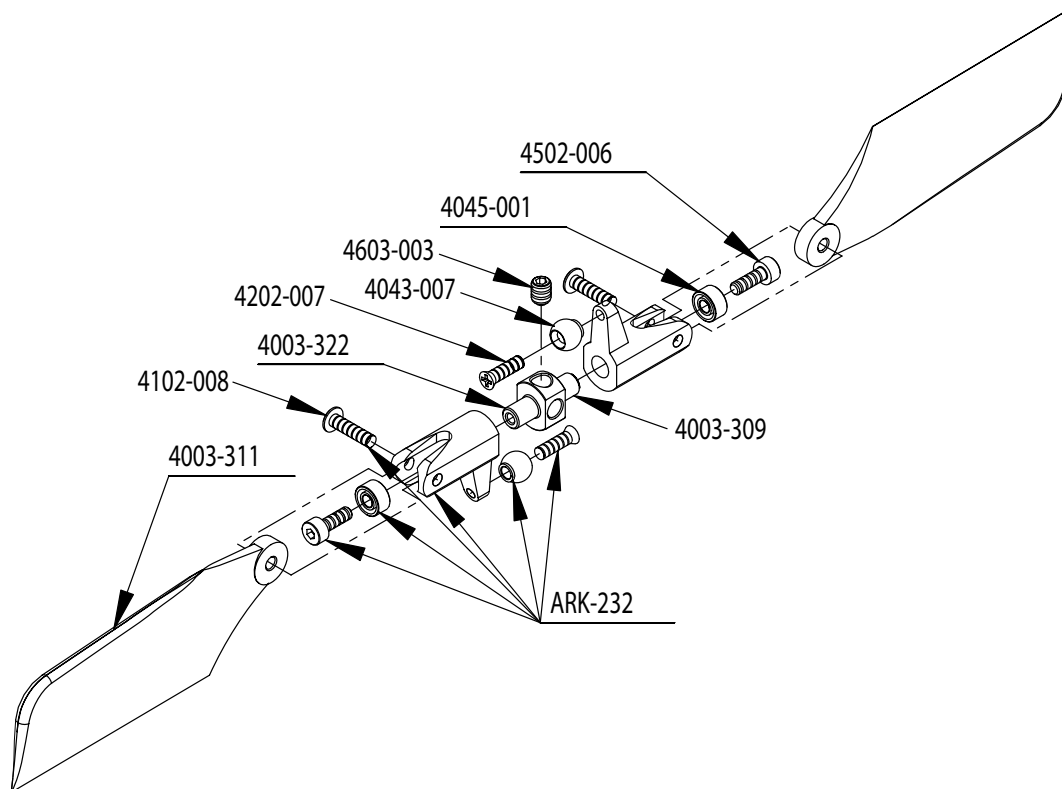

CANOPY

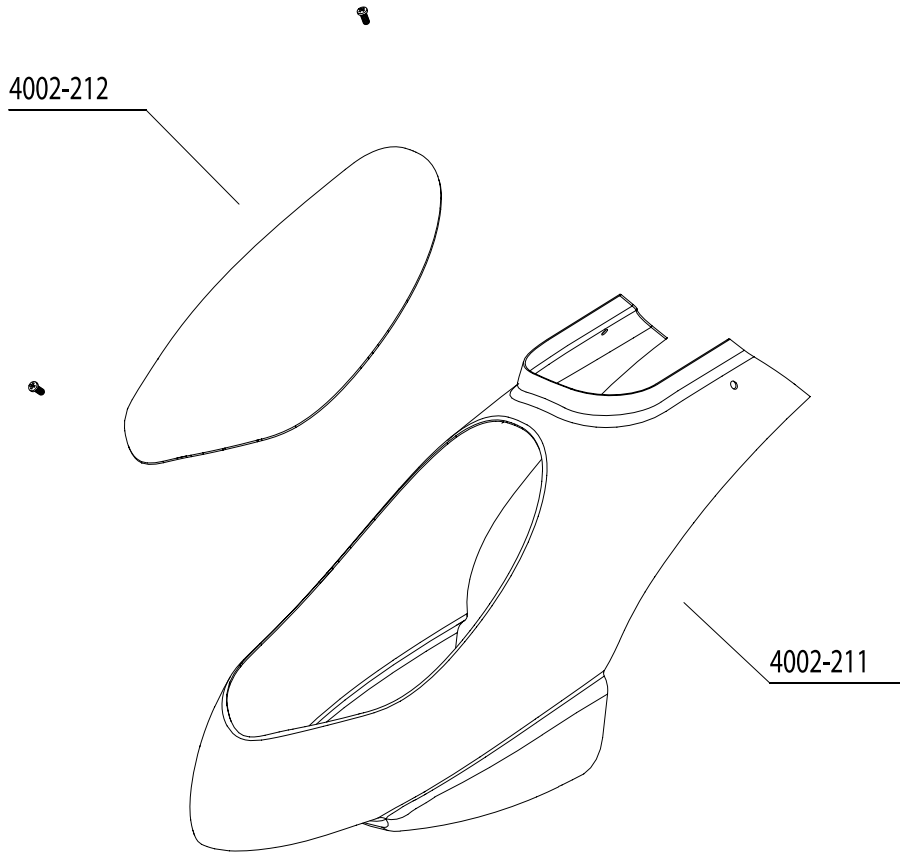

PITCH TEMPLATE

